

Disclaimer

The following online version of the Owner's Manual describes all models as well as all the standard and optional equipment of your vehicle. Country-specific differences in the language variants are possible. Note that your vehicle may not be fitted with all features described. This is also the case for safety-relevant systems and functions. Please contact your authorised Mercedes-Benz dealer if you would like to have a printed Owner's Manual for other vehicle models and vehicle model years. The online version is the current valid Owner's Manual version. Possible variations to your vehicle may not be taken into account as Mercedes-Benz constantly updates their vehicles and equipment to the state of the art and introduces changes in design and equipment. Please also read the printed Owner's Manual, any supplementary documents and the digital Owner's Manual in the vehicle.

Copyright

All Rights Reserved. All texts, images, graphics, are subject to Copyright and other laws for the protection of intellectual property. They may not be copied for commercial purposes or for transmission, nor changed and used on other websites.

Mercedes-Benz





E-Class Saloon

Owner's Manual

Mercedes-Benz



Symbols

In this Owner's Manual, you will find the following symbols:

 **DANGER** Danger due to not observing the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

 Please observe the warning notices in this Owner's Manual.

 **ENVIRONMENTAL NOTE** Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behaviour or environmentally responsible disposal.

 Observe environmental notes.

 **NOTE** Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

 Observe notes on material damage.

-  Useful instructions or further information that could be helpful to you.
-  Instruction
-  (→ page) Further information on a topic
-  Information in the multifunction display/multimedia display
-  Highest menu level, which is to be selected in the multimedia system
-  Corresponding submenus, which are to be selected in the multimedia system
-  Indicates a cause

Welcome to the world of Mercedes-Benz

Before you first drive off, read this Owner's Manual carefully and familiarise yourself with your vehicle. For your own safety and a longer vehicle life, follow the instructions and warning notices in this manual. Disregarding them may lead to damage to the vehicle or personal injury.

The equipment or model designation of your vehicle may vary according to:

- model
- order
- national version
- availability

The illustrations in this manual show a left-hand drive vehicle. On right-hand drive vehicles, the layout of components and controls differs accordingly.

Mercedes-Benz is constantly updating its vehicles to the state of the art.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design

- equipment
- technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

The following are integral parts of the vehicle:

- Digital Owner's Manual
- Printed Owner's Manual
- Service Booklet
- Equipment-dependent Supplements

Keep these documents in the vehicle at all times. If you sell the vehicle, always pass all of the documents on to the new owner.

2135844509Z102



At a glance	4	Copyright	26	Using the memory function	102
Cockpit	4			Stowage areas	103
Warning and indicator lamps	8	Occupant safety	27	Cup holders	113
Overhead control panel	10	Restraint system	27	Ashtray and cigarette lighter	115
Door control panel and seat adjustment	12	Seat belts	29	Sockets	116
Emergencies and breakdowns	14	Airbags	34	Wireless charging of the mobile phone and connection with the exterior aerial	119
		PRE-SAFE® system	41	Fitting/removing the floor mats	120
Digital Owner's Manual	16	Children in the vehicle	42		
Calling up the Digital Owner's Manual	16	Pets in the vehicle	60		
				Light and sight	122
General notes	17	Opening and closing	61	Exterior lighting	122
Protection of the environment	17	Key	61	Interior lighting	131
Take-back of end-of-life vehicles	17	Doors	65	Changing bulbs (only for vehicles with halogen headlamps)	132
Mercedes-Benz GenuineParts	18	Boot	70	Windscreen wipers and windscreen washer system	135
Owner's Manual	19	Roller sunblinds	75	Mirrors	138
Operating safety	19	Side windows	77	Operating the sun visors	140
Declaration of Conformity	20	Sliding sunroof	80	Infrared reflective windscreen	141
Diagnostics connection	22	Anti-theft protection	85		
Qualified specialist workshop	22			Climate control	142
Vehicle registration	23	Seats and stowing	88	Overview of climate control systems	142
Correct use of the vehicle	23	Notes on the correct driver's seat position ...	88	Operating the climate control system	143
Implied warranty	23	Seats	89		
QR code for rescue card	23	Steering wheel	99		
Vehicle data storage	23				

Driving and parking	154
Driving	154
DYNAMIC SELECT switch	161
Manual transmission	163
Automatic transmission	164
Refuelling	168
Parking	173
Driving and driving safety systems	182
Trailer hitch	235
Bicycle rack	239

Instrument Display and on-board computer	242
Instrument Display overview	242
Overview of the buttons on the steering wheel	243
Operating the on-board computer	243
Displays in the multifunction display	245
Adjusting the instrument lighting	245
Menus and submenus	246
Head-up Display	252

Multimedia system	254
Overview and operation	254

System settings	261
Navigation	271
Telephone	296
Online and Internet functions	316
Media	324
Radio	332
Sound	335

Maintenance and care	338
ASSYST PLUS service interval display	338
Engine compartment	339
Cleaning and care	346

Breakdown assistance	354
Emergency	354
Flat tyre	356
Battery (vehicle)	362
Tow starting or towing away	366
Electrical fuses	372


Wheels and tyres	375
Noise or unusual handling characteristics ..	375
Regular checking of wheels and tyres	375

Notes on snow chains	375
Tyre pressure	376
Wheel change	383
Emergency spare wheel	393

Technical data	395
Notes on technical data	395
On-board electronics	395
Vehicle identification plate, VIN and engine number	397
Operating fluids	399
Vehicle data	407
Trailer hitch	409


Display messages and warning/indicator lamps	411
Display messages	411
Warning and indicator lamps	472

Index	488
--------------------	------------

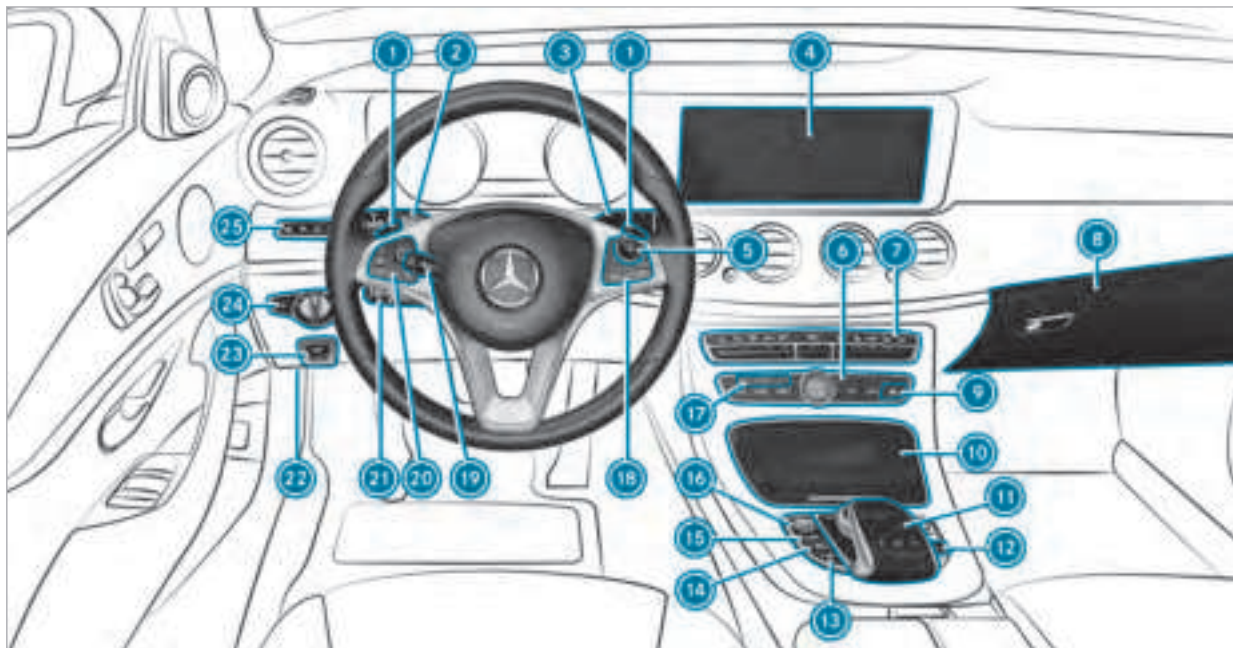


Left-hand drive vehicle

①	Steering wheel gearshift paddle	→	166	⑩	Stowage compartment	→	104
②	Combination switch	→	124	⑪	Control elements for the multimedia system	→	254
③	DIRECT SELECT lever			⑫	Rear window roller sunblind	→	76
④	Display (multimedia system)	→	254	⑬	ECO start/stop function	→	160
⑤	Start/Stop button	→	155	⑭	Active Parking Assist	→	219
⑥	Control panel for the multimedia system	→	254	⑮	To set the vehicle level	→	206
⑦	Climate control systems	→	143	⑯	DYNAMIC SELECT switch	→	162
⑧	Glove box	→	104	⑰	PASSENGER AIRBAG indicator lamp	→	38,
⑨	Hazard warning lights	→	125	⑱	Control panel for the multimedia system	→	243
				⑲	To adjust the steering wheel	→	100
				⑳	Control panel for the on-board computer	→	243
				㉑	Cruise control lever	→	193
				㉒	To unlock the bonnet	→	340
				㉓	Electric parking brake	→	178
				㉔	Light switch	→	122
				㉕	Control panel for:		
					Active Steering Assist	→	202
					Active Lane Keeping Assist	→	233
					Parking Assist PARKTRONIC	→	209
					Head-up display		

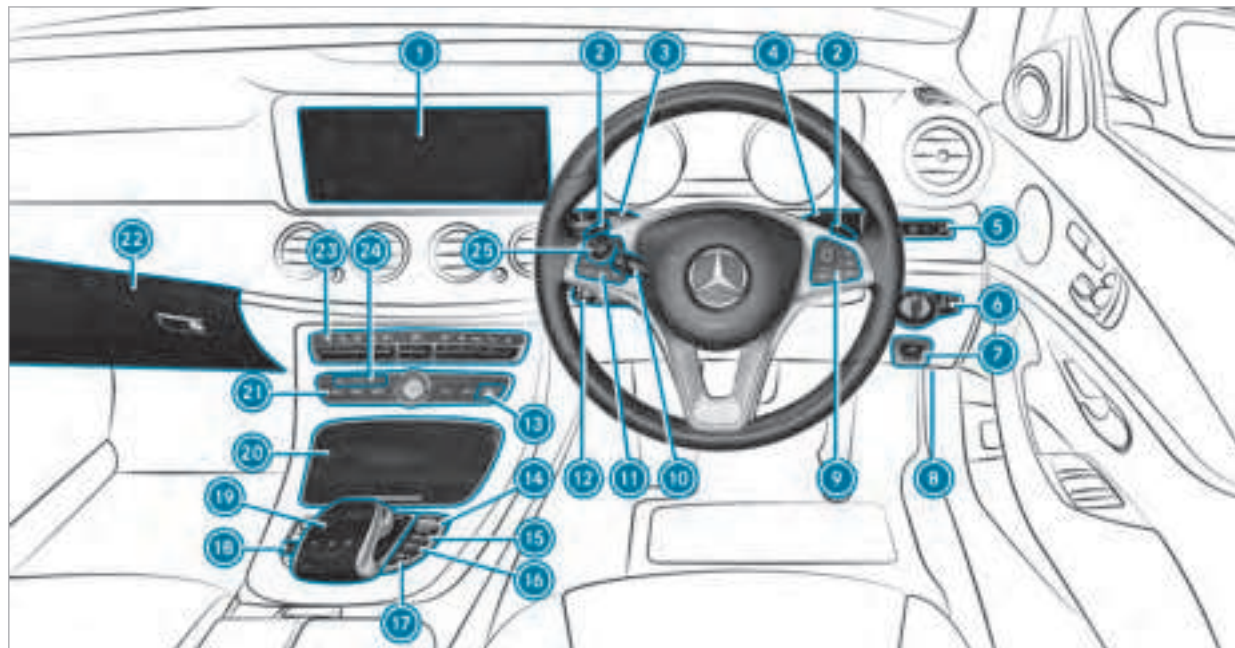


Right-hand drive vehicle

① Display (multimedia system)	→	254	⑫ Cruise control lever	→	193
② Steering wheel gearshift paddle	→	166	⑬ Hazard warning lights	→	125
③ Combination switch	→	124	⑭ DYNAMIC SELECT switch	→	162
④ DIRECT SELECT lever			⑮ To set the vehicle level	→	206
⑤ Control panel for:			⑯ Active Parking Assist	→	219
Active Steering Assist	→	202	⑰ ECO start/stop function	→	160
Active Lane Keeping Assist	→	233	⑱ Rear window roller sunblind	→	76
Parking Assist PARKTRONIC	→	209	⑲ Control elements for the multimedia system	→	254
Head-up display			⑳ Stowage compartment	→	104
⑥ Light switch	→	122	㉑ Control panel for the multimedia system	→	254
⑦ Electric parking brake	→	178	㉒ Glove box	→	104
⑧ To unlock the bonnet	→	340	㉓ Climate control systems	→	143
⑨ Control panel for the multimedia system	→	243	㉔ PASSENGER AIRBAG indicator lamp	→	38,
⑩ To adjust the steering wheel	→	100	㉕ Start/Stop button	→	155
⑪ Control panel for the on-board computer	→	243			

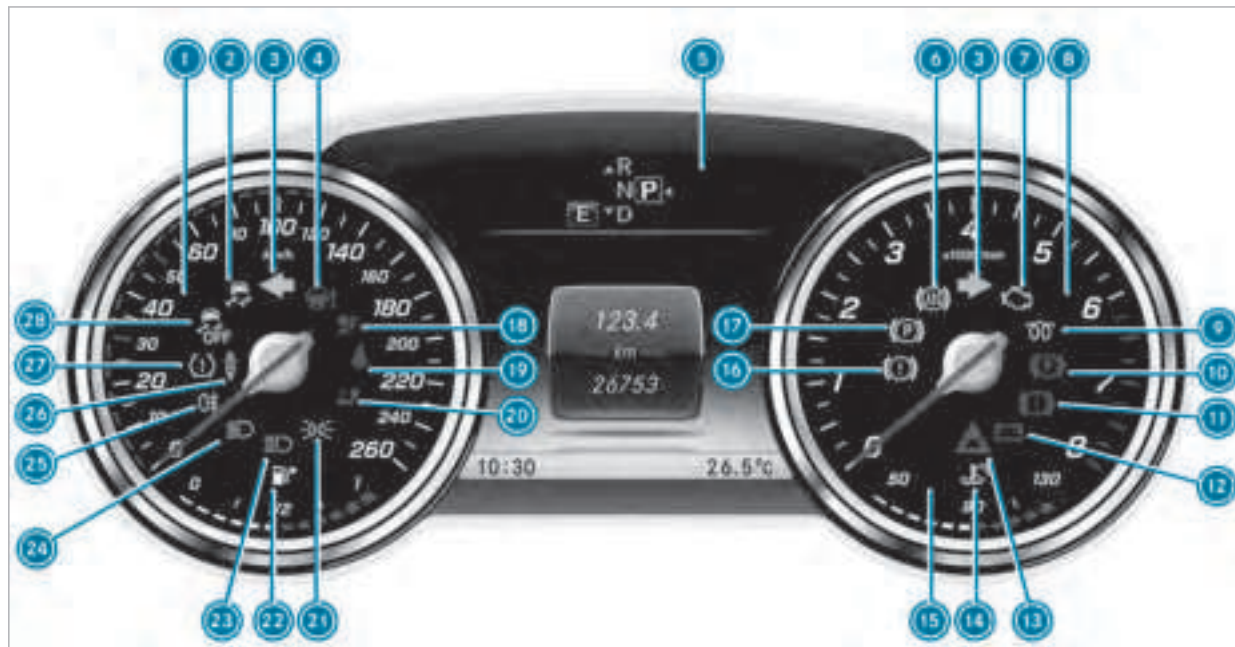


Instrument display


①	Speedometer	→	242	⑪	 Brakes (red)	→	473	⑰	 Electric parking brake (yellow)	→	473
②	 ESP®	→	473	⑫	 Electrical fault	→	483	⑱	 Restraint system		
③	  Turn signal light	→	124	⑬	 Distance warning	→	480	⑲	 Seat belt is not fastened	→	479
④	 Steering assistance malfunction	→	481	⑭	 Coolant too hot/cold	→	483	⑳	 Trailer hitch is not operational or is swiveling	→	481
⑤	Multifunction display	→	245	⑮	Coolant temperature display	→	242	㉑	 Standing lights	→	122
⑥	 ABS malfunction	→	473	⑯	Rev counter	→	242	㉒	Fuel level display		
⑦	 Engine diagnosis	→	483	⑰	 Fuel reserve with fuel filler flap location indicator	→	483	㉓	 Main beam	→	124
⑧	Rev counter	→	242	⑱	 Diesel engine: preglow			㉔	 Dipped beam	→	122
⑨	 Electric parking brake applied (red)	→	473	⑩	 Brakes (yellow)	→	473	㉕	 Rear fog light	→	123
⑩	 Brakes (red)	→	473	⑪	AIR BODY CONTROL/DYNAMIC BODY CONTROL malfunctioning			㉖	AIR BODY CONTROL/DYNAMIC BODY CONTROL malfunctioning		
⑪	 Brakes (red)	→	473	⑫	Electrical fault	→	483	㉗	 Tyre pressure monitoring system	→	486
⑫	 Electrical fault	→	483	⑬	Distance warning	→	480	㉘	 ESP® OFF	→	473
⑬	 Distance warning	→	480	⑭	Coolant too hot/cold	→	483				
⑭	 Coolant too hot/cold	→	483	⑮	Coolant temperature display	→	242				
⑮	Coolant temperature display	→	242	⑯	Rev counter	→	242				
⑯	Rev counter	→	242	⑰	 Fuel reserve with fuel filler flap location indicator	→	483				
⑰	 Electric parking brake applied (red)	→	473	⑱	 Diesel engine: preglow						
⑱	 Diesel engine: preglow			⑩	 Brakes (yellow)	→	473				
⑲	 Seat belt is not fastened	→	479								
⑳	 Trailer hitch is not operational or is swiveling	→	481								
㉑	 Standing lights	→	122								
㉒	Fuel level display										
㉓	 Main beam	→	124								
㉔	 Dipped beam	→	122								
㉕	 Rear fog light	→	123								
㉖	AIR BODY CONTROL/DYNAMIC BODY CONTROL malfunctioning										
㉗	 Tyre pressure monitoring system	→	486								
㉘	 ESP® OFF	→	473								

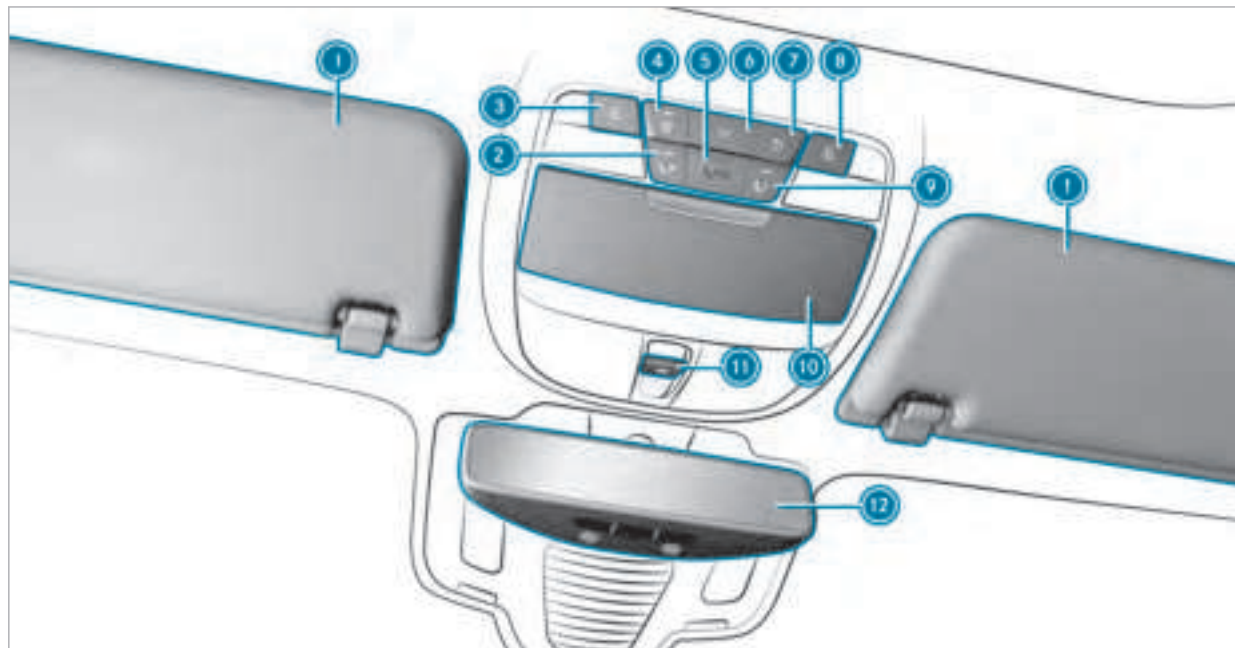

①	Sun visors	→	140	⑦	 Switches the rear interior lighting on/off	→	131
②	Breakdown assistance call button (Mercedes me connect)	→	312	⑧	 Switches the right-hand reading lamp on/off	→	131
③	 Switches the left-hand reading lamp on/off	→	131	⑨	MB Info call button (Mercedes me connect)	→	311
④	 Switches the automatic lighting control on/off	→	131	⑩	Spectacles compartment	→	105
⑤	SOS emergency call system (Mercedes-Benz emergency call system)			⑪	 Opens/closes the panoramic sliding sunroof	→	80
⑥	 Switches the front interior lighting on/off	→	131		Opens/closes the roller sunblinds	→	80
				⑫	Inside rearview mirror		

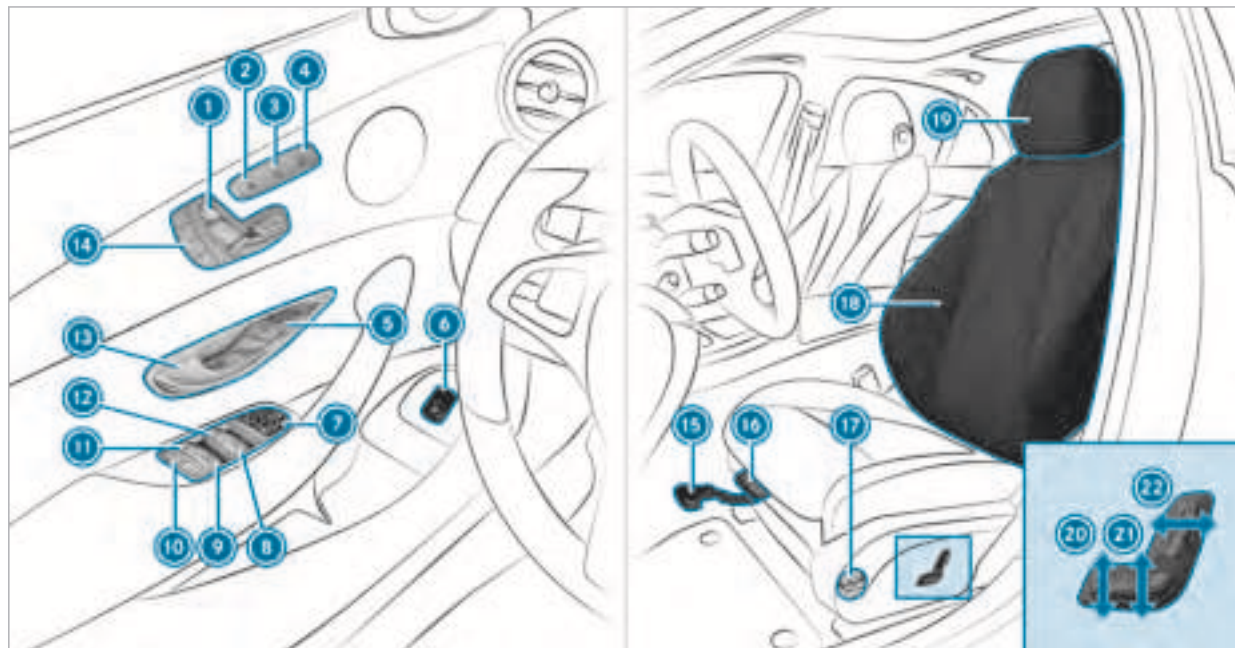

①	Adjusts the seats electrically	→	92	⑫	 Opens/closes the left side window	→	77
②	Switches the seat heater on/off	→	97	⑬	Opens the door	→	65
③	Switches the seat ventilation on/off	→	99	⑭	Sets the memory function	→	102
④	Adjusts the front passenger seat from the driver's seat	→	92	⑮	Sets the seat fore-and-aft adjustment	→	91
⑤	  Locks/unlocks the vehicle	→	66	⑯	Adjusts the seat cushion length	→	91
⑥	Opens/closes the boot lid	→	70	⑰	Adjusts the 4-way lumbar support	→	93
⑦	Adjusts and folds the outside mirrors out/in electrically	→	138	⑱	Seat adjustment using the multimedia system		
⑧	 Opens/closes the right side window	→	77	⑲	Adjusts the head restraints	→	93
⑨	 Opens/closes the rear right side window	→	77	⑳	Adjusts the seat cushion inclination	→	91
⑩	Child safety lock for the rear side windows	→	60	㉑	Adjusts the seat height	→	91
⑪	 Opens/closes the rear left side window	→	77	㉒	Adjusts the seat backrest inclination	→	91

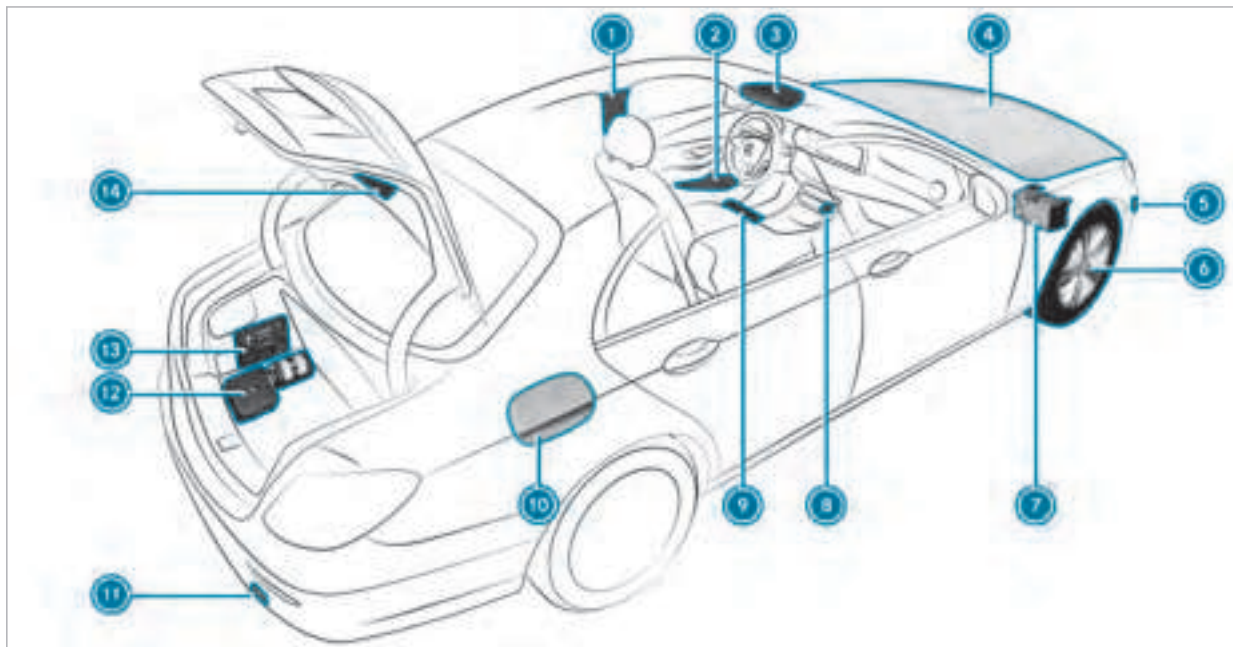

What to do in the event of an accident

①	QR code for accessing the rescue card	→	23
②	Safety vests	→	354
③	Button for the SOS emergency call system and breakdown assistance		
④	Checking and topping up operating fluids	→	399
⑤	Tow-starting and towing away	→	367
⑥	Flat tyre	→	356
⑦	Starting assistance	→	364

⑧	Hazard warning lights	→	125
⑨	Fire extinguisher	→	356
⑩	Fuel filler flap with instruction labels for tyre pressure, fuel type and QR codes for accessing the rescue card	→	168
⑪	Tow-starting and towing away	→	367
⑫	TIREFIT kit	→	358
⑬	First-aid kit (soft sided)	→	355
⑭	Warning triangle	→	355

Calling up the Digital Owner's Manual

Multimedia system:

➔ Vehicle ➔ Owner's Manual

▶ Select a menu item.


The Digital Owner's Manual describes the function and operation of:

- the vehicle
- the multimedia system

For safety reasons, the Digital Owner's Manual is deactivated while driving.

The Digital Owner's Manual contains the following menu items:

- **Search:** allows you to search precisely for keywords.
- **Quick start:** provides you with important information so that you can start using your vehicle immediately.
- **Tips:** provides tips on how to use your vehicle in certain situations.
- **Bookmarks:** provides you with a list of all the bookmarks you have stored yourself.

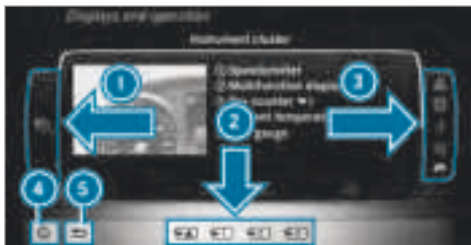

▶ **To scroll forwards/backwards:** turn the controller.

▶ **To display in full screen:** navigate to the left ①.

▶ **To select a note or store a bookmark:** navigate to the right ③.

▶ **To select a link:** navigate down ②.

▶ **To exit a content page:** select the  symbol ⑤.

▶ **To call up the basic menu of the Digital Owner's Manual:** select the  symbol ④.

▶ **To switch functions to the multimedia system using the buttons on the centre console:** press the , ,  or  button.

The selected menu appears. The Digital Owner's Manual remains open in the background.

① The Owner's Manual can also be found in the Mercedes-Benz Guides App in all common App Stores.

Protection of the environment



ENVIRONMENTAL NOTE Environmental damage due to operating conditions and personal driving style

The pollutant emission of your vehicle is directly related to the way you operate your vehicle.

You can help to protect the environment by operating your vehicle in an environmentally-responsible manner. Please observe the following recommendations on operating conditions and personal driving style.

Operating conditions:

- ▶ Make sure that the tyre pressure is correct.
- ▶ Do not carry any unnecessary weight (e.g. roof luggage racks once you no longer need them).
- ▶ Adhere to the service intervals.
A regularly serviced vehicle will contribute to environmental protection.

- ▶ Always have service work carried out at a qualified specialist workshop.

Personal driving style:

- ▶ Do not depress the accelerator pedal when starting the engine.
- ▶ Do not warm up the engine while the vehicle is stationary.
- ▶ Drive carefully and maintain a suitable distance from the vehicle in front.
- ▶ Avoid frequent, sudden acceleration and braking.
- ▶ Change gear in good time and use each gear only up to $\frac{2}{3}$ of its maximum engine speed.
- ▶ Switch off the engine in stationary traffic, e.g. by using the ECO start/stop function.
- ▶ Drive in a fuel-efficient manner.

Take-back of end-of-life vehicles

EU countries only:

Mercedes-Benz will take back your end-of-life vehicle for environment-friendly disposal in accordance with the European Union (EU) End-of-Life Vehicles Directive.

A network of vehicle take-back points and dismantlers has been established for you to return your vehicle. You can leave it at any of these points free of charge. This makes an important contribution to closing the recycling circle and conserving resources.

For further information about the recycling and disposal of end-of-life vehicles, and the take-back conditions, please visit the national Mercedes-Benz website for your country.

Mercedes-Benz GenuineParts



ENVIRONMENTAL NOTE Environmental damage caused by not using recycled/reconditioned components

Daimler AG offers recycled/reconditioned components and parts with the same quality as new parts. The same entitlement from the implied warranty is valid as for new parts.

- ▶ Use recycled/reconditioned components and parts from Daimler AG.



NOTE Impairment of the operating efficiency of the restraint systems from installing accessories or from repairs or welding

Airbags and seat belt tensioners, as well as control units and sensors for the restraint systems, may be installed in the following areas of your vehicle:

- Doors
- Door pillars

- Door sills
 - Seats
 - Cockpit
 - Instrument cluster
 - Centre console
- ▶ Do not install accessories such as audio systems in these areas.
 - ▶ Do not carry out repairs or welding.
 - ▶ Have accessories retrofitted at a qualified specialist workshop.

You could jeopardise the operating safety of your vehicle if you use parts, tyres and wheels as well as accessories relevant to safety which have not been approved by Mercedes-Benz. Safety-relevant systems, e.g. the brake system, may malfunction. Only use Mercedes-Benz GenuineParts or parts of equal quality. Only use tyres, wheels and accessory parts that have been specifically approved for your vehicle model.

Mercedes-Benz tests genuine parts and conversion parts and accessory parts that have been specifically approved for your vehicle model for

their reliability, safety and suitability. Despite ongoing market research, Mercedes-Benz is unable to assess other parts. Mercedes-Benz therefore accepts no responsibility for the use of such parts in Mercedes-Benz vehicles, even if they have been officially approved or independently approved by a testing centre.

Certain parts are only officially approved for installation or modification if they comply with legal requirements. All Mercedes-Benz GenuineParts meet the approval requirements. The use of non-approved parts may invalidate the vehicle's general operating permit.

This is the case in the following situations:

- A change of the vehicle type from that for which the vehicle's general operating permit was granted.
- If other road users could be endangered.
- If the exhaust gas or noise levels are adversely affected.

Always specify the vehicle identification number (VIN) (→ page 397) when ordering Mercedes-Benz GenuineParts.

Owner's Manual

This Owner's Manual describes all models and all standard and optional equipment available for your vehicle at the time of this Owner's Manual going to press. Country-specific differences are possible. Note that your vehicle may not be fitted with all features described. This is also the case for systems and functions relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.

The original purchase contract documentation for your vehicle contains a list of all of the systems in your vehicle.

Should you have any questions concerning equipment and operation, please consult a Mercedes-Benz service centre.

The Owner's Manual and Service Booklet are important documents and should be kept in the vehicle.

Operating safety

⚠ WARNING Risk of accident due to malfunctions or system failures

If you do not have the prescribed service/maintenance work or any required repairs carried out, this could result in malfunctions or system failures.

- ▶ Always have the prescribed service/maintenance work as well any required repairs carried out at a qualified specialist workshop.

⚠ WARNING Risk of accident or injury due to incorrect modifications on electronic component parts

Modification to electronic components, their software or wiring could impair their function and/or the function of other networked component parts. In particular, systems relevant to safety could also be affected.

As a result, these may no longer function properly and/or jeopardise the operating safety of the vehicle.

- ▶ Never tamper with the wiring and electronic component parts or their software.
- ▶ You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

If you modify the on-board electronics, the general operating permit is rendered invalid.

⚠ WARNING Risk of fire due to flammable materials on hot parts of the exhaust system

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system.

- ▶ When driving on unpaved roads or off-road, regularly check the vehicle underside.

- ▶ Remove trapped plants or other flammable material, in particular.
- ▶ If there is damage, consult a qualified specialist workshop immediately.

! NOTE Damage to the vehicle

Damage to the vehicle may occur in the following cases:

- The vehicle becomes grounded, e.g. on a high kerb or an unpaved road.
- The vehicle is driven too fast over an obstacle, e.g. a kerb, speed bump or pothole.
- A heavy object strikes the underbody or parts of the chassis.

In situations such as this, the body, the underbody, chassis parts, wheels or tyres could be damaged without the damage being visible. Components damaged in this way can unexpectedly fail or, in the case of an accident, no longer withstand the strain they are designed to.

If the underbody panelling is damaged, flammable materials such as leaves, grass or twigs can gather between the underbody and the underbody panelling. If these materials come into contact with hot parts on the exhaust system, they may catch fire.

- ▶ Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

- ▶ If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately, paying attention to road and traffic conditions, and contact a qualified specialist workshop.

Declaration of Conformity

Electromagnetic compatibility

The electromagnetic compatibility of the vehicle components has been checked and certified according to the currently valid version of Regulation ECE-R 10.

Wireless vehicle components

The following information applies to all components of the vehicle and the information systems and communication devices integrated into the vehicle which receive and/or transmit radio waves:

The components of this vehicle that receive and/or transmit radio waves are compliant with the basic requirements and all other relevant conditions of Directive 1999/5/EC. You can obtain further information from a Mercedes-Benz Service Centre.

Jack

Copy and translation of the original declaration of conformity:

EC declaration of conformity

1.

The signatory, as a representative
Manufacturer:

BRANO a.s.

74741 Hradec nad Moravicí, Opavská 1000,

Czech Republic

ID No.: 64-387-5933

VAT Reg. No.: CZ64-387-5933

declares, as our sole responsibility, that the product:

2. a)

Description:

Jack

Type, number:

A) A 164 580 02 18, A 166 580 01 18

B) A 240 580 00 18

C) A 639 580 02 18

Manufacture year: 2015

Fulfils all relevant conditions

Directive No. 2006/42/EC

b)

Description and purpose of use:

The jack is only intended for raising the specified vehicle in accordance with the operating instructions affixed to the jack.

3.

Reference data of the harmonised standards or specifications

A) ISO 4063, EN ISO 14341-A, DBL 7382.20, MBN 10435, AS 2693

B) ISO 4063, ISO 14341-A, DBL 7392.10, MBN 10435

C) DBL 7392.10, DBL 8230.10

The technical documentation of the product is stored at the manufacturer's plant. Representative for the compilation of the technical documentation: Director of the Technical Department Brano a.s.

4.

Hradec nad Moravicí

City

5.

05.05.2015

Date

Signed by

Director of Quality

TIREFIT kit

Copy and translation of the original declaration of conformity:

EC declaration of conformity

In accordance with EC directive 2006/42/EC

We hereby declare that the product

Product designation: Daimler electric air pump

Model designation: 0851ve, DT/UW 200046

MB part no.: A 000 583 8200

complies with the following relevant regulations: 2004/108/EC

Applied harmonised standards, in particular:

DIN EN 55014-1

DIN EN 55014-2:2009-06

Manufacturer: Dunlop Tech GmbH

Address: Birkenhainerstrasse 77, 63450 Hanau, Germany

Authorised representative: IMS dept.

Date: June 2015

Signature: IMS-AM, IMS-AE-L

Diagnostics connection

The diagnostics connection is only intended for the connection of diagnostic devices at a qualified specialist workshop.

⚠ WARNING Risk of accident due to connecting devices to the diagnostics connection

If you connect equipment to a diagnostics connection in the vehicle, it may affect the operation of vehicle systems.

As a result, the operating safety of the vehicle could be affected.

- ▶ Only connect equipment to a diagnostics connection in the vehicle which is approved for your vehicle by Mercedes-Benz.

⚠ WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Always fit the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

! NOTE Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

- ▶ Check the charge level of the battery.
- ▶ If the charge level is low, charge the battery, e.g. by driving a considerable distance.

Connecting equipment to the diagnostics connection can lead to emissions monitoring information being reset, for example. This may lead to the vehicle failing to meet the requirements of the next emissions inspection during the main inspection.

Qualified specialist workshop

A qualified specialist workshop has the necessary special skills, tools and qualifications to correctly carry out any necessary work on your vehicle. This particularly applies to work relevant to safety.

Always have the following work carried out on your vehicle at a qualified specialist workshop:

- Work relevant to safety
- Service and maintenance work
- Repair work
- Modifications, installations and conversions
- Work on electronic component parts

Mercedes-Benz recommends a Mercedes-Benz service centre.

Vehicle registration

Mercedes-Benz may ask its service centres to carry out technical inspections on certain vehicles. The quality or safety of the vehicle is improved as a result of the inspection.

Mercedes-Benz can only inform you about vehicle checks if Mercedes-Benz has your registration data.

It is possible that your vehicle has not yet been registered in your name in the following cases:

- If your vehicle was not purchased at an authorised specialist dealer.
- If your vehicle has not yet been examined at a Mercedes-Benz service centre.

It is advisable to register your vehicle with a Mercedes-Benz service centre.

Inform Mercedes-Benz as soon as possible about any change in address or vehicle ownership. You can do this at a Mercedes-Benz service centre, for example.

Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognise certain dangers. Leave warning stickers in position.

When using the vehicle, observe the following information:

- The safety notes in this manual
- The vehicle technical data
- Traffic rules and regulations
- Laws and safety standards pertaining to motor vehicles

Implied warranty

! **NOTE** Damage to the vehicle arising from culpable violation of these operating instructions.

Damage to the vehicle can arise from culpable violation of these operating instructions. This damage is not covered either by the Mercedes-Benz implied warranty or by the New or Used-Vehicle Warranty.

▶ Follow the instructions in this manual on proper operation of your vehicle as well as on possible vehicle damage.

QR code for rescue card

The QR code is secured in the fuel filler flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle in a compact form, e.g. the routing of the electric lines.

Further information can be obtained at <http://www.mercedes-benz.de/qr-code>.

Vehicle data storage

Information from electronic control units

Electronic control units are fitted in your vehicle. Some of these are necessary for the safe operation of your vehicle, while some assist you when driving (driver assistance systems). In addition,

your vehicle provides convenience and entertainment functions, which are also made possible by electronic control units.

Electronic control units contain data memories which can temporarily or permanently store technical information about the vehicle's operating status, component loads, maintenance requirements and technical events or faults.

In general, this information documents the state of a component part, a module, a system or the surroundings such as:

- operating statuses of system components (e.g. fluid levels, battery status, tyre pressure)
- status messages concerning the vehicle and its individual components (e.g. number of wheel revolutions/speed, deceleration, lateral acceleration, display of the fastened seat belts)
- malfunctions or defects in important system components (e.g. lights, brakes)
- information on vehicle damage events

- system reactions in special driving situations (e.g. airbag deployment, intervention of stability control systems)
- ambient conditions (e.g. temperature, rain sensor)

In addition to providing the actual control unit function, this data assists the manufacturer in detecting and rectifying faults and optimising vehicle functions. The majority of this data is temporary and is only processed in the vehicle itself. Only a small portion of the data is stored in the event or fault memory.

When your vehicle is serviced, technical data from the vehicle can be read out by service network employees or third parties. Services include repair services, maintenance processes, warranty events and quality assurance measures, for example. The read out is performed via the legally prescribed port for OBD ("on-board diagnostics") in the vehicle. The respective service network locations or third parties collect, process and use the data. They document technical statuses of the vehicle, assist in finding faults and improving quality and are trans-

mitted to the manufacturer, if necessary. Furthermore, the manufacturer is subject to product liability. For this, the manufacturer requires technical data from vehicles.

Fault memories in the vehicle can be reset by a service outlet as part of repair or maintenance work.

They can enter data into the vehicle's convenience and infotainment functions themselves as part of the selected equipment.

This includes, for example:

- multimedia data such as music, films or photos for playback in an integrated multimedia system
- address book data for use in connection with an integrated hands-free system or an integrated navigation system
- entered navigation destinations
- data about the use of Internet services

This data can be stored locally in the vehicle or is located on a device which you have connected to the vehicle. If this data is stored in the vehicle, you can delete it at any time. This data can

only be transmitted to third parties upon your request with particular regard to the scope of use of online services according to your selected settings.

You can store or change convenience settings/individualisations in the vehicle at any time.

Depending on the equipment, this includes, for example:

- seat and steering wheel position settings
- suspension and climate control settings
- individualisations such as interior lighting

If your vehicle is accordingly equipped, you can connect your smartphone or another mobile end device to the vehicle. You can control them via the control elements integrated in your vehicle. Images and audio from the smartphone can be output via the multimedia system. Certain information is simultaneously transmitted to your smartphone.

Depending on the respective integration type, this includes, for example:

- general vehicle information
- position data

This enables the use of selected smartphone Apps, e.g. navigation or music playback. There is no further interaction between the smartphone and the vehicle; in particular, vehicle data is not directly accessible. The type of further data processing is determined by the provider of the App used. The respective App and your smartphone's operating system determine whether changes can be made to the settings and which settings can be changed.

Service providers

Wireless network connection

If your vehicle has a wireless network connection, it enables data to be exchanged between your vehicle and additional systems. The wireless network connection is enabled via the vehicle's transmission and reception unit or via connected mobile end devices (e.g. smartphones). Online functions can be used via the wireless network connection. This includes online services and applications/Apps provided by the manufacturer or other providers.

Manufacturer's services

The manufacturer describes the respective functions and corresponding legal data protection information when suitable for the manufacturer's online services. Personal data may be used for the provision of online services. Data is exchanged via a secure connection, e.g. to the manufacturer's designated IT systems. Personal data is collected, processed and used via the provision of services exclusively on the basis of legal permissions or with prior consent.

The services and functions (sometimes subject to a fee) can usually be activated or deactivated. In some cases, this also applies to the entire vehicle's data connection. This excludes, in particular, legally prescribed functions and services.

Third party services

If it is possible to use online services from other providers, these services are subject to the data protection and terms of use of the responsible provider. The manufacturer has no influence on the content exchanged.

Please enquire, therefore, about the type, scope and purpose of the collection and use of per-

sonal data as part of third party services from their respective provider.

Copyright

Information on free and open source software licences for your vehicle's software can be found on the data storage medium in your vehicle document wallet and on the Internet together with updates:

<http://www.mercedes-benz.com/opensource>

Restraint system

Protection by the restraint system

The restraint system includes the following:

- Seat belt system
- Airbags
- Child restraint system
- Child seat securing system

In the event of an accident, the restraint system can:

- Reduce the risk of vehicle occupants coming into contact with parts of the vehicle interior.
- Reduce the forces to which the vehicle occupants are subjected.

A seat belt can only provide the best level of protection if it is worn correctly. Depending on the detected accident situation, seat belt tensioners and/or airbags supplement the protection offered by a correctly worn seat belt. Seat belt tensioners and/or airbags are not deployed in every accident.

So that the restraint system can provide protection, each vehicle occupant must:

- Fasten their seat belt correctly.
- Sit in an almost upright position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.
- Always be secured in an additional restraint system suitable for Mercedes-Benz vehicles if they are under 1.50 m tall.

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and airbag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the airbag deploying.

Reduced restraint system protection

⚠ WARNING Risk of injury or death from modifications to the restraint system

The restraint system can no longer function correctly after alterations have been made.

The restraint system may then not protect the vehicle occupants as intended by failing in an accident or triggering unexpectedly, for example

- ▶ Never alter the parts of the restraint system.
- ▶ Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to modify the vehicle to accommodate a person with disabilities, contact a qualified specialist workshop.

Mercedes-Benz recommends that you only use driving aids which have been approved specifically for your vehicle by Mercedes-Benz.

Restraint system functionality

When the ignition is switched on, a system self-test is performed, during which the  restraint system warning lamp lights up. It goes out no later than a few seconds after the vehicle is started. The components of the restraint system are then functional.

Restraint system malfunction

- The  restraint system warning lamp does not light up when the ignition is switched on.
- The  restraint system warning lamp lights up continuously or repeatedly during a journey.



WARNING Risk of injury or fatal injury due to a malfunction in the restraint system

If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This

may affect the seat belt tensioner or airbag, for example.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Function of the restraint system in an accident

How the restraint system works is determined by the severity of the impact detected and the type of accident anticipated:

- Frontal impact
- Rear impact
- Side impact
- Rollover

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is pre-emptive in nature. The triggering/deployment of the components of the restraint system should

take place in good time at the start of the collision.

Factors which can only be seen and measured after a collision has occurred cannot play a decisive role in airbag deployment, nor do they provide an indication of airbag deployment.

The vehicle may be deformed significantly without an airbag being deployed. This is the case if only parts which are relatively easily deformed are affected and the rate of vehicle deceleration is not high. Conversely, an airbag may be deployed even though the vehicle suffers only minor deformation. If very rigid vehicle parts such as longitudinal members are hit, for example, the vehicle deceleration may be high enough for this to happen.

The components of the restraint system can be activated or deployed independently of each other:

Component	Detected deployment situation
Seat belt tensioners	Frontal impact, rear impact, side impact, rollover
Driver's airbag, front passenger airbag	Frontal impact
Knee airbag	Frontal impact
Side impact airbag	Side impact
Window airbag	Side impact, rollover, frontal impact
Belt airbag	Frontal impact
PRE-SAFE® Impulse Side	Side impact

The front passenger airbag can only be deployed in an accident if the PASSENGER AIR BAG OFF

indicator lamp is off. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger airbag is correct (→ page 38).

⚠ WARNING Risk of burns from hot airbag components

The airbag parts are hot after an airbag has been deployed.

- ▶ Do not touch the airbag parts.
- ▶ Have a deployed airbag replaced at a qualified specialist workshop as soon as possible.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident. Take this into account, particularly if a seat belt tensioner is triggered or an airbag deployed.

If the seat belt tensioners are triggered or an airbag is deployed, you will hear a bang, and a small amount of powder may also be released:

- The bang will not generally affect your hearing.

- In general, the powder released is not hazardous to health but may cause short-term breathing difficulties to persons suffering from asthma or other pulmonary conditions. Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Seat belts

Protection provided by the seat belt

Always fasten your seat belt correctly before starting a journey. A seat belt can only provide the best level of protection if it is worn correctly.

⚠ WARNING Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function. In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

▶ Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

- The seat belt must:
 - Not be twisted and must fit tightly and snugly across your body.
 - Be routed across the centre of your shoulder and as low down across your hips as possible.
- The shoulder section of the seat belt should not touch your neck nor be routed under your arm or behind your back.
- Avoid wearing bulky clothing, e.g. a winter coat.
- Push the lap belt down as far as possible across your hips and pull tight with the shoulder section of the belt. Never route the lap belt across your abdomen.
- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time. Never allow babies and chil-

dren to travel sitting on the lap of another vehicle occupant.

- Never secure objects with a seat belt if the seat belt is also being used by one of the vehicle's occupants. Always observe the instructions for loading the vehicle when securing objects, luggage or loads (→ page 103).

If children are travelling in the vehicle, be sure to observe the instructions and safety notes on "Children in the vehicle" (→ page 42).

Reduced protection

⚠ WARNING Risk of injury or death due to incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

When braking or in the event of an accident, you could slide underneath the seat belt and sustain abdominal or neck injuries, for example.

▶ Adjust the seat properly before beginning your journey.

▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is routed across the centre of your shoulder.

⚠ WARNING Risk of injury or death when additional restraint systems are not used for persons with a smaller build

Persons under 1.50 m tall cannot wear the seat belt correctly without a suitable additional restraint system.

If the seat belt is not worn correctly, it cannot perform its intended protective function. In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

▶ Always secure persons under 1.50 m tall in a suitable restraint system.

⚠ WARNING Risk of injury or death due to blocked seat belt buckle or seat belt anchorage

Objects next to the front seat that block the seat belt buckle or the moving seat belt anchorage on the front seat impair the function of the seat belt tensioners.

The seat belt tensioners may not function as intended and the seat belt may no longer provide the intended protection.

- ▶ Before starting the journey, make sure that there are no objects around the seat belt buckle or between the front seat and door.

⚠ WARNING Risk of injury or death due to damaged or modified seat belts

Seat belts cannot provide protection in the following situations:

- If the seat belts are damaged, modified, extremely dirty, bleached or dyed

- If the seat belt buckle is damaged or extremely dirty
- If the seat belt tensioners, seat belt anchorages or seat belt retractors have been modified

Seat belts may be damaged in an accident, although the damage may not be visible, e.g. due to splinters of glass.

Modified or damaged seat belts may tear or fail, e.g. in an accident.

Modified seat belt tensioners could accidentally trigger or fail to function as intended.

- ▶ Never modify the seat belts, seat belt tensioners, seat belt anchorages or seat belt retractors.
- ▶ Make sure that the seat belts are undamaged, not worn and clean.
- ▶ Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Mercedes-Benz recommends that you only use seat belts which have been approved specifically for your vehicle by Mercedes-Benz.

⚠ WARNING Risk of injury or death from deployed pyrotechnic seat belt tensioners

Pyrotechnic seat belt tensioners that have been deployed are no longer operational and are unable to perform their intended protective function.

- ▶ Therefore, have deployed pyrotechnic seat belt tensioners immediately replaced at a qualified specialist workshop.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident.

! NOTE Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.

► Always ensure that an unused seat belt is fully retracted.

Information on the belt airbag in the rear seat belt

The BELTBAG identification indicates that a rear seat belt is equipped with a belt airbag.

When activated, the belt airbag increases the protected area of the vehicle occupant's ribcage.

▲ WARNING Risk of injury or death due to use of a non-approved child restraint system

In an accident, the belt airbag may damage a non-approved child restraint system or a child restraint system which has not been

approved for use in conjunction with the belt airbag.

As a result, the child restraint system may not be able to provide the intended level of protection.

For safety reasons, Mercedes-Benz recommends that you only use a child restraint system which has been tested and approved by Mercedes-Benz in combination with a belt airbag.

Information on child restraint systems (→ page 56).

Fastening and adjusting seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.



- Always engage seat belt tongue ② of the seat belt into seat belt buckle ① of the corresponding seat.
- Press and hold the seat belt outlet release and slide the seat belt outlet into the desired position.
- Let go of the belt outlet release and ensure that the seat belt outlet locks in position.

Vehicles with PRE-SAFE®: If the front seat belt is not pulled tight across your body, the seat belt adjustment may automatically apply a certain tightening force. Do not hold the seat belt tightly while it is adjusting. You can activate and deactivate the seat belt adjustment function using the multimedia system.

Vehicles with automatic front passenger front airbag shutoff:

! **NOTE** Deployment of the seat belt tensioner and side impact airbag when the front passenger seat is unoccupied

If the seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied, the seat belt tensioner and the side impact airbag may deploy in the event of an accident.

► Only one person should use each seat belt at any one time.

Vehicles without automatic front passenger front airbag shutoff:

! **NOTE** Deployment of the seat belt tensioner when the front passenger seat is unoccupied

If the seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied, the seat belt tensioner may deploy in the event of an accident.

► Only one person should use each seat belt at any one time.

Releasing a seat belt

► Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.

Activating or deactivating seat belt adjustment via the multimedia system

Multimedia system:

➞ Vehicle ➞  Vehicle settings ➞ Belt adjustment

► Activate ☒ or deactivate ☐ the function.

Seat belt warning for the driver and front passenger

The  seat belt warning lamp in the Instrument Display is a reminder that all vehicle occupants must wear their seat belts correctly.

In addition, an acoustic warning tone may sound.

As soon as the driver and front passenger fasten their seat belts, the seat belt warning goes out.

Rear seat belt status display


The rear seat belt status display is only available for certain countries.



The rear seat belt status display informs you which rear seat belt is not fastened. You can immediately dismiss the rear seat belt status display using the back button on the left-hand side of the steering wheel (→ page 243).

Airbags

Overview of airbags

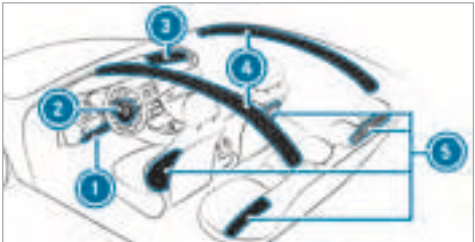

- ① Knee airbag
- ② Driver's airbag
- ③ Front passenger airbag
- ④ Window airbag
- ⑤ Side impact airbag

The installation location of an airbag is identified by the AIRBAG symbol.

When activated, an airbag can provide additional protection for the respective vehicle occupant.

AIRBAG	Potential protection for ...
Knee airbag	Thigh, knee and lower leg
Driver's airbag, front passenger airbag	Head and ribcage
Window airbag	Head
Side impact airbag	Ribcage, also pelvis for front seat occupants

The front passenger airbag can only be deployed in an accident if the PASSENGER AIR BAG OFF indicator lamp is off. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger airbag is correct (→ page 38).

! NOTE Important points to remember if the front passenger seat is unoccupied

In an accident, the components of the restraint system may deploy unnecessarily on the front passenger side if:

- There are heavy objects on the front passenger seat.
- The seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied.

- ▶ Stow objects in a suitable place.
- ▶ Only one person should use each seat belt at any one time.

Protection by the airbags

Depending on the accident situation, an airbag may supplement the protection offered by a correctly fastened seat belt.

⚠ WARNING Risk of injury or death due to incorrect seat position

If you deviate from the correct seat position, the airbag cannot perform its intended protective function and deployment may even cause further injuries.

To avoid hazardous situations, always make sure that all vehicle occupants:

- Have their seat belt fastened correctly, including pregnant women.
- Are seated properly and keep as far away as possible from the airbags.
- Observe the following information.
- ▶ Always make sure that there are no objects between the airbag and vehicle occupant.

To avoid risks resulting from the deployment of the airbag:

- Before starting your journey, adjust your seat correctly; the driver's seat and front passenger seat should be moved as far back as possible.

When doing so, always observe the information on the correct driver's seat position (→ page 88).

- Only hold the steering wheel by the steering wheel rim. This allows the airbag to be fully deployed.
- Always lean against the seat backrest when the vehicle is in motion. Do not lean forwards or against the door or side window. You may otherwise be in the deployment area of the airbags.
- Always keep your feet on the floor. Do not put your feet on the dashboard, for example. Your feet may otherwise be in the deployment area of the airbag.
- If children are travelling in the vehicle, observe the additional notes (→ page 42).
- Always stow and secure objects correctly.

Objects in the vehicle interior may prevent an airbag from functioning correctly. Therefore always ensure that:

- There are no people, animals or objects between the vehicle occupants and an airbag.
- There are no objects between the seat, door and door pillar (B-pillar).
- There are no hard objects, e.g. coat hangers, hanging on the grab handles or coat hooks.
- There are no accessory parts, such as cup holders, attached to the vehicle within the deployment area of an airbag, e.g. on doors, side windows or side panelling.
- There are no heavy, sharp-edged or fragile objects in the pockets of your clothing. Store such objects in a suitable place.

Reduced airbag protection

⚠ WARNING Risk of injury from modifications to the airbag cover

If you modify an airbag cover or affix objects such as stickers to it, the airbag can no longer function correctly.

- ▶ Never modify an airbag cover and do not affix objects to it.

The installation location of an airbag is identified by the AIRBAG symbol .

⚠ WARNING Risk of injury or death due to the use of unsuitable seat covers

Unsuitable seat covers can obstruct or prevent the deployment of the airbags integrated into the seats.

Consequently, the airbags cannot protect vehicle occupants as they are designed to do. In addition, the operation of the automatic front passenger airbag shutoff could be restricted.

- ▶ You should only use seat covers that have been approved for the corresponding seats by Mercedes-Benz.

⚠ WARNING Risk of injury due to malfunctions of the sensors in the door panelling

Sensors to control the airbags are located in the doors. Modifications or work not performed correctly to the doors or door panelling, as well as damaged doors, can lead to the function of the sensors being impaired. The airbags might therefore not function properly any more.

Consequently, the airbags cannot protect vehicle occupants as they are designed to do.

- ▶ Never modify the doors or parts of the doors.
- ▶ Always have work on the doors or door panelling carried out at a qualified specialist workshop.

⚠ WARNING Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection and cannot provide the intended protective function in the event of an accident.

- ▶ Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed airbags replaced immediately.

Status of the front passenger airbags

Points to remember when the front passenger seat is occupied

The automatic front passenger airbag shutoff is able to detect whether the front passenger seat is occupied by a person or a child restraint system. The front passenger airbag is enabled or disabled accordingly.

When installing a child restraint system on the front passenger seat:

- Ensure that the child restraint system is positioned correctly (→ page 50).

- Always observe the child restraint system manufacturer's installation instructions.
- Never place objects under or behind the child restraint system, e.g. cushions.
- Fully retract the seat cushion length adjustment.
- The entire base of the child restraint system must always rest on the sitting surface of the front passenger seat.
- The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat.
- The child restraint system must not touch the roof or be put under strain by the head restraints. Adjust the seat backrest inclination and the head restraint setting accordingly.

⚠ WARNING Risk of injury or death due to objects between the sitting surface and the child restraint system

Objects between the sitting surface and the child restraint system could affect the function of the automatic front passenger airbag shutoff.

This could result in the front passenger airbag not functioning as intended during an accident.

- ▶ Do not place any objects between the sitting surface and the child restraint system.
- ▶ The entire base of the child restraint system must always rest on the sitting surface of the front passenger seat.
- ▶ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat.
- ▶ Always comply with the child restraint system manufacturer's installation instructions.

A person in the front passenger seat must:

- Fasten their seat belt correctly.
- Sit in an almost upright position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.

Otherwise, the front passenger airbag may be deactivated by mistake, for example because the front passenger:

- Transfers their weight by supporting themselves on a vehicle armrest.
- Sits in such a way that their weight is raised from the sitting surface.

⚠ WARNING Risk of injury or death due to deactivated front passenger airbag

If the PASSENGER AIRBAG OFF indicator lamp is lit, the front passenger airbag is disabled. It will not be deployed in the event of an accident and cannot perform its intended protective function.

A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

If the front passenger seat is occupied, always ensure that:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
 - The front passenger seat has been moved as far back as possible.
 - The person is seated correctly.
- Ensure, both before and during the journey, that the status of the front passenger airbag is correct.

PASSENGER AIR BAG indicator lamps

System self-test



When the ignition is switched on, a system self-test is performed during which the two PASSENGER AIR BAG ON and OFF indicator lamps light up simultaneously.

The status of the front passenger airbag is then displayed:

- PASSENGER AIR BAG ON lights up for 60 seconds, subsequently both indicator lamps are off (PASSENGER AIR BAG ON and OFF): the front passenger airbag is able to deploy in the event of an accident.
- PASSENGER AIR BAG OFF lights up continuously: the front passenger airbag is disabled. It will then not be deployed in the event of an accident.

If the PASSENGER AIR BAG ON indicator lamp is off, only the PASSENGER AIR BAG OFF indicator lamp shows the status of the front passenger airbag. The PASSENGER AIR BAG OFF indicator lamp may be lit continuously or be off.

If the PASSENGER AIR BAG OFF indicator lamp and the  restraint system warning lamp light up simultaneously, the front passenger seat may not be used. Also in this case, do not install a child restraint system on the front passenger seat. Have the automatic front passenger airbag shutoff checked and repaired immediately at a qualified specialist workshop.

Status display

If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the prevailing situation.

After installing a rearward-facing child restraint system on the front passenger seat:

PASSENGER AIR BAG OFF must be lit continuously.

⚠ WARNING Risk of injury or death from using a rearward-facing child restraint system when the front passenger airbag is enabled

If you secure a child in a rearward-facing child restraint system on the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

Always ensure that the front passenger airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE FRONT AIRBAG in front of it; DEATH or SERIOUS INJURY to the CHILD can occur.

When installing a child restraint system on the front passenger seat, observe the vehicle-specific information .

Depending on the child restraint system and the stature of the child, the PASSENGER AIR BAG OFF indicator lamp may be off. In this case, do not install the rearward-facing child restraint system on the front passenger seat.

Instead, install the rearward-facing child restraint system on a suitable rear seat.

After installing a forward-facing child restraint system on the front passenger seat: depending on the child restraint system and the stature of the child, PASSENGER AIR BAG OFF may be lit continuously or be off. Always observe the following information.

⚠ WARNING Risk of injury or death due to incorrect positioning of the forward-facing child restraint system

If you secure a child in a forward-facing child restraint system on the front passenger seat and you position the front passenger seat too close to the cockpit, in the event of an accident, the child could:

- Come into contact with the vehicle interior if the PASSENGER AIR BAG OFF indicator lamp is lit, for example.
- Be struck by the airbag if the PASSENGER AIR BAG OFF indicator lamp is off.

▶ Always move the front passenger seat as far back as possible and fully retract the seat cushion length adjustment. Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet on the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet. If necessary, adjust

the seat belt outlet and the front passenger seat accordingly.

- ▶ Always observe the child restraint system manufacturer's installation instructions.

When installing a child restraint system on the front passenger seat, observe the vehicle-specific information .

If a person is sitting in the front passenger seat: PASSENGER AIR BAG OFF may be lit continuously or be off, depending on the person's stature. Always observe the following information.

If the front passenger seat is occupied by:

- An adult or a person with a build corresponding to that of an adult, the PASSENGER AIR BAG OFF indicator lamp must be off. This indicates that the front passenger airbag is enabled.

If the PASSENGER AIR BAG OFF indicator lamp is lit continuously, an adult or person with a build corresponding to that of an adult

should not use the front passenger seat. Instead, they should use a rear seat.

- A person with a smaller build (e.g. a teenager or small adult), the PASSENGER AIR BAG OFF indicator lamp either lights up continuously depending on the result of the classification or, alternatively, goes out.
 - PASSENGER AIRBAG OFF is off: move the front passenger seat as far back as possible or a person with a smaller build should use a rear seat.
 - If the PASSENGER AIRBAG OFF indicator lamp is lit continuously: a person with a smaller build should not use the front passenger seat.

⚠ WARNING Risk of injury or death when the PASSENGER AIR BAG OFF indicator lamp is lit

If the PASSENGER AIR BAG OFF indicator lamp remains lit after the system self-test, the front passenger airbag is disabled. It will not be deployed in the event of an accident. In this case, the front passenger airbag can-

not perform its intended protective function, e.g. when a person is seated in the front passenger seat.

That person could, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

If the front passenger seat is occupied, always ensure that:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The person is seated properly with a correctly fastened seat belt.
- The front passenger seat has been moved as far back as possible.

Further related subjects:

- Child restraint system on the front passenger seat (→ page 48).
- Suitable positioning of the child restraint system (→ page 50).

PRE-SAFE® system

Information on PRE-SAFE® (anticipatory occupant protection)

PRE-SAFE® is able to detect certain critical driving situations and implement pre-emptive measures to protect the vehicle occupants.

PRE-SAFE® can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Closing the side windows.
- **Vehicles with sliding sunroof:** Closing the sliding sunroof.
- **Vehicles with memory function:** Moving the front passenger seat to a more favourable seat position.
- **Vehicles with multicontour seat:** Increasing the air pressure in the seat side bolsters of the seat backrest.
- PRE-SAFE® Sound: Provided that the multimedia system is switched on, generates a

brief noise signal to stimulate the innate protective mechanism of a person's hearing.

! **NOTE** Damage caused by objects in the footwell or behind the seat

The automatic adjustment of the seat position may result in damage to the seat and/or the object.

► Stow objects in a suitable place.

Reversing the PRE-SAFE® system measures

If an accident did not occur, the pre-emptive measures that were taken are reversed. You will need to perform certain settings yourself.

► If the seat belt pre-tensioning is not reduced, move the seat backrest back slightly. The locking mechanism releases.

Information on PRE-SAFE® PLUS (anticipatory occupant protection plus)

PRE-SAFE® PLUS can detect certain impacts, particularly an imminent rear impact, and take pre-emptive measures to protect the vehicle occupants. These measures cannot necessarily prevent an imminent impact.

PRE-SAFE® PLUS can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Activating the rear hazard warning lights at a higher flashing frequency.
- Increasing brake pressure when the vehicle is stationary. This brake application is cancelled automatically when the vehicle pulls away.

If an accident did not occur, the pre-emptive measures that were taken are reversed.

System limitations

- No measures are implemented:
 - when reversing

or

- when the vehicle is towing a trailer and there is a risk of a rear impact.
- The brakes are not applied:
 - whilst driving
 - or
 - when entering or exiting a parking space while using Active Parking Assist.

Information on PRE-SAFE® Impulse Side

If an imminent side impact is detected, PRE-SAFE® Impulse Side can pre-emptively move the front-seat vehicle occupant's upper body towards the centre of the vehicle. It does this by rapidly inflating an air cushion in the outer seat side bolster of the seat backrest on the side on which the impact is anticipated. This increases the distance between the door and the vehicle occupant.

If PRE-SAFE® Impulse Side has been deployed or is faulty, the display message is displayed (→ page 412).

Children in the vehicle

Notes on the safe transportation of children

⚠ WARNING Risk of accident and injury due to children left unattended in the vehicle

If you leave children unattended in the vehicle, they may be able to set the vehicle in motion, for example by:

- Releasing the parking brake.
- Shifting the automatic transmission out of park position **P** or shifting the manual transmission into neutral.
- Starting the engine.

In addition, they may operate vehicle equipment.

- ▶ Never leave children and animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone"

function is activated via the Mercedes connect me web app.

⚠ WARNING This poses an increased risk of death due to heat stroke or exposure to cold in the vehicle

If persons – particularly children – experience prolonged exposure to extremely high or low temperatures, this poses a risk of injury or even fatal injury.

- ▶ Never leave anyone – particularly children – unattended in the vehicle.

⚠ WARNING Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up. Children could suffer burns on these parts, particularly on metallic parts of the child restraint system.

- ▶ Always make sure that the child restraint system is not exposed to direct sunlight.
- ▶ Protect it with a blanket, for example.
- ▶ If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child into it.
- ▶ Never leave children unattended in the vehicle.

To improve protection for children younger than 12 years old and under 1.50 m in height, Mercedes-Benz recommends you observe the following notes:

- Only secure children using a child restraint system which is suitable and recommended for Mercedes-Benz vehicles, as well as appropriate to the height, age and weight of the child. Be sure to observe the instructions for correct use of the child restraint system.
- Always install a child restraint system on a rear seat if possible.
- Only use the following securing systems for child restraint systems:

- the seat belt system
- the ISOFIX or i-Size mounting bracket
- the Top Tether anchorages
- The manufacturer's installation instructions for the child restraint system.
- The warning labels in the vehicle interior and on the child restraint system.

⚠ WARNING Risk of injury or death caused by incorrect installation of the child restraint system

If the child restraint system is incorrectly installed on a suitable seating position, it cannot perform its intended protective function.

The child cannot be restrained in the event of an accident, heavy braking or a sudden change of direction.

- ▶ Always comply with the manufacturer's installation instructions for the child restraint system and its correct use.

- ▶ Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.
- ▶ Never place objects under or behind the child restraint system, e.g. cushions.
- ▶ Always use child restraint systems with the original cover designed for them.
- ▶ Always replace damaged covers with genuine covers.

! WARNING Risk of accident caused by incorrectly installed child restraint systems

If the child restraint system is not correctly installed or secured, it could release in the event of an accident, sudden braking or a sudden change in direction.

The child restraint system could be flung around and hit vehicle occupants. This poses an increased risk of injury or even death!

- ▶ Always install child restraint systems correctly, even when not in use.
- ▶ Always comply with the child restraint system manufacturer's installation instructions.

! WARNING Risk of injury or death caused by the use of damaged child restraint systems

Child restraint systems or their retaining systems that have been subjected to a load in an accident may then not be able to perform their intended protective function.

The child cannot be restrained in the event of an accident, heavy braking or a sudden change of direction.

- ▶ Always replace child restraint systems immediately that have been damaged or involved in an accident.
- ▶ Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.

- ① Use Mercedes-Benz care products recommended by Mercedes-Benz to clean child restraint systems. Further information can be obtained at a qualified specialist workshop.

The following notes must be observed:

- When installing a child restraint system on the front passenger seat, the information on installing a child restraint system on the front passenger seat (→ page 48).
- Notes on attaching suitable child restraint systems (→ page 50).
- Notes on recommended child restraint systems (→ page 56).
- Instructions and safety notes on the automatic front passenger airbag shutoff .
- Safety notes on the seat belt (→ page 29).
- Information on the correct use of the seat belt (→ page 33).

ISOFIX and i-Size child seat securing systems

Information on the ISOFIX and i-Size child seat securing systems

⚠ WARNING Risk of injury or fatal injury if the child secured weighs more than the permissible weight for the ISOFIX or i-Size child restraint system

ISOFIX child restraint systems or i-Size child restraint systems do not offer sufficient protection for children weighing more than 22 kg, who are secured using the seat belt integrated in the child restraint system.

For example, the child may not be restrained correctly in the event of an accident.

- ▶ If the child weighs more than 22 kg, only use ISOFIX or i-Size child restraint systems with which the child is secured with the vehicle seat belt.
- ▶ Also secure the child restraint system with the Top Tether belt, if available.

When fitting a child restraint system, be sure to observe the manufacturer's installation instruc-


tions and the instructions for correct use of the child restraint system.

ISOFIX and i-Size are standardised securing systems for special restraint systems. ISOFIX child restraint systems are approved in accordance with ECE R44, i-Size child restraint systems are approved in accordance with ECE R129.

Only child restraint systems that have been approved in accordance with ECE R44 may be attached to ISOFIX mounting brackets.

The following child restraint systems can be attached to i-Size securing rings:

- ISOFIX child restraint systems that are approved in accordance with ECE R44
- i-Size child restraint systems that are approved in accordance with ECE R129

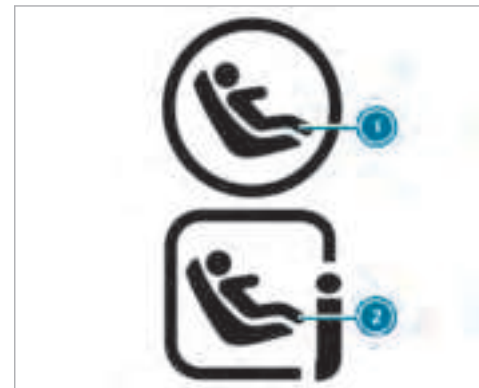

- ① Symbol for fitting an ISOFIX child restraint system
- ② Symbol for fitting an i-Size child restraint system

Fitting ISOFIX and i-Size child seat securing systems

⚠ WARNING Risk of injury or fatal injury if the child secured weighs more than the permissible weight for the ISOFIX or i-Size child restraint system

ISOFIX child restraint systems or i-Size child restraint systems do not offer sufficient protection for children weighing more than 22 kg, who are secured using the seat belt integrated in the child restraint system.


For example, the child may not be restrained correctly in the event of an accident.

- ▶ If the child weighs more than 22 kg, only use ISOFIX or i-Size child restraint systems with which the child is secured with the vehicle seat belt.
- ▶ Also secure the child restraint system with the Top Tether belt, if available.

When fitting a child restraint system, be sure to observe the manufacturer's installation instructions

and the instructions for correct use of the child restraint system.

Before every trip, make sure that the ISOFIX child restraint system or the i-Size child restraint system is engaged correctly in both ISOFIX or i-Size mounting brackets.

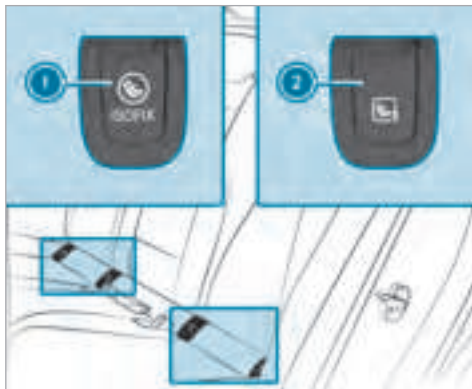

- ① ISOFIX mounting brackets
- ② i-Size mounting brackets

! NOTE Damage to the seat belt for the centre seat

When fitting a child restraint system, the seat belt for the centre seat could be damaged.

- ▶ Make sure that the seat belt is not trapped.

- ▶ Remove each cover for ISOFIX mounting brackets ① or i-Size mounting brackets ②.
 - ▶ Attach the ISOFIX child restraint system to both ISOFIX mounting brackets ① or i-Size mounting brackets ②.
- or
- ▶ Attach the i-Size child restraint system to both i-Size mounting brackets ②.
 - ▶ After removing the child seat, replace each cover for ISOFIX mounting brackets ① or i-Size mounting brackets ②.

Securing Top Tether

⚠ WARNING Risk of injury if the seat backrests of the rear seats are not locked after fitting Top Tether belts

If the rear seat backrests are not locked, they could fold forwards in the event of an accident, heavy braking or sudden changes of direction.

As a result, child restraint systems cannot perform their intended protective function. Rear seat backrests that are not locked can also cause additional injuries, e.g. in the event of an accident. This poses an increased risk of injury or even fatal injury.


- ▶ Always lock rear seat backrests after fitting Top Tether belts.
- ▶ Observe the lock verification indicator.

If the seat backrest is not engaged and locked, this will be shown in the multifunction display in the instrument cluster.

The risk of injury can be reduced by Top Tether as Top Tether provides an additional connection

between the child restraint system secured with ISOFIX or i-Size and the vehicle.

The child restraint system must be equipped with a Top Tether belt.

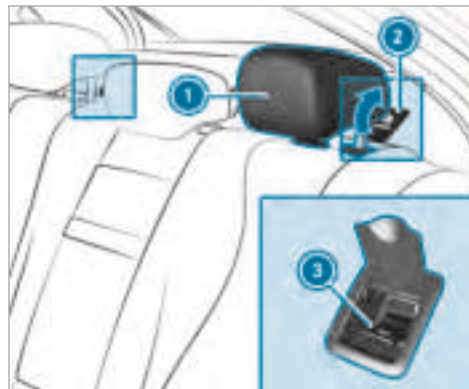

- ▶ If necessary, move head restraint ① upwards (→ page 95).
- ▶ Fold up cover ② of Top Tether anchorage ③.

- ▶ Fit the ISOFIX or i-Size child restraint system with Top Tether. Always comply with the child restraint system manufacturer's installation instructions when doing so.



- ▶ Route Top Tether belt ⑤ under head restraint ① between the two head restraint bars.
- ▶ Hook Top Tether hook ④ of Top Tether belt ⑤ without twisting into Top Tether anchorage ③.
- ▶ Tension Top Tether belt ⑤. Always comply with the child restraint system manufacturer's installation instructions when doing so.

- ▶ Fold down cover ② of Top Tether anchorage ③.
- ▶ If necessary, move head restraint ① downwards (→ page 95). Make sure that you do not interfere with the correct routing of Top Tether belt ⑤.

Child restraint systems on the front passenger seat


Notes on child restraint systems on the front passenger seat

Accident statistics show that children secured in the rear seats are safer than children secured in the front seats. For this reason, Mercedes-Benz strongly advises that you install a child restraint system on a rear seat.

If it is absolutely necessary to install a child restraint system on the front passenger seat, always observe the information on the automatic front passenger airbag shutoff.

By doing this, you can avoid risks caused by:

- A child restraint system that is not detected by the automatic front passenger airbag shutoff.
- The unintentionally disabled front passenger airbag.
- Incorrect positioning of the child restraint system.

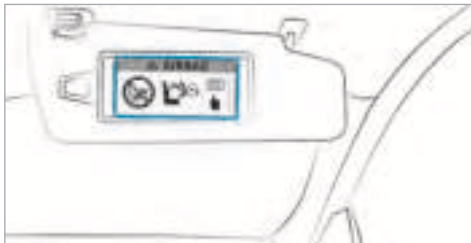

Warning notice on the front-passenger sun visor:

⚠ WARNING Risk of injury or death from using a rearward-facing child restraint system when the front passenger airbag is enabled

If you secure a child in a rearward-facing child restraint system on the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag can deploy in the event of an accident.

The child could be struck by the airbag.

Always ensure that the front passenger airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE FRONT AIRBAG in front of it; DEATH or SERIOUS INJURY to the CHILD can occur.

If the PASSENGER AIR BAG OFF indicator lamp goes out, the front passenger airbag is enabled. Be sure to observe the notes on the safe transportation of children (→ page 42).

Vehicles without the automatic front passenger airbag shutoff

Vehicles without automatic front passenger airbag shutoff have a special sticker affixed to the side of the cockpit on the front passenger side.



Never install a rearward-facing child restraint system on the front passenger seat:

Make sure you observe the following information:

- On forward-facing and rearward-facing child restraint systems on the front passenger seat (→ page 49).
- On attaching suitable child restraint systems (→ page 50).

Forward-facing and rearward-facing child restraint systems on the front passenger seat

When using a rearward-facing child restraint system on the front passenger seat, the front passenger airbag must always be disabled. This is only the case if the PASSENGER AIR BAG OFF indicator lamp is lit continuously (→ page 38).

When using the child restraint system on the front passenger seat, it is essential to observe the following:

- Move the front passenger seat as far back as possible.
- Set the seat backrest to an almost vertical position.
- Retract the seat cushion length as far as possible.
- The entire base of the child restraint system must always rest on the sitting surface of the front passenger seat.
- The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat. The child restraint system must not touch the roof or be put under strain by the head restraints.
- If necessary, adjust the angle of the seat backrest and the head restraint position accordingly.
- Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.
- Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet.

- If necessary, adjust the seat belt outlet and the front passenger seat accordingly.
- Never place objects, e.g. a cushion, under or behind the child restraint system.

Always comply with the manufacturer's installation and operating instructions for the child restraint system used, and the notes on fitting suitable child restraint systems (→ page 50).


Suitability of the seats for child restraint systems

Notes on attaching suitable child restraint systems


Only child restraint systems with the following ECE standards are permitted for use in the vehicle:

- ECE R44
- ECE-R129 (i-Size child restraint systems)

Examples of approval labels on child restraint systems:

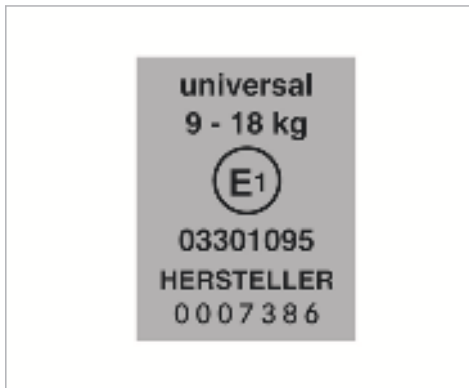

Label for child restraint systems in accordance with ECE R44

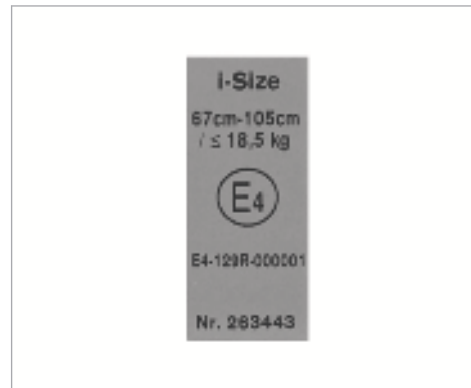

Label for child restraint systems in accordance with ECE R129

ISOFIX or i-Size child restraint systems of the following “Universal” category can be used, in accordance with the tables on suitability of seats for the attachment of child restraint systems, on seats marked U, UF, IUF or i-U.

Semi-universal child restraint systems are indicated by the text "semi-universal" on the approval label. They can only be used if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.

Suitability of the seats for attaching belt-secured child restraint systems

Observe the following information:

- **When using a baby car seat of the category 0/0+ and a rearward-facing child restraint system on a rear seat:** adjust the driver's and front passenger seat such that the seat does not touch the child restraint system.
- **When using a forward-facing child restraint system of category I:** remove the head restraint from the respective seat, if possible. In addition, the seat backrest of the

child restraint system must, as far as possible, lie flat against the backrest of the vehicle seat.

- When you remove the child restraint system, fit the head restraint immediately and adjust all the head restraints again correctly.
- For certain child restraint systems in weight categories II or III, there might be restrictions in the maximum size setting, e.g. due to possible contact with the roof.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat forward slightly.
- The child restraint system must not touch the roof or be put under strain by the head restraints. Adjust the head restraints accordingly.

- Observe the manufacturer's installation instructions for the child restraint system.

Legend for the table:

X	Not suitable for children in this weight category.
U	Suitable for child restraint systems of the "Universal" category in this weight category.
UF	Suitable for forward-facing child restraint systems of the "Universal" category in this weight category.
L	Suitable for semi-universal child restraint systems according to the table in "Recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.

Front passenger seat:

Weight categories	Front passenger airbag enabled	Front passenger airbag disabled ¹
Category 0: up to 10 kg	X	U, L
Category 0+: up to 13 kg	X	U, L
Category I: 9 to 18 kg	UF, L	U, L
Category II: 15 to 25 kg	UF, L	U, L
Category III: 22 to 36 kg	UF, L	U, L
¹ The vehicle is equipped with an automatic front passenger airbag shutoff. The PASSENGER AIR BAG OFF indicator lamp must be lit.		

Rear seats without a belt airbag

Weight categories	Left, right	Middle ¹
Category 0: up to 10 kg	U, L	U, L
Category 0+: up to 13 kg	U, L	U, L
Category I: 9 to 18 kg	U, L	U, L
Category II: 15 to 25 kg	U, L	U

Weight categories	Left, right	Middle ¹
Category III: 22 to 36 kg	U, L	U
¹ Child restraint systems with a supporting bracket are not suitable for this seat.		

Rear seats with a belt airbag

Weight categories	Left, right
Category 0: up to 10 kg	X
Category 0+: up to 13 kg	X
Category I: 9 to 18 kg	X
Category II: 15 to 25 kg	L ¹
Category III: 22 to 36 kg	L ¹
¹ Only use the approved child seats KIDFIX or KIDFIX XP.	

Vehicles with belt airbags: When securing a child in a child restraint system on an outer rear seat, it is essential to observe the following instructions:

- Only use a child restraint system approved by Mercedes-Benz.
- Observe the notes in "Overview of recommended child restraint systems" (→ page 56).

- Secure a rearward-facing child restraint system with the ISOFIX child seat attachment or the i-Size child seat attachment.
- Secure a forward-facing child restraint system with the ISOFIX child seat attachment or the i-Size child seat attachment and, if present, the Top Tether anchorage.

Suitability of the seats for attaching ISOFIX child restraint systems

Observe the following information:

- **When using a baby car seat of category 0/0+ and a rearward-facing child restraint system of category I on a rear seat:** adjust the driver's and front passenger seat such that the seat does not touch the child restraint system.
- **When using a forward-facing child restraint system of category I:** remove the

head restraint from the respective seat if possible and position the seat backrest of the child restraint system as flat as possible against the seat backrest of the vehicle seat.

- When you remove the child restraint system you must install the head restraint again immediately and adjust all of the head restraints correctly.
- For certain child restraint systems in weight categories II or III, there might be restrictions in the maximum size setting, e.g. due to possible contact with the roof.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat forward slightly.
- The child restraint system must not touch the roof or be put under strain by the head restraints. Adjust the head restraints accordingly.

- Observe the manufacturer's installation instructions for the child restraint system.

Legend for the table:

X	Not suitable for an ISOFIX child restraint system in this weight category and/or size category.
IUF	Suitable for forward-facing ISOFIX child restraint systems of the "Universal" category in this weight category.
IL	Suitable for ISOFIX child restraint systems according to the table in "Overview of the recommended child restraint systems", or if the vehicle and the seat are listed in the child restraint system manufacturer's vehicle model list.

Weight categories	Size category	Equipment	Rear seat Left, right
Carry cot	F	ISO/L1	X
	G	ISO/L2	X
Category 0: up to 10 kg and approx. 6 months	E	ISO/R1	IL
Category 0+: up to 13 kg and approx. 15 months	E	ISO/R1	IL
	D	ISO/R2	IL
	C	ISO/R3	IL ¹
Category I: 9 to 18 kg and between approx. 9 months and 4 years	D	ISO/R2	IL
	C	ISO/R3	IL ¹
	B	ISO/F2	IUF
	B1	ISO/F2X	IUF
	A	ISO/F3	IUF

¹ When using a child restraint system of size category C (ISO/R3), move the front seat to the highest position and move the seat backrest to an upright position. Make sure that the seat backrest of the front seat does not rest against the child restraint system.

Suitability of the seats for attaching i-Size child restraint systems

Observe the following information:

- **When using a rearward-facing child restraint system:** adjust the front seat so that it does not touch the child restraint system.
- **When using a forward-facing child restraint system:** remove the head restraint from the respective seat, if possible. In addition,

the seat backrest of the child restraint system must, as far as possible, lie flat against the backrest of the vehicle seat.

- When you remove the child restraint system you must install the head restraint again immediately and adjust all the head restraints correctly.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat forward slightly.

- Observe the manufacturer's installation instructions for the child restraint system.

Legend for the table:

X	Not suitable for an i-Size child restraint system in the "Universal" category.
i-U	Suitable for forward-facing and rearward-facing i-Size child restraint systems in the "Universal" category.

	Front passenger seat	Left rear seat	Centre rear seat	Right rear seat
i-Size child restraint system	X	i-U	X	i-U

Overview of recommended child restraint systems

Vehicles with belt airbags: When securing a child in a child restraint system on an outer rear seat, it is essential to observe the following instructions:

- Only use a child restraint system approved by Mercedes-Benz.

- Weight category 0, 0+ or 1: the child restraint system must be installed on the ISOFIX or i-Size child seat securing system.
- Weight category II/III: only used the approved child seats KIDFIX or KIDFIX XP.

- Secure a rearward-facing child restraint system with the ISOFIX or the i-Size child seat securing system.
- Secure a forward-facing child restraint system with the ISOFIX or the i-Size child seat securing system and, if present, the Top Tether anchorage.

- Observe the notes in "Belt airbag in rear seat belt" (→ page 32).

Recommended child restraint systems for attaching with the vehicle seat belt

Weight categories	Manufacturer	Type	Approval number (E1 ...)	Order number (A 000 ...) colour code 9H95
Category 0: up to 10 kg up to approximately 6 months	Britax Römer	BABY SAFE plus II	04 301 146	970 36 00 970 57 00
Category 0+: up to 13 kg up to approximately 15 months	Britax Römer	BABY SAFE plus II	04 301 146	970 36 00 970 57 00
Category I: 9 to 18 kg between approximately 9 months and 4 years	Britax Römer	DUO plus	04 301 133	970 37 00 970 58 00
Category II/III: 15 to 36 kg between approximately 4 and 12 years	Britax Römer	KIDFIX	04 301 198	970 38 00 970 59 00
	Britax Römer	KIDFIX XP	04 301 304	970 61 00

Recommended "Universal" and "Semi-Universal" category ISOFIX child restraint systems

Weight categories	Size category	Manufacturer	Type	Approval number (E1 ...)	Order number (colour code: 9H95)
Category 0+: up to 13 kg up to approximately 15 months	E	Britax Römer	BABY SAFE plus	04 301 146	B6 6 86 8224
Category I: 9 to 18 kg	B1	Britax Römer	DUO plus	04 301 133	A 000 970 37 00 A 000 970 58 00

 You can obtain further information on the correct child restraint system at any Mercedes-Benz Service Centre.

Child safety locks

Activating/deactivating the child safety lock for the rear doors

 **WARNING** Risk of accident and injury due to children left unattended in the vehicle

If you leave children unattended in the vehicle, they may be able to set the vehicle in motion, for example by:

- Releasing the parking brake.

- Shifting the automatic transmission out of park position **P** or shifting the manual transmission into neutral.
- Starting the engine.

In addition, they may operate vehicle equipment.

- ▶ Never leave children and animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes connect me web app.

⚠ WARNING This poses an increased risk of death due to heat stroke or exposure to cold in the vehicle

If persons – particularly children – experience prolonged exposure to extremely high or low temperatures, this poses a risk of injury or even fatal injury.

- ▶ Never leave anyone – particularly children – unattended in the vehicle.

⚠ WARNING Risk of accident and injury due to children left unattended in the vehicle


If children are travelling in the vehicle, they could:

- Open doors, thereby endangering other persons or road users.
- Get out of the vehicle and be hit by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.
- ▶ Always activate the child safety locks installed if children are travelling in the vehicle.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the

"Digital Car Key in the smartphone" function is activated via the Mercedes connect me web app.


Child safety locks are available for the rear doors and for the rear side windows.

The child safety lock on the rear doors secures each door separately. The doors can no longer be opened from the inside.

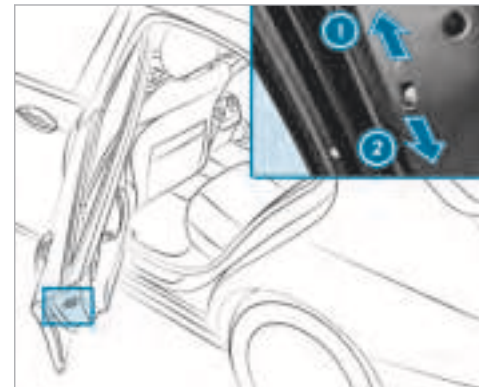

- ▶ Press the lever in direction ① (activate) or ② (deactivate).
- ▶ Make sure that the child safety locks are working properly.

Activating/deactivating the child safety lock for the rear side windows

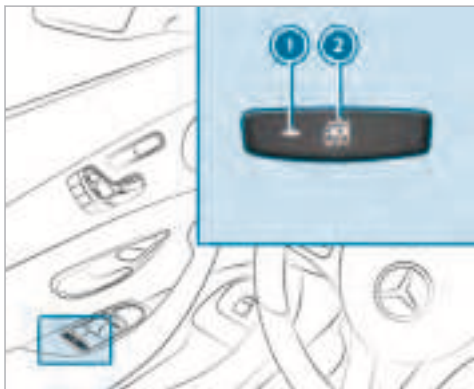

- ▶ **To activate/deactivate:** press button ②.
- Opening/closing the side window in the rear is possible:
- With indicator lamp ① lit: via the switch on the driver's door.
 - With indicator lamp ① off: via the switch on the corresponding rear door or driver's door.

Pets in the vehicle

⚠ WARNING Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could possibly press down buttons or switches.

Thereby an animal may:

- activate vehicle equipment and become trapped, for example
- switch systems on or off and endanger other road users

Unsecured animals may be thrown around in the vehicle in the event of an accident or sudden steering and braking manoeuvres and injure vehicle occupants in the process.

- ▶ Never leave animals in the vehicle unattended.
- ▶ Always correctly secure animals while driving, e.g. using a suitable animal carrier.

Key

Overview of key functions

⚠ WARNING - There is a risk of accident and injury if you leave children unattended in the vehicle

If children are left unattended in the vehicle, they could:

- open doors, thereby endangering other persons or road users.
- get out of the vehicle and be hit by oncoming traffic.
- operate vehicle equipment.

Moreover, the children could also set the vehicle in motion by, for example:

- releasing the parking brake
- shifting the automatic transmission out of park position P **P** or shifting manual transmission into idle position.
- starting the engine.

- ▶ Never leave children or animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Keep the vehicle key out of the reach of children.

! NOTE Damage to the key caused by magnetic fields

- ▶ Keep the key away from strong magnetic fields.



- ① Locks
- ② Battery check lamp
- ③ Unlocks
- ④ Opens/closes the boot lid

The key locks and unlocks the following components:

- The doors
- The boot lid
- The fuel filler flap

If you do not open the vehicle within approximately 40 seconds after unlocking:

- The vehicle is locked again.

- Anti-theft protection is reactivated.

Do not keep the key together with electronic devices or metal objects. This can affect the key's functionality.

- ❗ If battery check lamp ❷ does not light up after pressing the  or  button, the battery is discharged.

Replacing the key battery (→ page 63).

Activating/deactivating the acoustic locking verification signal

Multimedia system:

➔ Vehicle ➔  Vehicle settings ➔ Acoustic lock

- ▶ Activate ☒ or deactivate ☐ the function.

Priming/deactivating the panic alarm

Requirement:

- Ignition is switched off.



- ▶ **To prime:** press button ❶ for approximately one second.
A visual and audible alarm is triggered.
- ▶ **To deactivate:** briefly press button ❶ again.
- or
- ▶ Press the start/stop button on the cockpit (the key is inside the vehicle).

Changing the unlocking settings

Possible unlocking functions of the key:

- Central unlocking
- Unlocking the driver's door and fuel filler flap

- ▶ **To switch between settings:** press the  and  buttons simultaneously for approximately six seconds until the battery check lamp flashes twice.

If the unlocking function for the driver's door and fuel filler flap has been selected:

- Pressing the  button a second time centrally unlocks the vehicle.
- **Vehicles with KEYLESS-GO:** If you touch the inner surface of the door handle on the driver's door, only the driver's door and fuel filler flap are unlocked.


Reducing the energy consumption of the key

If you do not use the vehicle or a key for an extended period of time, you can reduce the energy consumption of the respective key. Deactivate the KEYLESS-GO function of the key.

- ▶ **To deactivate:** press the  button on the key twice in rapid succession.
The battery check lamp of the key flashes twice briefly and lights up once.
- ▶ **To activate:** press any button on the key.

- ① When the vehicle is started with the key in the stowage compartment of the centre console (→ page 157), the key functions are automatically activated.

Inserting/removing the emergency key

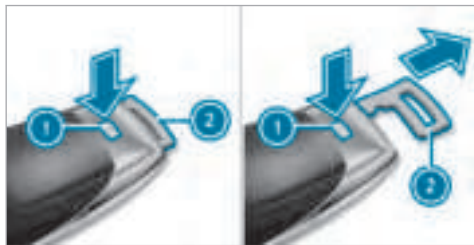

- ▶ **To remove:** press release knob ①. Emergency key ② is pushed out slightly.
 - ▶ Pull out emergency key ② until it engages in the intermediate position.
- ① You can use the intermediate position of emergency key ② to attach the key to a key ring.

- ▶ Press release knob ① again and fully remove emergency key ②.
- ▶ **To insert:** press release knob ①.
- ▶ Insert emergency key ② to the intermediate position or fully until it engages.

Replacing the key battery

⚠ DANGER Serious damage to health caused by swallowing batteries

Batteries contain toxic and corrosive substances. Swallowing batteries may cause serious damage to health.

There is a risk of fatal injury.

- ▶ Keep batteries out of the reach of children.
- ▶ If batteries are swallowed, seek medical attention immediately.



ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.



Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirement:

- You require a CR 2032 3 V cell battery.

Mercedes-Benz recommends that you have the battery replaced at a qualified specialist workshop.

- ▶ Remove the emergency key (→ page 63).



- ▶ Press release button ② down fully and remove cover ①.
- ▶ Remove battery compartment ③ and take out the discharged battery.
- ▶ Insert the new battery into battery compartment ③. Observe the positive pole marking in the battery compartment and on the battery.
- ▶ Push in battery compartment ③.
- ▶ Replace cover ① so that it engages.

Problems with the key

Problem	Possible causes/consequences and ▶ Solutions
You can no longer lock or unlock the vehicle.	Possible causes: • The key battery is discharged or nearly discharged. • There is interference from a powerful radio signal source. • The key is faulty. ▶ Check the battery using the battery check lamp and replace if necessary . ▶ Use the emergency key to lock or unlock the vehicle .

Problem	Possible causes/consequences and ► Solutions
You have lost a key.	► Have the key checked at a qualified specialist workshop.
	► Have the key deactivated at a qualified specialist workshop.
	► If necessary, have the locks changed as well.

Doors

Notes on the additional door lock

The additional door lock is only available for vehicles for the United Kingdom.

⚠ WARNING Risk of injury to persons inside the vehicle when the additional door lock is activated

If the additional door lock is activated, the doors can no longer be opened from the inside.

If there are persons in the vehicle, they can no longer leave the vehicle, e.g. in hazardous situations.

- Never leave persons unattended in the vehicle, particularly children, elderly persons or persons in need of help.
- If there are persons in the vehicle, do not activate the additional door lock.

The additional door lock is automatically activated:


- After locking the vehicle with the key.
- After locking the vehicle using KEYLESS-GO.
- ① After locking the vehicle, the horn can be operated for a short time.
- ① After locking the vehicle, pressing the button to centrally unlock the vehicle from inside will trigger an alarm (→ page 66).

If the additional door lock is activated, the doors cannot be opened from the inside.

You can deactivate the additional door lock by deactivating the interior protection (→ page 87).


Unlocking and opening the doors from the inside

United Kingdom only: observe the notes on the additional door lock (→ page 65).

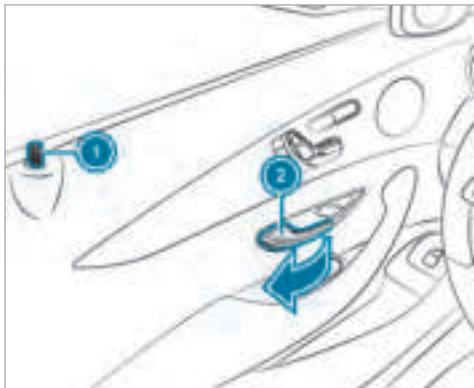

- ▶ Pull door handle ②.
Locking pin ① pops up when the door is unlocked.

Locking/unlocking the vehicle centrally from the inside

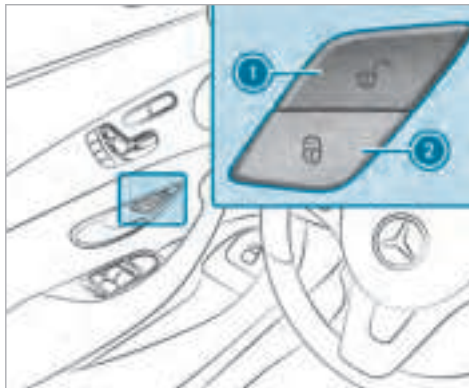

- ▶ **To unlock:** press button ①.
- ▶ **To lock:** press button ②.

This does not lock or unlock the fuel filler flap.
The vehicle is not unlocked:

- If you have locked the vehicle using the key.

- If you have locked the vehicle using KEY-LESS-GO.


Unlocking/locking the vehicle via a mobile phone

Requirements:

- Vehicle with the "Digital Car Key in the smartphone" function.
- The "Digital Car Key in the smartphone" function is activated via the Mercedes me connect web app: <https://www.mercedes.me>.
- Suitable mobile phone with NFC aerial (Near Field Communication) and Secure Element.
- **Sufficient charge level of the mobile phone.** On some mobile phones, the function is also available when the battery is discharged.

If the vehicle has been parked for longer than two weeks, the NFC aerial in the door handle is deactivated. Pull the door handle to activate the NFC aerial again.

- ① You can check the suitability of your mobile phone by entering the phone number at <https://www.mercedes.me>. Information about suitable mobile phones can be obtained from your Mercedes-Benz Service Centre or on the Internet at <http://www.mercedes-benz.com/connect>.
- ① The function is only available in combination with Mercedes me connect and only in certain countries.
- ① Protective cases around the mobile phone can impair the functionality.

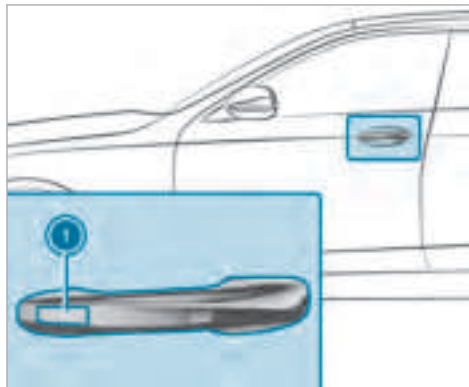

- ▶ Touch the door handle on the driver's door in the area where NFC aerial ① is located with the part of the mobile phone where the NFC aerial is located.
The vehicle is locked or unlocked alternately.


If you lose your mobile phone, deactivate the "Digital Car Key in the smartphone" service in Mercedes me connect at <https://www.mercedes.me>.

- ① Mercedes-Benz recommends that you carry the emergency key in case of function restrictions.

Locking and unlocking the vehicle with KEY-LESS-GO

Requirements:

- The key must be outside the vehicle.
- The distance between the key and the vehicle must not exceed 1 m.
- The driver's door and the door at which the door handle is used must both be closed.

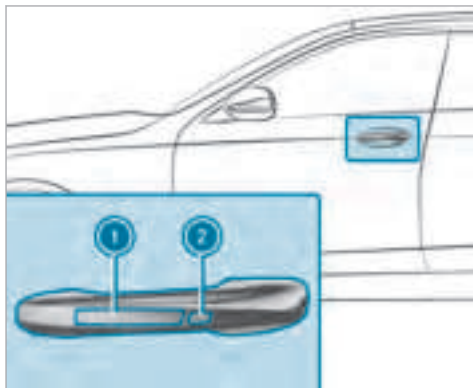

► **To unlock the vehicle:** touch the inner surface of the door handle.

► **To lock the vehicle:** touch sensor surface ① or ②.

► **Convenience closing:** touch recessed sensor surface ② for an extended period.

① For further information on convenience closing (→ page 79).

If you open the boot lid from outside, the boot lid is automatically unlocked.


Problems with KEYLESS-GO

Problem	Possible causes/consequences and ► Solutions
You can no longer lock or unlock the vehicle using KEYLESS-GO.	Possible causes: • KEYLESS-GO has been deactivated . • The key battery is discharged or nearly discharged. • There is interference from a powerful radio signal source.

Problem	Possible causes/consequences and ► Solutions
	• The key is faulty. ► Activate KEYLESS-GO . ► Check the battery using the battery check lamp and replace if necessary . ► Use the emergency key to lock or unlock the vehicle . ► Have the vehicle and key checked at a qualified specialist workshop.

Switching the automatic locking feature on/off

The vehicle is locked automatically when the ignition is switched on and the wheels are turning faster than walking pace.

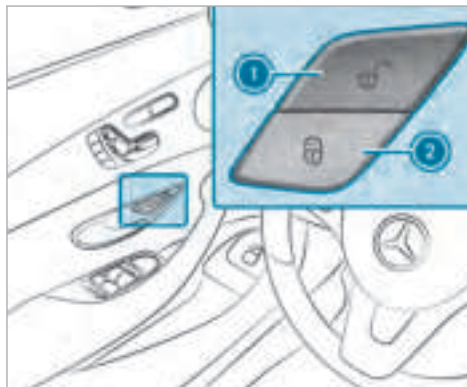


- **To deactivate:** press and hold button ① for approximately five seconds until an acoustic signal sounds.
- **To activate:** press and hold button ② for approximately five seconds until an acoustic signal sounds.

Danger of being locked out when the function is activated:


- If the vehicle is being tow started/pushed.
- On a roller dynamometer.

Unlocking/locking the driver's door using the emergency key element

- ❗ If you wish to lock the vehicle entirely using the emergency key, first press the button for locking from the inside while the driver's door is open. Then proceed to lock the driver's door using the emergency key element.

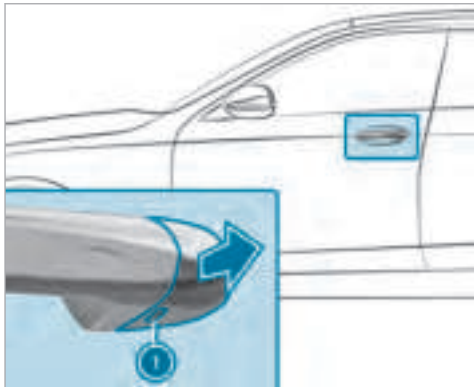

- Insert the emergency key as far as it will go into opening ❶ in the cover.
- Pull and hold the door handle.
- Pull the cover on the emergency key as straight as possible away from the vehicle until it releases.
- Release the door handle.

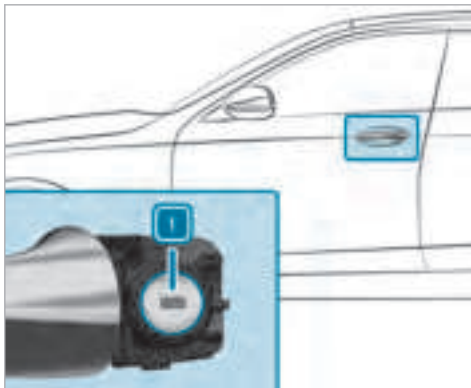

- **To unlock:** turn the emergency key anti-clockwise to position ❶.
- **To lock:** turn the emergency key clockwise to position ❶.
- ❗ **Right-hand drive vehicles:** turn the emergency key in the opposite direction in each case.
- Carefully press the cover onto the lock cylinder until it engages and is seated firmly.

Boot

Opening the boot lid

⚠ **WARNING** Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the boot lid is open when the engine is running, especially if the vehicle is in motion.

- Always switch off the engine before opening the boot lid.
- Never drive with the boot lid open.


! NOTE Damage to the boot lid by obstacles above the vehicle

The boot lid swings upwards when it is opened.

- ▶ Therefore, make sure that there is sufficient clearance above the boot lid.

You have the following options to open the boot lid:

- ▶ Pull the boot lid handle.
- ▶ **Vehicles with boot lid convenience closing feature:** With the boot lid stopped in an intermediate position, pull it upwards and release as soon as it begins to open.
- ▶ Press and hold the  button on the key.

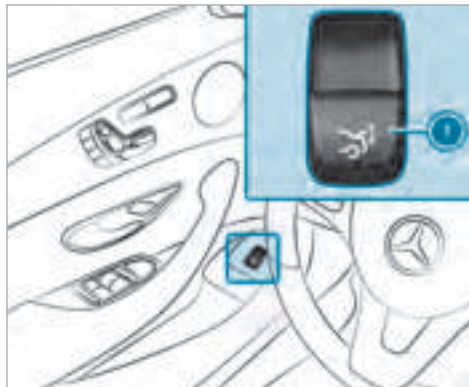

- ▶ Pull boot lid remote operating switch ①.
- ▶ **Vehicles with HANDS-FREE ACCESS:** move your foot below the bumper (→ page 73).

Vehicles with boot lid convenience closing: if an object restricts the boot lid during the automatic opening process, the obstacle detection stops the boot lid. The obstacle detection function is only an aid and is not a substitute for your attentiveness.

Closing the boot lid

! WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Before the journey, secure objects, luggage or loads against slipping or tipping over.

! WARNING Risk of becoming trapped during automatic closing of the boot lid

Parts of the body could become trapped during automatic closing of the boot lid. Moreover, people, e.g. children, may be standing

in the closing area or may enter the closing area during the closing process.


- ▶ Make sure that nobody is in the vicinity of the closing area during the closing process.
- ▶ Use one of the following options to stop the closing process:
 - Press the  button on the key.
 - Press or pull the remote operating switch on the driver's door.
 - Press the closing or locking button on the boot lid.
 - Pull the boot lid handle.

Vehicles with HANDS-FREE ACCESS: it is also possible to stop the closing process by moving your foot in a kicking motion under the rear bumper.

You have the following options to close the boot lid:


- ▶ Pull the boot lid down using the handle recess and push it closed.

- ▶ **Vehicles with boot lid convenience closing:** pull the boot lid handle.
- ▶ **Vehicles with boot lid convenience closing:** press and hold the  button on the key (with the key in the vicinity of the vehicle).

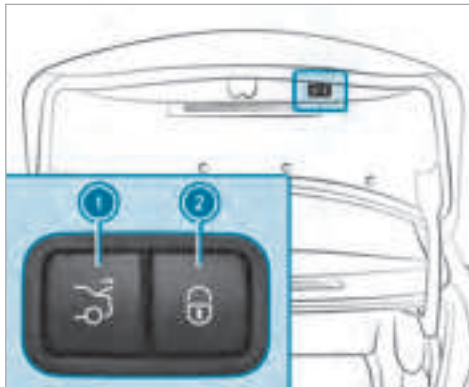

- ▶ **Vehicles with boot lid convenience closing:** press closing button ① in the boot lid.

- ▶ **Vehicles with boot lid convenience closing and KEYLESS-GO:** press locking button ② in the boot lid.
If a key is detected outside the vehicle, the boot lid closes and the vehicle is locked.

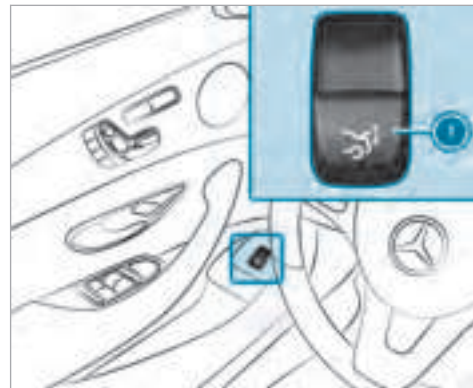

- ▶ **Vehicles with boot lid convenience closing:** press boot lid remote operating switch ①.

- **Vehicles with HANDS-FREE ACCESS:** move your foot in a kicking motion under the bumper (→ page 73).

Automatic reversing function of the boot lid

If an object restricts the boot lid during the automatic closing process, the boot lid opens again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- When closing, make sure that no body parts are in the closing area.

⚠ **WARNING** Risk of becoming trapped despite reversing function

The reversing function does not react:

- to soft, light and thin objects, e.g. fingers.
- over the last 8 mm of the closing path.


In these situations in particular, the reversing function cannot prevent someone being trapped.

- When closing, make sure that no body parts are in the closing area.

► If someone is trapped, use one of the following options:

- Press the  button on the key.
- Press the remote operating switch on the driver's door.
- Press the closing or locking button on the boot lid.
- Pull the boot lid handle.

HANDS-FREE ACCESS function

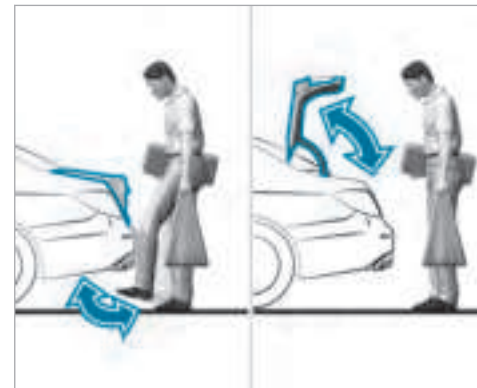

With HANDS-FREE ACCESS you can open, close or interrupt boot lid movement by performing a kicking movement under the rear bumper.

The kicking movement triggers the opening or closing process alternately.

Observe the notes when opening (→ page 70) and closing (→ page 71) the boot lid.

- ① A warning tone sounds while the boot lid is opening or closing.

⚠ WARNING Risk of burns caused by a hot exhaust system

The vehicle exhaust system can become very hot. If you use HANDS-FREE ACCESS, you could burn yourself by touching the exhaust system.

- ▶ Always ensure that you only make a kicking movement within the detection range of the sensors.


! NOTE Damage to the vehicle caused by unintentionally opening the boot lid:

- when using an automatic car wash
- when using a high pressure cleaner
- ▶ Deactivate KEYLESS-GO or make sure that the key located is at least 3 m away from the vehicle in such situations.

When making the kicking movement, make sure that your feet are firmly on the ground, otherwise you could lose your balance, e.g. on ice.

Requirements:

- The key is behind the vehicle.
- Stand at least 30 cm away from the vehicle while performing the kicking movement.
- Do not come into contact with the bumper while making the kicking movement.
- Do not carry out the kicking movement too slowly.
- The kicking movement must be towards the vehicle and back.

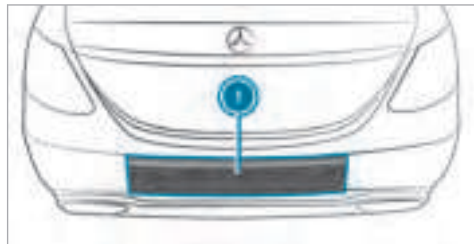

① Sensor detection range

If several consecutive kicking movements are not successful, wait ten seconds.

System limitations

The system may be impaired or may not function if:

- Snow or dirt, e.g. from road salt, covers the sensor area.
- The kicking movement is made using a prosthetic leg.


The boot lid could be opened or closed unintentionally, in the following situations:

- If a person's arms or legs are moving in the sensor detection range, e.g. when polishing the vehicle, sitting on the edge of the boot, or picking up objects.
- If objects are moved or placed behind the vehicle, e.g. charging cables, tensioning straps or luggage
- When working on the trailer coupling, trailers or rear bicycle racks.

Deactivate KEYLESS-GO (→ page 62) or do not carry the key about your person in such situations.

Switching separate boot locking on/off

If you centrally unlock the vehicle while separate locking is activated, the boot remains locked.

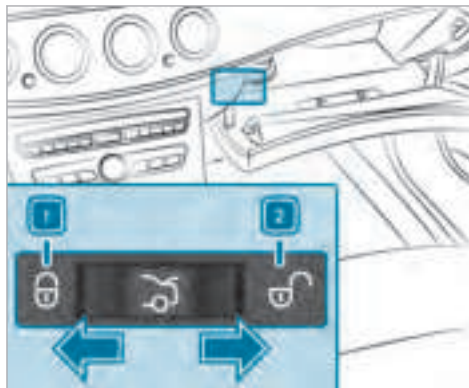

- ▶ **To switch on:** slide the switch to position **1**.
- ▶ **To switch off:** slide the switch to position **2**.
- ⓘ If an accident has been detected, the boot unlocks even if separate locking is switched on.

Activating/deactivating the boot lid opening limiter

Multimedia system:

→ Vehicle ► Vehicle settings ► Boot lid open. limiter

Activating the function allows you to avoid bumping the boot lid on a low garage ceiling, for example.

▶ Activate ☒ or deactivate ☐ the function.

Roller sunblinds


Extending the rear side window roller sunblinds

! NOTE Damage to the inertia reel due to it snapping back

If suddenly snapped back, the inertia reel may be damaged.

▶ Always move the roller sun blind manually.

- ▶ Do not drive with the roller sun blind hooked in and one or more side windows open at the same time.

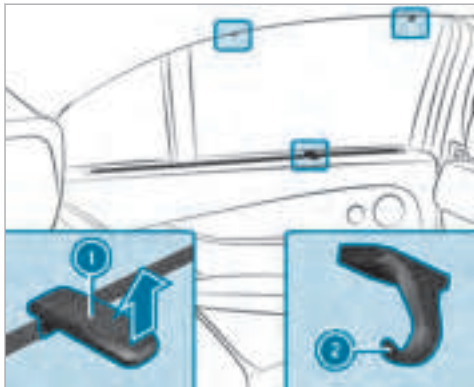

- ▶ Pull the roller sun blind out by tab ① and hook it onto brackets ② at the top of the window.

Extending/retracting the rear window roller sunblind


⚠ WARNING Risk of entrapment when extending or retracting the roller sunblind

Body parts could become entrapped in the sweep of the roller sunblind when it is being extended or retracted.

- ▶ Make sure that no body parts are in the sweep of the roller sunblind when it is being extended or retracted.
- ▶ If someone becomes trapped, briefly press the button again. The opening or closing process is briefly stopped. The roller sun blind then returns to its starting position.

! NOTE Damage caused by objects

- ▶ Make sure that the roller sunblind can move freely.

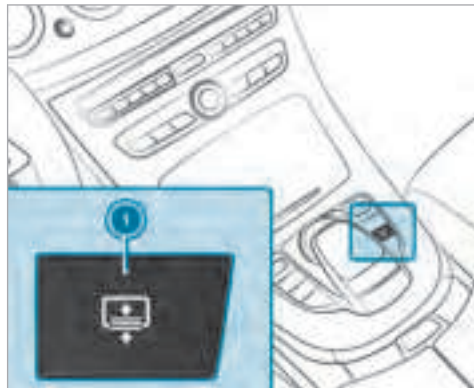

- ▶ To extend or retract: press button ①.

Side windows

Opening/closing the side windows

⚠ WARNING Risk of becoming trapped when opening a side window

When you open a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ▶ When opening, make sure that nobody is touching the side window.
- ▶ If someone is trapped, release the button immediately or pull it in order to close the side window again.

⚠ WARNING Risk of becoming trapped when closing a side window

When closing a side window, body parts could be trapped in the closing area in the process.


- ▶ When closing, make sure that no body parts are in the closing area.

- ▶ If someone is trapped, release the button immediately or press the button in order to reopen the side window.

⚠ WARNING Risk of becoming trapped when children operate the side windows

Children could become trapped if they operate the side windows, particularly when unattended.

- ▶ Activate the override feature for the rear side windows.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.
- ▶ Never leave children unattended in the vehicle.

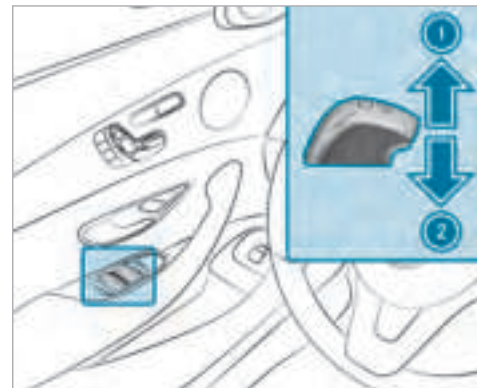

- ① To close
- ② To open

The buttons in the driver's door take precedence.

- ▶ **To start automatic operation:** press/pull the  button beyond the pressure point.
- ▶ **To interrupt automatic operation:** press/pull the  button again.

Automatic reversing function for the side windows

If an object blocks a side window during the closing process, the side window opens again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ When closing, make sure that no body parts are in the closing area.

⚠ WARNING Risk of becoming trapped despite there being reversing protection on the side window

The reversing function does not react:

- to soft, light and thin objects, e.g. small fingers
- over the last 4 mm of the closing path
- during resetting
- when closing the side window again manually immediately after automatic reversing

This means that the reversing function cannot prevent someone from becoming trapped in these situations.

- ▶ When closing, make sure that no body parts are in the closing area.
- ▶ If someone becomes trapped, press the  button to open the side window again.

Ventilating the vehicle before starting a journey (convenience opening)

⚠ WARNING Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ▶ When opening, make sure that nobody is touching the side window.
- ▶ Release the button immediately if somebody becomes trapped.

- ▶ Press and hold the  button on the key.

The following functions are performed:

- The vehicle is unlocked.
- The side windows are opened.
- The sliding sunroof is opened.
- The panoramic sliding sunroof is opened.
- The seat ventilation of the driver's seat is switched on.

If the roller sunblinds of the panoramic sliding sunroof are closed, the roller sunblinds are opened first.

- ▶ **To continue the opening procedure:** press the  button again.
- ▶ **To interrupt convenience opening:** release the  button.

Closing side windows from the outside (convenience closing)

⚠ WARNING Risk of entrapment caused by inadvertent convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side window and the sliding sunroof.

▶ Observe the complete closing procedure when using convenience closing.

▶ When closing, make sure that no body parts are in the closing area.

- ▶ Press and hold the  button on the key. The following functions are performed:
- The vehicle is locked.
 - The side windows are closed.
 - The sliding sunroof is closed.
 - The panoramic sliding sunroof is closed.

▶ **To close the roller sunblinds:** press the  button again.

▶ **To interrupt convenience closing:** release the  button.

i Convenience closing can also be operated with KEYLESS-GO (→ page 67).

Problems with the side windows

Problem	Possible causes/consequences and ▶ Solutions
A side window cannot be closed and you cannot see the cause.	▶ Check to see if any objects are in the window guide. ⚠ WARNING Risk of becoming trapped or fatally injured if reversing protection is not activated If you close a side window again immediately after it has been blocked or reset, the side window closes with increased or maximum force. The reversing feature is then not active. Parts of the body could become trapped in the closing area in the process.

Problem	Possible causes/consequences and ► Solutions
	► Make sure that no parts of the body are in the closing area. ► To stop the closing process, release the button or press the button again to reopen the side window. If a side window is obstructed during closing and reopens again slightly: ► Immediately after the window is obstructed, pull the corresponding button again until the side window has closed, and hold the button for an additional second. The side window is closed with increased force. If a side window is obstructed again during closing and reopens again slightly: ► Repeat the previous step. The side window is closed without the automatic reversing function.

Sliding sunroof

Opening/closing the sliding sunroof

- ❗ The term "sliding sunroof" also refers to the panoramic sliding sunroof.

⚠ WARNING Risk of becoming trapped while opening and closing the sliding sunroof

During opening and closing, parts of the body could get caught in the sweep of the sliding sunroof.

- When opening or closing, make sure that no body parts are in the sweep.

- Release the button immediately if somebody becomes trapped.

or

- Press the button in any direction during the automatic opening/closing process. The opening/closing process is stopped.

⚠ WARNING Risk of entrapment if the sliding sunroof is operated by children

Children operating the sliding sunroof could get caught in the moving parts, particularly if unattended.

- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle.

⚠ WARNING Risk of entrapment while opening and closing the roller sunblinds

When opening or closing, make sure that no body parts become trapped between the roller sunblind and frame or sliding sunroof.

- ▶ When opening or closing, make sure that no body parts are in the sweep of the roller sunblind.
- ▶ Release the switch immediately if somebody becomes trapped.

or

- ▶ Press the switch in any direction during the automatic opening/closing process. The opening/closing process is stopped.

! NOTE Malfunction caused by snow and ice


Snow and ice may lead to a malfunction of the sliding sunroof.

- ▶ Only open the sliding sunroof if it is free of snow and ice.

! NOTE Damage caused by protruding objects

Objects that protrude from the sliding sunroof may damage the sealing strips.

- ▶ Do not allow anything to protrude from the sliding sunroof.

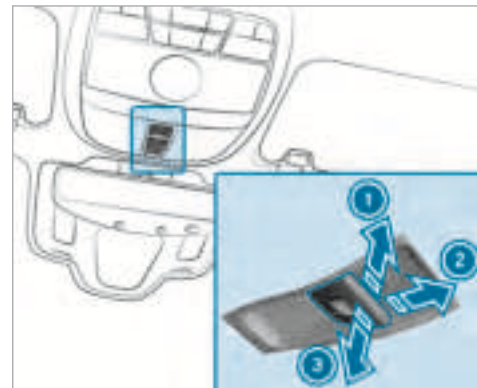

- ① To raise
- ② To open
- ③ To close/lower

Use the  button to operate the panoramic sliding sunroof and the roller sunblind.

- The panoramic sliding sunroof can only be opened when the roller sunblind is open.

- The roller sunblind can only be operated when the panoramic sliding sunroof is closed.

- ▶ **To start automatic operation:** press/pull the  button beyond the pressure point.
- ▶ **To interrupt automatic operation:** press/pull the  button again.

Restrictions:

- The panoramic sliding sunroof cannot be opened if a roof rack is fitted. The panoramic sliding sunroof closes again automatically when it encounters resistance.

Automatic reversing function of the sliding sunroof

If there is an object obstructing the sliding sunroof during the closing process, the sliding sunroof opens again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ When closing, make sure that no body parts are in the closing area.

⚠ WARNING Risk of entrapment even with the reversing feature active

The reversing function does not react:

- to soft, light and thin objects, e.g. small fingers
- during the last 4 mm of the closing path
- during resetting
- when closing the sliding sunroof again manually immediately after automatic reversing

This means that the reversing feature cannot prevent someone being trapped in these situations.

- ▶ When closing, make sure that no body parts are in the closing area.
 - ▶ Release the switch immediately if somebody becomes trapped.
- or
- ▶ Press the switch in any direction during the automatic closing process. The closing process is stopped.

Automatic reversing function of the roller sunblind

If there is an object obstructing the roller sunblind during the closing process, the roller sunblind opens again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

- ▶ When opening or closing the roller sunblind, make sure that no body parts are in the sweep.

⚠ WARNING Risk of becoming trapped despite the reversing function being active

In particular, the reversing function does not react to soft, light and thin objects, e.g. small fingers.

This means that the reversing function cannot prevent entrapment in these situations.

- ▶ When opening or closing the roller sunblind, make sure that no body parts are in the sweep.
- ▶ Release the button immediately if somebody becomes trapped.

or

- ▶ Press the button in any direction during the automatic closing process. The closing process is stopped.

Automatic features of the sliding sunroof

- ❶ The term "sliding sunroof" also refers to the panoramic sliding sunroof.

By pushing or pulling the  button, you can interrupt the automatic functions: "Rain closing function when driving" and "Automatic lowering feature".

Automatic closing when the vehicle is stationary

- if it starts to rain (detection by the rain sensor on the windscreen)

- at extreme outside temperatures
- after six hours
- if there is a malfunction in the power supply

The rear of the sliding sunroof is then raised.

Rain closing function when driving

Vehicles with a panoramic sliding sunroof: If it starts to rain, the raised sliding sunroof is automatically lowered while the vehicle is in motion.

Automatic lowering feature

Vehicles with a panoramic sliding sunroof: If the sliding sunroof is raised at the rear, the sliding sunroof is automatically lowered slightly at higher speeds. At low speeds, it is raised again automatically.

⚠ WARNING Risk of entrapment by automatic lowering of the sliding sunroof

At high speeds the raised sliding sunroof automatically lowers slightly at the rear.

This could trap you or other persons.

- ▶ Make sure that nobody reaches into the sweep of the sliding sunroof whilst the vehicle is in motion.
- ▶ If somebody becomes trapped, immediately pull back the sliding sunroof switch. The sliding sunroof lifts during opening.

Problems with the sliding sunroof

- ❶ The term "sliding sunroof" also refers to the panoramic sliding sunroof.

Problem

The sliding sunroof cannot be closed and you cannot see the cause.

Possible causes/consequences and ► Solutions

▲ WARNING Risk of becoming trapped or fatal injury by closing the sliding sunroof again

If you close the sliding sunroof again immediately after it has been blocked or reset, the sliding sunroof closes with increased or maximum force.

The reversing feature is then not active. Parts of the body could become trapped in the closing area in the process.

- Make sure that no parts of the body are in the closing area.
- Release the button immediately if somebody becomes trapped.

or

- Press the button in any direction during the automatic closing process.
The closing process is stopped.

If the sliding sunroof is obstructed during closing and reopens again slightly:

- Immediately after automatic reversing, pull and hold the  button down again to the point of resistance until the sliding sunroof is closed.
The sliding sunroof is closed with increased force.

If the sliding sunroof is obstructed again and reopens again slightly:

- Repeat the previous step.
The sliding sunroof is closed again with increased force.

Problem	Possible causes/consequences and ► Solutions
Vehicles without a panoramic sliding sunroof: The sliding sunroof does not operate smoothly.	► Raise the sliding sunroof fully at the rear. ► Press the  button for another second. ► Use automatic operation to fully raise and then close the sliding sunroof.
Vehicles with a panoramic sliding sunroof: The sliding sunroof or the roller sunblind does not operate smoothly.	► Pull the  button down repeatedly to the point of resistance until the sliding sunroof is fully closed. ► Pull the  button for another second. ► Pull and hold the  button down until the roller sunblind is completely closed. ► Pull the  button for another second. ► Use automatic operation to fully open and then close the sliding sunroof.

Anti-theft protection

Function of the immobiliser

The immobiliser prevents your vehicle from being started without the correct key.

The immobiliser is automatically activated when the ignition is switched off and deactivated when the ignition is switched on.

ATA (Anti-Theft Alarm system)

Function of the ATA system (anti-theft alarm system)


If the ATA system is primed, a visual and audible alarm is triggered in the following situations:

- A door is opened.
- The boot lid is opened.
- The bonnet is opened.
- Interior protection is triggered. (→ page 87)

- Tow-away protection is triggered. (→ page 86)

The ATA system is primed automatically after approximately 10 seconds:

- After locking the vehicle with the key.
- After locking the vehicle using KEYLESS-GO.

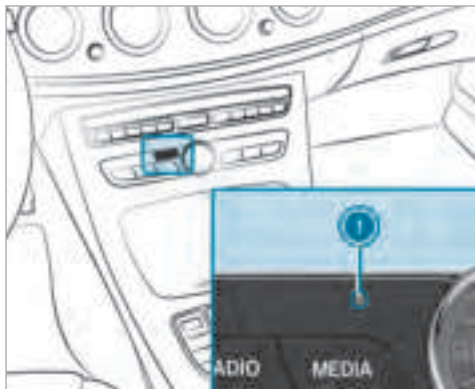

When the ATA system is primed, indicator lamp ❶ flashes.

The ATA system is automatically deactivated:

- After unlocking the vehicle with the key.
- After pressing the start/stop button with the key inside the vehicle.
- After unlocking the vehicle using KEYLESS-GO.

- ❶ When the Mercedes-Benz emergency call system is active and the alarm stays on for more than 30 seconds, a message is automatically sent to the Customer Assistance Centre (→ page 314).

Deactivating the ATA (anti-theft alarm system) alarm

- ▶ Press the , or button on the key.

or

- ▶ Press the start/stop button (the key is inside the vehicle).

Stopping the alarm using KEYLESS-GO

- ▶ Grasp the outside door handle (with the key outside the vehicle).

Tow-away protection

An audible and visual alarm is triggered if your vehicle's angle of inclination is altered while tow-away protection is primed.

Tow-away protection is automatically primed after about 60 seconds:

- After locking the vehicle with the key.
- After locking the vehicle using KEYLESS-GO.

Tow-away protection is only primed when the following components are closed:

- Doors
- Boot lid

Tow-away protection is automatically deactivated:

- After pressing the or button on the key.
- After pressing the start/stop button with the key inside the vehicle.
- After unlocking the vehicle using KEYLESS-GO.
- When using HANDS-FREE ACCESS.

Priming/deactivating tow-away protection

Multimedia system:

→ Vehicle ►  Vehicle settings ► Tow-away protection

► Activate ☒ or deactivate ☐ the function.

Tow-away protection remains deactivated until:

- The vehicle is unlocked again.
- A door is opened and closed again.
- The vehicle is locked again.

Interior protection

When interior protection is primed, a visual and audible alarm is triggered if movement is detected in the vehicle interior.

Interior protection is primed automatically after approximately 10 seconds:

- After locking the vehicle with the key.
- After locking the vehicle using KEYLESS-GO.

Interior protection is only primed when the following components are closed:

- Doors
- Boot lid

Interior protection is automatically deactivated:

- After pressing the  or  button on the key.
- After pressing the start/stop button with the key inside the vehicle.
- After unlocking the vehicle using KEYLESS-GO.
- When using HANDS-FREE ACCESS.

The following situations can lead to a false alarm:

- Moving objects such as mascots in the vehicle interior.
- The side window is open.
- When the sliding sunroof is open.
- The panoramic sliding sunroof is open.

Priming/deactivating interior protection

Multimedia system:

→ Vehicle ►  Vehicle settings ► Interior motion sensor

► Activate ☒ or deactivate ☐ the function.

Interior protection remains deactivated until:

- The vehicle is unlocked again.
- A door is opened and closed again.
- The vehicle is locked again.


Notes on the correct driver's seat position

⚠ WARNING Risk of injury through adjusting vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations:

- if you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion

► Before starting the engine: adjust the driver's seat, the head restraints, the steering wheel or the mirror and fasten your seat belt.

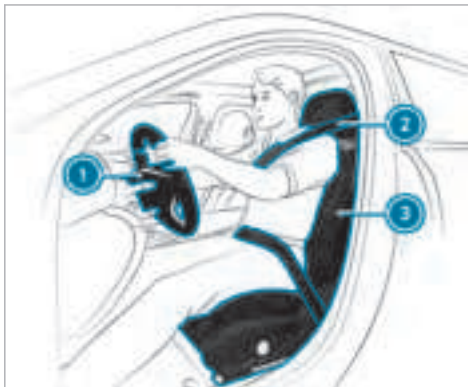

Observe the following when adjusting steering wheel ①, seat belt ② and driver's seat ③:

- you are as far away from the driver's airbag as possible
- you are sitting in a normal upright position
- your thighs are slightly supported by the seat cushion

- your legs are not entirely stretched and you can depress the pedals properly
- the back of your head is supported at eye level by the centre of the head restraint
- you can hold the steering wheel with your arms slightly bent
- you can move your legs freely
- you can see all the displays in the instrument cluster clearly
- you should have a good overview of traffic conditions
- the seat belt is pulled snugly against the body and must be routed across the centre of your shoulder and across your hips in the pelvic area

Seats

Adjusting the front seat manually and electrically (without Seat Comfort Package)

- ⚠ WARNING** Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes connect me web App.
- ▶ Never leave children unattended in the vehicle.

The seats can be adjusted when the ignition is switched off.

- ⚠ WARNING** Risk of becoming trapped when adjusting the seats

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

- ▶ Make sure when adjusting a seat that no one has any body parts in the sweep of the seat.

Observe the safety notes on "Airbags" and "Children in the vehicle".

- ⚠ WARNING** Risk of accident due to the driver's seat not being engaged

If the driver's seat is not engaged, it could move unexpectedly while the vehicle is in motion.

This could cause you to lose control of the vehicle.

- ▶ Always make sure that the driver's seat is engaged before starting the vehicle.

- ⚠ WARNING** Risk of injury through adjusting vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations:

- if you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion
 - if you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the engine: adjust the driver's seat, the head restraints, the steering wheel or the mirror and fasten your seat belt.

- ⚠ WARNING** Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- ▶ While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

⚠ WARNING Risk of injury due to head restraints which are not fitted or are adjusted incorrectly

If head restraints are not fitted or are adjusted incorrectly, they cannot provide protection as intended.

There is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- ▶ Always drive with the head restraints fitted.
- ▶ Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you cannot adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

⚠ WARNING Risk of injury or death due to incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.


When braking or in the event of an accident, you could slide underneath the seat belt and sustain abdominal or neck injuries, for example.

- ▶ Adjust the seat properly before beginning your journey.
- ▶ Always ensure that the seat backrest is in an almost vertical position and that the shoulder section of your seat belt is routed across the centre of your shoulder.

! NOTE Damage to the seats when moving the seats back

The seats may be damaged by objects when moving the seats back.


- ▶ When moving the seats back, make sure that there are no objects in the footwell or under or behind the seats.

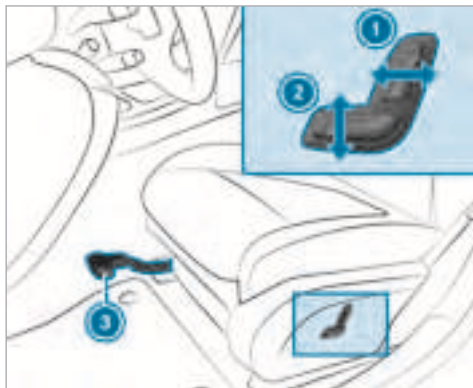

- ① Seat backrest inclination
- ② Seat height
- ③ Seat fore-and-aft adjustment

- ▶ **To adjust the seat fore-and-aft position:** lift lever ③ and slide the seat into the desired position.
- ▶ Make sure that the seat is engaged.


Adjusting the front seat manually and electrically (with Seat Comfort Package)

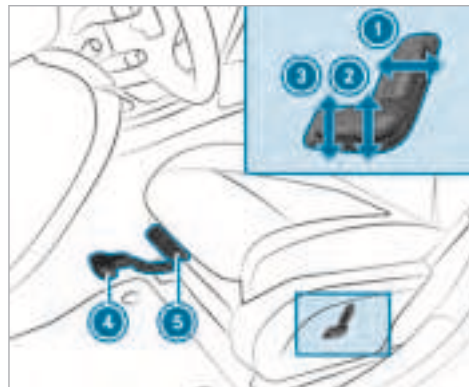

- ① Seat backrest inclination
- ② Seat height
- ③ Seat cushion inclination
- ④ Seat fore-and-aft adjustment
- ⑤ Seat cushion length

- ▶ **To adjust the seat fore-and-aft position:** lift lever ④ and slide the seat into the desired position.
- ▶ Make sure that the seat is engaged.
- ▶ **To adjust the seat cushion length:** lift lever ⑤ and slide the front section of the seat cushion forwards or backwards.

Adjusting the front seat electrically

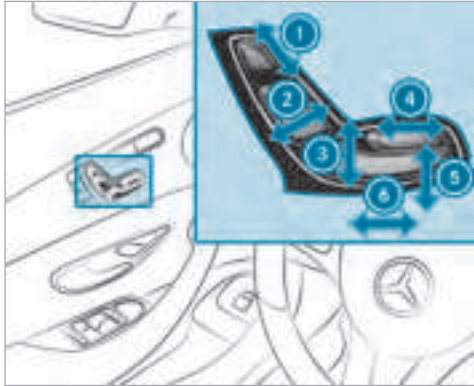

- ① Head restraint height
- ② Seat backrest inclination
- ③ Seat height
- ④ Seat cushion length
- ⑤ Seat cushion inclination
- ⑥ Seat fore-and-aft adjustment

- ▶ Save the settings with the memory function (→ page 102).

Adjusting the front passenger seat from the driver's seat electrically

Requirement:

- The power supply is switched on

This function is only available on vehicles with an electrically adjustable front passenger seat.




You can call up the following functions for the front passenger seat:

- Seat adjustment
- Seat heater
- Seat ventilation
- Memory function

- ▶ **To select the front passenger seat:** press button ①.
When the indicator lamp lights up, the front passenger seat is selected.
- ▶ Adjust the front passenger seat using the buttons in the door control panel on the driver's side.

Adjusts the 4-way lumbar support

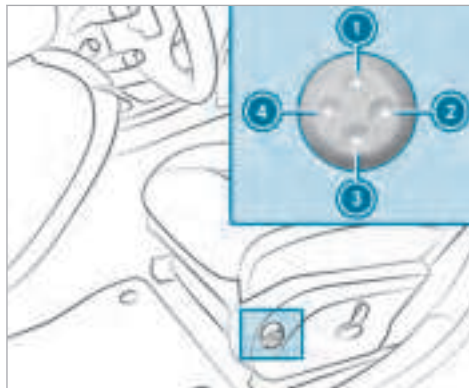

- ① To raise
- ② To soften
- ③ To lower
- ④ To harden

- ▶ Using buttons ① to ④, adjust the contour of the backrest individually to suit your back.

Head restraints

Adjusting the front seat head restraints manually

⚠ WARNING Risk of injury through adjusting vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations:

- if you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion

- ▶ Before starting the engine: adjust the driver's seat, the head restraints, the steering wheel or the mirror and fasten your seat belt.

⚠ WARNING Risk of injury due to head restraints which are not fitted or are adjusted incorrectly


If head restraints are not fitted or are adjusted incorrectly, they cannot provide protection as intended.

There is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- ▶ Always drive with the head restraints fitted.
- ▶ Before driving off, make sure for every vehicle occupant that the centre of the head restraint supports the back of the head at about eye level.


Do not interchange the head restraints of the front and rear seats. Otherwise, you cannot adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

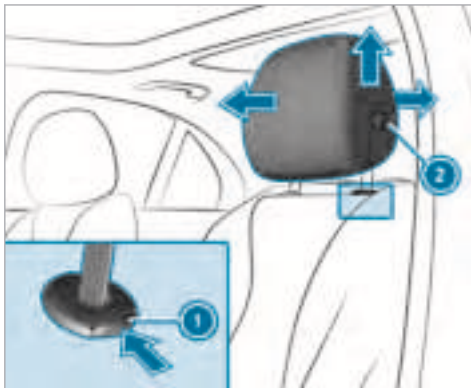

- ▶ **To raise:** pull the head restraint up.
- ▶ **To lower:** press release knob ① in the direction of the arrow and push the head restraint down.
- ▶ **To move forwards:** pull the head restraint forwards.
- ▶ **To move backwards:** press release knob ② and push the head restraint backwards.


Adjusting the front seat luxury head restraints manually

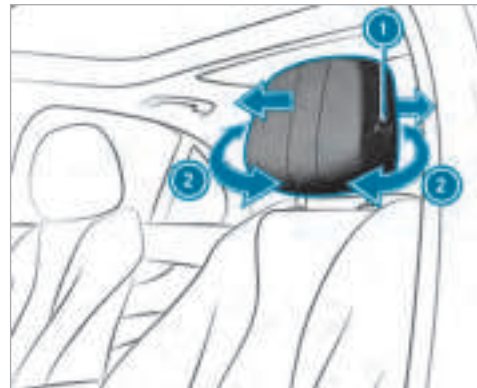

- ▶ **To adjust the side bolsters of the head restraint:** pull or push right or left-hand side bolster ②.
- ▶ **To move forwards:** pull the head restraint forwards.

- ▶ **To move backwards:** press release knob ① and push the head restraint towards the rear.


Adjusting the head restraints of the rear seats mechanically

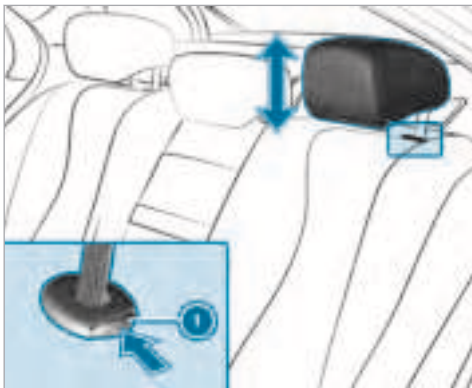

- ▶ **To raise:** pull the head restraint up.
- ▶ **To lower:** press release knob ① in the direction of the arrow and push the head restraint down.

Fitting/removing the rear seat head restraints

The head restraints can only be removed on vehicles with folding rear seat backrests.

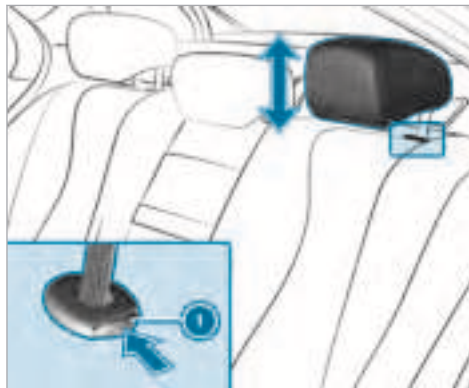

- ▶ Release the rear seat backrest and fold it slightly forwards (→ page 105).
- ▶ **To remove:** pull the head restraint up to the stop.

- ▶ Push release knob ① in the direction of the arrow and pull out the head restraint.
- ▶ **To refit:** insert the head restraint so that the notches on the bar appear on the left when viewed in the direction of travel.
- ▶ Push the head restraint down until you hear it engage in position.
- ▶ Fold the rear seat backrest back until it engages.

Setting automatic adjustment of the lateral support (active multicontour seat)

Multimedia system:

➞ Vehicle ➞  Seats

With this function, the lateral support of the active multicontour seat is automatically adjusted to the driving and cornering dynamics of the vehicle.

- ▶ Select [Driver's seat](#) or [Passenger seat](#).
- ▶ Select [Dynamic seat](#).
- ▶ **Select setting:** [Off](#), [Level 1](#) or [Level 2](#).

Overview of massage and workout programs

The following massage program can be selected:

Massage program for the front seats	Function
Hot Relaxing Massage for back	Relaxing massage program starting in the pelvic area. Warm pressure points can be felt, full back massage, stretching the pelvic area. Ending with gentle stroking motions.
Hot Relaxing Massage for shoulders	Relaxing massage program starting in the shoulder area. Warm pressure points can be felt, full twin-wave back massage, stretching the shoulder area. Ending with gentle stroking motions.
Activating Massage	Activating back massage with increasing twin-waves and then soothing movements.
Classic Massage	Massage with increasing twin-waves and soothing movements.
Wave Massage	Relaxing and activating massage program, starting on your back and continuing in the cushion. Subsequent stroking motions across the entire spinal column.
Mobilising Massage	Mobilisation of the spinal column and upper body using pressure points in the lumbar and back. You can increase the mobilisation effect by relaxing into the pressure points. This process helps to improve your posture.

Active Workout programs

The Active Workout programs require your active cooperation and are a convenient way of exercis-

ing your abdomen and back muscles during a traffic jam, for example, by tensing and releasing the specific muscle groups. Tensing and releas-

ing also helps to improve blood flow to your muscles. Press against a pressure point as soon as you feel it.

The following Active Workout programs can be selected:

Workout program	Function
Active Workout backrest	To stimulate the muscles in your abdomen and back: press against the pressure points in the backrest. Keep the pressure under your feet even. Continue to breathe normally; do not hold your breath. When the pressure in the seat backrest recedes, stop pressing against it and relax briefly.
Active Workout cushion	To stimulate the muscles in your lower back: press against the pressure points in the seat cushion. Keep the pressure under your feet even. Continue to breathe normally; do not hold your breath. When the pressure in the seat cushion recedes, stop pressing against it and relax briefly.

Selecting the massage programme for the front seats

Multimedia system:

Vehicle >> Seats

- Select Driver's seat or Passenger.
- Select Massage.
- Select a massage program.
The massage programme runs for approximately 9 to 15 minutes, depending on the setting.

To set the message intensity: switch High intensity on ☒ or off ☐.

Resetting seat and massage settings

Multimedia system:

Vehicle >> Seats >> Reset

- Select Yes or No.

Depending on whether the settings for the driver or front passenger seat are selected, only the selected seat can be reset.

Switching the seat heater on/off

 **WARNING** Risk of burns due to repeatedly switching on the seat heater



Repeatedly switching on the seat heater can cause the seat cushion and seat backrest padding to become very hot.

The health of persons with limited temperature sensitivity or a limited ability to react to excessively high temperatures may be affected or they may even suffer burn-like injuries.

- ▶ Do not repeatedly switch on the seat heater.

Requirement:

- The power supply is switched on

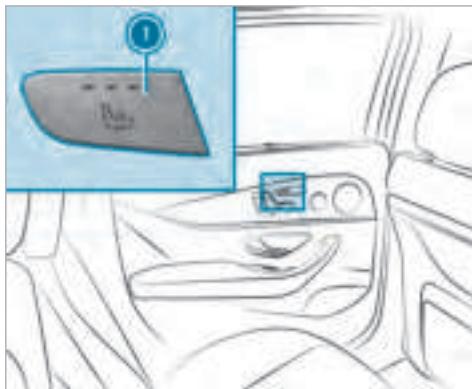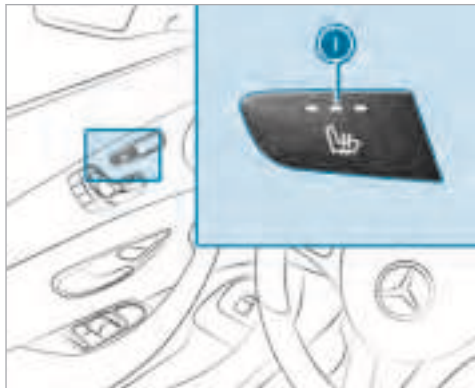

- ▶ **To switch on/increase the level:** press button ① repeatedly until the desired heating level is set. Depending on the heating level, up to three indicator lamps light up.

- ▶ **To switch off/reduce the level:** press button ① repeatedly until the desired heating level is set. If all indicator lamps are off, the seat heater is switched off.

- ① The seat heater automatically switches down from the three heating levels after 8, 10 and 20 minutes until the seat heater is switched off.

Setting the panel heating

Multimedia system:

➔ Vehicle ➔  Vehicle settings ➔ Panel heating

When the seat heater is switched on, the armrests in the vehicle as well as the centre console can be heated using this function.


Setting options

- ▶ Select **Front and rear**, **Front only**, **Rear only** or **Off**.

Switching the seat ventilation on/off

Requirement:

- the power supply is switched on

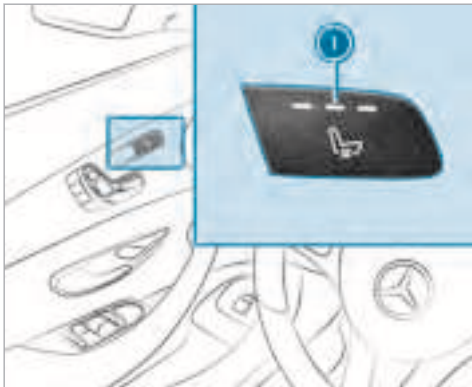

- ▶ **To switch on/increase the level:** press button ① repeatedly until the desired ventilation level is set. Depending on the ventilation level, up to three indicator lamps light up.

- ▶ **To switch off/reduce the level:** press button ① repeatedly until the desired ventilation level is set. If all indicator lamps are off, the seat ventilation is switched off.

Steering wheel

Adjusting the steering wheel manually

- ⚠ **WARNING** Risk of injury through adjusting vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations:


- if you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion
- if you fasten your seat belt while the vehicle is in motion
- ▶ Before starting the engine: adjust the driver's seat, the head restraints, the

steering wheel or the mirror and fasten your seat belt.

- ⚠ **WARNING** Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.


- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes connect me web app.

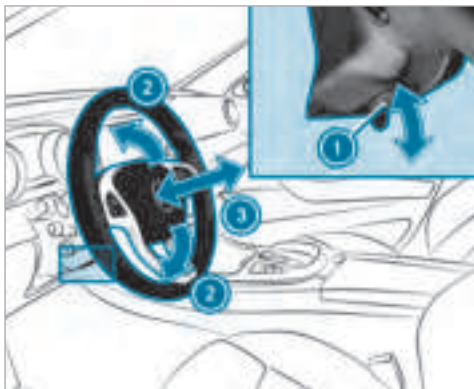

- ▶ **To unlock the steering column:** push release lever ① down completely.
- ▶ Adjust height ② and distance to steering wheel ③.
- ▶ **To lock the steering column:** push release lever ① up as far as it will go.
- ▶ Check and make sure that the steering column is locked by moving the steering wheel.


Adjusting the steering wheel electrically

The steering wheel can be adjusted when the ignition is switched off.

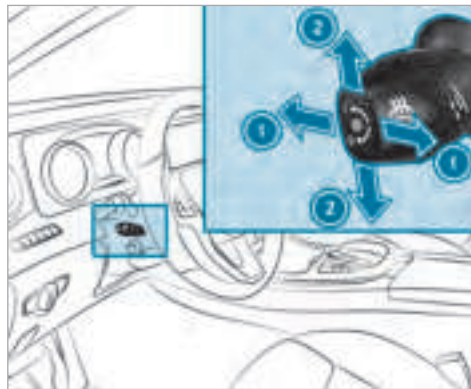

- ① Adjusts the distance to the steering wheel
- ② Adjusts the height
- ▶ Save the settings with the memory function (→ page 102).

Switching the steering wheel heater on/off

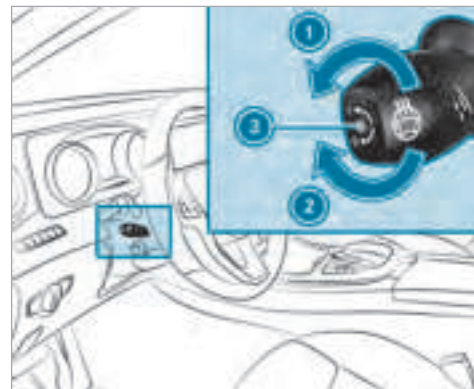

- ① To switch on
- ② To switch off
- ③ Indicator lamp

Easy entry and exit feature

How the easy entry and exit feature operates

⚠ WARNING Risk of accident when pulling away during the adjustment process of the easy exit feature

- If you pull away while the easy entry and exit feature is making adjustments, you could lose control of the vehicle.

- ▶ Always wait until the adjustment process is complete before pulling away.

⚠ WARNING Risk of becoming trapped while adjusting the easy entry and exit feature

When the easy entry and exit feature adjusts the steering wheel, you and other vehicle occupants – particularly children – could become trapped.

- ▶ During the adjustment process of the easy entry and exit feature, make sure

that no one has any body parts in the sweep of the steering wheel.

- ▶ Move the adjustment lever of the steering wheel if there is a risk of becoming trapped by the steering wheel. The adjustment process is stopped.
- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes connect me web App.

The easy entry and exit feature makes getting in and out of your vehicle easier.

If the easy entry and exit feature is active, the steering wheel will move upwards in the following situations:

- you switch the ignition off
- you open the driver's door when the ignition is switched on

The steering wheel moves back to the last drive position in the following cases:

- you switch the ignition on when the driver's door is closed
- you close the driver's door when the ignition is switched on

The last drive position of the steering wheel is stored in the following situations:

- you switch the ignition off
- you save the seat setting using the memory function

If you press one of the memory function position buttons, the adjustment process is stopped.

Setting the easy entry and exit feature

Multimedia system:

➞ [Vehicle](#) ➞  [Vehicle settings](#) ➞ [Easy Entry/Exit](#)

- ▶ Select [Steer. wheel and seat](#), [Steering wheel only](#) or [Off](#).

Using the memory function

⚠ WARNING Risk of an accident if memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

- ▶ Only use the memory function on the driver's side when the vehicle is stationary.

⚠ WARNING Risk of entrapment when setting the seat with the memory function

If you use the memory function to set the seat or the steering wheel, you and other vehicle occupants, especially children, could be entrapped.

- ▶ During the setting procedure of the memory function, ensure that no body parts are in the sweep of the seat or the steering wheel.

- ▶ If somebody becomes trapped, immediately release the memory function position button. The adjustment process is stopped.

⚠ WARNING Risk of entrapment if the memory function is activated by children

Children could become trapped if they activate the memory function, particularly when unattended.


- ▶ Never leave children unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes connect me web app.

The memory function can be used when the ignition is switched off.

Seat adjustments for up to three people can be stored and called up using the memory function.

The following systems can be selected:

- Seat, backrest and head restraint
- Steering wheel
- Outside mirrors
- Head-up Display

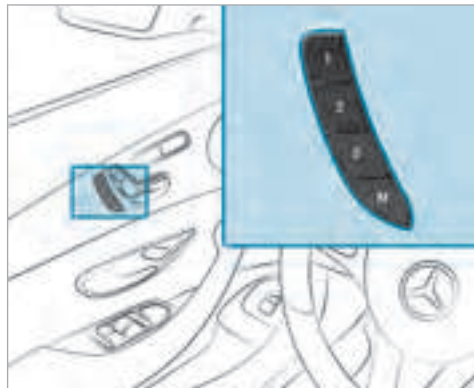

- ▶ **To save:** set the seat, the steering wheel, the Head-up Display and the outside mirror to the desired position.
- ▶ Press the memory button M together with one of the storage position buttons 1, 2 or 3. An acoustic signal sounds. The settings are stored.
- ▶ **To call up:** press and hold the relevant pre-set position button 1, 2 or 3 until the front seat is in the stored position.

Stowage areas

Notes on loading the vehicle

⚠ **WARNING** Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the boot lid is open when the engine is running, especially if the vehicle is in motion.

- ▶ Always switch off the engine before opening the boot lid.

- ▶ Never drive with the boot lid open.

⚠ **WARNING** Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects in such a way that they cannot be thrown around.
- ▶ Before the journey, secure objects, luggage or loads against slipping or tipping over.

⚠ **WARNING** Risk of injury from incorrectly stowed objects

If objects in the passenger compartment are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In

addition, cup holders, open stowage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects so that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.
- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot.

⚠ **WARNING** Risk of burns from tailpipes and tailpipe trim

The tailpipe and tailpipe trim can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

- ▶ Always be particularly careful around the tailpipe and the tailpipe trim.
- ▶ Allow the vehicle parts to cool down before you touch them.

The handling characteristics of your vehicle are dependent on the distribution of the load within the vehicle. You should bear the following in mind when loading the vehicle:

- never exceed the maximum permissible gross mass or the permissible axle loads for the vehicle (including occupants).
- the load must not protrude above the upper edge of the seat backrests.
- always place the load behind unoccupied seats if possible.
- secure the load using the tie-down eyes and distribute the load evenly.


Stowage spaces in the vehicle interior

Overview of the front stowage compartments



- ① Stowage compartment in the doors
- ② Stowage/telephone compartment in the armrest with multimedia connections and stowage compartment, e.g. for an MP3 player
- ③ Stowage compartment in the front centre console with a USB port (depending on the vehicle's equipment)
- ④ Glove box

Locking/unlocking the glove box

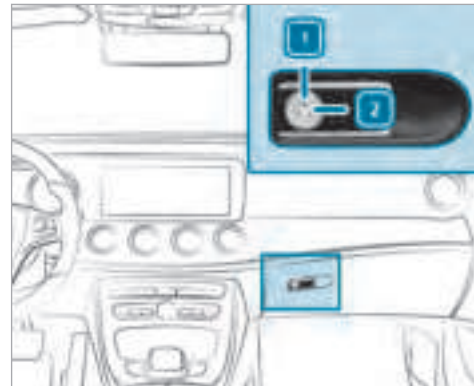

- ▶ Turn the emergency key a quarter turn clockwise **2** (to lock) or anti-clockwise **1** (to unlock).


Opening the spectacles compartment



► **To open:** press button ①.

Opening the stowage compartment in the rear armrest

Observe the notes on loading the vehicle (→ page 103).

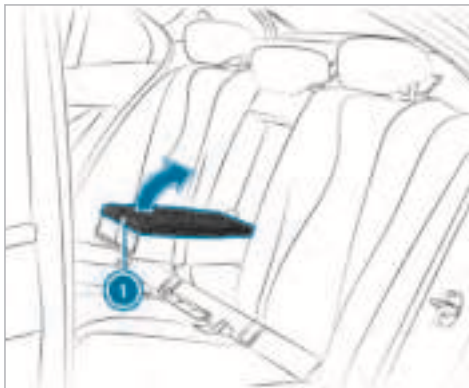

► **To open:** press release catch ① and swing the cover of the armrest upwards.

Through-loading feature in the rear bench seat

Folding the rear seat backrest forwards

⚠ WARNING Risk of injury if the rear bench seat/rear seat and seat backrest are not engaged

If the rear bench seat/rear seat and seat backrest are not engaged they could fold forwards, e.g. when braking suddenly or in the event of an accident.

- If this is the case, the vehicle occupant would be forced into the seat belt by the rear bench seat/rear seat or by the seat backrest. The seat belt cannot protect as intended and could result in additional injury.
 - Objects or loads in the boot cannot be restrained by the seat backrest.
- Make sure that the seat backrest and the rear bench seat/rear seat are engaged before every trip.


If the seat backrest is not engaged and locked, this will be shown in the multifunction display in the instrument cluster.

The centre and outer seat backrests can be folded forwards separately.

- ▶ Fully insert the rear seat backrest head restraints.



- ▶ **Left and right seat backrest:** pull release lever ①.

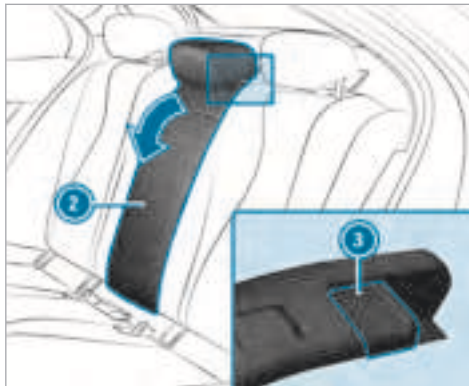

- ▶ **Centre seat backrest:** pull seat backrest release ② forwards.
- ▶ Fold the corresponding seat backrest forwards.

Folding the rear seat backrest back


! NOTE Damage to the seat belt

The seat belt could become trapped and thus damaged when folding back the seat backrest.

- ▶ Make sure that the seat belt is not trapped when folding back the seat backrest.

If the seat backrest is not engaged and locked, this will be shown in the multifunction display in the instrument cluster.

- ▶ Move the driver's or front passenger seat forwards, if necessary.

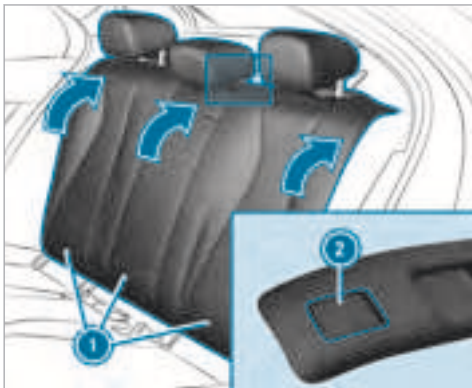

- ▶ Fold corresponding seat backrest ① back until it engages.


Left and right seat backrests: if the seat backrest is not correctly engaged, this will be shown in the multifunction display in the instrument cluster.

Centre seat backrest: if the seat backrest is not correctly engaged, red lock verification indicator ② will be visible.

Locking the centre rear seat backrest

Lock the centre seat backrest if you want to secure the load compartment from unauthorised access. The centre seat backrest can then only be folded forwards together with the left seat backrest.

Both seat backrests must be engaged and joined together.

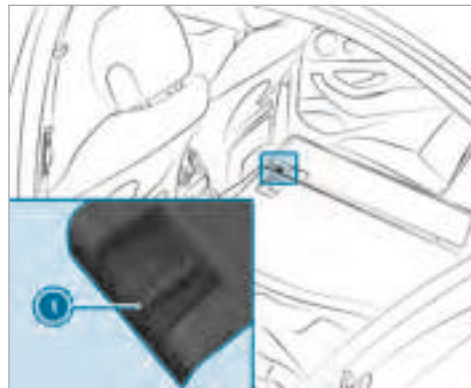

- ▶ Fold the centre and left seat backrest forwards.
- ▶ **To lock:** slide catch ① upwards. The release mechanism of the centre seat backrest is locked.
- ▶ **To unlock:** slide catch ① downwards.

Securing the ski and snowboard bag in the boot

⚠ WARNING Risk of injury due to using the through-load ski bag incorrectly


The through-load ski bag in conjunction with the lashing straps cannot restrain any objects other than skis.

Vehicle occupants could be struck in the event of sudden braking or an accident in the following cases:

- If you transport other heavy or sharp-edged objects in the through-load ski bag
- If you do not secure the through-load ski bag with the lashing straps

- ▶ Only store skis in the through-load ski bag.
- ▶ Always secure the through-load ski bag with the lashing straps so that it cannot move around.


A maximum of four pairs of skis or two snowboards may be transported in the ski and snowboard bag.

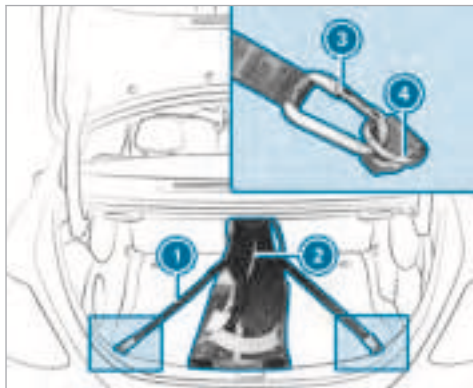

- ▶ Fold the centre rear seat backrest forwards.
- ▶ Slide the bag between the outer seat backrests into the rear.
- ▶ Undo zip (2), place the skis or snowboards inside the bag and close it.
- ▶ Pull tensioning strap tight by the loose end in order to secure the skis or snowboards inside the ski and snowboard bag.
- ▶ Attach lashing strap (1) onto hook (3) in a crosswise pattern with the fastener facing upwards in tie-down eye (4).

Overview of the tie-down eyes

Observe the notes on loading the vehicle (→ page 103).

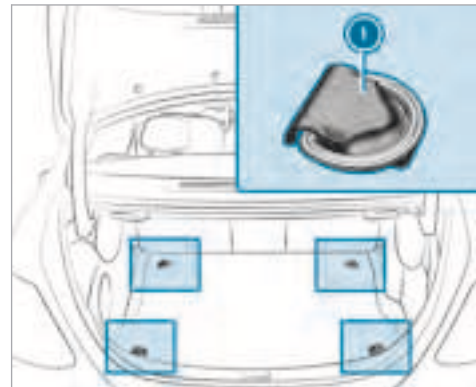

- ① Tie-down eyes (vehicles with through-loading feature in the rear bench seat)

EASY-PACK boot box

Adjusting the height of the EASY-PACK boot box to any position

⚠ WARNING Risk of becoming trapped and injured when moving the floor up

When the floor moves up, your hands may become trapped on the frame of the EASY-PACK boot box and objects may be thrown upwards.

- ▶ When the floor moves up, make sure that your hands are not within the sweep of the floor.
- ▶ If someone becomes trapped, carefully push the centre of the floor downward.
- ▶ Remove all objects from the floor before moving it up.

⚠ WARNING Risk of becoming trapped when pressing the EASY-PACK boot box in

When the EASY-PACK boot box is pressed into the retracted position, your hands may become trapped. Children, in particular, may injure themselves when doing so.

- ▶ When pressing the EASY-PACK boot box in, make sure that your hands are not within the sweep of the EASY-PACK boot box.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "digital vehicle key in the smartphone" function is activated via the Mercedes connect me web app.
- ▶ Never leave children unattended in the vehicle.

! NOTE Damage to the extended EASY-PACK boot box

The EASY-PACK boot box may be damaged when it is extended.

- ▶ Do not place any objects on or press down on the EASY-PACK boot box frame.
- ▶ Do not close the boot lid when the EASY-PACK boot box is extended.


! NOTE Damage to the EASY-PACK boot box by objects

Objects which are sharp-edged, pointed, fragile, rounded or heavy and objects that roll can damage the EASY-PACK boot box and be thrown out.

- ▶ Do not transport objects which are sharp-edged, pointed, rounded or fragile and objects that roll in the EASY-PACK boot box.
- ▶ Always stow and secure such objects outside of the box in the boot.

- ▶ Always observe the maximum permitted load of the EASY-PACK boot box.
- ▶ Do not use the EASY-PACK boot box when the rear seats are folded forwards.



The maximum permitted load of the EASY-PACK boot box is 10 kg. To prevent the box from being overloaded, the box floor lowers onto the boot floor when the load reaches approximately 5 kg.

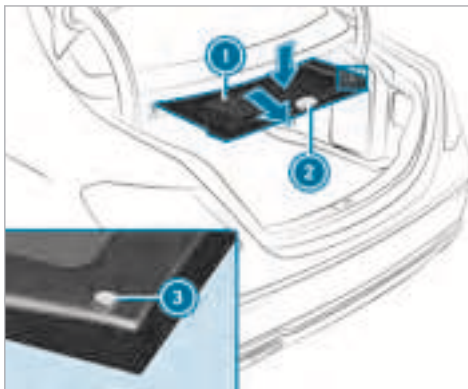

i Observe the notes on cleaning the EASY-PACK boot box (→ page 351).

- ▶ **To remove:** pull handle ② of the box.
- ▶ **To increase the load capacity:** press the centre of floor ① downwards to the desired position and box size.
- ▶ **To reduce the load capacity:** press button ③.
- ▶ **To stow:** press the box in completely using handle ② until it locks in place.

Installing/removing the EASY-PACK boot box

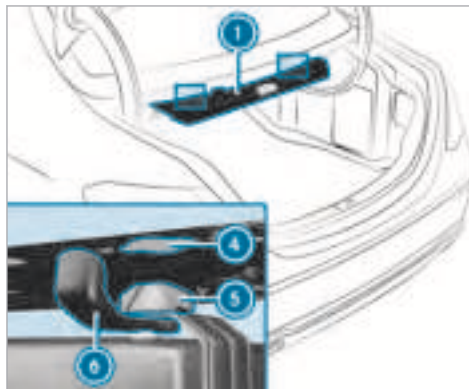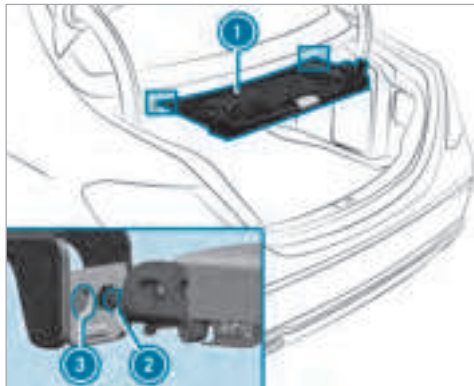

- ▶ **To install:** turn rotating catch ⑥ outward.
- ▶ Insert retainers ② of box ① into outer holes ③.
- ▶ Raise box ① and press hooks ⑤ into rear shelf ④.
- ▶ Turn rotating catch ⑥ inward.
- ▶ **To remove:** turn rotating catch ⑥ outward.


- ▶ Lower box ① and pull it out of anchorages ④.
- ▶ Pull box ① back out of openings ③.

Opening the stowage space under the boot floor

! NOTE Damage to the handle in the boot floor

If the handle in the boot is left protruding, the handle may be damaged.

- ▶ Unhinge the handle before you close the boot lid and clip it in place.

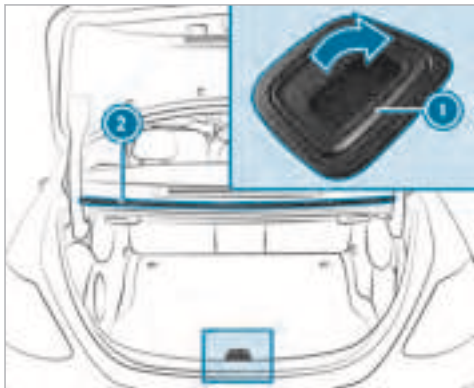

- Pull handle ① up and hook it into rain trough ②.

Attaching the roof rack

⚠ WARNING Risk of injury by exceeding the maximum roof load

When you load the roof, the vehicle centre of gravity rises and the driving characteristics change.

If you exceed the maximum roof load, the driving characteristics, as well as the steering and braking, will be greatly impaired.


- Never exceed the maximum roof load and adjust your driving style.

You will find information on the maximum roof load in the "Technical data" section.

Requirements:

- Only use roof racks tested and approved by Mercedes-Benz.
- Make sure that you can raise the sliding sunroof fully and open the boot lid fully once the roof rack is fitted.
- The panoramic sliding sunroof cannot be opened if a roof rack is fitted. The panoramic

sliding sunroof closes again automatically when it encounters resistance.

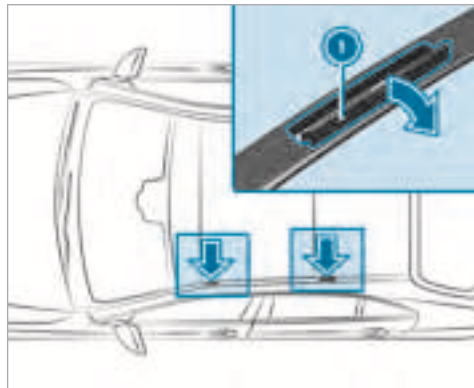

! NOTE Damage to the covers

The covers may be damaged and scratched when being opened.

- Do not use metallic or hard objects.

- ▶ Fold covers ① carefully upwards in the direction of the arrow.
- ▶ Only secure the roof rack to the anchorage points under covers ①.
- ▶ Always comply with the roof rack manufacturer's installation instructions.
- ▶ Secure the load on the roof rack.

Cup holders

Fitting or removing the cup holder in the centre console


⚠ WARNING - Risk of accident or injury when using the cup holder while the vehicle is in motion

The cup holder cannot hold a container secure while the vehicle is in motion.

If you use a cup holder while the vehicle is in motion, the container may be flung around and liquids could be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded.

You could be distracted from traffic conditions and you may lose control of the vehicle.

- ▶ Only use the cup holder when the vehicle is stationary.
- ▶ Only use the cup holder for containers of the right size.
- ▶ Always close the container, particularly if the liquid is hot.

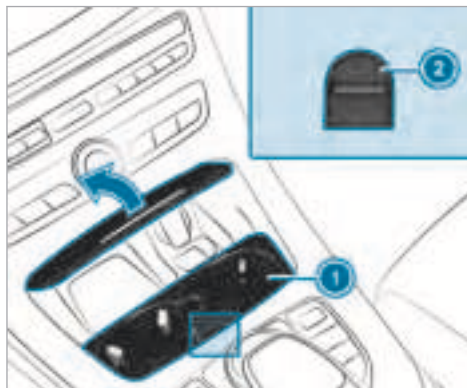

- ▶ **To remove:** slide catch ② forwards and pull out cup holder ①.

- ▶ **To fit:** insert cup holder ① and slide back catch ②.

ⓘ The rubber mat of the cup holder can be removed for cleaning, e.g. using clean, luke-warm water.

Fitting/removing the cup holder in the centre console (manual transmission)

⚠ WARNING - Risk of accident or injury when using the cup holder while the vehicle is in motion

The cup holder cannot hold a container secure while the vehicle is in motion.

If you use a cup holder while the vehicle is in motion, the container may be flung around and liquids could be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- ▶ Only use the cup holder when the vehicle is stationary.
- ▶ Only use the cup holder for containers of the right size.
- ▶ Always close the container, particularly if the liquid is hot.



- ▶ **To remove:** slide both cup holder sections (1) inwards until they release.
- ▶ Slide the cup holder forwards and remove cup holder (2).




- ▶ **To fit:** insert the cup holder at the front and then slide it until it reaches edge (3). The wedge of the upper section of the cup holder must face upwards.
- ▶ Slide upper cup holder sections (1) outwards until both right and left sides (2) engage.
- i The rubber mat of the cup holder can be removed for cleaning, e.g. using clean, luke-warm water.

Opening the cup holder in the rear armrest

! NOTE Damage to the cup holder

When the rear armrest is folded back the cup holder could become damaged.

- ▶ Only fold the rear armrest back when the cup holder is closed.

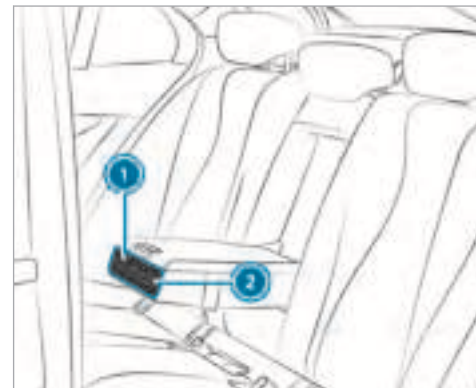

- ▶ **To open:** press on cup holder ① or ②.
- ▶ **To fold in or out:** place or remove a container from cup holder ① or ②.

Ashtray and cigarette lighter

Using the ashtray in the front centre console

! NOTE Damage to the stowage compartment under the ashtray


The stowage compartment under the ashtray is not heat resistant and could be damaged if you rest lit cigarettes on it.

- ▶ Ensure that the ashtray is fully engaged.



- ▶ **To open:** push the cover of the ashtray upwards on right ② or left side.
- ▶ **To remove the insert:** push insert ① forwards slightly and pull it upwards and out.
- ▶ **To refit the insert:** press insert ① into the holder until it engages.

Using the rear ashtray

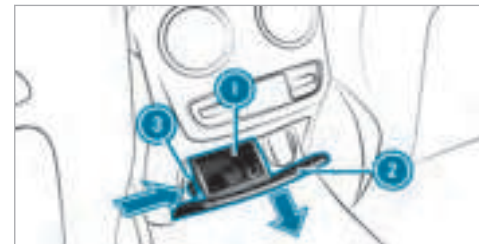

- ▶ **To open:** pull cover ② out by its top handle edge.
- ▶ **To remove the insert:** push ribbing ③ from the left side and pull insert ① upwards and out.
- ▶ **To fit the insert:** fit insert ① from above and press down into the holder until it engages.

Using the cigarette lighter

⚠ WARNING - Risk of fire and injury from the hot cigarette lighter

You can burn yourself if you touch the hot heating element or the socket of the cigarette lighter.

In addition, flammable materials may ignite if:

- you drop the hot cigarette lighter
- a child holds the hot cigarette lighter to objects, for example

- ▶ Always hold the cigarette lighter by the knob.
- ▶ Always make sure that the cigarette lighter is out of reach of children.
- ▶ Never leave children unattended in the vehicle.

Requirement:

- The ignition is switched on.



- ▶ Press in cigarette lighter ①. The cigarette lighter will pop out automatically when the heating element is red-hot.

Sockets

12 V socket in the centre console

Requirement:

- Only connect devices up to a maximum of 180 watts (15 A).



- ▶ Lift up socket cap ①.
- ▶ Insert the plug of the device.

If you have connected a device to the 12 V socket, leave the cover of the stowage compartment open.

Using the 12 V socket in the rear

Requirement:

- Only connect devices up to a maximum of 180 watts (15 A).



- ▶ Briefly press the trim of cover ②.
- ▶ Lift up cap ① of the socket and insert the plug of the device.

Using the 230 V socket in the rear compartment

⚠ DANGER Risk of fatal injury due to damaged connecting cables or sockets

When a suitable device is connected, the 230 V power socket will be carrying a high voltage. You could receive an electric shock if the connecting cable or the 230 V power

socket is pulled out of the trim or is damaged or wet.

- ▶ Use only connecting cables that are dry and free of damage.
- ▶ When the ignition is switched off, make sure that the 230 V power socket is dry.
- ▶ Immediately have the 230 V power socket checked or replaced at a qualified specialised workshop if it is damaged or has been pulled out of the trim.
- ▶ Never plug the connecting cable into a 230 V power socket that is damaged or has been pulled out of the trim.


⚠ DANGER Risk of fatal injury due to incorrect handling of the socket

You could receive an electric shock:

- if you reach into the socket.
 - if you insert unsuitable devices or objects into the socket.
- ▶ Only connect suitable devices to the socket.

Requirements:

- Only connect devices with a suitable plug which conforms to the standards specific to the country you are in.
- Only connect devices up to a maximum of 150 watts.
- Do not use multiple socket outlets.

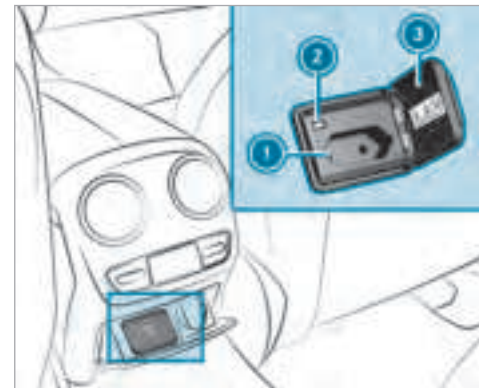


- ▶ Open flap ③.

- Insert the plug of the device into 230 V socket ❶.
When the on-board electrical system voltage is sufficient, indicator lamp ❷ lights up.

Using the 12 V socket in the boot


Requirement:

- Only connect devices up to a maximum of 180 watts (15 A).

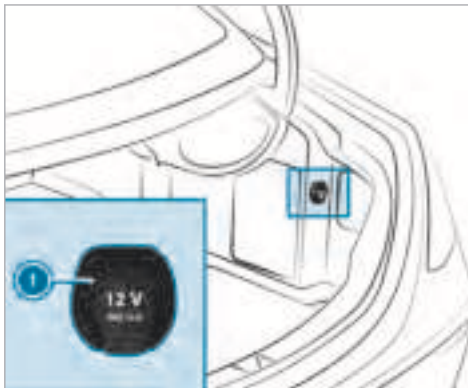

- Lift up cap ❶ of the socket and insert the plug of the device.

USB port in the rear

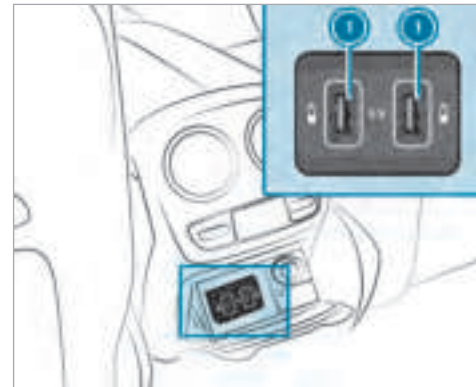

You can charge a USB device, e.g. a mobile phone, at USB ports ❶ using a suitable charging cable. The devices can be charged with 5 V (2.1 A) and when the ignition is switched on.

Wireless charging of the mobile phone and connection with the exterior aerial

Notes on wireless charging of the mobile phone

⚠ WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ▶ Always stow objects so that they cannot be thrown around in such situations.
- ▶ Always make sure that objects do not protrude from stowage spaces, luggage nets or stowage nets.

- ▶ Close the lockable stowage spaces before starting a journey.
- ▶ Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the boot/load compartment.

Observe the notes on loading the vehicle.

⚠ WARNING Risk of fire from placing objects in the mobile phone stowage compartment

If you place objects in the mobile phone stowage compartment, they may heat up excessively and even catch fire.

- ▶ Do not place additional objects, especially those made of metal, in the mobile phone stowage compartment.

! NOTE Damage to objects caused by placing them in the mobile phone stowage compartment

If you place objects in the mobile phone stowage compartment, these may be damaged by electromagnetic fields.

- ▶ Do not place credit cards, storage media or other objects sensitive to electromagnetic fields in the mobile phone stowage compartment.

! NOTE Damage to the mobile phone stowage compartment caused by liquids

If liquids enter the mobile phone stowage compartment, the compartment may be damaged.

- ▶ Ensure that no liquids enter the mobile phone stowage compartment.

- Depending on the vehicle equipment, the mobile phone is connected to the vehicle's exterior aerial via the charging module.


- The charging function and wireless connection of the mobile phone to the vehicle's exterior aerial are only available if the ignition is switched on.
- Small mobile phones may not be able to be charged in every position of the mobile phone stowage compartment.
- Large mobile phones which do not rest flat in the mobile phone stowage compartment may not be able to be charged or connected with the vehicle's exterior aerial.
- The mobile phone may heat up during the charging process. The mobile phone can be cooled in the mobile phone stowage compartment when the air conditioning system is switched on. The cooling output in the mobile phone stowage compartment is highest when the controller in the glove box is closed.
- To ensure more efficient charging and connection with the vehicle's exterior aerial, remove the protective cover from the mobile phone.

- When charging, the mat should be used if possible.

Wireless charging of the mobile phone

Requirement:

- The mobile phone must be suitable for wireless charging (Qi-compatible mobile phone). You can find a list of Qi-compatible mobile phones at:
<http://www.mercedes-benz.com/connect>

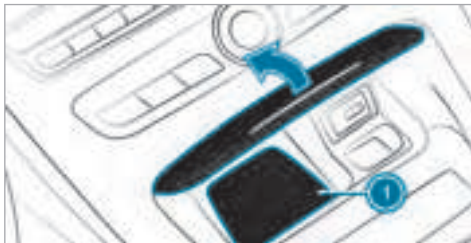

- ▶ Place the mobile phone as close to the centre of mat ① as possible with the display facing upwards.

When the charging symbol is shown in the multimedia system, the mobile phone is being charged.

Malfunctions during the charging process are shown in the multimedia system display.

- ① To clean, the mat can be removed.

Fitting/removing the floor mats

⚠ WARNING Risk of accident due to objects in the driver's footwell


Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Always fit the floor mats securely and as prescribed in order to ensure that

there is always sufficient room for the pedals.

- ▶ Do not use loose floor mats and do not place floor mats on top of one another.

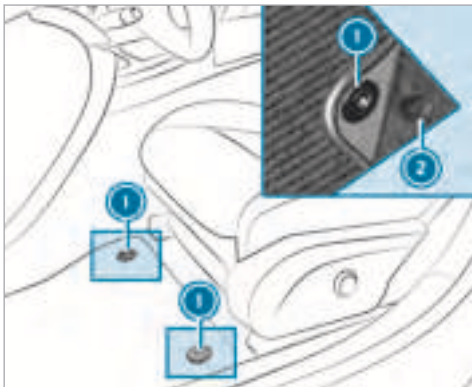

- ▶ **To fit:** press studs ① onto holders ②.
- ▶ **To remove:** pull the floor mat off holders ②.

Exterior lighting

Changing the lights when driving abroad

Vehicles with halogen or static LED headlamps: It is not necessary to change the headlamps. The legal requirements are also met in countries where people drive on the other side of the road.

Vehicles with Intelligent Light System: Before crossing the border into countries where they drive on the other side, it is necessary to set the headlamps to symmetrical dipped beam (→ page 130).

After changing the headlamps:

- Oncoming traffic is not dazzled.
- The edge of the road is not illuminated as far or as high.
- The "motorway mode" and "enhanced fog light functions" are not available.


The headlamps must be reset to asymmetrical dipped beam after returning from abroad.

Lighting systems and your responsibility

The various lighting systems of the vehicle are only aids. The driver of the vehicle is responsible for correct vehicle illumination in accordance with the prevailing light and visibility conditions, legal requirements and traffic situation.

Light switch

Operating the light switch

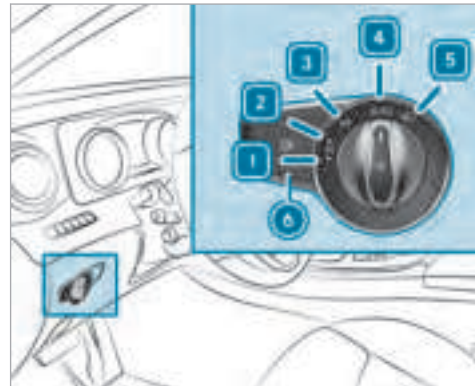

- ▶ 1  Left-hand parking lights
- ▶ 2  Right-hand parking lights
- ▶  3 Standing lights and licence plate lighting

- ▶ **4** **AUTO** Automatic driving lights (preferred light switch position)
- ▶ **5**  Dipped beam/main beam
- ▶ **6**  Switches the rear fog light on or off

When dipped beam is activated, the indicator lamp for the standing lights is deactivated and replaced by the dipped beam indicator lamp.

Always park your vehicle safely and in a well-lit area, in accordance with the relevant legal stipulations.

! **NOTE** Battery discharging by operating the standing lights

Operating the standing lights over a period of hours puts a strain on the battery.

- ▶ Where possible, switch on the right  or left  parking light.

In the case of severe battery discharging, the standing lights or parking lights are automatically switched off to facilitate a future engine start.

The exterior lighting (except standing and parking lights) switches off automatically when the driver's door is opened.

Automatic driving lights

The standing lights, dipped beam and daytime running lights are switched on automatically depending on the ignition status, whether the engine is running and on the light conditions.

! **WARNING** Risk of accident when the dipped beam is switched off in poor visibility

When the light switch is set to **AUTO**, the dipped beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

- ▶ In such cases, turn the light switch to .

The automatic driving lights are only an aid. You are responsible for vehicle lighting.

Activating/deactivating the rear fog light

Requirement:


- The light switch is in the  or **AUTO** position.

- ▶ Press the  button.

Please observe the country-specific laws on the use of rear fog lamps.

Adjusting the headlamp range (halogen headlamps without active suspension)


The headlamp range adjuster allows you to adjust the cone of light from the headlamps in relation to the vehicle's load condition.

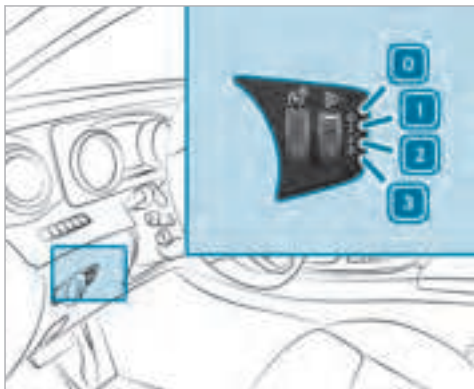

- 0 Driver's seat and front passenger seat occupied
- 1 Driver's seat, front passenger seat and rear seats occupied
- 2 Driver's seat, front passenger seat and rear seats occupied, boot laden
- 3 Driver's seat and front passenger seat occupied and maximum permissible rear axle load utilised

- ▶ Turn the headlamp range adjuster to the position which corresponds to the load condition of your vehicle.

Operating the light combination switch

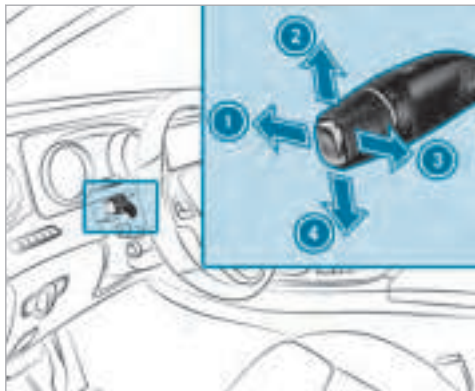

- 1 Main beam
- 2 Turn signal light, right

- 3 Headlamp flashing
- 4 Turn signal light, left

- ▶ Pull or push the combination switch in the relevant direction following the arrow.

Switching on the main beam manually

▶ Vehicles with Adaptive Highbeam Assist:

Turn the light switch to the  position.

- Press the combination switch beyond the pressure point in the direction of arrow 1.

▶ Vehicles with Adaptive Highbeam Assist Plus: Turn the light switch to the position.

- Press the combination switch beyond the pressure point in the direction of arrow 1.

When the main beam is activated, the indicator lamp for dipped beam is deactivated and replaced by the indicator lamp for the main beam.

- ▶ **To switch off the main beam:** move the combination switch back to its starting position.

- ▶ **To indicate briefly:** press the combination switch briefly up to the pressure point in the direction of arrow ② or ④. The corresponding turn signal flashes three times.
- ▶ **To indicate permanently:** press the combination switch beyond the pressure point in the direction of arrow ② or ④.

Activating/deactivating the hazard warning light



- ▶ Press button ①.

The hazard warning light switches on automatically if:

- The airbag has been deployed.
- The vehicle brakes sharply from a speed of more than 70 km/h to a standstill.

The hazard warning light switches off automatically when the vehicle reaches a speed exceeding 10 km/h following maximum full-stop braking.

Adaptive functions, MULTIBEAM LED

Function of the Intelligent Light System


The MULTIBEAM LED headlamps adapt to the driving and weather situation and provide extended functions for improving the illumination of the road.

The system comprises the following functions:

- Active headlamps function (→ page 126)
- Cornering light (→ page 126)
- Motorway mode (→ page 126)
- Enhanced fog light function (→ page 127)
- Adverse weather light (→ page 127)
- City lighting (→ page 127)

The system is only active when it is dark.

Active headlamps function

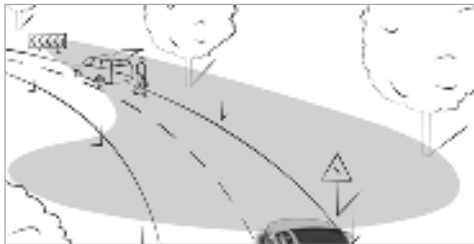

Functions of the active headlamps function:

- The headlamps follow the steering movements.
- Relevant areas are better illuminated while driving.
- **Vehicles with Lane Keeping Assist, Driving Assistance Package, Driving Assistance Plus Package or Traffic Sign Assist:** the active headlamps function evaluates the course of the lane in which you are driving and adjusts the light in advance.

The functions are active when the dipped beam is switched on.

Cornering light



Cornering light improves the illumination of the carriageway over a wide angle in the turning direction, enabling better visibility in tight bends, for example. It can only be activated when the dipped beam is switched on.

The function is active:

- At speeds below 40 km/h when the turn signal light is switched on or the steering wheel is turned.

- At speeds between 40 km/h and 70 km/h when the steering wheel is turned.

Roundabout and intersection function: the cornering light is activated on both sides through an evaluation of the current GPS position of the vehicle. It remains active until after the vehicle has left the roundabout or the intersection.

Motorway mode

The motorway mode increases the range and brightness of the cone of light enabling better visibility.



The function is active if a motorway journey is detected by:


- The vehicle's speed.
- The multifunction camera.
- The GPS.

The function is not active:

- At speeds below 80 km/h.

Enhanced fog light function

The enhanced fog light function reduces self-dazzling by the driver and improves the illumination of the edge of the carriageway.

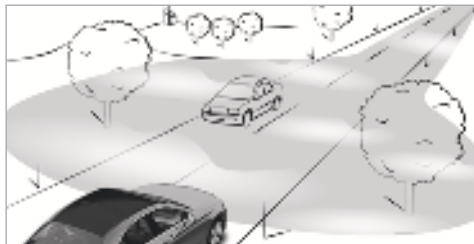

The function is active:

- At speeds below 70 km/h when the rear fog light is switched on.

The function is not active:

- At speeds above 100 km/h after activation.
- When the rear fog light is switched off.

Adverse weather light

The adverse weather light reduces reflections in rainy conditions by dimming individual LEDs in the headlamps. This reduces the glare for the driver and other road users.

City lighting

City lighting improves the illumination of road-sides within built-up areas using a broader distribution of light.

The function is active:

- At lower speeds.
- In illuminated parts of built-up areas.

Switching the Intelligent Light System on/off

Requirement:

- The light switch is in the **AUTO** position.

Multimedia system:

➔ Vehicle ➔  Light settings ➔ **Intell. Light System**

▶ Activate ☒ or deactivate ☐ the function.

Adaptive Highbeam Assist

Function of Adaptive Highbeam Assist

⚠ WARNING Risk of accident despite Adaptive Highbeam Assist

Adaptive Highbeam Assist does not recognise the following road users:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists

- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognise other road users with their own lighting, or may recognise them too late.

In this, or in similar situations, the automatic main beam will not be deactivated or will be activated despite the presence of other road users.

- ▶ Always observe the traffic carefully and switch off the main beam in good time.

System limitations


Adaptive Highbeam Assist cannot take into account road, weather or traffic conditions.

Detection may be restricted if:

- Visibility is impaired, for example in fog, heavy rain or snow.
- There is dirt on the sensors or the sensors are obscured.

Adaptive Highbeam Assist is only an aid. You are responsible for adjusting the vehicle's lighting to

the prevailing light, visibility and traffic conditions.

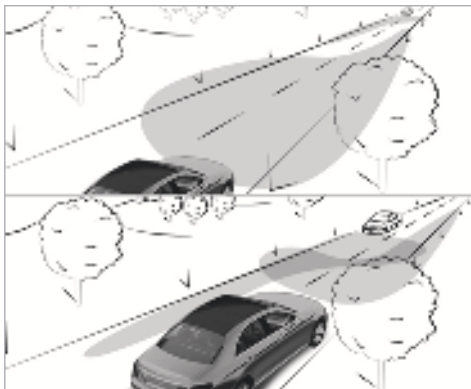

Adaptive Highbeam Assist switches automatically between:

- Dipped beam
- Main beam

At speeds above 30 km/h:

- If no other road users are detected, the main beam is automatically switched on.

The main beam switches off automatically:

- At speeds below 25 km/h.
- If other road users are detected.
- If street lighting is sufficient.

At speeds above approx. 50 km/h:

- The headlamp range of the dipped beam is regulated automatically based on the distance to other road users.

The system's optical sensor is located behind the windscreen near the overhead control panel.

Switching Adaptive Highbeam Assist on/off

- ▶ **To switch on:** turn the light switch to the **AUTO** position.
- ▶ Switch on the main beam using the combination switch.
When the main beam is switched on automatically in the dark, the  indicator lamp in the multifunction display comes on.

- **To switch off:** switch off the main beam using the combination switch.

Adaptive Highbeam Assist Plus

Function of Adaptive Highbeam Assist Plus

⚠ **WARNING** Risk of accident despite Adaptive Highbeam Assist Plus

Adaptive Highbeam Assist Plus does not recognise the following road users:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

In very rare cases, Adaptive Highbeam Assist Plus may not recognise road users who do have lights, or may recognise them too late.

In this, or in similar situations, the automatic main beam will not be deactivated or will be

activated despite the presence of other road users.

- Always observe the traffic carefully and switch off the main beam in good time.


System limitations

Adaptive Highbeam Assist Plus cannot take into account road, weather or traffic conditions.

Detection may be restricted if:

- Visibility is impaired, for example in fog, heavy rain or snow.
- There is dirt on the sensors or the sensors are obscured.

Adaptive Highbeam Assist Plus is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.

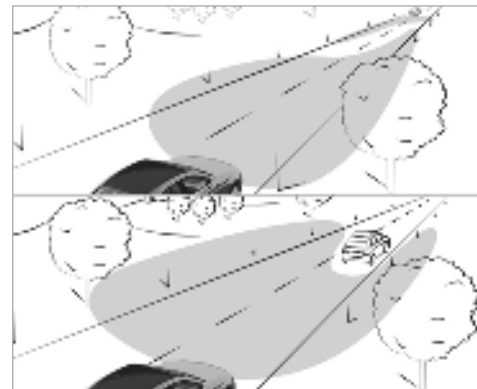

Adaptive Highbeam Assist Plus switches automatically between:

- Dipped beam
- Partial main beam
- Main beam

The partial main beam uses the main beam to shine past other road users rather than dazzling

them. The vehicle in front is illuminated by the dipped beam.

At speeds above 30 km/h:

- If no other road users are detected, the main beam is automatically switched on.
- If other road users are detected, the partial main beam is automatically switched on.

At speeds below 25 km/h or when there is sufficient street lighting:

- The partial main beam switches off automatically.
- The main beam switches off automatically.

At speeds above approx. 50 km/h:

- The headlamp range of the dipped beam is regulated automatically based on the distance to other road users.

The system's optical sensor is located behind the windscreen near the overhead control panel.

Switching Adaptive Highbeam Assist Plus on/off

- ▶ **To switch on:** turn the light switch to the **AUTO** position.
- ▶ Switch on the main beam using the combination switch.
When the main beam is switched on automatically in the dark, the  indicator lamp in the multifunction display comes on.
- ▶ **To switch off:** switch off the main beam using the combination switch.

Setting the dipped beam

Multimedia system:

➞ Vehicle ➞  Light settings ➞ Dipped-beams

- ▶ Select **Left-side traffic** or **Right-side traffic**.

Setting the surround lighting

Requirement:

- The light switch is in the **AUTO** position.

Multimedia system:

➞ Vehicle ➞  Light settings ➞ Locator lighting

Exterior switch-off delay time: the exterior lighting is switched on for a short time after the vehicle is switched off.

- ▶ Set the switch-off delay time.

Locator lighting: if a switch-off delay time is set, the exterior lighting remains lit up for 40 seconds after the vehicle is unlocked. When you start the vehicle, the locator lighting is switched off and automatic driving lights are activated.

Interior lighting

Adjusting the interior lighting

Front overhead control panel



- ▶ ① Switches the front left-hand reading lamp on/off
- ▶ ② Switches the automatic interior lighting control on/off
- ▶ ③ Switches the front interior lighting on/off
- ▶ ④ Switches the rear interior lighting on/off

- ▶ ⑤ Switches the front right-hand reading lamp on/off

Control panel in the grab handle (rear)



- ▶ ① Switches the reading lamp on/off

Adjusting the ambient lighting

Multimedia system:

➔ Vehicle ➔ Light settings ➔ Ambient light

Setting the colour

- ▶ Select **Colour**.

- ▶ Set the colour.

Adjusting the brightness.

- ▶ Select **Brightness**.
- ▶ Set the brightness value.

Activating the brightness for zones

- ▶ Select **Brightness zones**.
- ▶ Activate ☒ or deactivate ☐ the function. The **Display**, **Front** and **Rear** zones can be set separately.
- ① Setting brightness zones is not available for the Rear Seat Entertainment System.

Activating multi-coloured lighting

- ▶ Select **Multi-colour**.
- ▶ Activate ☒ or deactivate ☐ the function. There are ten preset colour combinations available.

Activating multi-coloured animation

- ▶ Select **Multi-colour animat..**

- ▶ Activate ☒ or deactivate ☐ the function. The chosen colour combination varies in a predefined rhythm.

Activating climate-dependent lighting

- ▶ Select **Climate**.
- ▶ Activate ☒ or deactivate ☐ the function. The colour of the ambient lighting adapts to suit the climate control setting.

Activating welcome lighting

- ▶ Select **Welcome**.
- ▶ Activate ☒ or deactivate ☐ the function. When the vehicle is unlocked, a special interior lighting sequence runs.

Setting the interior lighting switch-off delay time

Multimedia system:

- ▶ **Vehicle** ▶  **Light settings** ▶ **Int. light delay shut-off**
- ▶ Set the switch-off delay time.

Changing bulbs (only for vehicles with halogen headlamps)

Notes on changing bulbs

⚠ WARNING Risk of burns from hot component parts whilst replacing a bulb

Bulbs, lamps and plug connectors can become very hot during operation.


When replacing a bulb, you could burn yourself on these component parts.

- ▶ Allow the component parts to cool down before replacing the bulbs.

- Do not use a bulb if it has been dropped or if its glass tube has been scratched. The bulb may otherwise explode.
- Do not touch the glass tube with your bare hands.
- Protect bulbs from moisture and do not allow bulbs to come into contact with liquids.


Overview of bulb types

The following bulbs can be replaced.

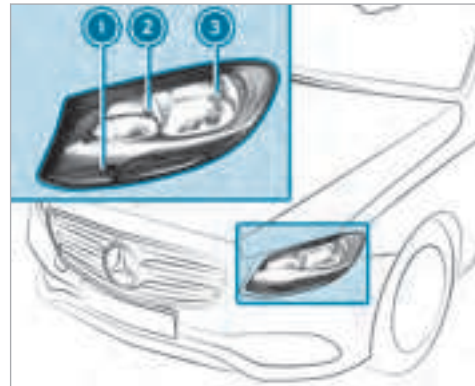

Halogen headlamps

- ① Turn signal light: PY 21 W
- ② Main beam: H7 55 W
- ③ Dipped beam: H7 55 W

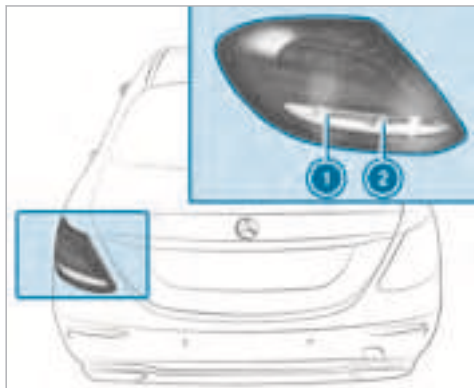

Tail lamps


- ① Turn signal light: PY 21 W
- ② Reversing light: W 16 W

Changing the front bulbs (vehicles with halogen headlamps)

Fitting/removing the cover on the front wheel arch

Requirements:

- The lighting system is switched off.
- The appropriate front wheel is turned inwards.

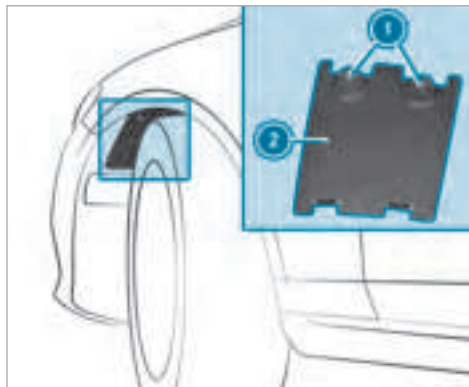


- ▶ **Removal (left-hand side of the vehicle):** using a screwdriver, turn rotating catches ① clockwise as far as they will go. Cover ② is released.
 - ▶ **Removal (right-hand side of the vehicle):** using a screwdriver, turn rotating catches ① anti-clockwise as far as they will go. Cover ② is released.
 - ▶ Remove cover ②.
 - ▶ **To fit:** insert cover ② into the wheel arch liner.
 - Left-hand side of the vehicle: using a screwdriver, turn rotating catches ① anti-clockwise as far as they will go.
 - Right-hand side of the vehicle: using a screwdriver, turn rotating catches ① clockwise as far as they will go.
- Cover ② is locked.

Replacing bulbs in the halogen headlamp

Requirements:

- **Main beam/dipped beam:** bulb, type H7 55 W.

- **Turn signal light:** bulb, type PY 21 W.
- The lighting system is switched off.
- The cover in the front wheel arch has been removed.
- The engine bonnet is open.

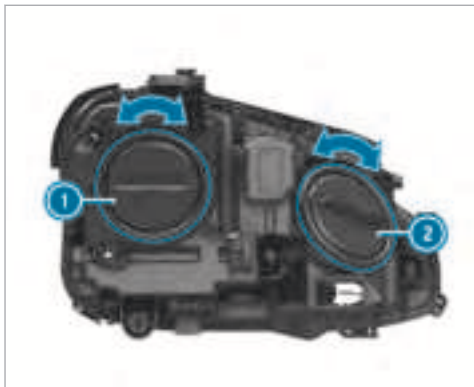

- ① Dipped beam
- ② Main beam/turn signal light

- ▶ Turn the relevant housing cover anti-clockwise and remove it.
- ▶ **Main beam/dipped beam:** turn the socket anti-clockwise and remove it.
- ▶ **Turn signal light:** turn the socket anti-clockwise, unlock and remove it.
- ▶ Pull the bulb out of the socket.
- ▶ Insert the new bulb into the socket so that the entire base of the bulb is resting on the bottom of the socket.
- ▶ Insert socket and turn it clockwise.
- ▶ Press on the housing cover and turn it clockwise.
- ▶ Replace the cover in the front wheel arch.

Changing the rear bulbs (vehicles with halogen headlamps)

Opening and closing the side trim panels in the boot




- ▶ **To open:** release right-hand or left-hand side trim panels ① at the side and remove.
- ▶ **To close:** reinsert side trim panel ①.

Replacing the tail lamp bulbs


Requirements:

- **Turn signal light:** bulb, type PY 21 W.
- **Reversing light:** bulb, type W 16 W.
- The lighting system is switched off.

- The side trim panel in the boot is open.

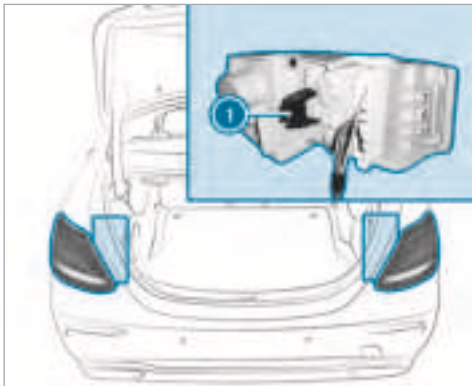


- ▶ Press the upper and lower catch on the plug together and remove the plug.
- ▶ Press tab ① outwards and remove the bulb mount.

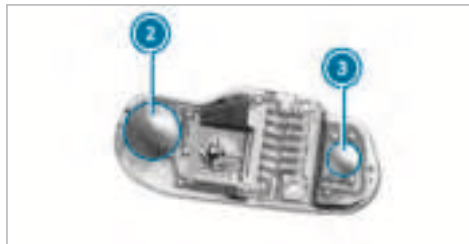

- ▶ **Turn signal light:** press bulb ② gently into the bulb mount, turn it anti-clockwise and remove it from the bulb mount.
- ▶ Insert the new bulb into the bulb mount and turn it clockwise.
- ▶ **Reversing light:** pull bulb ③ out of the bulb mount.
- ▶ Insert the new bulb into the bulb mount.
- ▶ Insert the bulb mount again.
- ▶ Insert the plug until the catch hooks engage audibly.
- ▶ Close the side trim panel.

Windscreen wipers and windscreen washer system

Switching the windscreen wipers on/off

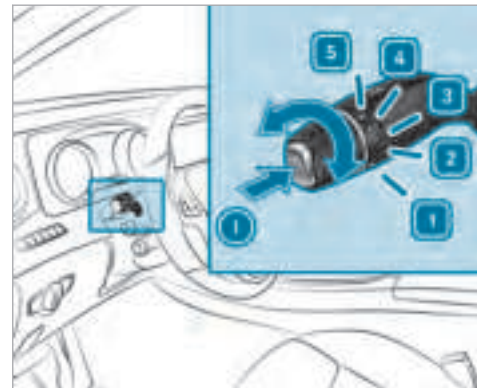

- ▶ ① Single wipe / wiper with washer fluid
- ▶ ① 0 Windscreen wipers off
- ▶ ② ... Intermittent wiping, normal

- ▶ 3  Intermittent wiping, frequent
- ▶ 4  Continuous wiping, slow
- ▶ 5  Continuous wiping, fast

Replacing the windscreen wiper blades

⚠ WARNING Risk of becoming trapped if the windscreen wipers are switched on while wiper blades are being replaced

If the windscreen wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.


- ▶ Always switch off the windscreen wipers and ignition before changing the wiper blades.

Moving the wiper arms to a vertical position

- ▶ Set the windscreen wipers to the  slow continuous wiping position on the combination switch.
- ▶ As soon as the wiper arms are vertical relative to the engine bonnet, switch off the ignition.

- ▶ Fold the wiper arm away from the windscreen.

Removing the wiper blades

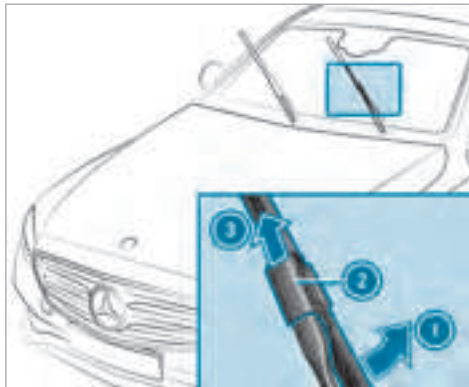

- ▶ Hold the wiper arm with one hand. With the other hand, turn the wiper blade in the direction of arrow ① away from the wiper arm to the stop.

- ▶ Slide catch ② in the direction of arrow ③ until it engages in the removal position.




- ▶ Remove the wiper blade in the direction of arrow ④ away from the wiper arm.

Fitting the wiper blades




- ▶ Insert the new wiper blade into the wiper arm in the direction of arrow ①.

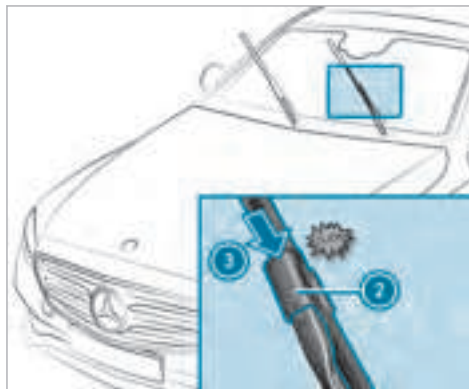

- ▶ Slide catch ② in the direction of arrow ③ until it engages in the locking position.
- ▶ Make sure that the wiper blade sits correctly.
- ▶ Fold the wiper arm back onto the windscreen.

Maintenance display

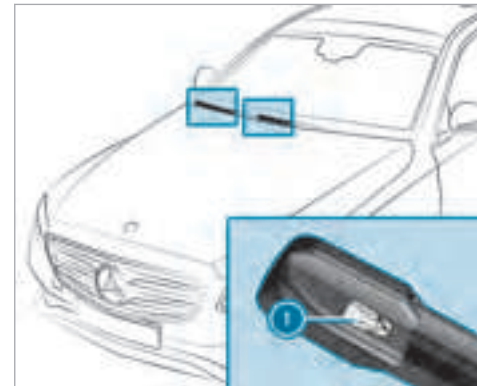

- ▶ Remove protective film ① of the maintenance display on the tip of the newly fitted wiper blade.

If the colour of the maintenance display changes from black to yellow, the wiper blades should be replaced.

- ⓘ The duration of the colour change varies depending on the usage conditions.

Mirrors

Operating the outside mirrors

- ⚠ **WARNING** Risk of injury through adjusting vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations:


- if you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion
 - if you fasten your seat belt while the vehicle is in motion
- Before starting the engine: adjust the driver's seat, the head restraints, the steering wheel or the mirror and fasten your seat belt.

- ⚠ **WARNING** Risk of accident due to misjudgement of distances when using the outside mirror

The outside mirrors reflect objects on a smaller scale. The objects in view are in fact closer than they appear.

As a result, you may misjudge the distance between you and the road user driving behind you, e.g. when changing lanes.

- Therefore, always look over your shoulder in order to ensure that you are aware of the actual distance between you and the road users driving behind you.

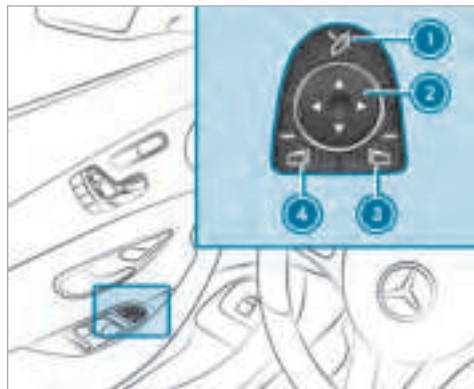

- **To fold in or out:** briefly press button ①.
- ⓘ If the battery has been disconnected or completely discharged, the outside mirrors must be reset. Only then will the automatic mirror folding function work properly.
- **To adjust:** select the required mirror using button ③ or ④.

- Use button ② to set the position of the mirror you have selected.

An outside mirror which has been pushed out of position can be engaged in position again in the following manner:

- **Vehicles without electrically folding outside mirrors:** manually move the outside mirror into the correct position.

- **Vehicles with electrically folding outside mirrors:** press and hold button ①.

You will hear a click and the mirror audibly engage in position. The mirror is set in the correct position.

Automatic anti-dazzle mirrors

⚠ WARNING Risk of burns and poisoning due to the anti-dazzle mirror electrolyte

Electrolyte may escape if the glass in an automatic anti-dazzle mirror breaks.

The electrolyte is harmful and causes irritation. It must not come into contact with your

skin, eyes, respiratory organs or clothing or be swallowed.

- If you come into contact with electrolyte, observe the following:

- Rinse the electrolyte from your skin and seek medical attention immediately.
- If electrolyte comes into contact with your eyes, rinse them thoroughly with clean water and seek medical attention immediately.
- If the electrolyte is swallowed, immediately rinse your mouth out thoroughly. Do not induce vomiting. Seek medical attention immediately.
- Immediately change out of clothing which has come into contact with electrolyte.
- If an allergic reaction occurs, seek medical attention immediately.

The outside mirrors and inside rearview mirrors on the driver's side automatically go into anti-

dazzle mode if light from a headlamp hits the inside rearview mirror.

System borders

The mirrors do not go into anti-dazzle mode in the following situations:

- the engine is switched off.
- reverse gear is engaged
- interior lighting is switched on

Parking position of the passenger outside mirror

The parking position makes parking easier.


The passenger outside mirror tilts downwards and shows the rear wheel on the front passenger side if:

- the parking position is stored
- the passenger mirror is selected
- reverse gear is engaged

The passenger outside mirror moves back to its original position in the following situations:

- if you shift the transmission to another transmission position
- when driving faster than 15 km/h
- if you press the button for the outside mirror on the driver's side

Storing the parking position of the passenger outside mirror using reverse gear

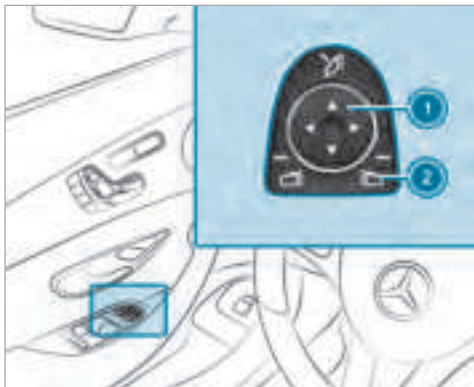

- ▶ **To store:** select the passenger outside mirror using button ②.
- ▶ Engage reverse gear.
- ▶ Move the passenger outside mirror into the desired parking position using button ①.
- ▶ **To call up:** select the passenger outside mirror using button ②.
- ▶ Engage reverse gear.
The passenger outside mirror moves to the stored parking position.


Activating/deactivating the automatic mirror folding function

Multimedia system:

→ Vehicle → Vehicle settings → Auto. fold-in mirrors


- ▶ Activate ☒ or deactivate ☐ the function.

Operating the sun visors

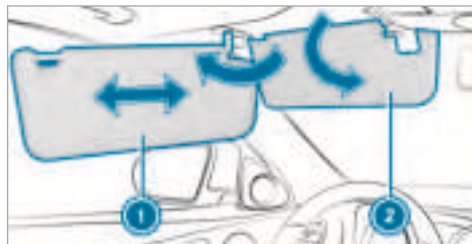

- ▶ **Glare from the front:** fold sun visor ① down.
- ▶ **Glare from the side:** swing sun visor ① to the side.
- ▶ Slide sun visor ① horizontally as required.
- ▶ Fold down additional sun visor ②.

Infrared reflective windscreen

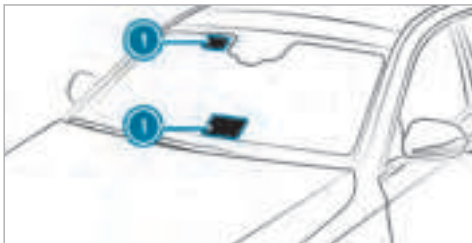

The infrared reflective windscreen is coated and prevents an excessive build-up of heat in the vehicle interior.

The coating shields the vehicle interior against radio waves up into the gigahertz range.

Radio-controlled equipment, such as toll systems, can only be mounted on areas of the windscreen which are permeable to radio waves ①.

Areas permeable to radio waves ① are best visible from outside the vehicle when the windscreen is illuminated using an external light source.

Overview of climate control systems


Notes on climate control

Vehicles with THERMOTRONIC automatic climate control: an interior air filter must always be used so that the air conditioning system, the pollution level monitoring and the air filtering function work correctly. Make sure that the filter is installed correctly and the filter housing in the engine compartment is closed correctly using the cap and always tightly sealed when in operation. Use filters recommended and approved by Mercedes-Benz. Always have service work carried out at a qualified specialist workshop.

THERMATIC control panel overview

The indicator lamps in the buttons indicate that the current function is activated.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

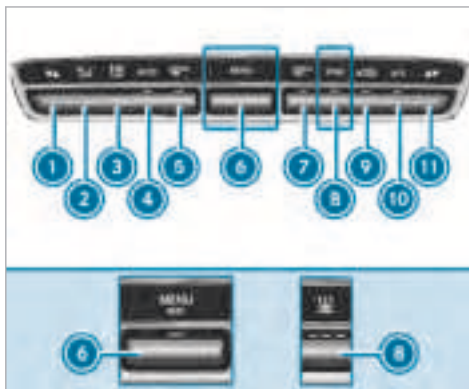


- ① To set the driver's side temperature
- ② To set the air distribution
- ③ To set the airflow or switch off climate control
- ④ To set climate control to automatic mode (→ page 144)
- ⑤ To demist the windscreen

- ⑥ Vehicles without a stationary heater: to call up the air conditioning menu
Vehicles with a stationary heater: to call up the air conditioning menu, to switch the residual heat on/off (→ page 145)
- ⑦ To switch the rear window heater on/off
- ⑧ Vehicles without a stationary heater: to switch the synchronisation on/off (→ page 145)
Vehicles with a stationary heater: to switch the stationary heater on/off (→ page 147)
- ⑨ To switch air-recirculation mode on/off (→ page 145)
- ⑩ To switch the A/C function on/off (→ page 144)
- ⑪ To set the front passenger side temperature

THERMOTRONIC control panel overview

The indicator lamps in the buttons indicate that the current function is activated.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

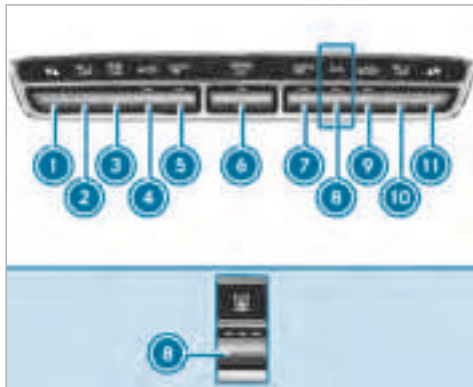

- ① To set the driver's side temperature
- ② To set the driver's side air distribution
- ③ To set the airflow or switch off climate control

- ④ To set climate control to automatic mode (→ page 144)
- ⑤ To demist the windscreen
- ⑥ To call up the air conditioning menu
To switch the residual heat on or off (→ page 145)
- ⑦ To switch the rear window heater on/off
- ⑧ Vehicles without a stationary heater:
 to switch the A/C function on/off (→ page 144)
Vehicles with a stationary heater: to switch the stationary heater on/off (→ page 147)
- ⑨ To switch air-recirculation mode on/off (→ page 145)
- ⑩ To set the front passenger side air distribution
- ⑪ To set the front passenger side temperature

Rear operating unit



- ① To set the temperature
- ② Display
- ③ To set the airflow

Operating the climate control system

Switching climate control on/off

- ▶ **To switch on:** set the airflow to level 1 or higher using the button.
- ▶ **To switch off:** set the airflow to level 0 using the button.

- ❗ When the climate control is switched off, the windows can mist up faster. Only switch off the climate control briefly.

Activating/deactivating the A/C function via the control panel

The A/C function cools, heats and dehumidifies the interior air in the vehicle.

- ▶ Press button .

Deactivate the A/C function only briefly otherwise the windows can mist up more quickly.

Condensation may drip from the underside of the vehicle when cooling mode is active. This is not a sign that there is a malfunction.

Activating/deactivating the A/C function using the multimedia system

Multimedia system:

➔ Vehicle ➔  Climate control ➔ A/C

The A/C function heats, cools and dehumidifies the vehicle's interior air.

- ▶ Activate ☒ or deactivate ☐ the function.

Setting climate control to automatic mode

In automatic mode, the set temperature is controlled and maintained at a constant level by the air supply.

- ▶ Press the  button.

- ▶ **To switch to manual mode:** press the  or  button.

Climate style

Climate style function

In automatic mode you can select the following climate style settings for the driver's and front passenger areas:

- **FOCUS:** high airflow, slightly cooler setting
- **MEDIUM:** medium airflow, standard setting
- **DIFFUSE:** low airflow, slightly warmer and draught-free setting

Setting the climate style

Multimedia system:

➔ Vehicle ➔  Climate control ➔ Climate mode

- ▶ Select **FOCUS**, **MEDIUM** or **DIFFUSE**.

- ❗ In order to feel the effect of the climate style, the  function must be active (→ page 144).

Air distribution settings

The symbols in the display indicate which vents the airflow is being directed through:

-  demister vents
-  centre and side air vents
-  footwell vents
-  centre, side and footwell vents
-  defroster and footwell vents
-  all vents
-  defroster, middle and side air vents
-  automatic air distribution

Setting the rear climate control using the multimedia system

Multimedia system:

➡ Vehicle ➡  Climate control ➡ Rear

Setting the airflow

- ▶ Select **Airflow**.
- ▶ Set the airflow.

Setting the temperature

- ▶ Select **Temperature**.
- ▶ Set the temperature.

Activating/deactivating the climate control synchronisation function via the control panel

Climate control can be set centrally using the synchronisation function. The temperature and air distribution setting for the driver's side is adopted automatically for the front passenger side.

- ▶ Press button **SYNC**.

The synchronisation function is deactivated if the settings for one of the other climate zones are changed.

Activating/deactivating the climate control synchronisation function using the multimedia system

Multimedia system:

➡ Vehicle ➡  Climate control ➡ SYNC

Climate control can be set centrally using the synchronisation function. The temperature setting is automatically adopted for all climate zones.

- ▶ Activate ☒ or deactivate ☐ the function.

Demisting the windows

Windows misted up on the inside

- ▶ Press the **AUTO** button.
- ▶ If the windows continue to mist up: press the  button.

Windows misted up on the outside

- ▶ Switch on the windscreen wipers.
- ▶ Press the **AUTO** button.

Switching air-recirculation mode on/off

- ▶ Press the  button.
The interior air will be recirculated.

Air-recirculation mode is switched off automatically.

- ⓘ If air-recirculation mode is switched on, the windows may mist up more quickly. Switch on air-recirculation mode only briefly.

Switching the residual heat on/off

Requirement:

- The vehicle is parked.

It is possible to make use of the residual heat from the engine to continue heating or ventilating the front compartment of the vehicle for approximately 30 minutes.

- ▶ **To switch on:** press the **MENU REST** button.

Residual heat is switched off automatically.

Activating and deactivating ionisation

Multimedia system:

➞ Vehicle ➞  Climate control ➞ Ionisation

Ionisation cleans and refreshes the interior air of the vehicle. The ionisation of the interior air is odourless.

▶ Switch the function on ☒ or off ☐.

Fragrance system

Setting the fragrance system

Requirements:

- Automatic climate control is activated.
- The glove box is closed.

Multimedia system:

➞ Vehicle ➞  Climate control ➞ Air freshener

The fragrance system distributes a pleasant fragrance throughout the vehicle interior from a flacon located in the glove box.

▶ **To set the intensity:** select **High**, **Medium**, **Low** or **Off**.

Inserting or removing the flacon of the fragrance system

⚠ WARNING Risk of injury from liquid perfume

If children open the flacon, they could drink the liquid perfume or it could come into contact with their eyes.

- ▶ Consult a doctor immediately if liquid perfume has been drunk.
- ▶ If liquid perfume comes into contact with your eyes or skin, rinse your eyes with clean water.
- ▶ If symptoms continue, consult a doctor.




ENVIRONMENTAL NOTE Environmental damage due to improper disposal of full flacons



Full flacons must not be disposed of with household waste.



Full flacons must be taken to a harmful substance collection point.

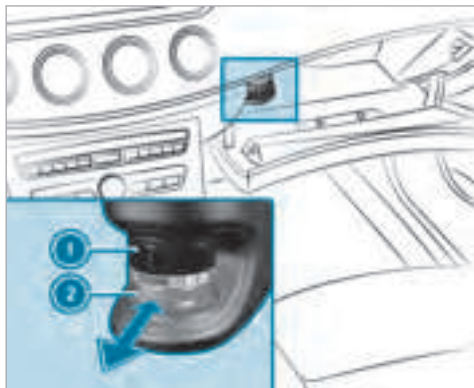

- ① Cap
- ② Flacon

- ▶ **To insert:** slide the flacon into the holder as far as it will go.
- ▶ **To remove:** pull out the flacon.

If you do not use genuine Mercedes-Benz interior perfumes, observe the manufacturers' safety notices on the perfume packaging.

Dispose of the genuine Mercedes-Benz interior perfume flacon when it is empty and do not refill it.

Refillable flacon

- ▶ Unscrew the cap of the empty flacon.
- ▶ Fill the flacon with a maximum of 15 ml.
- ▶ Screw the cap back on to the flacon.

Always refill the empty refillable flacon with the same perfume. Observe the separate information sheet attached to the flacon.

Information on the windscreen heater

The windscreen heater is switched on automatically:

- if the  button is activated

After the vehicle is started the windscreen heater is switched on automatically as needed.

Stationary heater/ventilation

Function of the stationary heater/stationary ventilation

- The air in the vehicle interior is heated or ventilated to the set temperature.
- The air in the vehicle interior cannot be cooled down to temperatures below the outside temperature.
- If the outside temperature changes, ventilation mode automatically switches to heating mode or from heating mode to ventilation mode.

The stationary heater and the exhaust gas outlet are situated at the right-hand front wheel.

Switching the stationary heater/stationary ventilation on/off via the control panel

⚠ DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle.

cle. This is the case in enclosed spaces or if the vehicle gets stuck in snow, for example.

- ▶ Always switch the stationary heater off in enclosed spaces without an air extraction systems, e.g. in garages.
- ▶ Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater are running.
- ▶ Open a window on the windward side of the vehicle to ensure an adequate supply of fresh air.

⚠ WARNING Risk of fire due to hot stationary heater components

When the stationary heater is switched on, parts of the vehicle can become very hot, e.g. the exhaust system.

Flammable materials such as leaves, grass or twigs may ignite if they come into contact with:

- hot parts of the exhaust system

- the exhaust gas itself
- ▶ When the stationary heater is switched on, make sure that:
 - hot vehicle parts do not come into contact with flammable materials
 - the exhaust gas can flow out of the tailpipe unhindered
 - the exhaust gas does not come into contact with flammable materials


! NOTE Battery discharge caused by stationary heater or stationary ventilation operation

Operating the stationary heater or stationary ventilation drains the battery.

- ▶ After heating or ventilating the vehicle twice, drive for a longer period of time.

Requirement:

- The fuel tank is filled to at least reserve fuel level.

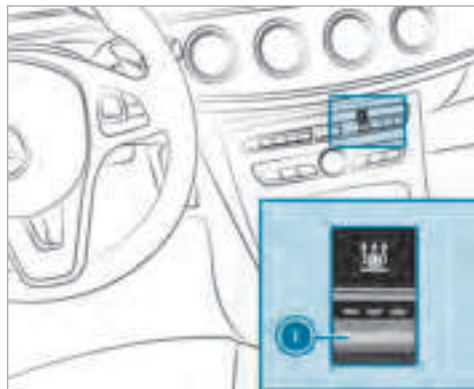

- ▶ Set the desired temperature using the ▼▲ button.
- ▶ Press button ①. The red or blue indicator lamp in button ① lights up or goes out.

Indicator lamp colours:

- **blue:** stationary ventilation is switched on
- **red:** stationary heater is activated

- **yellow:** departure time is preselected

The stationary heater/stationary ventilation switches off automatically after 50 minutes.

Operation using the App: the stationary heater/ventilation can also be operated via the Mercedes me connect App. Further information can be found in the separate Owner's Manual under http://manuals.daimler.com/baix/cars/connectme/en_GB/index.html.

Setting the stationary heater/stationary ventilation using the multimedia system

Multimedia system:

➔ Vehicle ➔  Climate control ➔ Auxiliary heating

You can pre-set three departure times for automatic activation of the stationary heater.

- ▶ Select an option.

Setting the stationary heater/stationary ventilation via remote control

Requirement:

- The fuel tank is filled to at least reserve fuel level.



- ▶ **To activate immediately:** press and hold the **ON** button.
- ▶ **To set the departure time:** briefly press the **ON** button.
- ▶ Press the  or  button repeatedly until the time to be changed appears in the display.


- ▶ Press the **ON** and **OFF** buttons simultaneously. The  symbol in the remote control display flashes.
- ▶ Press the  and  buttons to set the desired departure time.
- ▶ Press the **ON** and **OFF** buttons simultaneously. The new departure time is stored.

Up to three departure times can be stored.

- ▶ **To activate the departure time:** select the desired departure time and press and hold the **ON** button. The  symbol, the departure time and, depending on the selected departure time, the letter **A**, **B** or **C** appear in the display.
- ▶ **To deactivate the departure time:** select the desired departure time and press and hold the **OFF** button. **OFF** appears in the display.
- ▶ **To check the status of the stationary heater:** briefly press the **ON** button.

▶ **To deactivate immediately:** press and hold the **OFF** button.

Overview of the remote control displays (stationary heater/stationary ventilation)

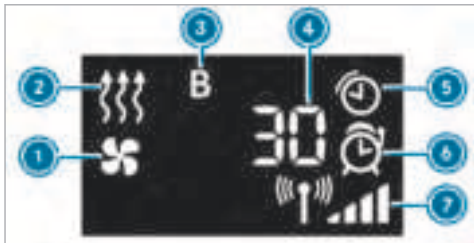

- ① Stationary ventilation switched on
- ② Stationary heater switched on
- ③ Selected departure time
- ④ Remaining time for the stationary heater/stationary ventilation (in minutes)
- ⑤ Stationary heater/stationary ventilation active
- ⑥ Departure time activated
- ⑦ Signal strength

Further possible displays:

- **Time:** activated departure time.
- **Zero minutes:** the running time for the stationary heater is increased, as the engine has not yet reached operating temperature when it is started.
- **OFF:** the stationary heater/stationary ventilation is switched off.

Replacing the remote control battery (stationary heater)

⚠ DANGER Serious damage to health caused by swallowing batteries

Batteries contain toxic and corrosive substances. Swallowing batteries may cause serious damage to health.

There is a risk of fatal injury.

- ▶ Keep batteries out of the reach of children.
- ▶ If batteries are swallowed, seek medical attention immediately.



ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries




Batteries contain toxic and corrosive substances.



Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirement:

- A CR2450 lithium battery is required when replacing the battery.

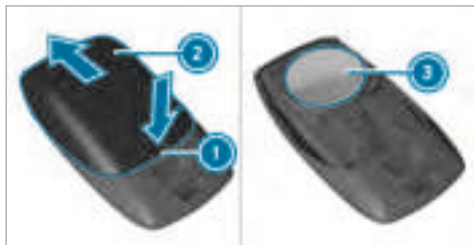

- ▶ Press a pointed object into recess ①.
- ▶ Slide battery cover ② backwards in the direction of the arrow.
- ▶ Insert new battery ③ with the lettering facing upwards.
- ▶ Slide battery cover ② in the opposite direction to the arrow onto the remote control until the battery cover engages.

Problems with the remote control for the stationary heater/stationary ventilation

Problem	Possible causes/consequences and ▶ Solutions
FAIL 	The signal transmission between the transmitter and the vehicle is faulty. ▶ Change your position in relation to the vehicle, moving closer if necessary.
FAIL	The starter battery is not sufficiently charged. ▶ Charge the starter battery. The fuel tank content is below the reserve fuel level. ▶ Refuel at the nearest filling station.
FAIL 	The stationary heater is malfunctioning. ▶ Have the stationary heater checked at a qualified specialist workshop.

Air vents

Adjusting the front air vents

⚠ WARNING - Risk of burns/frostbite due to not maintaining a sufficient distance to the air vents

Very hot or very cold air can flow from the air vents.


This could result in burns or frostbite in the immediate vicinity of the air vents.

- ▶ Always ensure that all vehicle occupants maintain a sufficient distance to the air vents.
- ▶ If necessary, redirect the airflow to another area of the vehicle interior.



- ▶ **To open or close:** turn controller ② to the left or right as far as it will go.
- ▶ **To adjust the air direction:** hold air vent ① in the centre and move it up or down or to the left or right.

Adjusting the rear air vents

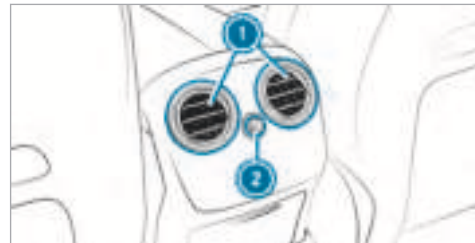

- ▶ **To open or close:** turn controller ② to the left or right as far as it will go.
- ▶ **To adjust the air direction:** hold rear air vent ① in the centre and move it up or down or to the left or right.

Opening/closing the air vent in the glove box


! NOTE Damage to temperature-sensitive objects in the glove box

Temperature-sensitive objects stored in the glove box may be damaged by the air vent located inside the glove compartment.

- ▶ Close the air vent when you heat the vehicle.
- ▶ At high outside temperatures, open the air vent and switch on the A/C function.

Requirement:

- Automatic climate control is activated.

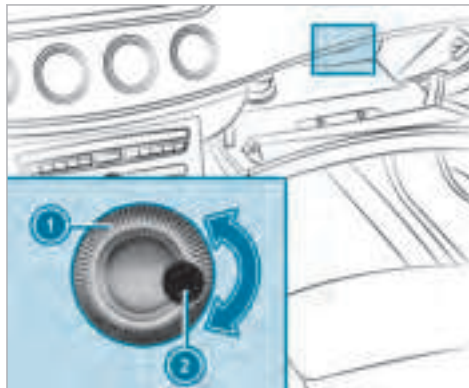

- ① Air vent controller
- ② Air vent

▶ **To open or close:** turn controller ① to the left or right.

Driving

Notes on Mercedes-AMG vehicles

Be sure to observe the notes on the following topics in the Supplement. Otherwise, you may fail to recognise dangers.

- RACE START
- DRIFT MODE
- AMG RIDE CONTROL

Switching on the power supply or ignition using the start/stop button

⚠ WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unattended in the vehicle, they could:

- Open doors, thereby endangering other persons or road users.
- Get out of the vehicle and be hit by oncoming traffic.

- Operate vehicle equipment and become trapped, for example.

Moreover, children could also set the vehicle in motion by, for example:

- Releasing the parking brake.
- Shifting the automatic transmission out of park position **[P]** or shifting manual transmission into idle position.
- Starting the engine.

- ▶ Never leave children and animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes me connect web app.
- ▶ Keep the vehicle key out of reach of children. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes me connect web app.

⚠ WARNING Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases causes poisoning.

- ▶ Never leave the engine running in an enclosed space without sufficient ventilation.

⚠ WARNING Risk of fire caused by flammable material on the exhaust system


Flammable materials brought in by either animals or environmental influences may ignite if they come into contact with hot parts of the engine or exhaust system.

- ▶ Therefore, check regularly that there are no flammable materials in the engine compartment or on the exhaust system.

Requirements:

- The key is located in the vehicle and the key battery is not discharged.

- Or if the "Digital Car Key" function is activated via the Mercedes me connect web app: the mobile phone is located in the vehicle.

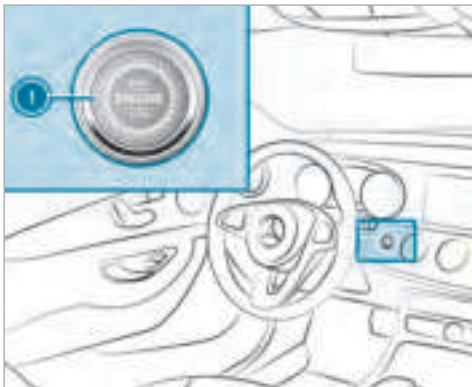

- ▶ **To switch on the power supply:** press button ① once.
You can activate the windscreen wiper, for example.

The power supply is switched off again if the following conditions are met:

- The driver's door is open.
- You press button ① twice.

- ▶ **To switch on the ignition:** press button ① twice.
The indicator lamps in the instrument cluster light up.

The ignition is switched off again if one of the following conditions is met:

- You do not start the vehicle within 15 minutes.
- You press button ① once.

Starting the vehicle

Starting the vehicle with the start/stop button

Requirements:

- The key is located in the vehicle and the key battery is not discharged.

- Or if the "Digital Car Key" function is activated via the Mercedes me connect web app: the mobile phone is located in the vehicle.

▶ Vehicles with manual transmission:

Depress the clutch pedal.

▶ Vehicles with automatic transmission:

Shift the transmission to position **P** or **N**.

- ▶ Depress the brake pedal and push button ① once.

- ▶ If the vehicle does not start: switch off non-essential consumers and press button ① once.

- ▶ If the vehicle still does not start and the [Place the key in the marked space See Owner's Manual](#) display message also appears in the multifunction display: start the vehicle in emergency operation mode.

You can switch off the engine while driving by pressing button ① for about three seconds. Be sure to observe the safety notes under "Driving instructions".

Starting the vehicle with a mobile phone (NFC)

Requirements:

- The vehicle is equipped with the "Digital Car Key" function.
- The "Digital Car Key" function is activated via the Mercedes me connect web app: <http://www.mercedes.me>.
- Suitable mobile phone with NFC aerial (Near Field Communication) and Secure Element.
- **Sufficient charge level of the mobile phone.** On some mobile phones, the function is also available when the battery is discharged.

- i** You can check the suitability of your mobile phone by entering the phone number at <http://www.mercedes.me>. Information about suitable mobile phones can be obtained from your Mercedes-Benz service centre or at <http://www.mercedes-benz.com/connect>.

- i** Mercedes-Benz recommends that you carry the emergency key in case of function restrictions.
- i** The function is only available in combination with Mercedes me connect and only in certain countries.
- i** Protective cases around the mobile phone can impair the functionality.
- ▶ Make sure that the charge level of the mobile phone is sufficient. If necessary, charge the mobile phone before starting the journey.

Starting the vehicle for the first time after activating the function



- ▶ Make sure that there is a valid vehicle key in the vehicle.
- ▶ Place the mobile phone in stowage space **1** so that the NFC aerial areas touch each other.
- ▶ Depress the brake pedal and start the vehicle using the start/stop button.
- i** The key is not needed for any further starts.

Any further starts

- ▶ Place the mobile phone in stowage space **1** so that the NFC aerial areas touch each other, and leave it there while driving.
- ▶ Depress the brake pedal and start the vehicle using the start/stop button.

The "Digital Car Key" service can be deactivated in Mercedes me connect at <https://www.mercedes.me>. The function is then deactivated in the smartphone via an online connection. If connection to the Internet is not possible, e.g. after the mobile phone has been stolen, the key function can be deactivated at a Mercedes-Benz Service Centre.

Starting the vehicle in emergency operation mode

If the vehicle cannot be started, the **Place the key in the marked space** See Owner's Manual display message appears in the multifunction display.



- ▶ Make sure that marked space ② is empty.
 - ▶ Remove key ① from the key ring.
 - ▶ Place key ① in marked space ②. The vehicle will start after a short while.
- If you remove key ① from marked space ② the engine continues running. For further vehicle starts however, key ① must be loca-

ted in marked space ② during the entire journey.

- ▶ Have key ① checked at a qualified specialist workshop.

If the vehicle does not start:

- ▶ Leave key ① in marked space ②.
 - ▶ Depress the brake pedal and start the vehicle using the start/stop button.
- ① You can also switch on the power supply or the ignition with the start/stop button.

Running-in notes

Mercedes-AMG vehicles: make sure that you read the separate Owner's Manual. Otherwise, you may fail to recognise dangers.

To preserve the engine during the first 1,500 km:

- drive at varying road speeds and engine speeds.
- drive in drive program **C** or **E**.
- change gear before the rev counter needle is $\frac{2}{3}$ of the way to the red area of the rev counter.

- do not shift down a gear manually in order to brake.
- avoid overstraining the vehicle, e.g. driving at full throttle.
- **vehicles with automatic transmission:** do not depress the accelerator pedal beyond the pressure point (kickdown).
- only increase the engine speed gradually and accelerate the vehicle to full speed after 1,500 km.

This also applies when the engine or parts of the drivetrain have been replaced.

Please also observe the following running-in notes:

- In certain driving and driving safety systems, the sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness is not achieved until the end of this teach-in process.
- Brake linings, brake discs and tyres that are either new or have been replaced only achieve optimum braking effect and grip after

several hundred kilometres of driving. Compensate for the reduced braking effect by applying greater force to the brake pedal.

Notes on driving

WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardises the operating and road safety of the vehicle.

- ▶ Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ▶ Ensure floor mats and carpets cannot slip and provide sufficient room for the pedals.
- ▶ Do not lay multiple floor mats or carpets on top of one another.

WARNING Risk of accident due to unsuitable footwear

Operating the pedals may be impaired by wearing unsuitable footwear, e.g.:

- platform shoes
 - high-heeled shoes
 - slippers
- ▶ Always wear suitable footwear when driving so that you can operate the pedals safely.

WARNING Risk of accident if the ignition is switched off while driving

If you switch off the ignition while driving, functions relevant to safety are restricted or no longer available. This may effect, for example, the power steering system and the brake force boosting.

You will then need to use considerably more force to steer and brake.

- ▶ Do not switch off the ignition while driving.

WARNING Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases causes poisoning.

- ▶ Never leave the engine running in an enclosed space without sufficient ventilation.

WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

- ▶ Do not shift down on slippery road surfaces to increase the engine braking effect.

⚠ DANGER Risk of fatal injuries due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case, for example, if the vehicle is stuck in snow.

- ▶ When the engine or the stationary heater are running, keep the tailpipe and the area around the vehicle clear of snow.
- ▶ Open a window on the side of the vehicle facing the wind to ensure an adequate supply of fresh air.

⚠ WARNING Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system may even fail.

- ▶ Never use the brake pedal as a footrest.
- ▶ Do not depress the brake pedal and the accelerator pedal at the same time while driving.

! NOTE Causing wear to the brake linings by permanently depressing the brake pedal

- ▶ Do not permanently depress the brake pedal while driving.
- ▶ To use braking effect of the engine, shift to a lower gear in good time.

! NOTE Damage to the drivetrain and engine when pulling away

- ▶ Do not warm up the engine when stationary. Pull away immediately.
- ▶ Avoid high engine speeds and full throttle until the engine has reached its operating temperature.
- ▶ Do not allow the wheels to spin.

! NOTE Damage to the catalytic converter due to non-combusted fuel

The engine is not running smoothly and is misfiring.

Non-combusted fuel may get into the catalytic converter.

- ▶ Only depress the accelerator pedal slightly.
- ▶ Have the cause rectified immediately at a qualified specialist workshop.

Limited braking effect on salt-treated roads:

- due to salt build-up on the brake discs and brake lining, the braking distance can increase considerably or result in braking only on one side.
- maintain a much greater distance to the vehicle in front.

To prevent salt build-up:

- brake occasionally while paying attention to the traffic conditions.

- carefully depress the brake pedal at the end of the journey and when starting the next journey.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

ECO start/stop function

Operation of the ECO start/stop function

Mercedes-AMG vehicles: make sure that you read the separate operating instructions. Otherwise, you may fail to recognise dangers.

The engine is automatically switched off if the following conditions are met:

- Vehicles with manual transmission:** If you brake the vehicle, shift into neutral **[N]** when travelling at a low speed and then release the clutch pedal.
- Vehicles with automatic transmission:** If you brake the vehicle to a standstill in transmission position **[D]** or **[N]**.
- If all vehicle conditions for an automatic engine stop are met.

The **[A]** symbol appears in the multifunction display when the vehicle is stationary. If not all the vehicle conditions are met, the **[A]** symbol appears in the multifunction display.


The engine is restarted automatically if:

- Vehicles with manual transmission:** You depress the clutch pedal.
- Vehicles with automatic transmission:** In transmission position **[D]**, you release the brake pedal when the HOLD function is not active.
- Vehicles with automatic transmission:** You shift out of transmission position **[P]**.
- Vehicles with automatic transmission:** You shift into transmission position **[D]** or **[R]**.
- You depress the accelerator pedal.
- You change the vehicle level.
- An automatic engine start is necessary.

If the engine was switched off by the ECO start/stop function and you leave the vehicle, a warning tone sounds. The **Vehicle is operational**

Switch off the ignition before exiting display message also appears in the multifunction display. If you do not switch off the ignition, the ignition is automatically switched off after one minute.

Switching the ECO start/stop function off/on

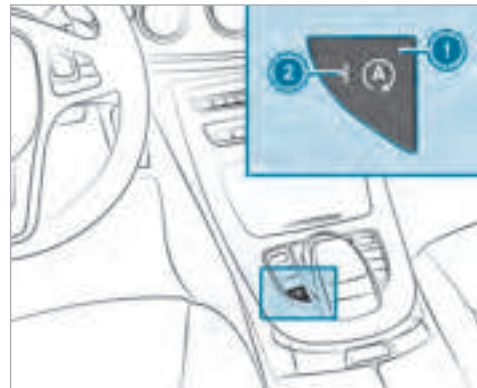

- Press button ①.
If indicator lamp ② lights up, the ECO start/stop function is switched on.
- ① Depending on the model, the button may also be located at a different position in the centre console.

ECO display

The ECO display summarises the driving style from the start of the journey to its completion and assists you in achieving the most economical driving style.

You can influence consumption if you:

- drive with particular care
- drive the vehicle in drive program **E**
- observe the gearshift recommendations



The inner segment lights up green and the outer segment fills up:

- ① Moderate acceleration
- ② Gentle deceleration and rolling
- ③ Consistent speed

The inner segment is grey and the outer segment empties:

- ① Sporty acceleration
- ② Heavy braking
- ③ Fluctuations in speed

You have driven economically when:

- the three outer segments are completely filled simultaneously.
- the ECO display border lights up.

The additional range achieved as a result of your driving style in comparison to a driver with a very sporty driving style is shown under **Bonus from start**. The range displayed does not indicate a fixed reduction in consumption.

DYNAMIC SELECT switch

Function of the DYNAMIC SELECT switch

Mercedes-AMG vehicles: make sure that you read the separate Owner's Manual. Otherwise, you may fail to recognise dangers.

Use the DYNAMIC SELECT switch to change between the following drive programs:


- **I (Individual):** individual settings
- **S+ (Sport Plus):** particularly sporty driving style
- **S (Sport):** sporty driving style

- **C (Comfort):** comfortable and economical driving style
- **E (Eco):** particularly economical driving style

Depending on the drive program selected, the following vehicle characteristics will change:

- Drive system
 - Engine and transmission management
 - Active Distance Assistant DISTRONIC
 - ESP®
 - **Vehicles with AIR BODY CONTROL or DYNAMIC BODY CONTROL:** Suspension
 - Steering
- ❶ Time until the next vehicle start:
- Less than four hours: the last selected drive program is active.
 - More than four hours: drive program **C** is active.

Selecting the drive program

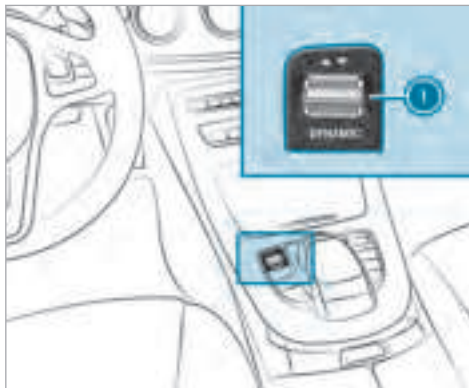

- ▶ Press DYNAMIC SELECT switch ❶ forwards or backwards. The drive program selected appears in the multifunction display.

Configuring drive program I

Multimedia system:

➔ Vehicle ➔ DYNAMIC SELECT ➔ Individual

- ▶ Select the individual setting.

Displaying vehicle data

Multimedia system:

➔ Vehicle ➔ DYNAMIC SELECT

- ▶ Select Vehicle data.

Displaying engine data

Multimedia system:

➔ Vehicle ➔ DYNAMIC SELECT

- ▶ Select Engine data.

- ❶ The values for engine output and engine torque may deviate from the nominal values. Items that can influence this are, for example:

- engine speed

- sea level
- fuel grade
- outside temperature

Manual transmission


Operating the gearshift lever

! **NOTE** Damage to the engine and transmission by shifting to a gear that is too low

- ▶ When changing between gears **5** and **6** push the gearshift lever to the right.
- ▶ Do not shift down at high speeds.

! **NOTE** Damage to the transmission by shifting to reverse gear **R** while the vehicle is in motion

- ▶ Only shift into reverse gear **R** when the vehicle is stationary.

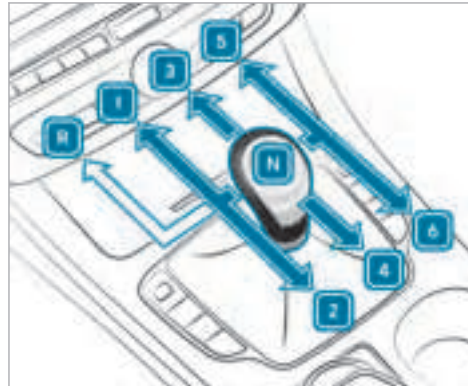

- R** Reverse gear
- 1** - **6** Forward gears
- N** Neutral

- ▶ Depress the clutch pedal and shift the gearshift lever into the required position.

Gearshift recommendation

The gearshift recommendations assist you in adopting an economical driving style.



- ▶ If gearshift recommendation message **1** is shown in the multifunction display, shift to the recommended gear.

Automatic transmission

DIRECT SELECT lever

Function of the DIRECT SELECT lever

▲ WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unattended in the vehicle, they could:

- Open doors, thereby endangering other persons or road users.
- Get out of the vehicle and be hit by oncoming traffic.
- Operate vehicle equipment.

Moreover, children could also set the vehicle in motion by, for example:

- Releasing the parking brake.
- Shifting the transmission out of park position **P**.
- Starting the engine.

- ▶ Never leave children and animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes me connect web app.
- ▶ Keep the keys out of the reach of children. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes me connect web app.


▲ WARNING Risk of accident due to incorrect gearshifting

If the engine speed is higher than the idle speed and you engage the transmission position **D** or **R**, the vehicle may accelerate sharply.

- ▶ If you engage the transmission position **D** or **R** always depress the brake

pedal firmly and do not accelerate at the same time.

Use the DIRECT SELECT lever to shift the transmission position. The current transmission position is displayed in the multifunction display.

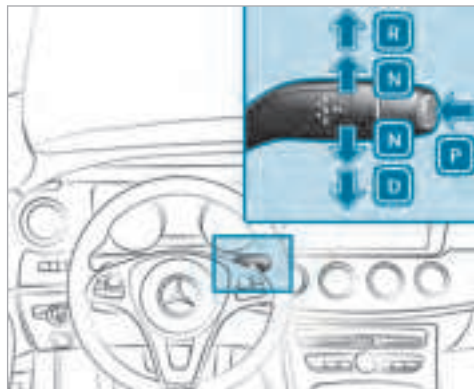

P Park position

R Reverse gear

- N** Neutral
- D** Drive position

Engaging reverse gear R

- ▶ Depress the brake pedal and push the DIRECT SELECT lever up past the first point of resistance.
The transmission position display shows **R** in the multifunction display.

Shifting to neutral N

- ▶ Depress the brake pedal and push the DIRECT SELECT lever up or down to the first point of resistance.
The transmission position display shows **N** in the multifunction display.


Subsequently releasing the brake pedal will allow you to move the vehicle freely, e.g. to push it or tow it away.

If you want the automatic transmission to remain in neutral N even if the ignition is switched off:

- ▶ Start the vehicle.

- ▶ Depress the brake pedal and shift to neutral **N**.
- ▶ Release the brake pedal.
- ▶ Switch the ignition off.
- ⓘ If you then exit the vehicle leaving the key in the vehicle, the automatic transmission remains in neutral **N**

Engaging park position P

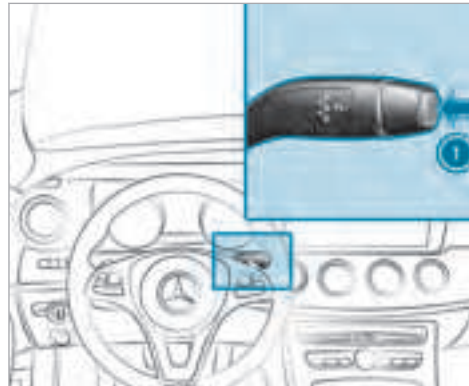

- ▶ Press button ①.
The transmission position display shows **P** in the multifunction display.
- Park position **P** is engaged automatically if one of the following conditions is met:
- If you switch the engine off with the transmission in position **D** or **R**.
 - If you open the driver's door when the vehicle is stationary or when driving at a very low speed and the transmission is in position **D** or **R**.

Engaging drive position D

- ▶ Depress the brake pedal and push the DIRECT SELECT lever down past the first point of resistance.
The transmission position display shows **D** in the multifunction display.

When the automatic transmission is in transmission position **D**, it shifts the gears automatically. This depends on the following factors:

- The selected drive program
- The position of the accelerator pedal
- The road speed

Manual gearshifting

⚠ WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

- ▶ Do not shift down on slippery road surfaces to increase the engine braking effect.



- ▶ **To activate:** pull steering wheel gearshift paddle ① or ②. Manual gearshifting is activated for a short time. The current gear is displayed in the multifunction display.
 - ▶ **To shift up:** pull steering wheel gearshift paddle ②.
 - ▶ **To shift down:** pull steering wheel gearshift paddle ①.
 - ▶ **To deactivate:** pull steering wheel gearshift paddle ② and hold it in place. The transmission position **D** appears in the multifunction display.
- ❗ If you select the **Manual** drive setting in drive program **I**, manual gearshifting is permanently activated.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Mercedes-AMG vehicles: make sure that you read the separate operating instructions. Otherwise, you may fail to recognise dangers.

Gearshift recommendation

Mercedes-AMG vehicles: make sure that you read the separate Owner's Manual. Otherwise, you may fail to recognise dangers.

The gearshift recommendations assist you in adopting an economical driving style.



- ▶ If gearshift recommendation message ① is shown in the multifunction display, shift to the recommended gear.

Using kickdown

Mercedes-AMG vehicles: make sure that you read the separate operating instructions. Otherwise, you may fail to recognise dangers.

- ▶ **Maximum acceleration:** depress the accelerator pedal beyond the pressure point.

During kickdown, you cannot shift gears using the steering wheel gearshift paddles. The automatic transmission shifts up to the next gear when the maximum engine speed is reached to protect the engine from overrevving.

- ▶ Ease off the accelerator pedal once the desired speed is reached.

Glide mode function

Mercedes-AMG vehicles: make sure that you read the separate Owner's Manual. Otherwise, you may fail to recognise dangers.

With an anticipatory driving style, glide mode helps you to reduce fuel consumption.

Glide mode is characterised by the following:

- The combustion engine is disconnected from the drivetrain and the vehicle continues to roll in neutral.
- The transmission position **D** is displayed in green in the multifunction display.

Glide mode is activated if the following conditions are met:

- Drive program **E** is selected.
- The speed is within a suitable range.
- The course of the road is suitable, e.g. no steep uphill or downhill gradients or tight bends.
- There is no trailer coupled to the ball head of the trailer hitch, and no bicycle rack fitted.
- You are no longer depressing the accelerator or brake pedal.

- ① Glide mode can also be activated if you have selected the "Eco" setting for the drive (engine management) when in drive program **I**.

Glide mode is deactivated again if one of the conditions is no longer met.

Vehicles with Driving Assistance Package, Active Distance Assist DISTRONIC or Active Brake Assist:

Glide mode is also deactivated depending on the traffic situation and the vehicle then switches to overrun mode. This further reduces fuel consumption.

Glide mode can also be prevented by the following parameters:

- Uphill gradient
- Downhill gradient
- Temperature
- Height
- Speed
- Obstacle detection
- Operating condition of the engine

Refuelling

Refuelling the vehicle

⚠ WARNING - Risk of fire or explosion caused by fuel

Fuels are highly inflammable.

- ▶ You must avoid fire, naked flames, creating sparks and smoking.
- ▶ Before refuelling, switch off the engine and auxiliary heating if your vehicle is equipped with auxiliary heating.

⚠ WARNING Risk of injury from fuel

Fuels are poisonous and harmful to your health

- ▶ Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapour.
- ▶ Keep children away from fuel.

If you or other people come into contact with fuel, observe the following:

- ▶ Immediately rinse fuel off your skin with soap and water.
- ▶ If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- ▶ If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- ▶ Change immediately out of clothing that has come into contact with fuel.

⚠ WARNING Risk of fire and explosion due to electrostatic charge

Electrostatic charge can cause sparks and thereby ignite fuel vapours.

- ▶ Touch the metal vehicle body before opening the fuel filler cap or touching the pump nozzle.

This discharges any electrostatic charge that may have built up.

⚠ WARNING Risk of fire from fuel mixture

Vehicles with a diesel engine:

If you mix diesel fuel with petrol, the flash point of the fuel mixture is lower than that of pure diesel fuel.

While the engine is running, component parts in the exhaust system may overheat without warning.

- ▶ Never refuel using petrol.
- ▶ Never mix petrol with diesel fuel.

! NOTE Damage caused by the wrong fuel

Vehicles with a petrol engine:

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel using premium-grade unleaded fuel that conforms to EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10 % ethanol. Your vehicle is suitable for use with E10 fuel.

Do not refuel using:

- Diesel
- E85, E100
- Petrol containing methanol (M15, M30, M85, M100)
- Petrol with additives containing metal

If you accidentally refuel with the wrong fuel:

- ▶ Do not switch the ignition on.
- ▶ Consult a qualified specialist workshop.

! NOTE Damage caused by the wrong fuel

Vehicles with a diesel engine:

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

▶ Only refuel using diesel fuel that conforms to EN 590, or an equivalent specification.

▶ **Vehicles with diesel particulate filters:** In countries outside the EU, only use low-sulphur Euro diesel with a sulphur content of under 50 ppm.

Do not use the following:

- Petrol
- Marine diesel
- Heating oil
- Bio-diesel
- Vegetable oil
- Paraffin
- Kerosene

If you accidentally refuel with the wrong fuel:

- ▶ Do not switch the ignition on.
- ▶ Consult a qualified specialist workshop.

! NOTE Do not use diesel to refuel vehicles with a petrol engine.

If you accidentally refuel with the wrong fuel:

- Do not switch on the ignition. Otherwise, fuel can enter the fuel system.

Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.

- ▶ Contact a qualified specialist workshop.
- ▶ Have the fuel tank and fuel lines drained completely.

! NOTE Do not use petrol to refuel vehicles with a diesel engine.

If you accidentally refuel with the wrong fuel:

- Do not switch on the ignition. Otherwise, fuel can enter the fuel system.

Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.

- ▶ Contact a qualified specialist workshop.
- ▶ Have the fuel tank and fuel lines drained completely.

! NOTE Damage to the fuel system caused by overfilled fuel tanks.

- ▶ Only fill the fuel tank until the pump nozzle switches off.

! NOTE Fuel may spray out when you remove the fuel pump nozzle.


- ▶ Only fill the fuel tank until the pump nozzle switches off.

Requirement:

- The vehicle must be unlocked.
- i** Do not get into the vehicle again during the refuelling process. Otherwise, electrostatic charge could build up again.

Observe the notes on operating fluids
(→ page 399).

Refuelling

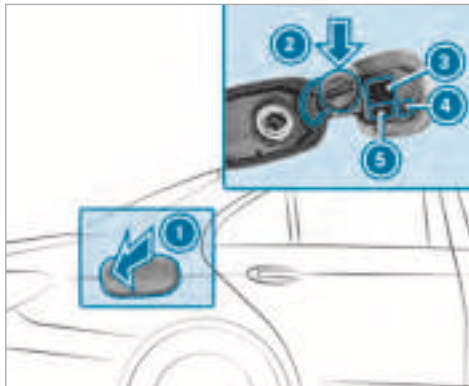

- ① Fuel filler flap
- ② Bracket for the fuel filler cap
- ③ Tyre pressure table
- ④ QR code for rescue card
- ⑤ Fuel type

- ▶ Press fuel filler flap ①.

- ▶ Turn the fuel filler cap anti-clockwise and remove it.
- ▶ Insert the fuel filler cap into bracket ②.
- ▶ Completely insert the fuel pump nozzle into the tank filler neck, hook in place and refuel.
- ▶ Only fill the fuel tank until the pump nozzle switches off.

i Vehicles with a diesel engine: the filler neck is designed for refuelling at diesel filling pumps.

i Vehicles with a diesel engine: when the fuel tank is completely empty, refuel with at least 5 litres of diesel.

AdBlue® (diesel engine vehicles only)

Notes on AdBlue®

! **NOTE** When you open the AdBlue® tank, small amounts of ammonia vapour may escape.

- ▶ Only fill the AdBlue® tank in well-ventilated areas.
- ▶ Do not let AdBlue® come into contact with skin, eyes or clothes.
- ▶ Keep AdBlue® away from children.

! **NOTE** Do not ingest AdBlue®.

If AdBlue® is swallowed:

- ▶ Immediately rinse out your mouth thoroughly.
- ▶ Drink plenty of water.
- ▶ Seek medical attention immediately.

AdBlue® is a fluid urea solution for exhaust gas aftertreatment of diesel engines. In order for the

exhaust gas aftertreatment to function properly, only use AdBlue® in accordance with ISO 22241.

AdBlue® is characterised by the following:

- non-toxic
- colourless and odourless
- non-flammable

AdBlue® availability:

- AdBlue® may be topped up by fast service at a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.
- AdBlue® is available at many filling stations from AdBlue® filling pumps.
- Alternatively, AdBlue® is available at qualified specialist workshops, e.g. Mercedes-Benz Service Centres, and at many filling stations in AdBlue® refill canisters or AdBlue® refill bottles.

i Ensure the connection between the refill container and vehicle filler neck does not drip.

Topping up AdBlue®

! **NOTE** Engine damage due to AdBlue® in the fuel

- ▶ AdBlue® must not be used to fill the fuel tank.
- ▶ Only use AdBlue® to fill the AdBlue® tank.
- ▶ Do not overfill the AdBlue® tank.

! **NOTE** Contamination of the vehicle interior due to AdBlue® leakage

- ▶ After topping up, carefully close the AdBlue® refill container.
- ▶ Avoid carrying AdBlue® refill containers permanently in the vehicle.

Requirements:

- The vehicle must be unlocked.

The following announcements appear in order in the multifunction display when the AdBlue® tank requires refilling:


- **Refill AdBlue See Owner's Manual.** The AdBlue® reservoir is down to the reserve level.
- **Refill AdBlue No start in XXX km.** You can still drive the vehicle over the distance shown. Top up AdBlue® as soon as possible.
- **Refill AdBlue Start not possible.** The vehicle can no longer be started.

Opening the AdBlue® filler cap




- ▶ Press fuel filler flap ①.
- ▶ Turn AdBlue® filler cap ② anti-clockwise and remove it.

Preparing the AdBlue® refill canister

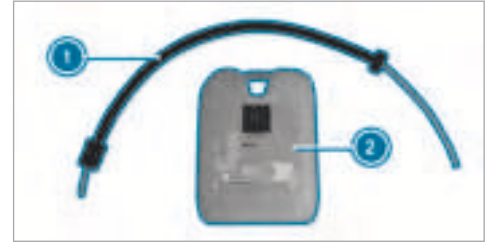

- ▶ Screw on the fastener of AdBlue® refill canister ②.
- ▶ Screw disposable hose ① onto the opening of AdBlue® refill canister ② until finger-tight.

Topping up AdBlue®

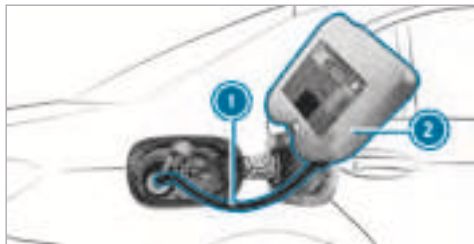

- ▶ Screw disposable hose ① onto the filler neck of the vehicle until finger-tight.
- ▶ Lift up and tip AdBlue® refill canister ②. The filling process stops when the AdBlue® tank is completely full.
AdBlue® refill canister ② can be removed when it has been only partially emptied.
- ▶ Unscrew and close disposable hose ① and AdBlue® refill canister ② in reverse order.
- ▶ Switch on the ignition for at least 60 seconds.
- ▶ Start the vehicle.

- ① Avoid storing AdBlue® refill containers permanently in the vehicle.

Parking

Switching off the vehicle

- ⚠ **WARNING** Risk of fire caused by hot exhaust system parts

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system or exhaust gas flow.

- ▶ Park the vehicle so that no flammable material can come into contact with hot vehicle components.
- ▶ In particular, do not park on dry grass-land or harvested grain fields.

- ⚠ **WARNING** Risk of accident and injury due to children left unattended in the vehicle

If you leave children unattended in the vehicle, they may be able to set the vehicle in motion, for example by:


- Releasing the parking brake.
- Shifting the automatic transmission out of park position [P] or shifting the manual transmission into neutral.
- Starting the engine.

In addition, they may operate vehicle equipment.

- ▶ Never leave children and animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone" function is activated via the Mercedes connect me web app.

NOTE Damage to the vehicle or the drivetrain caused by the vehicle rolling away

- ▶ Always properly secure the vehicle against rolling away.

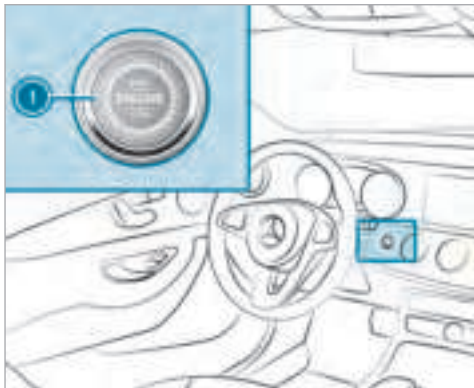

- ▶ On uphill or downhill inclines, turn the front wheels towards the kerb.

▶ **Vehicles with manual transmission:**

Engage first **1** or reverse gear **R**.

▶ **Vehicles with automatic transmission:**

Engage transmission position **P**.

- ▶ Apply the electric parking brake.

- ▶ Press button **i** once.

i When you switch off the vehicle, you can still operate the side windows and the panoramic sliding sunroof for five minutes.

Garage door opener

Programming buttons for the garage door opener

WARNING Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases causes poisoning.


- ▶ Never leave the engine running in an enclosed space without sufficient ventilation.

WARNING Risk of injury and entrapment when opening the garage door using the garage door opener

When you operate or program the garage door with the integrated garage door opener, persons in the range of movement of the garage door can become trapped or struck by the garage door.

- ▶ When using the integrated garage door opener, always make sure that nobody is within the sweep of the garage door.

Prior to programming a garage door opener, park the vehicle outside the garage and switch off the engine.

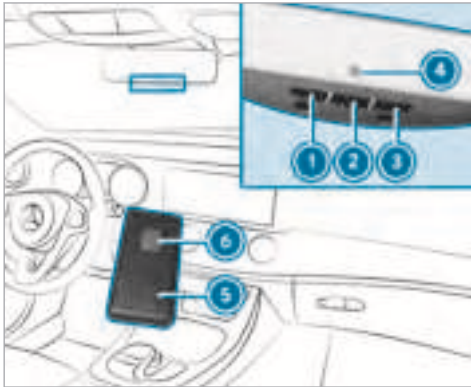

- ▶ Press and hold button ①, ② or ③ that you wish to program. Indicator lamp ④ flashes yellow.
- ① It can take up to 20 seconds before the indicator lamp flashes yellow.
- ▶ Release the previously pressed button. Indicator lamp ④ continues to flash yellow.


- ▶ Point remote control ⑤ at a distance of 1 cm to 8 cm towards buttons ①, ② or ③.
- ▶ Press and hold button ⑥ of remote control ⑤ until:
 - Indicator lamp ④ lights up green continuously. Programming is complete.
 - Indicator lamp ④ flashes green. Programming was successful. Additionally, synchronisation of the rolling code with the garage door system must also take place.
- ▶ If indicator lamp ④ does not light up or flash green: repeat the procedure.
- ▶ Release all of the buttons.
- ① The remote control for the garage door drive is not included in the scope of delivery of the garage door opener.

Synchronising the rolling code

Requirements:

- The garage door system uses a rolling code.
- The vehicle must be within range of the garage door or exterior gate drive.

- The vehicle as well as persons and objects, are located outside the sweep of the garage door.

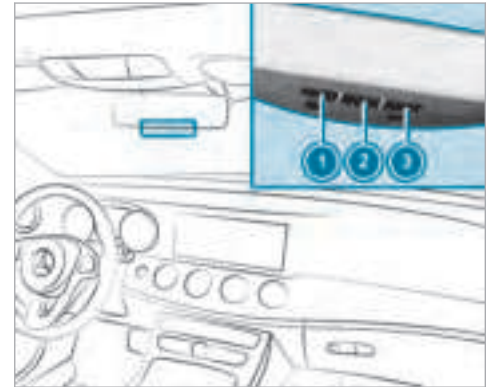


- ▶ Press the programming button on the door drive unit. Initiate the next step within approximately 30 seconds.

- ▶ Press previously programmed button ①, ② or ③ repeatedly, until the door closes. When the door closes, programming is completed.

❗ Please also read the operating instructions for the garage door drive.

Troubleshooting when programming the remote control

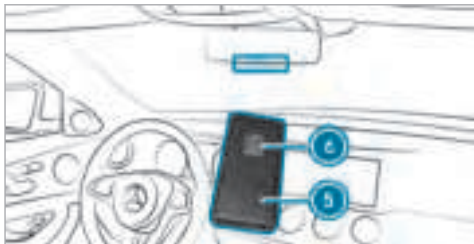

- ▶ Check if the transmitter frequency of remote control ⑤ is supported.
- ▶ Replace the batteries in remote control ⑤.
- ▶ Hold remote control ⑤ at various angles at a distance between 1 cm to 8 cm in front of

the inside rear view mirror. You should test every position for at least 25 seconds before trying another position.

- ▶ Hold remote control ⑤ at the same angles at various distances in front of the inside rear view mirror. You should test every position for at least 25 seconds before trying another position.

- ▶ Note that some remote controls transmit only for a limited period, press button ⑥ on remote control ⑤ again before transmission ends.

- ▶ Align the aerial line of the garage door opener unit with the remote control.


❗ Support and additional information on programming:

- On the HomeLink® Hotline on (0) 08000 466 354 65 or +49 (0) 6838 907-277.
- On the Internet at <http://www.homelink.com>.

Opening or closing the garage door

Requirement:


- The corresponding button is programmed to operate the garage door.

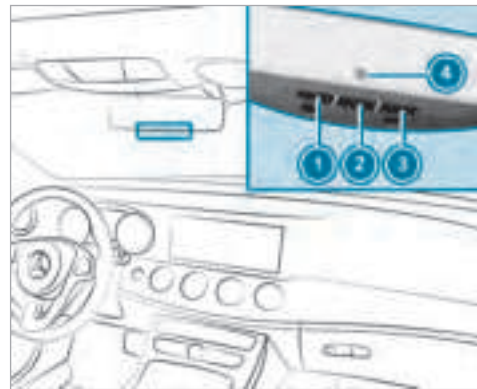

- ▶ Press and hold buttons ①, ② or ③ until the garage door opens or closes.
- ▶ If indicator lamp ④ flashes yellow after approximately 20 seconds: press and hold

the previously pressed button again until the garage door opens or closes.

Clearing the garage door opener memory

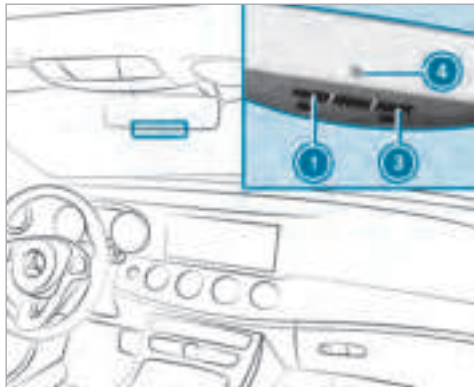

- ▶ Press and hold buttons ① and ③. Indicator lamp ④ lights up yellow.
- ▶ If indicator lamp ④ flashes green: release buttons ① and ③.

Radio equipment approval numbers for the garage door opener

Radio equipment approval numbers

Country	Radio equipment approval number
Egypt	TAC.2511151293.WIR
Andorra	CE
Australia	R-NZ
Barbados	MED1578
Chile	2488/DFRS20576/F-74
European Union	CE
Gibraltar	CE
Iceland	CE
Jordan	TRC/LPD/2015/299
Canada	IC: 4112A-MUAHL5
Kuwait	CE

Country	Radio equipment approval number
Liechtenstein	CE
Mexico	RCPGEMU15-0448
Monaco	CE
New Zealand	R-NZ
Norway	CE
Russian Federation	not required
Saudi Arabia	TA 10525
Switzerland	CE

Country	Radio equipment approval number
South Africa	 TA-2015/1386
Turkey	not required
United Arab Emirates	ER41849/15 Dealer No: DA35176/14
United States	FCC ID: NZLMUAHL5

Brazil



Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Para maiores informações acessar www.anatel.gov.br

Further information on the declaration of conformity for wireless vehicle components (→ page 20).

Electric parking brake

Automatically applying the electric parking brake

⚠ WARNING Risk of accident and injury due to children left unattended in the vehicle

If you leave children unattended in the vehicle, they may be able to set the vehicle in motion, for example by:

- Releasing the parking brake.
- Shifting the automatic transmission out of park position **P** or shifting the manual transmission into neutral.
- Starting the engine.

In addition, they may operate vehicle equipment.

- ▶ Never leave children and animals unattended in the vehicle.
- ▶ When leaving the vehicle, always take the key with you and lock the vehicle. This also applies to mobile phones if the "Digital Car Key in the smartphone"

function is activated via the Mercedes connect me web app.

Vehicles with manual transmission:

The electric parking brake is applied while the vehicle is being kept stationary by the HOLD function if one of the following conditions are fulfilled:

- The engine is switched off.
- The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
- There is a system malfunction.
- The power supply is insufficient.
- The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the  indicator lamp lights up in the instrument cluster.

The electric parking brake is not automatically applied if the engine is switched off by the ECO start/stop function.

Vehicles with automatic transmission:

The electric parking brake is applied if the transmission is in position  and one of the following conditions is fulfilled:

- The engine is switched off.
- The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.

 To prevent application: pull the handle of the electric parking brake.

In the following situations, the electric parking brake is also engaged:

- The Active Distance Assistant DISTRONIC brings the vehicle to a standstill.
- The HOLD function is keeping the vehicle stationary.
- Active Parking Assist is keeping the vehicle stationary.

This is only the case if one of the following conditions is also fulfilled:

- The engine is switched off.

- The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
- There is a system malfunction.
- The power supply is insufficient.
- The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the  indicator lamp lights up in the instrument cluster.

The electric parking brake is not automatically applied if the engine is switched off by the ECO start/stop function.

Releasing the electric parking brake automatically

Vehicles with manual transmission:

The electric parking brake is released when the following conditions are fulfilled:

- The driver's door is closed.
- The engine is running.
- A gear has been selected, you release the clutch pedal and depress the accelerator pedal.

- When the reverse gear **R** is selected, the boot lid must be closed.

If the electric parking brake is released, the **(P)** indicator lamp in the instrument cluster goes out.

Vehicles with automatic transmission:

The electric parking brake is released when the following conditions are fulfilled:

- The engine is running.
- The seat belt tongue is inserted into the seat belt buckle of the driver's seat.
- The transmission is in position **D** or **R** and you depress the accelerator pedal or you shift from transmission position **P** to **D** or **R**.
- If the transmission is in position **R**, the boot lid must be closed.


If the seat belt tongue is not inserted into the seat belt buckle of the driver's seat, the following conditions must be fulfilled:

- The driver's door is closed.

- You move the transmission out of transmission position **P** or you have previously driven faster than 3 km/h.
- If the transmission is in position **R**, the boot lid must be closed.

If the electric parking brake is released, the **(P)** indicator lamp in the instrument cluster goes out.

Applying or releasing the electric parking brake manually

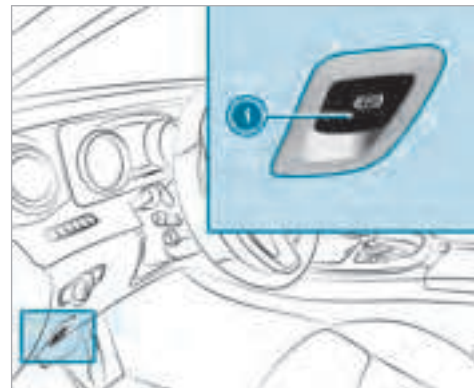

- To apply:** push handle ①. The **(P)** indicator lamp appears in the instrument cluster.
- To release:** switch on the ignition.

- ▶ Pull handle ①.
The  indicator lamp in the instrument cluster goes out.

Emergency braking

- ▶ Press and hold handle ①.
When the vehicle has been braked to a standstill:
 - The electric parking brake is applied.
 - The  indicator lamp appears in the instrument cluster.

Notes on parking up the vehicle

If you leave the vehicle parked up for longer than four weeks, the battery may become damaged.

If you leave the vehicle parked up for longer than six weeks, it may suffer damage as a result of lack of use.

- ① Further information can be obtained at a qualified specialist workshop.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Standby mode (extension of the starter battery's period out of use)

Standby mode function

If standby mode is activated, the vehicle can be parked for an extended period of time without losing power.

Standby mode is characterised by the following:

- the starter battery is preserved.
- the maximum period out of use is displayed in the multimedia system display.
- functions such as interior protection or tow-away protection are not available.
- the connection to online services is interrupted.

If the following conditions are fulfilled, standby mode can be activated or deactivated using the multimedia system:

- the engine is switched off.
- the ignition is switched on.

Exceeding the vehicle's displayed period out of use may cause inconvenience, i.e. it cannot be

guaranteed that the starter battery will reliably start the engine.

The starter battery must be charged first in the following situations:

- the vehicle's period out of use must be extended.
- the **Battery charge insufficient for standby mode** message appears in the multimedia system display.

- ① Standby mode is automatically deactivated when the ignition is switched on.

Activating or deactivating standby mode

Multimedia system:

➞ **Vehicle** ➞  **Vehicle settings** ➞ **Standby mode**

- ▶ Activate ☒ or deactivate ☐ the function.
When you activate the function, a prompt appears.
- ▶ Select **Yes**.
Standby mode is activated.

Driving and driving safety systems

Driving systems and your responsibility

Your vehicle is equipped with driving systems which assist you in driving, parking and manoeuvring the vehicle. The driving systems are aids and do not relieve you of your responsibility. Pay attention to the traffic conditions at all times and intervene when necessary. Be aware of the limitations regarding the safe use of these systems.

Function of the radar sensors

Some driving and driving safety systems use radar sensors to monitor the area in front of, behind or next to the vehicle (depending on the vehicle's equipment).

Depending on the vehicle's equipment, the radar sensors are integrated behind the bumpers and/or behind the radiator grille. Keep these parts free of dirt, ice and slush (→ page 349). The sensors must not be covered, for example by bicycle racks, overhanging loads or radar-reflecting stickers. Following an impact and in

the event of associated damage, which may not be visible, to the bumpers or radiator grille, have the function of the radar sensors checked at a qualified specialist workshop. The driver assistance system may no longer work properly.

Overview of driving systems and driving safety systems

In this section, you will find information about the following driving systems and driving safety systems:

- 360° Camera (→ page 214)
- ABS (**A**nti-lock **B**raking **S**ystem) (→ page 183)
- Active Distance Assist DISTRONIC (→ page 195)
- Adaptive brake lights (→ page 191)
- AIR BODY CONTROL (→ page 204)
- Active Brake Assist (→ page 187)
- Active Lane Keeping Assist (→ page 232)
- ATTENTION ASSIST (→ page 228)
- BAS (**B**rake **A**ssist **S**ystem) (→ page 183)
- DYNAMIC BODY CONTROL (→ page 204)
- EBD (**E**lectronic **B**rake force **D**istribution) (→ page 186)
- ESP® (**E**lectronic **S**tability **P**rogram) (→ page 183)
- Hill Start Assist
- HOLD function (→ page 202)
- STEER CONTROL (→ page 187)
- Active Steering Assist (→ page 201)
- Limiter (→ page 192)
- Active Parking Assist (→ page 217)
- Parking Assist PARKTRONIC (→ page 207)
- Reversing camera (→ page 211)
- Cruise control (→ page 192)
- Blind Spot Assist and Active Blind Spot Assist (→ page 229)

Functions of ABS (anti-lock braking system)

ABS regulates the brake pressure in critical driving situations:

- During braking, e.g. at maximum full-stop braking or insufficient traction of the tyres, the wheels are prevented from blocking.
- Vehicle steerability while braking is ensured.

If ABS intervenes when braking, you will feel a pulsing in the brake pedal. The pulsating brake pedal can be an indication of hazardous road conditions and can serve as a reminder to take extra care while driving.

System limitations

- ABS is active from speeds of approx. 8 km/h.
- ABS may be impaired or may not function if a malfunction has occurred and the yellow  ABS warning lamp lights up continuously in the instrument cluster after the engine is started.

Function of BAS (Brake Assist System)

⚠ WARNING Risk of an accident caused by a malfunction in BAS (Brake Assist System)

If BAS is malfunctioning, the braking distance in an emergency braking situation is increased.

▶ Depress the brake pedal with full force in emergency braking situations. ABS prevents the wheels from locking.

BAS supports your emergency braking situation with additional brake force.

If you depress the brake pedal quickly, BAS is activated:

- BAS automatically boosts the brake pressure.
- BAS can shorten the braking distance.
- ABS prevents the wheels from locking.

The brakes will function as usual once you release the brake pedal. BAS is deactivated.

Functions of ESP® (Electronic Stability Program)

⚠ WARNING Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off.

- ▶ Drive on carefully.
- ▶ Have ESP® checked at a qualified specialist workshop.

⚠ WARNING Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilisation.

- ▶ ESP® should only be deactivated in the following situations.

ESP® monitors and improves driving stability and traction, particularly in the following situations:

- When pulling away on wet or slippery roads.

- When braking.
- **Vehicles with trailer hitch:** In trailer operation from speeds of 65 km/h, if the vehicle/trailer combination begins to sway from side to side.
- In strong sidewinds when you are driving faster than 80 km/h.

ESP® can stabilise the vehicle by intervening in the following ways:

- One or more wheels are braked.
- The engine output is adapted according to the situation.

ESP® is deactivated if the ESP® OFF  warning lamp lights up continuously in the instrument cluster:

- Driving stability will no longer be improved.
- **Vehicles with trailer hitch:** Stabilisation of the vehicle/trailer combination is no longer active.
- Crosswind Assist is no longer active.
- The drive wheels could spin.

- ETS/4ETS traction control is still active.
-  Even when ESP® is deactivated, you are still assisted by ESP® when braking.

ESP® is intervening if the ESP®  warning lamp flashes in the instrument cluster:

- Do not deactivate ESP®.
- Only depress the accelerator pedal as far as is necessary.
- Adapt your driving style to suit the current road and weather conditions.

Deactivate ESP® in the following situations to improve traction:

- When using snow chains
- In deep snow
- On sand or gravel

-  Spinning the wheels results in a cutting action which provides better grip.

ESP® is deactivated if the  ESP® OFF warning lamp lights up continuously in the instrument cluster.

If the ESP®  warning lamp lights up continuously, ESP® is not available due to a malfunction. Observe any information which may be displayed in the instrument cluster:

- Warning and indicator lamps (→ page 472)
- Display messages (→ page 411)

ETS/4ETS (Electronic Traction System)

ETS/4ETS traction control is part of ESP®.

ETS/4ETS can improve the vehicle's traction by intervening in the following ways:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

Influence of drive programs on ESP®

The drive programs enable ESP® to adapt to different weather and road conditions as well as the driver's preferred driving style. You can select the drive programs using the DYNAMIC SELECT switch.

ESP® characteristics per drive program

Drive program	ESP® mode	Characteristics
C (Comfort) E (Economy)	ESP® Comfort	These drive programs provide the ideal balance between traction and stability. Select drive program E or C in difficult road conditions, such as in snow or ice, or when the road is wet from rain.
S (Sport)	ESP® Sport	This drive program continues to offer stability but with a sporty setup which allows the enthusiastic driver a more active driving style. Only select drive program S in good road conditions, for example on dry carriageways and clear stretches of road.
S+ (Sport Plus)	ESP® Sport Plus	The vehicle's own understeering and oversteering characteristics are accentuated. This allows a more active driving style to be adopted. Only select drive program S+ in good road conditions, for example on dry carriageways and clear stretches of road.

Activating/deactivating ESP® (Electronic Stability Program)

Multimedia system:

➔ Vehicle ➔  Assistance ➔ ESP

Mercedes-AMG vehicles: always observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

▶ Activate ☒ or deactivate ☐ the function.

ESP® is deactivated if the  ESP® OFF warning lamp lights up continuously in the instrument cluster.

Observe the information on warning lamps and display messages which may be shown in the instrument cluster.

Functions of ESP® Crosswind Assist

ESP® Crosswind Assist detects sudden gusts of side wind and helps the driver to keep the vehicle in the lane:

- ESP® Crosswind Assist is active at vehicle speeds between 80 km/h and 200 km/h

when driving straight ahead or cornering slightly.

- The vehicle is stabilised by means of individual brake application on one side.

Functions of ESP® trailer stabilisation

⚠ WARNING Risk of accident in poor road and weather conditions

In poor road and weather conditions, the trailer stabilisation cannot prevent lurching of the vehicle/trailer combination. Trailers with a high centre of gravity may tip over before ESP® detects this.

▶ Always adapt your driving style to suit the current road and weather conditions.

When driving with a trailer, ESP® can stabilise your vehicle if the trailer begins to swerve from side to side:

- ESP® trailer stabilisation is active above speeds of 65 km/h.

- Slight swerving is reduced by means of a targeted, individual brake application on one side.
- In the event of severe swerving, the engine output is also reduced and all wheels are braked.

ESP® trailer stabilisation may be impaired or may not function if:

- The trailer is not connected correctly or is not detected properly by the vehicle.

Function of EBD (Electronic Brake force Distribution)

EBD is characterised by the following:

- Monitoring and regulating the brake pressure on the rear wheels.
- Improved driving stability when braking, especially on bends.

Function of STEER CONTROL

STEER CONTROL helps you by transmitting a noticeable steering force to the steering wheel in the direction required for vehicle stabilisation.

This steering recommendation is given particularly in the following situations:

- Both right wheels or both left wheels are on a wet or slippery road surface when you brake.
- The vehicle starts to skid.

System limitations

STEER CONTROL may be impaired or may not function in the following situations:

- ESP® is deactivated.
- ESP® is malfunctioning.
- The steering is malfunctioning.

If ESP® is malfunctioning, you will be assisted further by the electric power steering.

Function of Active Brake Assist

Active Brake Assist consists of:

- Distance warning function
- Autonomous braking function
- Situation-dependent braking assistance
- **Vehicles with Driving Assistance Package:** Evasive Steering Assist

Active Brake Assist can help you to minimise the risk of a collision with vehicles or pedestrians or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, you will be warned visually and acoustically.

If you do not react to the visual or acoustic warning, autonomous braking can be initiated in critical situations.

In especially critical situations, Active Brake Assist can initiate autonomous braking directly. In this case, the visual and acoustic warning occurs simultaneously with the braking application.

If you apply the brake yourself in a critical situation or apply the brake during autonomous braking, situation-dependent braking assistance occurs. The brake pressure increases up to maximum full-stop braking if necessary.

If the autonomous braking function or the situation-dependent braking assistance is triggered, additional preventive measures for occupant protection (PRE-SAFE®) may also be initiated, if the vehicle is equipped with these.

⚠ WARNING Risk of an accident caused by limited detection performance of Active Brake Assist

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

In such cases, Active Brake Assist might:

- Give a warning or brake without reason
- Not give a warning or not brake

▶ Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone. Active Brake Assist is only



an aid. The driver is responsible for maintaining a suitable distance to the vehicle in front, vehicle speed and for braking in good time.

Be prepared to brake or swerve if necessary.

Also observe the system limitations of Active Brake Assist.

The individual subfunctions are available in the following speed ranges:

Distance warning function

The distance warning function issues a warning at speeds:

- From approximately 30 km/h, if over several seconds the distance maintained to the vehicle travelling in front is insufficient for the

driven speed. The  distance warning lamp then lights up in the instrument cluster.

- From approximately 7 km/h, if your vehicle is critically close to a vehicle or pedestrian. An intermittent warning tone sounds and the  distance warning lamp lights up in the instrument cluster.

Brake immediately or take evasive action, provided it is safe to do so and the traffic situation allows this.

The distance warning function can aid you in the following situations with an intermittent warning tone and a warning lamp:

	Vehicles travelling in front	Stationary vehicles	Crossing vehicles	Crossing pedestrians	Stationary pedestrians
Vehicles without Driving Assistance package	up to approx. 250 km/h	up to approx. 80 km/h	no reaction	up to approx. 60 km/h	no reaction
Vehicles with Driving Assistance package	up to approx. 250 km/h	up to approx. 100 km/h	up to approx. 70 km/h	up to approx. 70 km/h	up to approx. 70 km/h

Autonomous braking function

The autonomous braking function may intervene at speeds starting from approximately 7 km/h in the following situations:

	Vehicles travelling in front	Stationary vehicles	Crossing vehicles	Crossing pedestrians	Stationary pedestrians
Vehicles without Driving Assistance package	up to approx. 200 km/h	up to approx. 50 km/h	no reaction	up to approx. 60 km/h	no reaction
Vehicles with Driving Assistance package	up to approx. 250 km/h	up to approx. 100 km/h	up to approx. 70 km/h	up to approx. 70 km/h	up to approx. 70 km/h

Situation-dependent braking assistance

Situation-dependent braking assistance may intervene at speeds starting from approximately 7 km/h in the following situations:

	Vehicles travelling in front	Stationary vehicles	Crossing vehicles	Crossing pedestrians	Stationary pedestrians
Vehicles without Driving Assistance package	up to approx. 250 km/h	up to approx. 80 km/h	no reaction	up to approx. 60 km/h	no reaction
Vehicles with Driving Assistance package	up to approx. 250 km/h	up to approx. 100 km/h	up to approx. 70 km/h	up to approx. 70 km/h	up to approx. 70 km/h

Cancelling a brake application of Active Brake Assist

You can cancel a brake application of Active Brake Assist at any time by:

- Fully depressing the accelerator pedal or with kickdown
- **Vehicles without Driving Assistance package:** releasing the brake pedal

Active Brake Assist cancels the brake application when at least one of the following conditions is fulfilled:

- You manoeuvre to avoid the obstacle.
- There is no longer a risk of collision.
- An obstacle is no longer detected in front of your vehicle.

Evasive Steering Assist (only vehicles with Driving Assistance Package)

Evasive Steering Assist has the following characteristics:

- Can detect stationary or crossing pedestrians.

- Can assist the driver with additional steering assistance if it detects a swerving manoeuvre.
- Can be activated by an abrupt steering movement during a swerving manoeuvre.
- Can assist during swerving and straightening of the vehicle.
- Can react from a speed of approximately 20 km/h up to a speed of approximately 70 km/h.

You can prevent the assistance at any time by active steering.

⚠ WARNING Risk of an accident despite Evasive Steering Assist

Evasive Steering Assist cannot always clearly identify objects and complex traffic situations.

In addition, the steering support of Evasive Steering Assist is generally not sufficient to avoid a collision.

In such cases Evasive Steering Assist can:

- give an unnecessary warning or provide assistance
 - not give a warning or not provide assistance
- ▶ Always pay careful attention to the traffic situation; do not rely on Evasive Steering Assist alone.
 - ▶ Be ready to brake and take evasive action, if necessary.
 - ▶ Prevent the assistance by actively steering in non-critical driving situations.
 - ▶ Drive at an appropriate speed if pedestrians are close to the path of your vehicle.

Also observe the system limitations of Evasive Steering Assist.

System limitations

Active Brake Assist may be impaired or may not function in the following situations:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- If the sensors are dirty, misted up, damaged or covered.
- If the sensors malfunction due to other radar source interference, for example strong radar reflections in multi-storey car parks.
- If a loss of tyre pressure or a defective tyre has been detected and displayed.

The system may not react correctly:

- In complex traffic stations where objects cannot always be clearly identified.
- To pedestrians or vehicles if they move quickly into the sensor detection range.
- To pedestrians who are hidden by other objects.
- If the typical outline of a pedestrian cannot be distinguished from the background.

- If a pedestrian is not recognised as such, e.g. due to special clothing or other objects.
- On bends with a tight radius.

Setting Active Brake Assist

Multimedia system:

➔ Vehicle ➔  Assistance ➔ Active Brake Assist

Vehicles without Driving Assistance package:

The settings can be made after starting the vehicle.

Vehicles with Driving Assistance package:

The settings can be made when the ignition is switched on.

- ❗ It is recommended that you always leave Active Brake Assist switched on.

Select one of the following settings:

- **Early:** your selection is retained when the vehicle is next started.
- **Medium:** your selection is retained when the vehicle is next started.

- **Late:** your selection is retained when the vehicle is next started.

Off:

The distance warning function and the autonomous braking function are deactivated.

Vehicles without Driving Assistance package:

When the vehicle is next started, the medium setting is automatically selected.

Vehicles with Driving Assistance package:

Evasive Steering Assist is not available. When the ignition is next started, the middle setting is selected automatically and Evasive Steering Assist is available.

- ❗ When Active Brake Assist is deactivated, the  symbol appears in the assistance graphic in the multifunction display.

Function of Adaptive Brake Lights

Adaptive Brake Lights warn following traffic in an emergency braking situation:

- By flashing brake lamps
- By activating the hazard warning lights

If the vehicle is braked sharply from speeds above 50 km/h, the brake lamps flash rapidly. This provides traffic travelling behind you with an even more noticeable warning.

If the vehicle is travelling at speeds of more than 70 km/h at the beginning of the brake application, the hazard warning lights switch on once the vehicle is stationary. When pulling away again, the hazard warning lights switch off automatically at approximately 10 km/h. You can also switch off the hazard warning lights using the hazard warning button.

Cruise control and limiter

Function of cruise control

Cruise control accelerates and brakes the vehicle automatically in order to maintain a previously stored speed.

If you accelerate to overtake, for example, the stored speed is not deleted. If you remove your foot from the accelerator pedal after overtaking, cruise control will resume speed regulation back to the stored speed.

You can operate cruise control with the cruise control lever.

If you fail to adapt your driving style, cruise control can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. Cruise control is only an aid. You are responsible for the distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

System limitations

Cruise control may be unable to maintain the stored speed on uphill gradients. The stored speed is resumed when the gradient evens out.

Change into a lower gear in good time on long and steep downhill gradients. Take particular note of this when driving a laden vehicle. By doing so, you will make use of the braking effect of the engine. This relieves the load on the brake system and prevents the brakes from overheating and wearing too quickly.

Do not use cruise control in the following situations:

- In traffic situations which require frequent changes of speed, e.g. in heavy traffic, on winding roads
- On slippery roads. Accelerating can cause the drive wheels to lose traction and the vehicle could then skid
- When visibility is poor

Function of the limiter

The limiter restricts the speed of the vehicle. To reduce the speed swiftly to the set speed, the limiter applies the brakes automatically.

You can limit the speed as follows:

- Variable: for speed limits, e.g. in built-up areas.
- Permanent: for long-term speed restrictions, e.g. when driving with winter tyres fitted.

If you fail to adapt your driving style, the limiter can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. The limiter is only an aid. You are responsible for the

distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

You can operate the variable limiter with the cruise control lever. You can store any road speed above 20 km/h. You can also perform settings while the vehicle is stationary if the vehicle has been started.

Kickdown

If you depress the accelerator pedal beyond the pressure point (kickdown), the limiter is switched to passive mode. The **Limiter passive** message appears in the multifunction display.

After completion of kickdown, the variable limiter is activated again in the following situations:

- if the driven speed drops below the stored speed.
- if the stored speed is called up.
- if you store a new speed.

Operating cruise control or the variable limiter



WARNING Risk of accident due to unknown stored speed

If you call up the stored speed and this is lower than your current speed, the vehicle decelerates.

If you do not know the stored speed, the vehicle could decelerate unexpectedly.

- ▶ Take into account the traffic situation before calling up the stored speed.
- ▶ If the stored speed is not known, store the desired speed again.

Change into a lower gear in good time on long and steep downhill gradients. Take particular note of this when driving a laden vehicle. By doing so, you will make use of the braking effect of the engine. This relieves the load on the brake system and prevents the brakes from overheating and wearing too quickly.


Requirements:

Cruise control

- Cruise control is selected.
- ESP® must be switched on, but not intervening.
- The driving speed must be at least 20 km/h.

Variable Limiter


- The vehicle has been started.
- The variable limiter is selected.

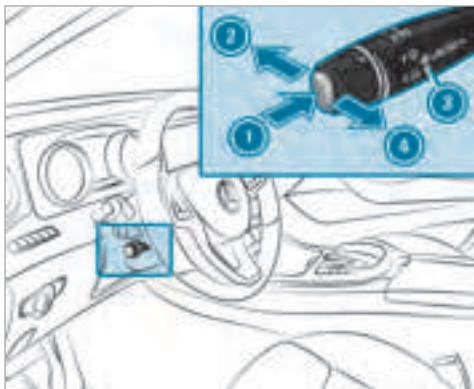

- ▶ To switch between cruise control and variable limiter (1).
 - LIM indicator lamp (3) off: cruise control is selected.
 - LIM indicator lamp (3) on: the variable limiter is selected.
- ▶ Store current speed (4) (once after starting the vehicle).

or

- ▶ To call up last speed stored (4).
- ▶ To deactivate cruise control or variable limiter (2).

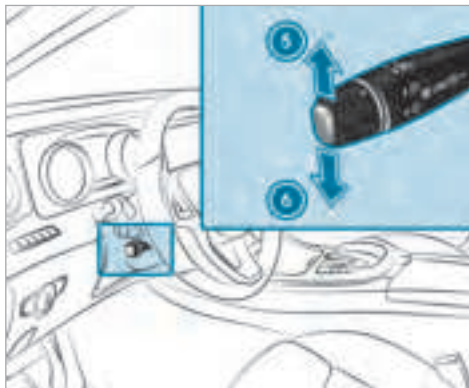

- ▶ Press the lever briefly: stored speed is increased (5) or reduced (6) by 1 km/h.

or

- ▶ Press and hold the lever: stored speed is increased (5) or reduced (6) in 1 km/h increments.

or

- ▶ Press the lever beyond the pressure point: stored speed is increased (5) or reduced (6) by 10 km/h.

or

- ▶ Press and hold the lever beyond the pressure point: stored speed is increased (5) or reduced (6) in 10 km/h increments.

If cruise control or the variable limiter has been deactivated, the current speed is stored with (5) or (6).

- (i) Vehicles with manual transmission: if the engine speed is very low, cruise control or the limiter is deactivated. When the engine speed approaches the maximum engine speed, or neutral is engaged or the clutch pedal is depressed for longer than six seconds, cruise control is deactivated.

- ❗ On vehicles with a segment display in the speedometer, the segments extending from the current stored speed to the end of the scale light up. If you have activated the permanent limiter and a speed is stored, the segments extending up to the stored speed light up.
- ❗ If you perform a kickdown, the variable limiter is switched to passive mode. The variable limiter is operational again once the speed drops below the stored speed.
- ❗ If you brake, deactivate ESP® or if ESP® intervenes, cruise control is deactivated. The variable limiter is not deactivated. When you switch off the vehicle, the last speed stored is cleared.

Permanent limiter

If you wish to limit the vehicle speed permanently to a specific value (e.g. for driving in winter tyre mode), you can set this speed with the permanent limiter.

You do this by limiting the speed to a value between 160 km/h and 240 km/h in the multimedia system (→ page 195).

Shortly before the set speed is reached, it appears in the multifunction display. When you confirm the message with , display messages no longer appear until you switch off the vehicle. The speed will only be displayed again once the vehicle has been restarted.

The permanent limiter does not switch to passive mode even during kickdown and the driven speed remains below the set speed.

Setting the speed limit for winter tyres

Multimedia system:

→  Vehicle ►  Vehicle settings ► Winter tyres limit

► Select the speed or deactivate the function.

Active Distance Assist DISTRONIC

Function of Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC

- Maintains the set speed and accelerates or decelerates the vehicle if the distance from the vehicle in front permits.

- Assists you in maintaining the distance from the vehicle in front and can bring your vehicle to a standstill if necessary.
- Brakes your vehicle with up to 50 % of the maximum possible braking power. If greater deceleration performance is required, a visual and acoustic warning is given and you must then intervene yourself.
- **Vehicles with Driving Assistance Package:** Responds in urban speed ranges to stationary vehicles (except bicycles, motorcycles and pedestrians) if conditions are sufficient to enable detection.

If you fail to adapt your driving style, Active Distance Assist DISTRONIC can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. Active Distance Assist DISTRONIC is only an aid. You are responsible for the distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

If all activation conditions are met, you can activate Active Distance Assist DISTRONIC during a

journey or while stationary. When Active Distance Assist DISTRONIC is activated, a speed is stored which the driver can increase or reduce at any time. The speed can be adjusted between 20 km/h and 200 km/h.

Vehicles with the Driving Assistance Package: The speed can be adjusted between 20 km/h and 210 km/h.

Vehicles with the Driving Assistance Package: In conjunction with navigation systems, Active Distance Assist DISTRONIC prevents prohibited overtaking on the right at speeds over 80 km/h in right-hand traffic and overtaking on the left in left-hand traffic on motorways and high-speed major roads.

Active Distance Assist DISTRONIC uses information from the navigation system to respond to certain traffic situations:

- Roundabouts
- T junctions
- Motorway exits
- Tollbooth

Even if the vehicle in front leaves the detection range in these situations, Active Distance Assist DISTRONIC temporarily maintains the current driving speed and does not accelerate.

If you activate the turn signal indicator to change lanes, the vehicle will accelerate more briskly to the set speed under the following conditions:

- Active Distance Assist DISTRONIC is activated.
- If the driving speed is higher than 70 km/h.
- If the driven speed drops below the stored speed.
- The system cannot detect a vehicle in the relevant area of the overtaking lane.

Drive program

The DYNAMIC SELECT switch allows you to change the driving style of Active Distance Assist DISTRONIC. Depending on which drive program is selected, the driving characteristics can be geared towards fuel economy, comfort or dynamic performance (→ page 161).

System limitations

Active Distance Assist DISTRONIC is active in the 0 km/h to 200 km/h speed range.

Vehicles with the Driving Assistance Package: Active Distance Assist DISTRONIC is active in the 0 km/h to 210 km/h speed range.

The system may be impaired or may not function in the following instances, for example:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- The windscreen in the area of the camera is dirty, misted up, damaged or covered.
- If the radar sensors are dirty or covered.
- On slippery roads, braking or accelerating can cause the drive wheels to lose traction and the vehicle could then skid.
- In multi-storey car parks, toll stations or on roads with steep uphill or downhill gradients.

Do not use Active Distance Assist DISTRONIC in these situations.

Tips

Pay particular attention in the following traffic situations. In such situations, brake if necessary. Active Distance Assist DISTRONIC is then deactivated:

- When cornering, entering and exiting a bend.
- When not driving in the centre of the lane.
- When other vehicles are changing lane.
- If there are narrow vehicles.
- If there are obstacles and stationary vehicles.
- If there are crossing vehicles, pedestrians, motorcyclists or cyclists.

Display of Active Distance Assist DISTRONIC in the assistance graphic and in the speedometer



- ① Vehicle ahead
- ② Distance indicator
- ③ Set specified distance
- ④ Own vehicle



- ① Speed of vehicle ahead
- ② Stored speed

Displays in the multifunction display

When activating Active Distance Assist DISTRONIC or when changing the stored speed, the new stored speed is shown for around five seconds in the multifunction display  70 km/h.

When Active Distance Assist DISTRONIC is active, the set stored speed is displayed next to the  symbol. When distance control is active, the symbol is shown in green.

Vehicles with the Driving Assistance Package: On motorways or high-speed major roads

the  symbol is displayed cyclically when the vehicle is ready to pull away.

Operating Active Distance Assist DISTRONIC

⚠ WARNING Risk of accident if the detection function of Active Distance Assist DISTRONIC is impaired

Active Distance Assist DISTRONIC does not react:

- To people or animals.
- To stationary obstacles on the road, e.g. stopped or parked vehicles (vehicles without the Driving Assistance Package).
- To stationary obstacles on the road, e.g. stopped or parked vehicles, if conditions are not sufficient to enable detection (vehicles with the Driving Assistance Package).
- To oncoming vehicles and crossing traffic.

Active Distance Assist DISTRONIC can neither give warnings nor intervene in such situations.

- ▶ Always carefully observe the traffic conditions and be ready to brake at all times.

⚠ WARNING Risk of accident due to limited detectability of road users and traffic situations

Active Distance Assist DISTRONIC cannot always clearly identify other road users and complex traffic situations.

In these conditions, Active Distance Assist DISTRONIC may:

- Give an unnecessary warning and then brake the vehicle.
 - Neither give a warning nor intervene.
 - Accelerate or brake unexpectedly.
- ▶ Continue driving with care and be ready to brake, particularly if Active Distance Assist DISTRONIC warns you.

⚠ WARNING Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC may accelerate or brake in the following cases, for example:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.
- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.

- ▶ Always carefully observe the traffic conditions and be ready to brake at all times.
- ▶ Take into account the traffic situation before calling up the stored speed.

⚠ WARNING Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50 % of the maximum possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- ▶ In these cases, adjust your speed and keep a sufficient distance.
- ▶ Brake the vehicle yourself and/or take evasive action.

⚠ WARNING Risk of accident due to Active Distance Assist DISTRONIC still being activated when you leave the driver's seat


If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- ▶ Always deactivate Active Distance Assist DISTRONIC and secure the vehicle

to prevent it from rolling away before you leave the driver's seat.

Requirements:


- The vehicle has been started.
- The electric parking brake is released.
- Active Parking Assist is not being used to park the vehicle or to exit from a parking space.
- ESP® is activated, but is not intervening.
- The transmission is in position **D**.
- The driver's door, front passenger door and the rear doors are closed.
- The engine bonnet is closed.

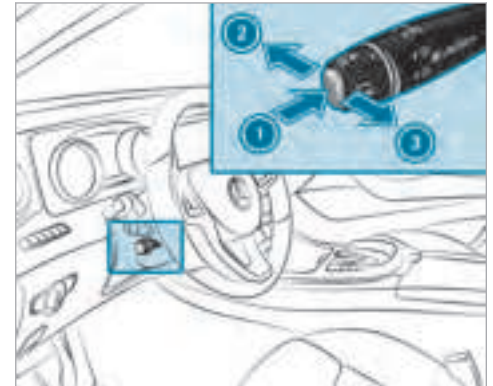


- ▶ If the LIM indicator lamp is lit: select Active Distance Assist DISTRONIC ①.
- ▶ Remove your foot from the accelerator pedal.
- ▶ To store current speed ③. Your vehicle adapts its speed to that of the vehicle in front, but only up to the stored speed.

or

- ▶ Call up stored speed ③.
- ▶ Deactivate Active Distance Assist DISTRONIC ②.

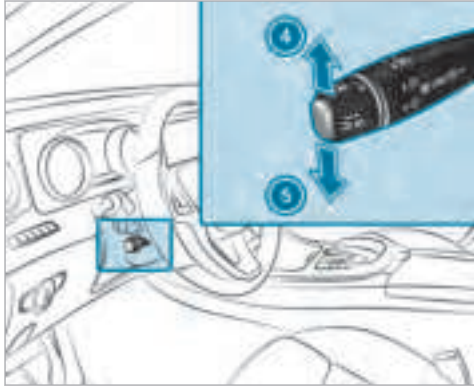

- ▶ To increase ④ or reduce ⑤ the speed.

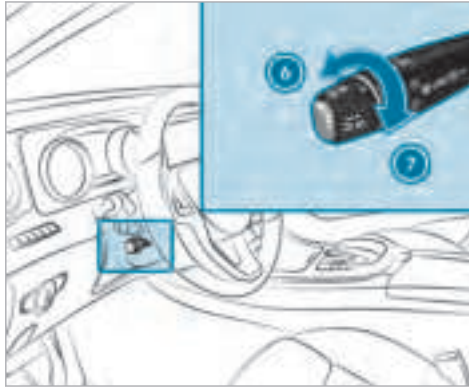

- ▶ To reduce ⑥ or increase ⑦ the specified distance from the vehicle in front.

Pulling away with Active Distance Assist DISTRONIC Requirement

A speed has been previously stored.

- ▶ Remove your foot from the brake pedal.

- ▶ Briefly pull the cruise control lever towards you ③.

or

- ▶ Accelerate briefly.
Your vehicle pulls away and adapts its speed to that of the vehicle in front. If no vehicle is detected in front, your vehicle accelerates to the set speed.

Collision warning

If Active Distance Assist DISTRONIC is unable to sufficiently decelerate the vehicle in order to prevent it from approaching the vehicle in front, you will be warned visually and acoustically. An intermittent warning tone will then sound and the distance warning lamp will light up in the instrument cluster.

- ▶ Brake immediately in order to increase the distance from the vehicle in front.

or

- ▶ Take evasive action provided it is safe to do so.

Active Steering Assist

Function of Active Steering Assist

Active Steering Assist is only available for vehicles with the Driving Assistance Package.

- Active Steering Assist is operational at speeds up to 210 km/h and helps you to stay in the centre of the lane by means of moderate steering interventions.
- It uses the vehicle in front and the lane markings as a reference depending on the driven speed.
- Active Steering Assist requires you as the driver, to keep your hands on the steering wheel at all times so that you are able to intervene at any time to correct the course of the vehicle and keep it in lane.
- Active Steering Assist can be overridden at any time by steering the vehicle yourself.
- When the system is actively steering, the  symbol is shown in green in the multifunction display.

System limitations of Active Steering Assist

Active Steering Assist has a limited steering torque for lateral guidance. In some cases, the steering intervention is not sufficient to keep the vehicle in the lane.

If detection of lane markings and vehicles ahead is impaired, Active Steering Assist switches to passive mode. The system provides no support in this case. During the transition from the active to passive status, the  symbol is shown as enlarged and flashes yellow. Once the system is passive the  symbol is shown as grey in the multifunction display.

The system may be impaired or may not function in the following instances:

- If there is poor visibility, e.g. due to insufficient illumination of the road, or due to snow, rain, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflection from other vehicles (e.g. if the carriageway is wet).
- If the windscreen is dirty, misted up, damaged or covered, for instance by a sticker, in the vicinity of the camera.

- If no, or several, unclear lane markings are present for one lane, e.g. in a construction area.
- If the lane markings are worn away, dark or covered up, e.g. by dirt or snow.
- The distance to the vehicle in front is too small and the lane markings thus cannot be detected.
- If the lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- The carriageway is narrow and winding.
- If there are highly variable shade conditions on the carriageway.
- If there are obstacles such as object markers on the lane or projecting out into the lane.


The system does not provide assistance in the following conditions:

- On very sharp bends.
- When towing a trailer.
- If you actively change lane without switching on the turn signal indicator.

Activating Active Steering Assist

Requirements:

- ESP® must be activated, but not intervening.
- Active Distance Assist DISTRONIC must be activated.

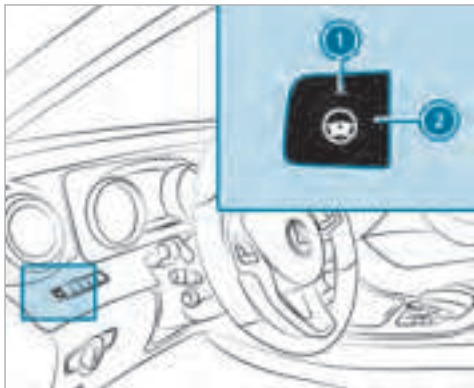

► If indicator lamp ❶ is off: press button ❷.

Information on Hill Start Assist

Hill Start Assist holds the vehicle for a short time when pulling away on a hill under the following conditions:

- **Vehicles with automatic transmission:**
The transmission is in position **D** or **R**.
- The electric parking brake is released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it before the vehicle begins to roll.

⚠ WARNING Risk of accident and injury caused by the vehicle rolling away

After a short time, Hill Start Assist no longer holds the vehicle and it can roll away.

- Therefore, swiftly move your foot from the brake pedal to the accelerator pedal. Never attempt to leave the vehicle if it is being held by Hill Start Assist.

HOLD function

HOLD function

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. when pulling away on steep slopes.

System limitations

The incline must not be greater than 30%.

Activating/deactivating the HOLD function

⚠ WARNING Risk of an accident due to the HOLD function being activated when you leave the vehicle

If you leave the vehicle while only the HOLD function is braking the vehicle, the vehicle can roll away in the following situations:

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or the brake pedal, e.g. by a vehicle occupant.

- If the electrics in the engine compartment, the battery or the fuses are tampered with or if the battery is disconnected.

▶ Always deactivate the HOLD function and secure the vehicle against rolling away before leaving the vehicle.

! NOTE Damage from automatic braking

When Active Brake Assist, Active Distance Assist DISTRONIC or the HOLD function are activated, the vehicle brakes autonomously in certain situations.

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- ▶ During towing
- ▶ In a car wash

Requirements:

- The vehicle is stationary.
- The driver's door is closed or the seat belt on the driver's side is fastened.

- The engine is running or has been automatically switched off by the ECO start/stop function.
- The electric parking brake is released.
- Active Distance Assist DISTRONIC is not activated.
- **Vehicles with automatic transmission:**
The transmission is in position **D**, **R** or **N**.

Activating the HOLD function

- ▶ Depress the brake pedal and after a short time depress further until the **HOLD** display appears in the multifunction display.
- ▶ Release the brake pedal.

Deactivating the HOLD function

- ▶ Depress the accelerator pedal to pull away.
or
- ▶ Depress the brake pedal until the **HOLD** display disappears from the multifunction display.

The HOLD function is deactivated in the following situations:

- When Active Distance Assist DISTRONIC is activated.
- **Vehicles with automatic transmission:**
When transmission position **P** is selected.
- When the vehicle is secured with the electric parking brake.

In the following situations, the vehicle is held by the transmission position **P** or by the electric parking brake:

- When the seat belt is unfastened and the driver's door is opened.
- When the engine is switched off.
- When there is a malfunction in the system or if the power supply is insufficient.

Vehicles with manual transmission:

The **Brake immediately** message may also appear in the multifunction display:

- ▶ Immediately depress the brake pedal firmly until the warning message disappears.
The HOLD function is deactivated.

A horn sounds at regular intervals if you turn off the engine, remove your seat belt and open the driver's door while the HOLD function is activated. If you attempt to lock the vehicle, the horn tone becomes louder. The vehicle cannot be locked until you have deactivated the HOLD function.

-  Once you have switched off the engine, you cannot restart the engine until you have deactivated the HOLD function.

DYNAMIC BODY CONTROL

DYNAMIC BODY CONTROL has the following characteristics:

- Variable damping characteristics
- Continual adjustment of the damping forces

The damping characteristics adapt to the current operating and driving situation.

The damping is tuned individually for each wheel and is affected by the following factors:

- The road surface conditions
- Vehicle load
- The drive program selected

The drive program can be adjusted using the DYNAMIC SELECT switch.

AIR BODY CONTROL

AIR BODY CONTROL function

AIR BODY CONTROL is an air suspension system with variable damping for improved driving comfort. The all-round level control system ensures

the best possible suspension and constant ground clearance, even with a laden vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and to reduce fuel consumption. The option of manually adjusting the vehicle level is also available.

AIR BODY CONTROL comprises:

- Air suspension with variable spring rate
- Automatic level control system
- Speed-dependent lowering to reduce fuel consumption
- Manual level adjustment
- ADS PLUS (Adaptive Damping System with constant damping force adjustment)
- DYNAMIC SELECT switch and level button

Available suspension settings

Drive program	Characteristics
C (Comfort)	• The suspension tuning is comfortable. • The vehicle is set to the normal level. • When driving at speeds above 125 km/h the vehicle is lowered by 15 mm • When driving at speeds below 80 km/h, the vehicle is raised again.
E (Economy)	• The suspension tuning is comfortable. • The vehicle is lowered by 15 mm compared to the normal level • The vehicle is not lowered any further if you are travelling at higher speeds.
S (Sport)	• The suspension tuning is firmer. • The vehicle is lowered by 15 mm compared to the normal level • The vehicle is not lowered any further if you are travelling at higher speeds.
S+ (Sport Plus)	• The suspension tuning is even firmer. • The vehicle is lowered by 15 mm compared to the normal level • The vehicle is not lowered any further if you are travelling at higher speeds.

Setting the vehicle level

⚠ WARNING Risk of accident because vehicle level is too high

If you drive at a higher vehicle level, the driving characteristics may be impaired due to the higher vehicle centre of gravity.

The vehicle may tip over more quickly on a bend, for example.

- ▶ Always select as low a vehicle level as possible and adapt your driving style accordingly.

⚠ WARNING Risk of entrapment from vehicle lowering

When lowering the vehicle, other people could become trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

- ▶ Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when you lower the vehicle.

⚠ WARNING Risk of entrapment from vehicle lowering

Vehicles with AIR BODY CONTROL or level control system: When you unload luggage or leave the vehicle, the vehicle first rises slightly and then returns to the set level shortly afterwards.

You or anyone else in the vicinity of the wheel arches or the underbody could thus become trapped.


The vehicle can also be lowered after being locked.

- ▶ When leaving the vehicle, make sure that nobody is in the vicinity of the wheel arches or the underbody.

Requirements:

- The vehicle's engine must be switched on.
- The vehicle must not be moving faster than 60 km/h.

Raising the vehicle

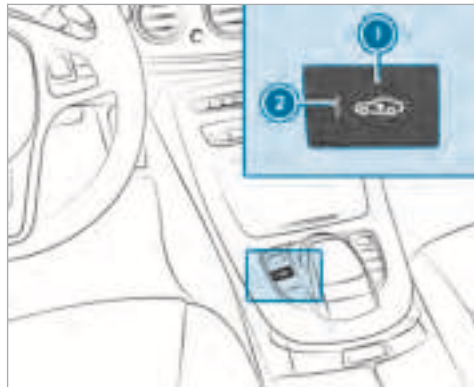

- ▶ Press button ①. Indicator lamp ② lights up. The vehicle is raised by 25 mm compared to the normal level.

Your selection is saved.

The vehicle is lowered again in the following situations:

- When driving faster than 100 km/h.
- When driving between 80 km/h and 100 km/h for approximately three minutes.
- After selecting a drive program using the DYNAMIC SELECT switch.


The vehicle is adjusted to the height of the last active drive program.

Lowering the vehicle

- ▶ Press button ❶.
- Indicator lamp ❷ goes out. The vehicle is adjusted to the height of the last active drive program.

Parking Assist PARKTRONIC

Function of Parking Assist PARKTRONIC

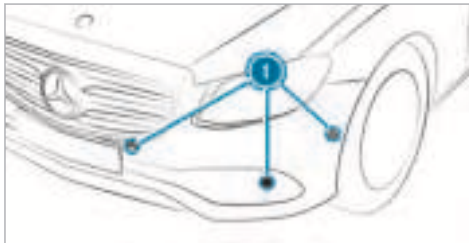

Parking Assist PARKTRONIC is an electronic parking assistance system with ultrasound. It monitors the area around your vehicle using six sensors ❶ in the front bumper and six sensors in the rear bumper. Parking Assist PARKTRONIC indicates visually and audibly the distance between your vehicle and an object.

Parking Assist PARKTRONIC is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects in


the manoeuvring area while manoeuvring and parking in/exiting parking spaces.

In the standard setting, an intermittent warning tone sounds from a distance of approximately 0.3 m to an obstacle. A continuous tone sounds from a distance of approximately 0.2 m. You can set the warning tone in the multimedia system so that it will sound earlier at a greater distance of approximately 1.0 m (→ page 210).

If Parking Assist PARKTRONIC is deactivated, Active Parking Assist is unavailable.

Parking Assist PARKTRONIC display in the multimedia system

If Active Parking Assist is not activated and an obstacle is detected in the path of the vehicle, a pop-up window for Parking Assist PARKTRONIC ❶ appears in the multimedia system at speeds up to approximately 10 km/h.

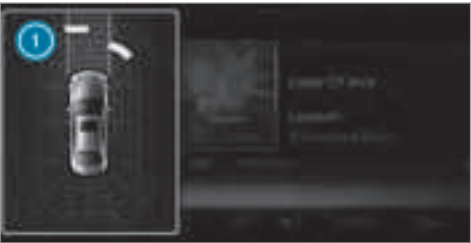

Vehicles with Active Parking Assist without 360° Camera



Vehicles with Parking Assist and 360° Camera

System limitations

Parking Assist PARKTRONIC does not necessarily take into account the following obstacles:

- Obstacles below the detection range, e.g. persons, animals or objects.
- Obstacles above the detection range, e.g. overhanging loads, overhangs or loading ramps of lorries.

The sensors must be free of dirt, ice and slush. Otherwise, they may not function correctly. Clean the sensors regularly, taking care not to scratch or damage them.

Vehicles with trailer hitch: Parking Assist PARKTRONIC is deactivated for the rear zone when you establish an electrical connection between your vehicle and a trailer.

Function of the passive side impact protection

Passive side impact protection is an additional Parking Assist PARKTRONIC function which warns the driver about obstacles at the side of the vehicle. A warning is issued when obstacles are detected between the front and rear detec-

tion range. In order for an object to be detected, the sensors in the front and rear bumper must detect the object while you are driving past it.

During the parking procedure or manoeuvring, objects are detected as the vehicle drives past. If you steer in the direction of a detected obstacle and there is a risk of a lateral collision, a warning is issued. The lateral segments light up orange or red, depending on the distance to the obstacle.

Segment colour depending on distance

Colour	Lateral distance in cm
Red	Approx. < 30
Orange	Approx 30 - 60

In order for lateral front or rear segments to be displayed, the vehicle must first travel a distance of at least half of the vehicle length. Once the vehicle has travelled the length of the vehicle, all of the lateral front and rear segments can be displayed.



Vehicles without 360° Camera

- ① Parking Assist PARKTRONIC is only operational in the front and rear
- ② Parking Assist PARKTRONIC is operational and can also warn the driver about obstacles at the side of the vehicle
- ③ Obstacle detected at the front right (orange) and rear (red)



Vehicles with 360° Camera

- ① Parking Assist PARKTRONIC is only operational in the front and rear
- ② Parking Assist PARKTRONIC is operational and can also warn the driver about obstacles at the side of the vehicle
- ③ Obstacle detected at the front right (orange) and rear (red)

Saved obstacles are deleted in the following situations, for example:

- You switch off the vehicle
- You open the doors

After the engine is restarted, obstacles must be detected again, before a new warning can be issued.

System limitations

The system limitations for Parking Assist PARKTRONIC apply for passive side impact protection.

The following objects are not detected, for example:

- Pedestrians who approach the vehicle from the side
- Objects placed next to the vehicle

Deactivating/activating PARKTRONIC


! **NOTE** Risk of an accident from objects at close range

Parking Assist PARKTRONIC may not detect certain objects at close range.

► When parking or manoeuvring the vehicle, pay particular attention to any objects which are above or below the sensors, e.g. flowerpots or drawbars.

The vehicle or other objects could otherwise be damaged.

If indicator lamp ❶ is not lit, Parking Assist PARKTRONIC is active. If the indicator lamp is lit or the  symbol appears in the multifunction display, Parking Assist PARKTRONIC is not active.

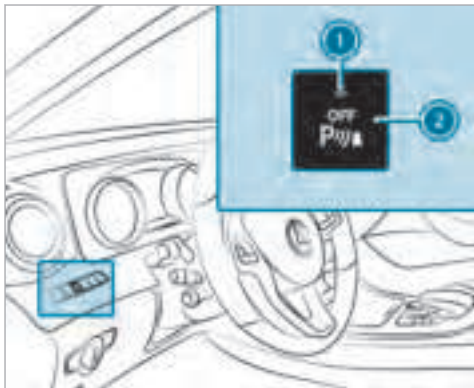

▶ Press button ❷.

- ❶ Depending on the vehicle's equipment, the button may also be located in the centre console.
- ❶ Parking Assist PARKTRONIC is automatically activated when the vehicle is started.

Adjusting the warning tones of Parking Assist PARKTRONIC

Multimedia system:

➤ Vehicle ➤  Assistance ➤ Camera & Park. Assist ➤ Set warning tone

Adjusting the volume of the warning tones

- ▶ Select **Warning tone volume**.
- ▶ Set a value.

Adjusting the pitch of the warning tones

- ▶ Select **Warning tone pitch**.
- ▶ Set a value.

Specifying the starting point for the warning tones

You can specify whether the Parking Assist PARKTRONIC warning tones should commence when the vehicle is further away from an obstacle.

- ▶ Select **Warn early**.
- ▶ Activate ☒ or deactivate ☐ the function.


Activating/deactivating audio fadeout

You can specify whether the volume of a media source in the multimedia system is to be reduced when Parking Assist PARKTRONIC gives an audible warning.

- ▶ Select **Audio fadeout during warning tones**.
- ▶ Activate ☒ or deactivate ☐ the function.

Reversing camera

Function of the reversing camera

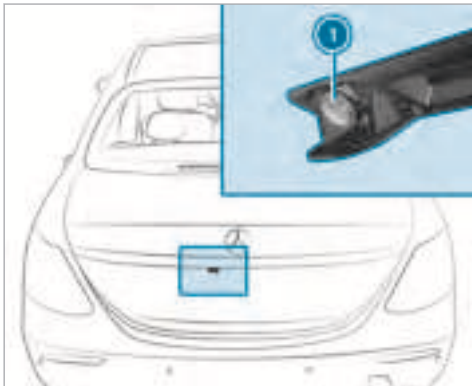

If you have activated the function in the multimedia system, the image from reversing camera ① is displayed in the multimedia system when reverse gear is selected. Dynamic guide lines show the path the vehicle will take with the steering wheel in its current position. This helps

you to orientate yourself and to avoid obstacles when reversing.

The reversing camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects in the manoeuvring area while manoeuvring and parking in parking spaces.

You can select from the following views:

- Normal view
- Wide-angle view
- Trailer view

The area behind the vehicle is displayed as a mirror image, as in the inside rearview mirror.

System limitations

The reversing camera will not function or will only partially function in the following situations:

- If the boot lid or tailgate is open.
- There is heavy rain, snow or fog.
- The light conditions are poor, e.g. at night.

- The camera lens is obstructed, dirty or misted up. Observe the notes on cleaning the reversing camera (→ page 349).
- The camera or rear of your vehicle is damaged. In this case, have the camera and its position and setting checked at a qualified specialist workshop.

The field of vision and other functions of the reversing camera may be restricted due to additional accessories on the rear of the vehicle (e.g. licence plate bracket or bicycle rack).

- ① The display contrast may be impaired due to incident sunlight or other light sources. In this case, pay particular attention.
- ① Have the display repaired or replaced if, for example, pixel errors considerably restrict its use.

Vehicles without Parking Package

The following camera views are available in the multimedia system:



Normal view


- ① Yellow guide line at a distance of approximately 4.0 m from the rear area
- ② White guide line without turning the steering wheel, vehicle width including the outside mirrors (static)
- ③ Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)
- ④ Yellow lane marking the course the tyres will take at the current steering wheel angle (dynamic)



- ⑤ Yellow guide line at a distance of approximately 1.0 m from the rear area
- ⑥ Vehicle centre axis (locating aid)
- ⑦ bumper
- ⑧ Red guide line at a distance of approximately 0.3 m from the rear area



Wide-angle view

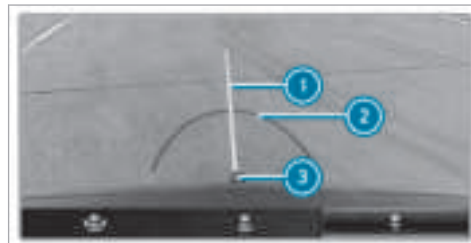


View of trailer (if trailer hitch is fitted)

- ① Yellow guide line, locating aid

- ② Red guide line at a distance of approximately 0.3 m to the ball head of the trailer hitch
- ③ Ball head of the trailer hitch

Vehicles with Parking Package

The following camera views are available in the multimedia system:

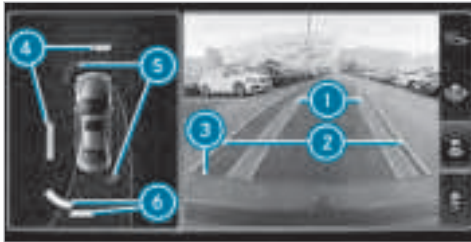

Normal view


- ① Yellow lane marking the course the tyres will take at the current steering wheel angle (dynamic)
- ② Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)

- ③ Red guide line at a distance of approximately 0.3 m from the rear area
 - ④ Yellow warning display of Parking Assist PARKTRONIC: obstacles are at a distance of between approximately 0.6 m and 1.0 m
 - ⑤ Red warning display of Parking Assist PARKTRONIC: obstacles are very close (approximately 0.3 m or less)
 - ⑥ Orange warning display of Parking Assist PARKTRONIC: obstacles are a medium distance away (between approximately 0.3 m and 0.6 m)
- ❗ If the entire system fails, the inner segments of the warning display are shown in red. The indicator lamp on the PARKTRONIC button lights up and the  symbol appears in the multifunction display.
- If the system fails at the rear:
- The rear segments are shown in red when reversing.
 - The rear segments are hidden when driving forwards.

When Active Parking Assist is active, the lanes are displayed in green. If Parking Assist PARKTRONIC is deactivated, the warning display fades out.



Wide-angle view

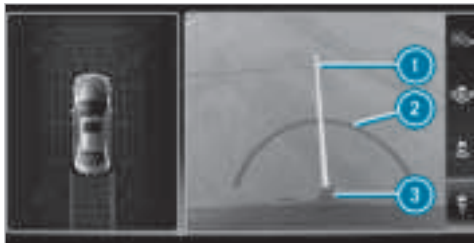

View of trailer (if trailer hitch is fitted)

- ① Yellow guide line, locating aid
- ② Red guide line at a distance of approximately 0.3 m to the ball head of the trailer hitch
- ③ Ball head of the trailer hitch

360° Camera

Function of the 360° Camera

The 360° Camera is a system that consists of four cameras. The cameras cover the immediate vehicle surroundings. The system assists you, e.g. when parking or at exits with reduced visibility.

The 360° Camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that there are no persons, animals or objects in the manoeuvring area while manoeuvring and parking in parking spaces.

The system evaluates images from the following cameras:

- Reversing camera
- Front camera
- Two side cameras in the outside mirrors

Views of the 360° Camera

You can select from different views:



- ① Wide-angle view, front
- ② Top view with image from the front camera
- ③ Top view with images from the side cameras in the outside mirrors
- ④ Wide-angle view, rear
- ⑤ Top view with image from the reversing camera
- ⑥ Top view with trailer view (if trailer hitch is fitted)

Top view



- ① Lane indicating the route the vehicle will take with the steering wheel in its current position
- ② Yellow warning display of Parking Assist PARKTRONIC: obstacles at a distance of approximately 1.0 m or less
- ③ Your vehicle from above

If the distance to the object lessens, the colour of the warning display changes ②. From a distance of approximately 0.6 m the warning display is shown in orange. From a distance of approximately 0.3 m the warning display is shown in red.

When Parking Assist PARKTRONIC is operational and no object is detected, the segments of the warning display are shown in grey.

- ① If the entire system fails, the segments of the warning display are shown in red. The indicator lamp on the PARKTRONIC button lights up and the  symbol appears in the multifunction display.

If the system fails at the rear:

- The rear segments are shown in red when reversing.
- The rear segments are hidden when driving forwards.

If Parking Assist PARKTRONIC is deactivated, the warning display fades out.

Guide lines



- ① Yellow lane marking the course the tyres will take at the current steering wheel angle (dynamic)
- ② Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)
- ③ Red guide line at a distance of approximately 0.3 m from the rear area
- ④ Mark at a distance of approx. 1.0 m
- ① When Active Parking Assist is active, the lanes are displayed in green.

The guide lines in the multimedia system display show the distances to your vehicle. The distances only apply to road level. In trailer mode, the guide lines are shown at the level of the trailer hitch.


Trailer view (if trailer hitch is fitted)



The side cameras support the manoeuvring procedure with a trailer in this view. If this view is selected, symbol ❶ appears.

Side view of the mirror cameras

The sides of the vehicle can be seen in this view.

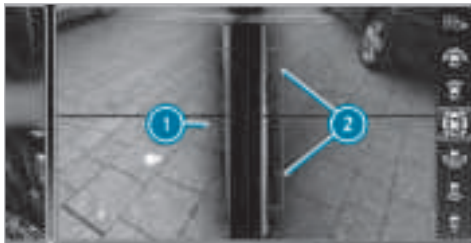

- ❶ Guide line of external vehicle dimensions with outside mirrors folded out
- ❷ Marker of the wheel contact points

System limitations

The 360° Camera will not function or will only partially function in the following situations:

- If the doors are open.
- The side mirrors are folded in.
- If the boot lid or tailgate is open.
- There is heavy rain, snow or fog.
- The light conditions are poor, e.g. at night.

- The camera lens is obstructed, dirty or mis-tuned up.
- Cameras, or vehicle components in which the cameras are fitted, are damaged. In this event, have the cameras, their positions and their setting checked at a qualified specialist workshop.

Do not use the 360° Camera under such circumstances. You could otherwise injure others or collide with objects when parking the vehicle.

On vehicles with height-adjustable suspension or if the vehicle is carrying a heavy load, leaving the standard height can result in inaccuracies in the guide lines and in the display of the generated images, depending on technical conditions.

The field of vision and other functions of the camera system may be restricted due to additional accessories on the rear of the vehicle (e.g. licence plate bracket, bicycle rack).

See the notes on cleaning the 360° Camera (→ page 349).

Selecting a view for the 360° Camera

The **Auto reversing camera** function is selected in the multimedia system.

- ▶ Engage reverse gear.
- ▶ In the multimedia system, select the desired view.

Switching reversing camera automatic mode on/off

The reversing camera is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range. Pay attention to your surroundings and be ready to brake at all times.

Multimedia system:

- ➔ **Vehicle** ➔  **Assistance** ➔ **Camera & Park. Assist** ➔ **Auto reversing camera**
- ▶ Switch the function on ☒ or off ☐.

Opening the camera cover of the reversing camera

Multimedia system:

- ➔ **Vehicle** ➔  **Assistance** ➔ **Camera & Park. Assist**
- ▶ Select **Open camera cover**.
- ⓘ The camera cover closes automatically after some time or after an ignition cycle.

Assigning the camera as a favourite

You can call up the camera view directly in the multimedia system by assigning it as a favourite.

- ▶ Press the  button on the touchpad or controller.
The main functions are displayed.
- ▶ Navigate downwards twice.
The Favourites menu appears.
- ▶ Select **New favourite**.
- ▶ Select **Vehicle**.
- ▶ Select **Camera**.

Active Parking Assist

Functions of Active Parking Assist

Active Parking Assist is an electronic parking assistance system which uses ultrasound and is automatically activated during forward travel. The system is operational at speeds of up to approximately 35 km/h. When all the conditions are fulfilled, the  symbol appears in the multifunction display and the system automatically searches for and measures parking spaces on both sides of the vehicle parallel and perpendicular to the direction of travel. If Active Parking Assist is activated, suitable parking spaces are displayed in the multimedia system. The  symbol appears in the multifunction display. The arrows show on which side of the carriageway free parking spaces are located.

The parking space and, if necessary, the parking direction can be selected as desired. Active Parking Assist calculates a suitable vehicle path and assists you in parking and exiting the parking space.

Vehicles with automatic transmission: Active Parking Assist changes gear, accelerates, brakes and steers the vehicle.

Vehicles with manual transmission: Active Parking Assist supports you by intervening actively in the steering.

-  The active brake application and automatic gear change is only available on vehicles with automatic transmission.

Active Parking Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

Active Parking Assist is cancelled if, among other things, one of the following actions is carried out:

- You deactivate Parking Assist PARKTRONIC.
- You deactivate Active Parking Assist.
- You begin steering.
- You apply the parking brake.
- You engage drive range **P**.

- ESP® intervenes.
- You open the tailgate.

System limitations of Active Parking Assist

Objects located above or below the detection range of Active Parking Assist are not detected when the parking space is being measured. These are also not taken into account when the parking manoeuvre is calculated, e.g. overhanging loads, overhangs or loading ramps of lorries or the boundaries of parking spaces. In some circumstances, Active Parking Assist may therefore guide you into the parking space prematurely.

 **WARNING** Risk of accident due to objects located above or below the detection range of Active Parking Assist

If there are objects above or below the detection range, the following situations may arise:

- Active Parking Assist may steer too early.
- **Vehicles with automatic transmission:** The vehicle may not stop in front of these objects.

This could cause a collision.

-  In these situations, do not use Active Parking Assist.

Snowfall or heavy rain may lead to a parking space being measured inaccurately. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or be measured incorrectly. Only use Active Parking Assist on level, high-grip ground.

Do not use Active Parking Assist in the following situations:

- In extreme weather conditions such as ice or packed snow or in heavy rain.
- If you are transporting a load that protrudes beyond the vehicle.
- If the parking space is on a steep downhill or uphill gradient.
- If you have installed snow chains.

Active Parking Assist may also display parking spaces that are not suitable for parking, e.g.:

- Parking spaces where parking is prohibited.

- Parking spaces on unsuitable surfaces.

Active Parking Assist will not assist you with parking spaces at right angles to the direction of travel in the following situations:


- If two parking spaces are located immediately next to each other.
- If the parking space is directly next to a low obstacle such as a low kerb.

Active Parking Assist will not assist you with parking spaces at right angles to the direction of travel in the following situations:

- If the parking space is on a kerb.
- If the parking space is bordered by an obstacle, e.g. a tree, a post or a trailer.

Parking with Active Parking Assist

- i** Depending on the vehicle's equipment, the button may also be located at a different position in the centre console.

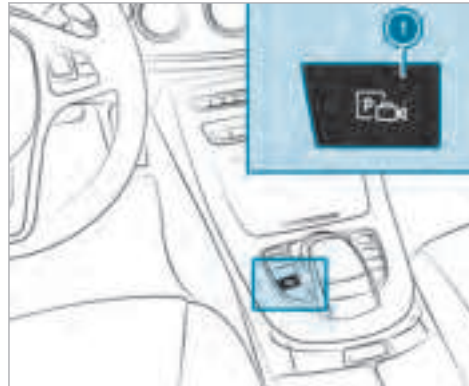

- ▶ Press button **1**.
The Active Parking Assist view appears on the multimedia system display. Area **2** displays detected parking spaces **4** and vehicle path **3**.

- i** Vehicle path **3** shown on the multimedia system display may differ from the actual vehicle path.



- ▶ If you have driven past a suitable parking space: bring the vehicle to a standstill.
- ▶ Select desired parking space **4**.
- ▶ Where necessary, select the parking direction: forwards or reverse.
Vehicle path **3** is shown, depending on the selected parking space and parking direction.
- ▶ Confirm the selected parking space.

⚠ WARNING Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- ▶ Pay attention to objects and other road users.
- ▶ Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

- ▶ If, for example, the **Engage reverse gear** message appears in the multimedia system display: select the corresponding transmission position.

Vehicles with automatic transmission:

The vehicle drives into the selected parking space.

- ▶ **Vehicles with manual transmission:** Stop as soon as Parking Assist PARKTRONIC sounds the continuous warning tone, if not

before. Depending on the message or as required, engage forward or reverse gear.

On completion of the parking procedure, the **Active Parking Assist finished, take control of the vehicle.** display message appears. Further manoeuvring may still be necessary.

- ▶ After completion of the parking procedure, safeguard the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.

ⓘ Vehicles with automatic transmission:

You can stop the vehicle and change the transmission position during the parking procedure. The system then calculates a new vehicle path. The parking procedure can then be continued. If no new vehicle path is available, the transmission position will be changed again. If the vehicle has not yet reached the parking space, the parking procedure will be cancelled, should a gear be changed.


Exiting a parking space with Active Parking Assist

Requirement:

You can only exit a parking space with Active Parking Assist if you have previously parked the vehicle with Active Parking Assist.

Please note that you are responsible for the vehicle and surroundings during the entire parking procedure.

- ▶ Start the vehicle.

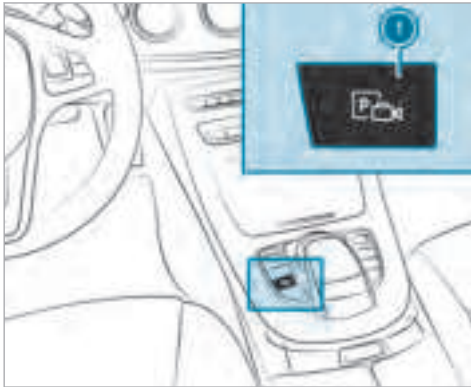

- ▶ Press button ①.
The Active Parking Assist view appears on the multimedia system display.
- ▶ If the vehicle has been parked at right angles to the direction of travel: in area ②, select direction of travel ③.



- ① The vehicle path shown on the multimedia system display may differ from the actual vehicle path.
- ▶ Confirm to start the exiting process.

⚠ WARNING Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- ▶ Pay attention to objects and other road users.
- ▶ Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

- ▶ If, for example, the **Engage forward gear** message appears in the multimedia system display: select the corresponding transmission position.
The vehicle moves out of the parking space.



Example: vehicles with 360° Camera

After the exiting procedure has been completed, the **Active Parking Assist finished, take control of the vehicle.** message appears in the display of the multimedia system. A warning tone and the display ④ in the multimedia system prompt you to take over. You have to accelerate, brake, steer and change gear yourself again.

Function of Remote Parking Assist

❶ Remote Parking Assist is an additional function of Active Parking Assist. Comply with local traffic laws and regulations when using Remote Parking Assist on public roads.

Remote Parking Assist supports the manoeuvring or parking procedure while you are outside your vehicle. Once you have selected a suitable parking space, you then exit the vehicle and guide it into the parking space using a suitable mobile phone. Remote Parking Assist changes gear, accelerates, brakes and steers the vehicle. While Remote Parking Assist is active, the vehicle is locked. You can interrupt the parking process at any time with the mobile phone or the vehicle key and then take over the vehicle yourself.

You can also use your mobile phone to move your vehicle backwards and forwards in the straight-ahead position (exploration mode). This is useful, for example, if a garage is so narrow that it is difficult or impossible to get in or out of the vehicle after it has been parked. Remote Parking Assist automatically performs any minor steering corrections that are required.

Remote Parking Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Interrupt or terminate the parking procedure if necessary. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

For the Remote Parking Assist function, you require a mobile phone and the current Remote Parking Assist App.

The following operating systems are supported:

- Android™
- Apple® iOS

If the connection between the vehicle and the mobile phone is interrupted while a parking

manoeuvre is being performed, the manoeuvre can be continued if the connection is re-established within about two minutes.

The following scenarios are supported:

- Parking in a parking space parallel to the direction of travel.
- Parking in a parking space at right angles to the direction of travel.
- Exiting a parking space at right angles to the direction of travel (exploration mode).
- Parking in a straight-ahead position, e.g. into a garage or carport (exploration mode).
- Exiting a parking space in a straight-ahead position, e.g. from a garage or carport (exploration mode).

If a malfunction or a system limitation is detected during parking or manoeuvring (e.g. the permitted downhill gradient is exceeded), the following actions are performed automatically:

- The parking manoeuvre is cancelled.
- The vehicle is brought to a standstill.
- Transmission position **P** is engaged.

- The vehicle is switched off.
- The vehicle remains locked.

If the parking manoeuvre is cancelled, a corresponding message is displayed on the mobile phone. You can then take over and manoeuvre the vehicle into the parking space yourself. Alternatively, you can move the vehicle back to its original position, if necessary.

You can interrupt the parking procedure with Active Parking Assist in order to take control of the vehicle with Remote Parking Assist and manoeuvre it into its final position.

-  You can find further information in the operating instructions for the Remote Parking Assist App <http://www.mercedes.me>.

System limitations

Snowfall or heavy rain may lead to a parking space being measured inaccurately or, in certain cases, to connection problems with the mobile phone. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or be measured incorrectly. Only use Remote Parking Assist on a level, high-grip surface. The parking space must be at least 0.60 m

wider than the vehicle without the outside mirrors.

Do not use Remote Parking Assist in the following situations:

- In extreme weather conditions such as ice or packed snow or in heavy rain.
- If you are transporting a load that protrudes beyond the vehicle.
- If you have installed snow chains.
- If the parking space is on a downhill or uphill incline.

Remote Parking Assist is cancelled if, among other things, one of the following actions is carried out:

- You deactivate Active Parking Assist.
- You press a button on the key.
- ESP® intervenes.

During the parking procedure, you should not stand more than approx. 3.0 m away from the vehicle. At greater distances, the procedure will be interrupted and a corresponding message will be displayed on the mobile phone. If you move

closer to the vehicle, you will be able to continue the procedure.

Further information on cancelling the function can be found in the operating instructions for the Remote Parking Assist App.

Operating Remote Parking Assist

 **WARNING** Risk of accident due to objects located above or below the detection range of Active Parking Assist

If there are objects above or below the detection range, the following situations may arise:

- Active Parking Assist may steer too early.
- **Vehicles with automatic transmission:** The vehicle may not stop in front of these objects.

This could cause a collision.

 In these situations, do not use Active Parking Assist.

Objects located above or below the detection range of the Parking Assist are not detected

when the parking space is being measured. These are also not taken into account when the parking manoeuvre is calculated, e.g. overhanging loads, overhangs or loading ramps of lorries or the boundaries of parking spaces. In some circumstances, Parking Assist may therefore guide you into the parking space prematurely.

⚠ WARNING Danger due to insufficient view of the vehicle surroundings

When using the Remote Parking Assist, the view of the vehicle's surroundings may be limited.

▶ When you manoeuvre, park or exit a parking space with the vehicle using Remote Parking Assist, observe the following points:

- Make sure that you have the best view possible of the vehicle and the vehicle's surroundings.
- Make sure that no persons, animals or objects are in the path of your vehicle.

- Make sure that you maintain a suitable distance to the vehicle and that neither you nor other road users could be endangered.
- Be aware of the vehicle's surroundings at all times and identify possible dangers.
- If necessary, cancel the parking procedure.

Keep in mind that the system limitations must be observed at all times. If necessary, cancel the parking procedure.

Please note that you can only use Remote Parking Assist if you have a valid driving licence and are in a fit state to drive.

During the parking procedure, no persons or pets are allowed in the vehicle.

Always make sure that other road users can access their vehicles.

- ⓘ Keep the key with you during the parking procedure. You can cancel the parking procedure and bring the vehicle to a standstill by pressing a button on the key.

- ⓘ On completion of the parking procedure, the vehicle is locked.

Requirement:

- The mobile phone and Remote Parking Assist are connected (→ page 226)

Parking



- ▶ Press button ①.
The Active Parking Assist view appears on the multimedia system display. Area ② displays detected parking spaces ④ and vehicle path ③.

① Vehicle path ③ shown on the multimedia system display may differ from the actual vehicle path.



- ▶ If you have driven past a suitable parking space: bring the vehicle to a standstill. Area ② is activated.
- ▶ Select transmission position **P**.

- ▶ Select the desired parking space in area ② and confirm.
- ▶ Exit the vehicle.
- ▶ Ensure that all vehicle doors, windows and the boot lid are closed.
- ▶ Start the Remote Parking Assist App.
- ▶ Observe the instructions of the Remote Parking Assist App accordingly and park the vehicle into the parking space.
- ▶ After completion of the parking procedure, safeguard the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.

Taking over a parking procedure from Parking Assist

- ▶ Park the vehicle with Active Parking Assist (→ page 219).
- ▶ When the vehicle is in the desired position, select transmission position **P**. Active Parking Assist is ended and Remote Parking Assist is activated.
- ▶ Exit the vehicle.

- ▶ Ensure that all vehicle doors, windows and the boot lid are closed.
- ▶ Start the Remote Parking Assist App.
- ▶ Observe the instructions of the Remote Parking Assist App accordingly and park the vehicle into the parking space.
- ▶ After completion of the parking procedure, safeguard the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.

Parking with exploration mode



- ▶ Bring the vehicle to a standstill.

- ▶ Press button ❶.
The Parking Assist view appears on the multimedia system display. Area ❷ is activated.
- ▶ To activate Remote Parking Assist, select transmission position **P**.
- ▶ Select your own vehicle ❸ and confirm.
- ▶ Exit the vehicle.
- ▶ Ensure that all vehicle doors, windows and the boot lid are closed.
- ▶ Start the Remote Parking Assist App.
- ▶ Observe the instructions of the Remote Parking Assist App accordingly and drive the vehicle forwards or backwards into the desired position.
- ▶ After completion of the parking procedure, safeguard the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.

Alternatively, you can proceed as follows:

- ▶ Bring the vehicle to a standstill.
- ▶ Engage transmission position **P** and switch off the vehicle.

- ▶ Exit the vehicle.
- ▶ Start the Remote Parking Assist App.
- ▶ Observe the instructions of the Remote Parking Assist App accordingly and drive the vehicle forwards or backwards into the desired position.
- ▶ After completion of the parking procedure, safeguard the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the kerb.

The parking procedure requires a minimum parking space size. If clearances get smaller during the parking procedure, e.g. if the vehicle is being driven into a garage, a message appears on the mobile phone. You will need to confirm the reduced clearances.

Exiting a parking space with exploration mode

- ▶ Unlock the vehicle.
- ▶ Start the Remote Parking Assist App within one minute.
- ▶ Observe the instructions of the Remote Parking Assist App accordingly and drive the vehicle

forwards or backwards into the desired position.

- ❗ The outside mirrors are not automatically folded out after exiting a parking space.

Authorising and de-authorising a mobile phone for Remote Parking Assist

Multimedia system:

➔ Vehicle ➔  Assistance ➔ Camera & Park. Assist ➔ Remote Parking Assist

Authorising a new mobile phone

In order to be able to use the Remote Parking Assist function, you must authorise your mobile phone. You can authorise up to six mobile phones.

- ▶ Select **Connect new device**.
Remote Parking Assist is ready to connect.
- ▶ Start the Remote Parking Assist App and start the authorisation process too.
A connection prompt is displayed.
- ▶ Enter the PIN.

De-authorising a mobile phone

- ▶ Select the mobile phone.

- ▶ Select  **Options** .
 - ▶ Select **Deauthorise**.
 - ▶ Select **Yes**.
- The mobile phone is deleted from the list of devices.

Drive Away Assist

-  Drive Away Assist is only available for vehicles with automatic transmission.

Drive Away Assist can reduce the severity of an impact when pulling away. If an obstacle is detected in the direction of travel, the vehicle's speed is briefly reduced to approx. 2 km/h. If a critical situation is detected, a symbol appears on the camera image of the multimedia system.

 **WARNING** Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

In such cases, Drive Away Assist might:

- Warn you without reason and limit the vehicle speed.
 - Not warn you or not limit the vehicle speed.
- ▶ Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.
- ▶ Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

Drive Away Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe manoeuvring and parking remains with you. Make sure that no persons, animals or objects etc. are in the manoeuvring range.

A risk of a collision may arise in the following situations, for example:

- If the driver mixes up the accelerator and brake pedals.

- If the wrong gear is selected.

The Drive Away Assist function is active under the following conditions:

- If Parking Assist PARKTRONIC is activated.
- Every time the gear is changed to **R** or **D** when the vehicle is at a standstill.
- If the detected obstacle is less than approx. 1.0 m away.
- If the manoeuvring assistance function is activated in the multimedia system.

Drive Away Assist is not available on inclines and when driving with a trailer.

Cross Traffic Alert

-  Also read the instructions on Blind Spot Assist (→ page 229).

Vehicles with Blind Spot Assist: Drivers can also be warned of any crossing traffic when reversing out of a parking space. If a critical situation is detected, a warning symbol appears on the camera image of the multimedia system. If the driver does not respond to the warning, the vehicle's brakes can be applied automatically. To

do this, the function uses the radar sensors in the bumper. The area adjacent to the vehicle is continually monitored.

If the radar sensors are obstructed by vehicles or other objects, detection is not possible.

The Cross Traffic Alert function is active under the following conditions:

- If Blind Spot Assist is activated.
- If the vehicle is reversing at walking pace.
- If the manoeuvring assistance function is activated in the multimedia system.

The Cross Traffic Alert function is not available on inclines and when driving with a trailer.

Activating/deactivating manoeuvring assistance

Multimedia system:

➡ Vehicle ➡  Assistance ➡ Camera & Park. Assist ➡ Manoeuvring assist.

▶ Activate ☒ or deactivate ☐ the function.

ATTENTION ASSIST

Function of ATTENTION ASSIST

ATTENTION ASSIST assists you on long, monotonous journeys, e.g. on motorways and trunk roads. If ATTENTION ASSIST detects indicators of fatigue or increasing lapses in concentration on the part of the driver, it suggests taking a break.

ATTENTION ASSIST is only an aid. It cannot always detect fatigue or lapses in concentration until too late. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular breaks in good time that allow for adequate recuperation.

You can choose between two settings.

- **Standard:** normal system sensitivity
- **Sensitive:** higher system sensitivity. The driver is warned earlier and the attention level detected by ATTENTION ASSIST is adapted accordingly.

If drowsiness or increasing lapses in concentration are detected, the **ATTENTION ASSIST: Take a break!** warning appears in the Instrument Dis-

play. You can acknowledge the message and take a break where necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.



You can have the following status information for ATTENTION ASSIST displayed in the assistance menu of the on-board computer:

- The length of the journey since the last break.
- The attention level determined by ATTENTION ASSIST.

If ATTENTION ASSIST is unable to calculate the attention level and cannot issue a warning, the **System suspended** message appears.

If ATTENTION ASSIST is deactivated, the  symbol appears in the assistance graphic in the Instrument Display when the engine is running. ATTENTION ASSIST is activated automatically when the engine is re-started. The last selected sensitivity level remains stored.

System limitations

ATTENTION ASSIST is active in the 60 km/h to 200 km/h speed range.

The functionality of ATTENTION ASSIST is restricted, and warnings may be delayed or not occur at all in the following situations:

- If you have been driving for less than 30 minutes.
- If the road condition is poor (uneven road surface or potholes).
- If there is a strong side wind.
- If you adopt a sporty driving style (high cornering speeds or high rates of acceleration).

- If the Steering Assist function of Active Distance Assist DISTRONIC is active.
- If the time has been set incorrectly.
- In active driving situations, if you change lanes and vary your speed frequently.

The ATTENTION ASSIST tiredness or alertness assessment is deleted and restarted when continuing the journey in the following situations:

- If you switch off the engine.
- If you unfasten your seat belt and open the driver's door (e.g. change drivers or take a break).

Setting ATTENTION ASSIST

Multimedia system:

 **Vehicle**  **Assistance**  **ATTENTION ASSIST**

Setting options

- ▶ Select **Standard**, **Sensitive** or **Off**.

Suggesting a rest area

- ▶ Select **Suggest rest area**.

- ▶ Activate ☒ or deactivate the function ☐. If ATTENTION ASSIST detects fatigue or increasing lack of attention, it suggests a rest area in the vicinity.

Selecting a suggested rest area.

You are guided to the selected rest area.

Blind Spot Assist and Active Blind Spot Assist

Function of Blind Spot Assist and Active Blind Spot Assist

Blind Spot Assist uses two lateral, rear-facing radar sensors to monitor the area up to 40 m behind your vehicle and 3 m directly next to your vehicle.

If a vehicle is detected at speeds above approximately 12 km/h and this vehicle subsequently enters the monitoring range directly next to your vehicle, the warning lamp in the outside mirror lights up red.

If a vehicle is detected close to your vehicle in the lateral monitoring range and you switch on the turn signal indicator in the corresponding direction, a warning tone sounds once. The red

warning lamp in the outside mirror flashes. If the turn signal indicator remains on, all other detected vehicles are indicated only by the flashing of the red warning lamp.

If you overtake a vehicle quickly, no warning is given.

⚠ WARNING Risk of accident despite Blind Spot Assist

Blind Spot Assist does not react to vehicles approaching and overtaking you at a greatly different speed.

As a result, Blind Spot Assist cannot warn drivers in this situation.

- ▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

Blind Spot Assist and Active Blind Spot Assist are only aids. They may fail to detect some vehicles and are no substitute for attentive driving. Always ensure that there is sufficient distance to the side for other road users and obstacles.

System limitations

The detection capability of Blind Spot Assist can be restricted in the following situations:

- If the sensors are dirty or covered.
- When there is poor visibility, e.g. due to fog, heavy rain, snow or spray.
- If narrow vehicles are within the monitoring range, e.g. bicycles.

Warnings may be issued in error when driving close to crash barriers or similar solid lane borders. Warnings may be interrupted when driving alongside long vehicles, for example lorries, for a prolonged time.

Blind Spot Assist is not operational when reverse gear is engaged.

Brake application of Active Blind Spot Assist

If Active Blind Spot Assist detects a risk of a side impact in the monitoring range, a course-correcting brake application is carried out. This is designed to help you avoid a collision.

The course-correcting brake application is available in the speed range between approximately 30 km/h and 200 km/h.

⚠ WARNING Risk of accident despite brake application of Active Blind Spot Assist

A course-correcting brake application cannot always prevent a collision.

- ▶ Always steer, brake or accelerate yourself, especially if Active Blind Spot Assist warns you or makes a course-correcting brake application.
- ▶ Always maintain a safe distance at the sides.

⚠ WARNING Risk of accident despite Active Blind Spot Assist

Active Blind Spot Assist does not react to the following:

- Overtaking vehicles closely on the side, placing them in the blind spot area.
- Vehicles approaching and overtaking you at a very different speed.

As a result, Active Blind Spot Assist may neither give warnings nor intervene in such situations.

- ▶ Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.



If a course-correcting brake application occurs, the red warning lamp flashes in the outside mirror and a warning tone sounds. In addition, a display ❶ indicating the danger of a side collision appears in the multifunction display.

In rare cases, the system may make an inappropriate brake application. This brake application

may be interrupted at any time if you steer slightly in the opposite direction or accelerate.

System limitations

Either a course-correcting brake application appropriate to the driving situation, or none at all, may occur in the following situations:

- There are vehicles or obstacles, e.g. crash barriers, on both sides of your vehicle.
- A vehicle approaches too closely on the side.
- You have adopted a sporty driving style with high cornering speeds.
- You clearly brake or accelerate.
- A driving safety system intervenes, such as ESP® or Active Brake Assist.
- ESP® is deactivated.
- A loss of tyre pressure or a defective tyre is detected.
- When driving with a trailer, the electrical connection to the trailer hitch has been correctly established.

Activating or deactivating Blind Spot Assist or Active Blind Spot Assist


Multimedia system:

➞ Vehicle ➞  Assistance ➞ Blind Spot Assist

▶ Activate ☒ or deactivate ☐ the function.

Active Lane Keeping Assist

Function of Active Lane Keeping Assist

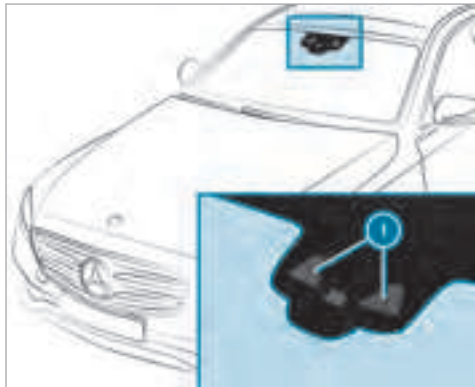

Active Lane Keeping Assist monitors the area in front of your vehicle by means of multifunction camera ①. It serves to protect you against unintentionally leaving your lane. You will be warned by means of a vibration in the steering wheel

and a course-correcting brake application guides you back into your lane.

You are warned by vibration pulses in the steering wheel in the following circumstances:

- Active Lane Keeping Assist detects lane markings.
- A front wheel passes over the lane markings.

You will also be guided back into your lane by means of a course-correcting brake application if the following conditions are met:

- Active Lane Keeping Assist detects lane markings on both sides.
- A front wheel drives over a solid lane marking.

Whether a warning is issued and when this occurs also depends on the selected sensitivity setting (standard or adaptive).


If you fail to adapt your driving style, Active Lane Keeping Assist can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. Active Lane Keeping Assist is only an aid. You are responsible for the distance to the

vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

Vehicles with Lane Tracking package: If the lane markings are solid lines and you do not react to the warning, a lane-correcting brake application can bring the vehicle back into the original lane.

Vehicles with Driving Assistance package or Driving Assistance Plus package: If you do not react to the warning, a lane-correcting brake application can bring the vehicle back into the original lane. In the case of a broken lane marking being detected, a brake application will only be made if a vehicle has been detected in the adjacent lane. Oncoming vehicles, overtaking vehicles and vehicles in adjacent lanes can be detected.

The brake application is available in the speed range between 60 km/h and 200 km/h.

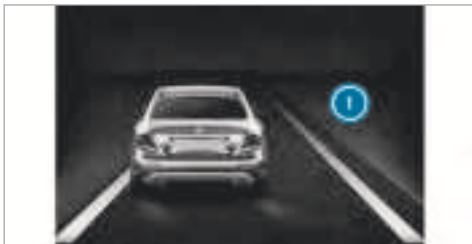

If a lane-correcting brake application occurs, display ⓘ appears in the multifunction display.

System limitations

No lane-correcting brake application occurs in the following situations:

- You clearly and actively steer, brake or accelerate.
- You have switched on the turn signal indicator.
- A driving safety system intervenes, such as ESP®, Active Brake Assist or Active Blind Spot Assist.
- You have adopted a sporty driving style with high cornering speeds or high rates of acceleration.
- ESP® is deactivated.
- When driving with a trailer, the electrical connection to the trailer has been correctly established.
- If a loss of tyre pressure or a defective tyre has been detected and displayed.

The system may be impaired or may not function in the following situations:

- There is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, or due to rain, snow, fog or heavy spray.
- There is glare, e.g. from the sun, reflections or oncoming traffic.
- There is dirt on the windscreen in the vicinity of the multifunction camera or the camera is misted up, damaged or obscured.
- No or several, unclear lane markings are present for one lane, e.g. in a construction area.

- The lane markings are worn, dark or covered.
- The distance to the vehicle in front is too small and the lane markings thus cannot be detected.
- The lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- The carriageway is very narrow and winding.

Vehicles with Driving Assistance package or Driving Assistance Plus package:

Active Lane Keeping Assist uses radar sensors to monitor several areas around the vehicle. If the radar sensors in the rear bumper are dirty or covered with snow, the system may be impaired or may not function. If an obstacle in the lane in which you are driving has been detected, no lane-correcting brake application occurs.

Activating Active Lane Keeping Assist

⚠ WARNING Risk of accident despite Active Lane Keeping Assist warning

A lane-correcting brake application cannot always bring the vehicle back into the original lane.

- ▶ Always steer, brake or accelerate yourself, especially if Active Lane Keeping Assist warns you or makes a lane-correcting brake application.

⚠ **WARNING** Risk of accident despite intervention of Active Lane Keeping Assist

Active Lane Keeping Assist does not detect traffic conditions or road users. In very rare cases, the system may make an inappropriate brake application, e.g. after intentionally driving over a solid lane marking.

The brake application can be interrupted at any time if you steer slightly in the opposite direction.

- ▶ Always make sure that there is sufficient distance to the side for other traffic or obstacles.

⚠ **WARNING** Risk of accident despite Lane Keeping Assist


Lane Keeping Assist cannot always clearly detect lane markings.

In such cases, Lane Keeping Assist can:

- give an unnecessary warning
 - not give a warning
- ▶ Always pay particular attention to the traffic situation and keep within the lane, especially if Active Lane Keeping Assist alerts you.

Requirement:

The driving speed is at least 60 km/h.

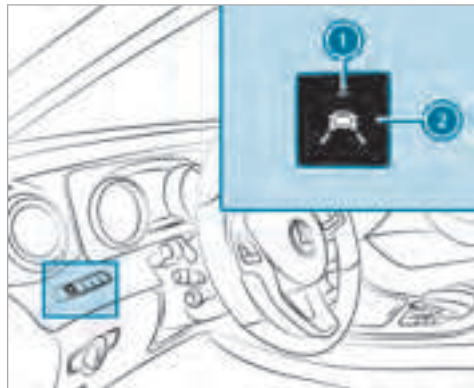

- ▶ Press button ②. If indicator lamp ① lights up, Lane Keeping Assist is activated. When lane markings are detected, the lines in the assistance graphic are shown in white.

Sensitivity of Active Lane Keeping Assist

With the standard or adaptive setting, you can influence when the warning vibration of Lane Keeping Assist takes place.

In both the standard and adaptive settings, no warning vibration occurs in the following situations:

- You have switched on the turn signal indicator.
- A driving safety system intervenes, such as ABS, BAS or ESP®.

In the adaptive setting, there will also be no warning vibration in the following situations:

- The vehicle is accelerated or braked considerably.
- You steer actively, e.g. swerve to avoid an obstacle or change lane quickly.
- You cut the corner on a sharp bend.

Setting the sensitivity of Active Lane Keeping Assist

Multimedia system:

➔ Vehicle ➔  Assistance ➔ Act.
Lane Keep. Assist

Selection options

► Select **Adaptive** or **Standard**.

Trailer hitch

Trailer operation notes

Mercedes-AMG vehicles: always observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Observe the following notes on the tongue weight:

- use a tongue weight as close as possible to the maximum tongue weight
- do not use a tongue weight that exceeds or falls below the permissible tongue weight

Do not exceed the following values:

- the permissible towing capacity
- the permissible rear axle load of the towing vehicle
- the permissible gross mass of the towing vehicle
- the permissible gross mass of the trailer
- the maximum permissible speed of the trailer

Make sure of the following before starting a journey:

- the tyre pressure on the rear axle of the towing vehicle is set for a maximum load
- the headlamps are adjusted correctly

In the event of increased rear axle load, the car/trailer combination may not exceed a maximum speed of 100 km/h for reasons concerning the operating permit. This also applies in countries in which the permissible maximum speed for car/trailer combinations is above 100 km/h.

Extending/retracting the ball neck fully electrically

⚠ WARNING Risk of accident due to the ball neck not being engaged

If the ball neck is not engaged, the trailer may come loose.

► Make sure that the ball neck securely engages and locks into place.

! NOTE Damage to the fully-electric trailer hitch

The fully-electric trailer hitch could be mechanically damaged by applying additional pressure when the ball neck is being extended or retracted.


- ▶ Do not make the ball neck extend/retract faster by applying additional pressure.

Requirements:

Make sure of the following before extending/retracting the ball neck fully electrically:

- the transmission must be in position **P** or **N**
- the range of movement is clear
- **only when retracting:** ensure trailer cables or adapter plugs have been removed

Extending/retracting the ball neck fully electrically

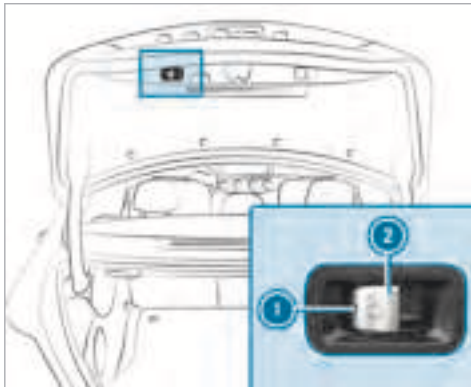

- ▶ Pull switch **2**. Indicator lamp **1** flashes and the **Trailer coupling extending...** display message appears in the multifunction display. The ball neck extends fully electrically. Wait until the ball neck has locked in place.

The ball neck is securely locked in place when indicator lamp **1** lights up continuously.

If the ball neck is not securely locked in place, indicator lamp **1** flashes and the **Check trailer hitch lock** display message appears in the multifunction display.



- Pull switch ②.
Indicator lamp ① flashes and the **Trailer coupling extending...** display message appears in the multifunction display.

The ball neck retracts fully electrically.

Wait until the ball neck has locked in place.

The ball neck is securely locked into place once indicator lamp ① goes out.

If the ball neck is not securely locked in place, indicator lamp ① flashes and the **Check trailer hitch lock** display message appears in the multifunction display.

Observe the information on the displays in the instrument cluster:

- warning and indicator lamps (→ page 472)
- display messages (→ page 411)

Coupling up/uncoupling a trailer

⚠ WARNING Risk of injury from the vehicle level being changed

Vehicles with level control system: the vehicle level may be changed unintentionally, e.g. by other persons. You may become trapped if you couple up or uncouple a trailer while the vehicle level is changing. In addition, other people could become trapped if their limbs are between the vehicle body and the tyres or underneath the vehicle.

When coupling up or uncoupling a trailer, make sure that:

- The doors or tailgate are not opened or closed.
- Do not initiate the level control system and do not operate the DYNAMIC SELECT switch.
- The vehicle is not locked or unlocked.

Requirements:

- the ball neck must extended fully electrically, securely engaged and locked into place.

Trailers with a 7-pin plug can be connected to the vehicle with the following adapters:

- adapter plug
- adapter cable

The trailer will only be correctly detected by the vehicle if the following conditions are met:

- the trailer is connected correctly
- the trailer lighting system is in working order

The operation of the following systems depends on the trailer being connected correctly:

- Active Lane Keeping Assist
- ESP®
- Parking Assist PARKTRONIC
- Active Parking Assist
- Blind Spot Assist or Active Blind Spot Assist

Coupling up a trailer

! NOTE Damage to the battery due to full discharge

Charging the trailer battery using the power supply of the trailer can damage the battery.

▶ Do not use the power supply to charge the trailer battery.

- ▶ Remove the cover from the ball head and store it in a safe place (→ page 103).
- ▶ Position the trailer on a level surface behind the vehicle and couple it up to the vehicle.



- ▶ Open the socket cover.
- ▶ Insert the plug connector with lug ① into groove ③ on the socket.
- ▶ Turn bayonet coupling ② clockwise to the stop.
- ▶ Let the cover engage.
- ▶ Secure the cable to the trailer with cable ties (if you are using an adapter cable).
- ▶ Make sure that cable is always slack for ease of movement when cornering.
- ▶ Push the combination switch upwards and downwards and check whether the corresponding turn signal light on the trailer is flashing.

A display message may appear in the multifunction display even if the trailer has been connected correctly:

- LEDs have been installed on the trailer lighting system
- the current has fallen below the trailer lighting system's minimum current (50 mA)

① Accessories can be connected to the permanent power supply up to 180 W, and the power supply that is switched on via the ignition lock.

Uncoupling a trailer

! WARNING Risk of being crushed and becoming trapped when uncoupling a trailer

When uncoupling a trailer with an engaged inertia-activated brake, your hand may become trapped between the vehicle and the trailer drawbar.

▶ Do not uncouple trailers with an engaged overrun brake.

! WARNING Risk of becoming trapped when disconnecting the trailer cable

Vehicles with level control system: the vehicle lowers when the trailer cable is disconnected.

This could result in you or other people becoming trapped if your or their limbs are between the vehicle body and the tyres or underneath the vehicle.

- ▶ Make sure nobody is underneath the vehicle or in the immediate vicinity of the wheel arches when you disconnect the trailer cable.

! NOTE Damage to the rear bumper from installing adapter cables or adapter plugs

The following parts could be damaged when retracting the ball neck fully electrically:

- bumper
- adapter cable
- adapter plug

- ▶ Always remove the adapter cable or adapter plug before retracting the ball neck fully electrically.

- ▶ Safeguard the trailer against rolling away.

- ▶ Disconnect the electrical connection between the vehicle and the trailer.
- ▶ Uncouple the trailer.
- ▶ Place the cover on the ball head.

Bicycle rack

! WARNING Risk of an accident when using the bicycle rack incorrectly

The bicycle rack may become detached from the vehicle in the following cases:

- the permissible load capacity of the trailer hitch is exceeded.
- the bicycle rack is used incorrectly.
- the bicycle rack is secured to the ball neck beneath the ball head.


Observe the following for your own safety and that of other road users:

- always adhere to the permissible load capacity of the trailer hitch.

- only use the bicycle rack to transport bicycles.
- always mount the bicycle rack properly by attaching to the ball head and the ball neck guide pin, if possible.
- when transporting four bicycles, always use bicycle racks which have additional support on the ball neck guide pin.
- only use bicycle racks approved by Mercedes-Benz.
- always observe the bicycle rack operating instructions.

! NOTE Damage to or cracks on the trailer hitch due to unsuitable bicycle racks or bicycle racks being used incorrectly

- ▶ Only use bicycle racks approved by Mercedes-Benz.

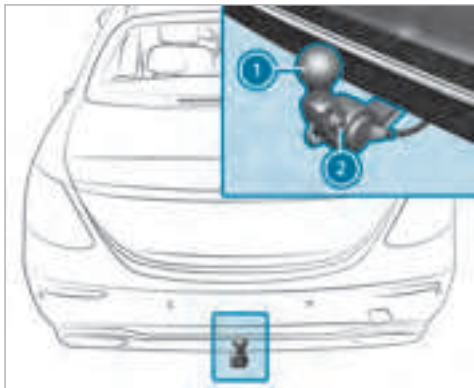

Trailer hitch (example with additional guide pins)

Depending on the design, up to four bicycles can be transported on the bicycle rack:

- when mounted by attaching to ball head ①, the maximum load capacity is 75 kg. Up to three bicycles can be transported.

- when mounted on ball head ① and guide pin ②, the maximum load capacity is 100 kg. Up to four bicycles can be transported.

The load capacity is calculated from the weight of the bicycle rack and the bicycle rack load.

For bicycles weighing a total of between 75 kg and 100 kg only use bicycle racks with additional support on guide pin ②.

The vehicle's handling characteristics change when a bicycle rack is fitted. The vehicle:

- is heavier
- is restricted in its acceleration and gradeability
- has an increased braking distance

This can impair the vehicle's handling characteristics. Adapt your driving style accordingly. Drive carefully and maintain a safe distance.

When using a bicycle rack, set the tyre pressure for maximum load on the rear axle of the vehicle. Further information on the tyre pressure can be found in the tyre pressure table (→ page 377).

Notes on loads

The larger the distance between the load's centre of gravity and the ball head, the greater the load on the trailer hitch.


Observe the following notes:

- mount heavy bicycles as close to the vehicle as possible.
- always distribute the load on the bicycle rack as evenly as possible across the vehicle's longitudinal axis.

Mercedes-Benz recommends removing all detachable parts from the bicycles, e.g. baskets, child seats or batteries, before loading them onto the bicycle rack. This improves the wind resistance and centre of gravity of the bicycle rack.

Always secure the bicycles to prevent them from moving around and check they are secured at regular intervals.

Do not use tarpaulins or other covers. The handling characteristics and rear view may be impaired. In addition, the wind resistance and load on the trailer hitch increase.

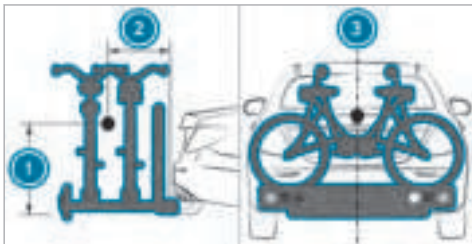

Distribution of the load on the bicycle rack

- ① Vertical distance between the centre of gravity and ball head
- ② Horizontal distance between centre of gravity and ball head
- ③ Centre of gravity located on the vehicle's centre axis

Observe the following information when loading the bicycle rack:

Number of bicycles	Total weight of bicycle rack and load	Max. distance ①	Max. distance ②
3	Up to 75 kg	420 mm	300 mm
4 ¹	Up to 90 kg ¹	420 mm	400 mm
4 ¹	Up to 100 kg ¹	420 mm	400 mm

¹ When transporting four bicycles or with a total weight between 75 kg and 100 kg, always use bicycle racks with additional support on the trailer hitch guide pin.

Instrument Display overview

Mercedes-AMG vehicles: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Plug-in hybrid: be sure to observe the notes in the Supplement. You may otherwise fail to recognise dangers.

⚠ WARNING Risk of accident due to an instrument display malfunction

If the instrument display has failed or malfunctioned, you may not recognise function restrictions applying to safety relevant systems.

The operating safety of your vehicle may be impaired.

- ▶ Drive on carefully.
- ▶ Have the vehicle checked immediately at a qualified specialist workshop.


If the operating safety of your vehicle is impaired, park the vehicle safely as soon as possible. Contact a qualified specialist workshop.

Instrument display (standard)



- ① Speedometer
- ② Multifunction display
- ③ Rev counter
- ④ Coolant temperature display
- ⑤ Fuel level and fuel filler flap location indicator

Instrument Display in the Widescreen Cockpit

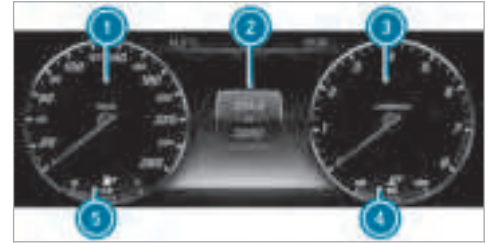

- ① Speedometer
 - ② Multifunction display
 - ③ Example: area for additional values
 - ④ Coolant temperature display
 - ⑤ Fuel level and fuel filler flap location indicator
- ① Further display content can be shown in display ③ for additional values .

The segments in speedometer ① indicate the system status for the following:

- Cruise control (→ page 192)

- Limiter (→ page 192)
- Active Distance Assist DISTRONIC (→ page 195)

! **NOTE** Engine damage due to excessively high engine speeds

The engine will be damaged if you drive with the engine in the overrevving range.

- ▶ Do not drive with the engine in the overrevving range.

The fuel supply is interrupted to protect the engine when the red band in rev counter ③ (overrevving range) is reached.

During normal operating conditions, coolant temperature display ④ may rise to 120 °C.

! **WARNING** Danger of burns when opening the bonnet

If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- ▶ Before opening the bonnet, allow the engine to cool down.
- ▶ In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.

Overview of the buttons on the steering wheel



- ① Button group:
- ◀ Main menu and back button (on-board computer)
 - 🔊 Switches sound off/on

- + Increases the volume
- Decreases the volume

② Touch Control (on-board computer)

③ Touch Control (multimedia system)

④ Button group:

◀ Main menu and back button (multimedia system)

🗣️ LINGUATRONIC or Voice Control System

☎️ Makes/accepts a call

📞 Rejects/ends a call

Operating the on-board computer

! **WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communications equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the on-board computer.

- ❗ The on-board computer displays appear in the multifunction display (→ page 245).



The on-board computer is operated using Touch Control ② and back button ① on the left-hand side of the steering wheel.

The following menus are available:

- [Service](#)
- [Assistance](#)
- [Trip](#)
- [Navigation](#)
- [Radio](#)
- [Media](#)
- [Telephone](#)
- **Vehicles with an instrument display in the widescreen cockpit:** [Content](#)
- [HUD](#)
- **Vehicles with an instrument display in the widescreen cockpit:** [Design](#)


The menus can be called up from the menu bar in the multifunction display.



- ▶ **To call up the menu bar:** press the back button on the left.
- ▶ **To scroll in the menu bar:** swipe to the left or right on the left-hand Touch Control.
- ▶ **To call up the menu or confirm the selection:** press the left-hand Touch Control.
- ▶ **To scroll through displays or lists in the menu:** swipe upwards or downwards on the left-hand Touch Control.
- ▶ **To call up the submenu or confirm the selection:** press the left-hand Touch Control.
- ▶ **To exit the submenu:** press the back button on the left.

If you are browsing a submenu and you press and hold the back button on the left, the menu bar appears.

Displays in the multifunction display

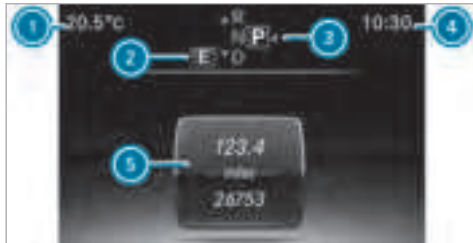

- ① Outside temperature
- ② Drive program
- ③ Transmission position
- ④ Time
- ⑤ Display section


i Vehicles with the Instrument Display in the Widescreen Cockpit: the position of

the displays deviates from those displayed here.

Further displays in the multifunction display:

- ↑ Gearshift recommendation (→ page 166)
- Active Parking Assist activated
- Parking Assist PARKTRONIC deactivated
- Cruise control (→ page 192)
- Limiter (→ page 192)
- Active Distance Assist DISTRONIC (→ page 195)
- Active Steering Assist (→ page 201)
- ECO start/stop function
- HOLD function (→ page 202)
- Adaptive Highbeam Assist (→ page 127)
- Adaptive Highbeam Assist Plus (→ page 129)
- Maximum permissible speed exceeded (for certain countries only)

Adjusting the instrument lighting

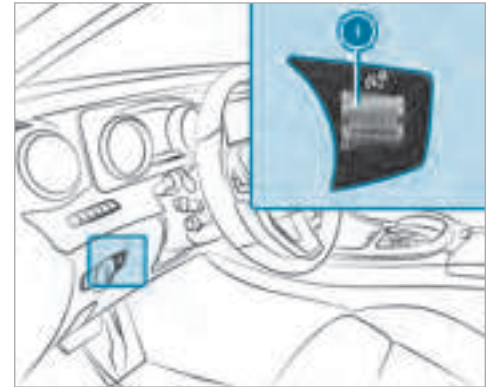

- ▶ Turn brightness control ① up or down. The lighting of the instrument display and in the controls in the vehicle interior is adjusted.

Menus and submenus

Functions in the Service menu of the on-board computer

On-board computer:

→ Service

▶ **To select the function:** swipe upwards or downwards on the left-hand side of Touch Control.

▶ Press the left-hand side of Touch Control.

Functions in the [Service](#) menu:

- Message memory (→ page 411)
- [AdBlue](#): Adblue® range
- [Tyres](#):
 - Restarting the tyre pressure loss warning system (→ page 383)
 - Checking tyre pressure with the tyre pressure monitoring system (→ page 379)
 - Restarting the tyre pressure monitoring system (→ page 379)

- [ASSYST PLUS](#): calling up the service due date (→ page 338)
- Engine oil level

Calling up the Assistance graphic display

On-board computer:


→ Assistance

❶ **Vehicles with the instrument display in the widescreen cockpit:** when you have the design set to [Progressive](#), you can view the assistance graphic in the left-hand portion of the instrument display.

The following displays are available from the Assistance graphic menu:

- Assistance graphic
- Attention level (→ page 228)

▶ **To switch between the displays:** swipe upwards or downwards on the left-hand side of Touch Control.

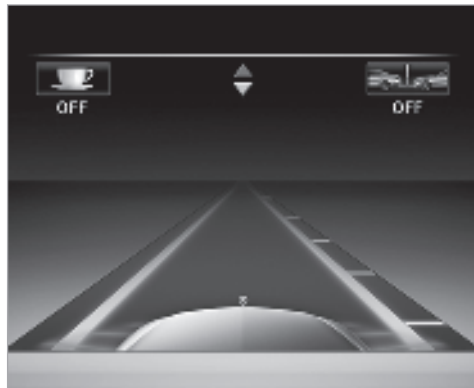

Status displays in the Assistance graphic:

- : ATTENTION ASSIST deactivated
- : Active Brake Assist deactivated
- Light lane markings: Active Lane Keeping Assist activated
- Green lane markings: Active Lane Keeping Assist active

- Grey radar waves next to vehicle: Blind Spot Assist activated
- Green radar waves next to vehicle: Blind Spot Assist active
- Display of Active Distance Assist DISTRONIC (→ page 195)

Calling up displays in the Trip menu

On-board computer:



- i Vehicles with an instrument display in the widescreen cockpit:** when you have the design set to **Progressive**, you can view information on the journey in the left-hand area of the instrument display.

▶ To select a display: swipe upwards or downwards on the left-hand side of Touch Control.

Displays in the **Trip** menu:

- standard display
- range and current fuel consumption

When gliding mode is active (→ page 167), **Gliding mode** is displayed instead of the current fuel consumption.

A recuperation display is also available for certain engines. If there is only a small amount of fuel left in the fuel tank, the display shows a vehicle being refuelled instead of the range.

- ECO display (→ page 161)
- trip computer **From start** and **From reset**
- Digital speedometer

- i Vehicles with an Instrument Display in the Widescreen Cockpit:** The digital speedometer only appears in the **Classic** and **Sport** designs.



Example: standard display

- 1** Trip distance
- 2** Total distance recorder



Example: trip computer

- ① Total distance recorder
- ② Driving time
- ③ Average speed
- ④ Average fuel consumption

Resetting values in the Trip menu of the on-board computer

On-board computer:



- ① The spelling may differ in the main menu displayed. Therefore, observe the menu over-

view for the instrument display
(→ page 243).

You can reset the values of the following functions:

- Trip distance
- Trip computer "From start" and "From reset"
- ECO display

- ▶ **To select the function to be reset:** swipe upwards or downwards on the left-hand side of Touch Control.
- ▶ Press the left-hand side of Touch Control.
- ▶ Select **Yes**.
- ▶ Press the left-hand side of Touch Control.

If you press and hold the left-hand side of Touch Control, the function will be reset immediately.

Calling up navigation instructions in the on-board computer

On-board computer:



Example: no change of direction announced

- ① Distance to the next destination
- ② Estimated arrival time
- ③ Distance to the next change of direction
- ④ Current road



Example: change of direction announced

- ① Road to which the change of direction leads
- ② Distance to the change of direction
- ③ Change-of-direction symbol
- ④ Recommended lane and new lane during a change of direction (white)
- ⑤ Possible lane
- ⑥ Lane not recommended (dark grey)

Further possible displays in the [Navigation](#) menu:

- **Direction of travel:** display of direction of travel and road currently being travelled on.

- **New route... or Calculating route...:** a new route is calculated.
- **Road not mapped:** the road is unknown, e.g. newly built roads.
- **No route:** no route could be calculated to the selected destination.
- **Off map:** the map for the current location is not available.
- **Area of destination reached:** you have reached the area of destination.
-  : you have reached the destination or an intermediate destination.

▶ **To exit the menu:** press the back button on the left.

Selecting radio stations using the on-board computer

On-board computer:

➞ Radio



- ① Frequency range
- ② Station
- ③ Name of track
- ④ Name of artist

When you select a station in the presets, the preset appears next to the station name. When you select a saved station in the frequency range, an asterisk appears next to the station name.

- ▶ **To select a radio station:** swipe upwards or downwards on the left-hand side of Touch Control.

Selecting the frequency range or station preset

- ▶ Press the left-hand side of Touch Control.
- ▶ **To select the frequency range/station preset:** swipe upwards or downwards on the left-hand Touch Control.
- ▶ Press the left-hand side of Touch Control.

Playing back media using the on-board computer

On-board computer:



- ① Media source
- ② Current track and track number
- ③ Name of artist
- ④ Name of album

The folder name also appears in the display.

- ▶ **To change tracks in the active media source:** swipe upwards or downwards on the left-hand side of Touch Control.

Changing the media source

- ▶ Press the left-hand side of Touch Control.
- ▶ **To select a media source:** swipe upwards or downwards on the left-hand side of Touch Control.
- ▶ Press the left-hand side of Touch Control.

Dialling telephone numbers using the on-board computer

Requirement:

- Mobile phone connected to the multimedia system

On-board computer:



⚠ WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the

traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

When telephoning, you must observe the legal requirements for the country in which you are currently driving.

Vehicles with the Audio 20 multimedia system: the most recently dialled telephone numbers are displayed in the **Telephone** menu.

- ▶ **To select the telephone number:** swipe upwards or downwards on the left-hand side of Touch Control.
- ▶ Press the left-hand side of Touch Control.
If there is only one telephone number saved to an entry: the telephone number is selected.
- ▶ **If there are multiple telephone numbers saved to an entry:** swipe upwards or down-

wards on the left-hand side of Touch Control to select the desired telephone number.

- ▶ Press the left-hand side of Touch Control. The telephone number is dialled.

The following displays may appear instead of the telephone numbers dialled:

- **Please wait...:** the application is starting. When a Bluetooth® connection to the mobile phone is not established, the menu for authorising and connecting a mobile phone is displayed in the multimedia system (→ page 298) (→ page 299).
- **Updating data...:** the call list is being updated.
- **Importing contacts...:** the contacts from the mobile phone or from a storage medium are being imported.

Accepting/rejecting a call

When you receive a call, a message appears in the Head-up-Display **Incoming call**.

- ▶ Swipe upwards or downwards on the left-hand side of Touch Control and select  (Accept) or  (Reject).

- ▶ Press the left-hand side of Touch Control.

The call may be accepted/rejected using the  or  buttons on the steering wheel.

Adjusting the head-up display settings in the on-board computer

On-board computer:

➞ **HUD**

The following head-up display settings can be adjusted:

- **Position**
- **Brightness**
- **Display content**

- ▶ **To select the setting:** swipe upwards or downwards on the left-hand Touch Control.
- ▶ Press the left-hand side of Touch Control.
- ▶ **To adjust the value:** swipe upwards or downwards on the left-hand side of Touch Control.
- ▶ Press the left-hand side of Touch Control.



- ① Currently selected setting
- ② Digital speedometer
- ③ Traffic Sign Assist
- ④ Navigation displays

Setting the design

On-board computer



- ① This function is only available for vehicles with a widescreen cockpit.

The following designs can be selected:

- Sport
- Classic
- Progressive

- ▶ **To select a design:** swipe upwards or downwards on the left-hand Touch Control.
- ▶ Press the left-hand Touch Control. The instrument display is shown in the selected design.


Head-up Display

Function of the head-up display

Mercedes-AMG vehicles: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

The head-up display projects information from the navigation system and the driver assistance system above the cockpit into the driver's field of vision.

Display elements

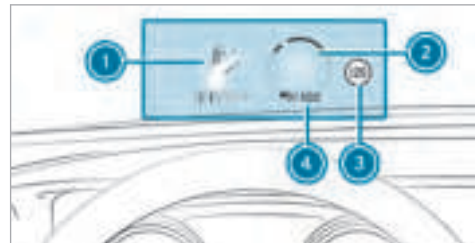

- ① Navigation messages
- ② Current speed
- ③ Detected instructions and traffic signs
- ④ Set speed in the driver assistance system (e.g. cruise control)

When you receive a call, a message appears in the head-up display **Incoming call.**

In audio mode, the station name or track is temporarily shown when the active audio source is being operated.


System limits

The visibility is influenced by the following conditions:

- seat position
- the positioning of the display image
- light conditions
- wet road surfaces
- objects on the display cover
- polarisation in sunglasses

Overview and operation

Overview of the multimedia system

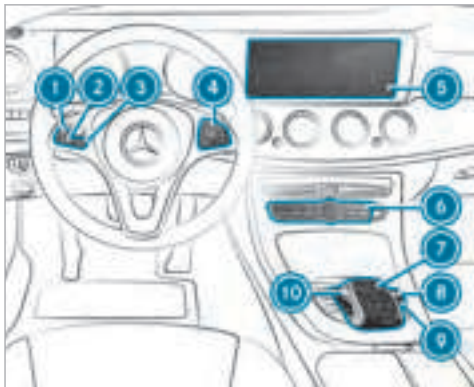

- ① Switches the sound on/off
- ② Decreases the volume
- ③ Increases the volume
- ④ Touch Control
- ⑤ Media display

- ⑥ Main functions button group (→ page 257)
- ⑦ Touchpad
- ⑧ Volume control
Adjusts volume and switches the sound on/off
- ⑨ Button 
Switches multimedia system on/off
- ⑩ Controller

Notes on the media display

! NOTE Scratching of the display

The display has a highly sensitive, high-gloss surface. There is a risk of it becoming scratched.

Avoid touching the display.

Observe the notes on cleaning.

Observe the notes on caring for the interior (→ page 351).

Automatic temperature-controlled switch-off feature: if the temperature is too high, the

brightness is initially reduced automatically. The media display may then switch off completely for a while.

- ① If you are wearing polarised sunglasses, it may be difficult to read the media display.


Central control elements overview



- ① Touch Control
- ② Controller
- ③ Touchpad

Touch Control

Operating Touch Control

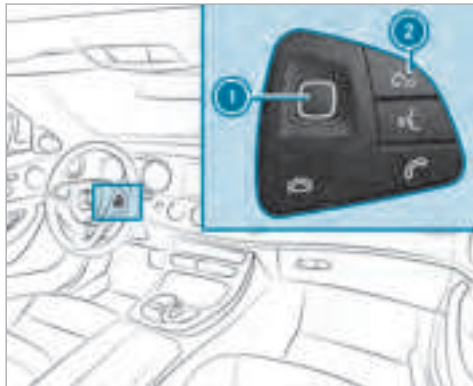

- ▶ **To select a menu item:** swipe up, down, left or right on Touch Control ①.
- ▶ Press Touch Control ①.
- ▶ **To open a list:** press Touch Control ①.
- ▶ **To close a list:** press the ② button.

- ▶ **To move the digital map:** swipe in any direction.

Setting the sensitivity for Touch Control

Multimedia system:

- System ➤ Input ➤ Touch Control sensitivity
- ▶ Select **Fast**, **Medium** or **Slow**.

Operating the controller



- ①  button
Press briefly: returns to the previous display
Press and hold: calls up main functions
- ② Button 
Calls up main functions and favourites
- ③ Controller

Controller operating options:

- ▶ Turn  left or right.
- ▶ Slide  left or right.
- ▶ Slide  up or down.
- ▶ Slide  diagonally.
- ▶ Press  briefly or press and hold.

Touchpad

Switching the touchpad on/off

Multimedia system:


→ System →  Input

- ▶ Switch Touchpad on ☒ or off ☐.

Operating the touchpad

Requirement:

For vehicles with a controller: the touchpad is switched on (→ page 256).

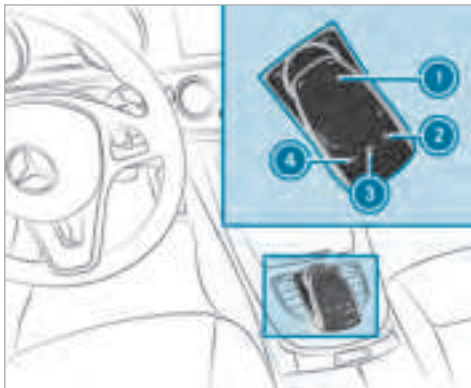

- ① Touchpad
- ② Button  Calls up main functions and favourites
- ③ Button  Calls up the control menu of the last active audio source
- ④ Button 

Press briefly: returns to the previous display

Press and hold: calls up main functions

You can navigate in menus and lists via touch-sensitive surface ① by using **a single-finger swipe**.

- ▶ **To open or close lists:** swipe left or right.
- ▶ **To select the menu item:** swipe up, down, left or right.
- ▶ Press touchpad ①.
- ▶ **To move the digital map:** swipe in any direction.

Use the following functions with a two-finger swipe:

- ▶ **To call up main functions and favourites:** swipe down with two fingers.
- ▶ **To zoom in and out of the map:** move two fingers together or apart.
- ▶ **To call up the control menu of the last active audio source:** swipe up with two fingers.

Setting the sensitivity for the touchpad

Multimedia system:

➔ System ➔  Input

- ▶ Select **Touchpad sensitivity**.
- ▶ Select **Fast**, **Medium** or **Slow**.
- ▶ **To set the pressure sensitivity:** switch **Touchpad tap** on ☒ or off ☐.
If the function is switched on ☒, a tap on the touchpad is enough to select a menu item.

Handwriting recognition: switching the read-aloud function on/off

Multimedia system:

➔ System ➔  Audio ➔ System feedback

- ▶ Switch **Read out handwriting recognition** on ☒ or off ☐.


Selecting a station and track using the touchpad

- ▶ Press the  button on the touchpad.
or

- ▶ Swipe upwards using two fingers on the touchpad.
The control menu appears for the audio source that was last selected.
- ▶ Use one finger to swipe up or down.
Radio: the previous or next station is set.
Media source: the previous or next track is selected.
- ▶ **To hide the control menu:** swipe down on the touchpad using two fingers.

Main functions

Calling up the main functions

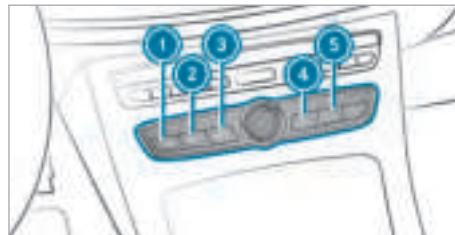

- ▶ ① Button  calls up navigation
- ▶ ② Button  calls up the radio
- ▶ ③ Button  calls up media sources
- ▶ ④ Button  calls up the telephone
- ▶ ⑤ Button  sets vehicle functions
- ▶ Alternatively: press the  button on the controller, the touchpad or Touch Control.
The main functions are displayed.
- ▶ Select a main function.

Favourites

Overview of favourites

Favourites offer you quick access to frequently used applications. It is possible to create 20 favourites in total.

The following functions are available:

- add **pre-defined favourites** from the following categories (→ page 258):
 - Navigation
 - Entertainment
 - Telephone

- [Connect](#)
- [Vehicle](#)
- [System settings](#)
- add **your own favourites** (→ page 258).
- rename a favourite (→ page 258).
- move a favourite (→ page 258).
- delete a favourite (→ page 259).
- reset all favourites (→ page 259).

Calling up favourites

- ▶ Press the  button.
The main functions are displayed.
- ▶ Navigate downwards once.
Navigating means:
 - swiping on the touchpad and Touch Control
 - sliding the controller

Leaving the favourites menu

- ▶ Press the  button.

Adding a favourite

Adding a pre-defined favourite

- ▶ Press the  button.
The main functions are displayed.
- ▶ Navigate downwards twice.
The Favourites menu appears.
- ▶ Select [New favourite](#).
The categories are displayed.
- ▶ Select a category.
The favourites are displayed.
- ▶ Select a favourite.
- ▶ Store the favourite at the desired position.
If a favourite has already been added at this position, it will be overwritten.

Example: adding your own favourite

- ▶ Select [Vehicle](#).
- ▶ Select [Full screen: Consumption](#).
- ▶ Press and hold the  button until the favourites are displayed.
- ▶ Store the favourite at the desired position.

Renaming a favourite

- ▶ Press the  button.
The main functions are displayed.
- ▶ Navigate downwards once.
- ▶ Select a favourite.
- ▶ Navigate downwards once.
The Favourites menu appears.
- ▶ Select [Rename](#).
- ▶ Enter the characters.
- ▶ **To confirm the entry:** select .


Moving a favourite

- ▶ Press the  button.
The main functions are displayed.
- ▶ Navigate downwards once.
- ▶ Select a favourite.
- ▶ Navigate downwards once.
The Favourites menu appears.
- ▶ Select [Move](#).
- ▶ Move the favourite to the desired position.
If a favourite has already been added at this position, it will be overwritten.

Deleting a favourite


- ▶ Press the  button.
The main functions are displayed.
- ▶ Navigate downwards once.
- ▶ Select a favourite.
- ▶ Navigate downwards once.
The Favourites menu appears.
- ▶ **To delete:** select [Delete](#).
- ▶ Select [Yes](#).
- ▶ **To restore all favourites:** select [Reset all](#).
A prompt appears.
- ▶ Select [Yes](#).
The favourites are reset to the factory settings.

Switching the sound on/off

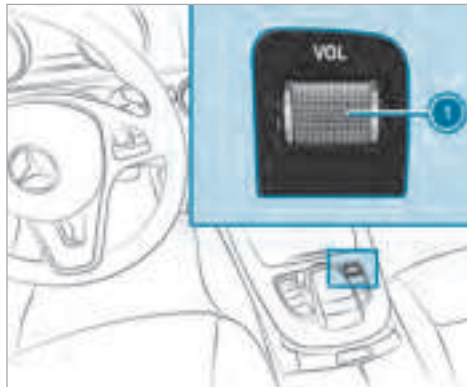

- ▶ **To mute:** press volume control ①.
The  symbol appears in the status line.
You will also hear traffic announcements and navigation announcements even when the sound is muted.
- ▶ **To switch on:** change the media source or adjust the volume.

Adjusting the volume

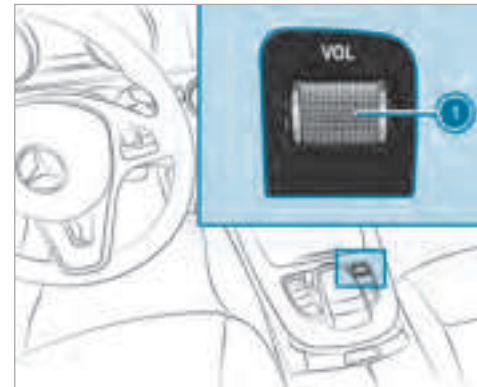

On the multimedia system

- ▶ Turn volume control ①.
The volume of the current radio or media source is set. The volume of other audio sources can be adjusted separately.

Adjust this in the following situations:

- during a traffic announcement
- during a navigation announcement

The volume of the navigation announcement changes in accordance with the volume of the current media source.

- during a telephone call
- when entering or exiting a parking space while using Active Parking Assist

or

- ▶ Select **System**.
- ▶ Select **Audio**.
- ▶ Select a volume setting.
- ▶ Set the volume.

- ① The volume can also be set on the multifunction steering wheel (→ page 243).

Entering characters

Using the character input function

The following functions are available:

- selecting a character in the character bar

- writing a character on the touchpad

Character input can be started with a control element and resumed with another.

- ▶ **On Touch Control and controller:** select a character in the character bar.

Depending on the destination entered, the following is available:

- the full set of characters
- characters which are useful for the current input string

Other characters are greyed out.

- ▶ **On the touchpad:** select a character in the character bar.

or

- ▶ Write the characters on the touch-sensitive surface of the touchpad. Handwriting recognition supports you by means of character suggestions and a read-aloud function.

Examples of character entry:

- Renaming a favourite

- Entering a POI or an address using free or step-by-step search
- Entering a web address

Character input using the controller

Example: renaming a favourite



- ▶ Calling up the "Renaming a favourite" function (→ page 258).
- ▶ **To enter a character:** turn **[⊙]**, slide **↑⊙↓** and press the controller. The character is entered in the input line.

Use the following entry functions:

-  To delete a character: press the controller.
- To delete an entry: press and hold the controller until the entire entry is deleted.
-  To switch to special characters and symbols.
-  To switch to upper-case or lower-case letters.
-  To change the language
-  To switch to character entry on the touchpad.

 The available editing functions depend on the editing task, the language set and the character level.

▶ **To confirm the entry:** select .

Example: entering a destination (navigation)

▶ Enter a POI or address (→ page 273).

Entering characters on the touchpad

Requirements:

- The touchpad is switched on (→ page 256).

- The entered or selected character should be read out: the handwriting recognition read-aloud function is switched on (→ page 257).

Example: renaming a favourite



- ▶ Calling up the "Renaming a favourite" function (→ page 258).
- ▶ **To enter a character:** use your finger to write characters on the touchpad. The character is entered in the input line. If different interpretations are possible, character suggestions are displayed.
- ▶ **To select a character suggestion:** turn the controller.

- ▶ Resume character input.
- ▶ **To enter a space:** swipe right when the cursor is located in the input line.
- ▶ **To delete a character:** swipe left when the cursor is located in the input line.
- ▶ **To confirm the entry:** press the touchpad.
- ▶ **To finish character entry:** swipe upwards.

or

▶ Press the  button.

Example: entering a destination (navigation)

▶ Enter a POI or address (→ page 273).

System settings

Display

Configuring display settings

Multimedia system:

➞ System ➞  Display and styles

Designs

- ▶ Select [Design](#).
- ▶ Select [Sport](#), [Classic](#) or [Progressive](#).

Adapting the ambient lighting for the style

- ▶ Select [Adjust ambient light..](#)
Activate ☒ or deactivate the function ☐.
This function adjusts the ambient lighting for the selected display style.

Additional display area

Depending on the vehicle, various items of additional information can be shown. The additional display area comprises the left-hand or right-hand third of the display.

- ▶ Select [Additional display area.](#)

The following display content can be selected:

- [Dynamic](#)
- [Navigation map](#)
- [Consumption](#)
- [Time and date](#)

Display brightness

- ▶ Select [Display brightness.](#)
- ▶ Select a brightness value.

Switching the display off/on

- ▶ **Off:** select [Display off.](#)
- ▶ **On:** press a button, TEL, for example.

Display design

- ▶ Select [Day/night design.](#)
- ▶ Select [Automatic](#), [Day design](#) or [Night design.](#)

Time and date

Setting the time and date automatically

Multimedia system:

➞ [System](#) ➞ 31 [Time and date](#)

- ▶ Deactivate ☐ [Manual time adjustment.](#)
The time and date are set automatically for the selected time zone and daylight saving time.

- ① The correct time is required for the following functions:
 - route guidance with time-dependent traffic guidance
 - calculation of expected time of arrival

Setting the time zone

Multimedia system:

➞ [System](#) ➞ 31 [Time and date](#) ➞ [Time zone:](#)

A list of countries is displayed.

- ▶ Select a country ●.
Depending on the country, time zones are displayed.
- ▶ Select a time zone.
The time zone set is displayed after [Time zone:](#).

Setting summer time

The [Automatic Summer Time](#) and [Summer Time](#) options cannot be selected in all countries.

Multimedia system:

➞ [System](#) ➞ 31 [Time and date](#)

Automatically

- ▶ Switch [Automatic Summer Time](#) on ☒ or off ☐.

Manually

- ▶ Deactivate ☐ [Automatic Summer Time.](#)

▶ Select **Summer Time**.

▶ Select **On** or **Off**.

Setting the time and date format

Multimedia system:

➞ **System** ➞  **Time and date** ➞ **Set format**

▶ Set the date and time format ●.

Setting the time manually

Requirement:

- The **Manual time adjustment** function is switched on.

Multimedia system:

➞ **System** ➞  **Time and date** ➞ **Set time**

▶ Set the hours.

▶ Navigate to the right to set the minutes.

▶ Set the minutes.

▶ Confirm changes when exiting the menu.

The date is set automatically via GPS.

Connectivity

Setting up a hotspot via business telephony

Multimedia system:

➞ **System** ➞  **Connectivity** ➞ **Set up hotspot**

▶ Select **Select the vehicle's mobile hotspot**.

▶ Select **Business phone**.

The hotspot is active.

External devices (e.g. tablets) can be connected to the multimedia system via business telephony.

 Information about setting up a hotspot (→ page 317).

Switching transmission of the vehicle position on/off

Multimedia system:

➞ **System** ➞  **Connectivity**

▶ Select **Transmit vehicle position data**.

▶ Switch the function on ☒ or off ☐.

Bluetooth®

Bluetooth® settings

Bluetooth® technology is a standard for short-range wireless data transfer up to approximately 10 m. You can use Bluetooth® to connect your mobile phone to the multimedia system and use the following functions, for example:

- hands-free system with access to the following options:
 - contacts (→ page 303)
 - call lists (→ page 305)
- Internet connection
- listening to music via Bluetooth® audio (→ page 329)
- transferring business cards (vCards) into the vehicle

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

 Internet connection via Bluetooth® is not available in all countries.

Activating/deactivating Bluetooth®

Requirement:

- Apple CarPlay™ is not active.

Multimedia system:

➞ System ➞  Connectivity

- ▶ Activate ☒ or deactivate ☐ Bluetooth®.

If Android Auto is active, a prompt appears asking whether Bluetooth® should be deactivated.

- ▶ Select **Yes**.
Android Auto is closed and Bluetooth® is deactivated.

Wi-Fi

Wi-Fi connection overview

You can use Wi-Fi to establish a connection with a Wi-Fi network and to access the Internet or other network devices.

The following connection options are available:

- Wi-Fi connection

The Wi-Fi connection is established to a Wi-Fi-capable device, e.g. to the customer's mobile phone or tablet PC.

- multimedia system as a Wi-Fi hotspot

Using this function, a tablet PC or notebook can be connected, for example.

To establish a connection, you can use the following methods:

- WPS PIN

The connection to a secure Wi-Fi network is made via a PIN.

- WPS PBC

The connection to a secure Wi-Fi network is made by pressing a button (push button).

- security key

The connection to a secure Wi-Fi network is made via a security key.

Setting up Wi-Fi

Requirement:

- The device to be connected supports one of the three means of connection described.

Multimedia system:

➞ System ➞  Connectivity

Activating/deactivating Wi-Fi

- ▶ Switch **Wi-Fi** on ☒ or off ☐.
- If **Wi-Fi** is deactivated ☐, communication via Wi-Fi is interrupted to all devices. This also means that a connection to the HERMES communication module cannot be established. Functions such as dynamic route guidance with Live Traffic Information are then unavailable.

Connecting the multimedia system with a device via Wi-Fi

This function is available if a HERMES communication module is not installed.

The type of connection established must be selected on the multimedia system and on the device to be connected.

-  The connection procedure may differ depending on the device. Follow the instructions that are shown in the display. Further information (see the manufacturer's operating instructions).

- ▶ Select [Internet settings](#).
- ▶ Select [Search for Wi-Fi networks](#).

Using a WPS PIN:

- ▶ Highlight a Wi-Fi network in the list.
- ▶ Select  [Connect using WPS PIN input](#). The multimedia system generates an eight-digit PIN.
- ▶ Enter this PIN on the device to be connected.
- ▶ Confirm the entry.

Using a button:

- ▶ Highlight a Wi-Fi network in the list.
- ▶ Select  [Connect via WPS PBC](#).
- ▶ Select "Connect via WPS PBC" in the options on the device to be connected.
- ▶ Press the WPS button on the device to be connected.
- ▶ Select [Continue](#) in the multimedia system.

Using a security key:

- ▶ Highlight a Wi-Fi network in the list.
- ▶ Select  [Connect using security key](#).

- ▶ Have the security key displayed on the device to be connected (see the manufacturer's operating instructions).
- ▶ Enter this security key on the multimedia system.
- ▶ Confirm the entry with .
- ▶  All devices support a security key as a means of connection.

Device has already been connected:

- ▶ **To automatically connect:** highlight a Wi-Fi network in the list.
- ▶ Activate ☒  [Connect automatically](#).
- ▶ **To connect:** highlight a Wi-Fi network in the list.
- ▶ Select  [Connect](#). The connection is established again. These functions are possible when the device has already been connected to the Wi-Fi network.

Setting up a Wi-Fi hotspot

Requirement:

- the vehicle is equipped for business telephony

Multimedia system:

 [System](#)   [Connectivity](#)

Configuring the multimedia system as a Wi-Fi hotspot

The type of connection established depends on the device to be connected. The function must be supported by the multimedia system and by the device to be connected. The type of connection established must be selected on the multimedia system and on the device to be connected.

- ▶ Select [Set up hotspot](#).
- ▶ Highlight [Connect device to vehicle hotspot](#).
- ▶ **To generate a WPS PIN:** select  [Connect using WPS PIN generation](#).
- ▶ Enter the PIN shown in the multimedia system display on the device to be connected and confirm.
- ▶ **Connect via WPS PIN:** select  [Connect using WPS PIN input](#).
- ▶ Select [Enter WPS PIN](#).

- ▶ Enter the PIN that is shown on the external device's display on the multimedia system.
- ▶ Select [Continue](#).
- ▶ **To connect by pressing a button:** select  [Connect via WPS PBC](#).
- ▶ Press the push button on the device to be connected.
- ▶ Select [Continue](#).
- ▶ **To connect via a security key:** select [Connect device to vehicle hotspot](#). A security key is displayed.
- ▶ Select the vehicle from the device to be connected. The vehicle is displayed with the SSID [MB Hotspot XXXXX](#).
- ▶ Enter the security key which is shown in the multimedia system display on the device to be connected.
- ▶ Confirm the entry.
- ▶ **To connect via NFC:** select [Establish a connection via NFC](#).
- ▶ Activate NFC on the mobile device (see the manufacturer's operating instructions).

- ▶ Bring the mobile device into the NFC area of the vehicle (→ page 300).
- ▶ Select [Done](#).
The mobile device is now connected to the multimedia system hotspot via NFC.

To generate a new security key:

- ▶ Select [Set up hotspot](#).
- ▶ Select [Generate security key](#).
A connection will be established with the newly created security key.
- ▶ **To save a security key:** select [Save](#).
When a new security key is saved, all existing Wi-Fi connections are then disconnected. If the Wi-Fi connections are being re-established, the new security key must be entered.

System language

Notes on the system language

This function allows you to determine the language for the menu displays and the navigation announcements. The selected language affects the characters available for entry. The navigation announcements are not available in all lan-

guages. If a language is not available, the navigation announcements will be in English.

Setting the system language

Multimedia system:

 [System](#)  [Language](#)

- ▶ Set the language.
- ▶  If you are using Arabic map data, the text information can also be shown in Arabic on the navigation map. To do so, select [العربية](#) as the language from the language list. Navigation announcements are then also made in Arabic.

Setting the distance unit

Multimedia system:

 [System](#)   [Units](#)

- ▶ Select [km](#) or [mi](#).
- ▶ In the multifunction display of the instrument display, switch the [Additional speedometer](#) display on .

Data import and export

Data import/export function

The following functions are possible:

- transferring data from one system or vehicle to another system or vehicle.
- creating a backup copy of your personal data and loading it again.
- protecting your personal data against unwanted export with PIN protection.

You can either use an SD card or a USB storage device as temporary storage.

-  Please note that the NTFS file system is not supported. The FAT32 file system is recommended.

Importing/exporting data

NOTE Data loss

- ▶ Do not remove the data storage medium when data is being exported.

Mercedes-Benz is not liable for any loss of data.

Requirements:

- The vehicle is stationary.
- The ignition is switched on or the vehicle has been started.
- The SD card is inserted (→ page 325) or the USB device is connected (→ page 327).

Multimedia system:

↪ System ➤ System backup

- ▶ Select [Import data](#) or [Export data](#).

Importing

- ▶ Select a data storage medium.
A prompt appears asking whether you really wish to overwrite the current data. If data originates from another vehicle, this is recognised during data reading.

The multimedia system is restarted once the data has been imported.

-  Current vehicle settings can be edited after the import.

Exporting

If PIN protection is activated, your PIN is requested.

- ▶ Enter your four-digit PIN.
- ▶ Select a data storage medium.
The data is exported. The data export may take several minutes.

Activating/deactivating PIN protection

Multimedia system:

↪ System ➤ PIN protection

Setting the PIN

- ▶ Select [Set PIN](#).
- ▶ Enter your four-digit PIN.
- ▶ Enter your four-digit PIN again.
If both PINs match, PIN protection is active.

Changing the PIN

Requirement:

- A current PIN must be set.
- ▶ Select [Change settings](#).
 - ▶ Enter the current PIN.
 - ▶ Select [Change PIN](#).
 - ▶ Set the new PIN.

Activating PIN protection for data export

- ▶ Select [Change settings](#).
Confirm with the PIN.
- ▶ Select [Protect data export](#).
Activate ☒ or deactivate ☐ the function.

Activating PIN protection for offline mode

- ▶ Select [Change settings](#).
Confirm with the PIN.
- ▶ Select [Protect deactivation of offline mode](#).
Activate ☒ or deactivate ☐ the function.

Unblocking the PIN

Requirements:

- There is an Internet connection.
- A Mercedes me account exists at <http://www.mercedes.me>.
- The [Personalisation](#) (→ page 268) service is activated.

If the PIN has been entered incorrectly three times, the PIN will be blocked. You can have a single-use password sent to you via the

Mercedes me connect online portal to reset the PIN protection.

- ▶ Select [Unblock PIN](#).
- ▶ Enter the single-use password.
PIN protection is reset, and you can set a new PIN.
- ❶ Alternatively, you can have PIN protection reset at a Mercedes-Benz Service Centre.

User profile

Setting a user profile

Multimedia system:

↪ [System](#) ▶  [Personalisation](#)

Displaying a user profile when starting

If this function is active, a prompt appears when starting the system asking which user profile to use.

- ▶ Select [Display profile list after start](#).
- ▶ Activate ☒ or deactivate ☐ the function.

Selecting a user profile

- ▶ Select [Guest](#) or individual profile ●.

- ❶ Some settings from the user profile are only loaded when the vehicle is stationary or when the ignition is switched on.

Automatic synchronisation

Each time the ignition is switched off or on, the individual user profiles are synchronised on the multimedia system and on the server. This ensures that the latest user profiles are always available.

- ▶ Select [Automatic synchronisation](#).
- ▶ Activate ☒ or deactivate ☐ the function.
- ❶ For more information about importing/exporting user profiles (→ page 269).

Creating a user profile

Multimedia system:

↪ [System](#) ▶  [Personalisation](#) ▶ [Create profile](#)

- ▶ Enter a name.
- ▶ Select .

Individual settings are saved in the user profile, e.g.:

- system settings

- settings in the TV tuner's channel list
- navigation and traffic information

The settings differ depending on the vehicle equipment.

Importing/exporting user profiles

Requirements:

- There is an Internet connection .
- A Mercedes me account exists at <http://www.mercedes.me>.
- The [Personalisation](#) service is activated.

Multimedia system:

↳ System »  Personalisation » Manual export/import

This function is not available in all countries. Only individual profiles can be imported or exported.

The individual profiles are always collectively imported or exported.

- ▶ **Import:** select [Import profiles from the server](#).
The [The profile import overwrites the existing profiles. Do you want to continue?](#) message appears.
- ▶ Select [Yes](#).
User profiles are imported.
- ▶ **Export:** select [Export profiles to the server](#).
User profiles are exported.
- ❗ Certain settings, such as address book entries or previous destinations from the navigation system, are not exported.

Software update

Information on software updates

The multimedia system provides a message when an update is available.

Depending on the source, you can perform various updates:

Software update

Source of the update	Update type
Internet	Navigation map, system updates, Digital Owner's Manual
External storage medium, e.g. USB flash drive	Navigation maps

Software updates ensure your vehicle's technology is always up-to-date.

In order to constantly improve the quality of our services you will receive future updates for your multimedia system, the Mercedes me connect services and your vehicle's communication module. These will conveniently be sent to you via the mobile phone connection in your vehicle and, in many cases, installed automatically. You can monitor the status of your updates at any time on the Mercedes me portal and find information about potential innovations.

Your advantages at a glance:

- conveniently receive software updates via the mobile phone network
- the long-term quality and availability of Mercedes me connect is guaranteed
- keep your multimedia system and communication module up-to-date

Further information about software updates can be found at <http://me.mercedes-benz.com>

Performing a software update

Requirement:

- An Internet connection is required for updates which are obtained online .

Multimedia system:

➞ [System](#) ➞ [Software update](#)

Automatically

Requirement:

- Your vehicle has a built-in communication module.

- ▶ Activate ☒ [Automatic online updates](#).
Updates are performed.

The current status of the updates is displayed.

Manually

- ▶ Deactivate ☐ [Automatic online updates](#).
- ▶ Select an update from the list and start the update.

Searching for new Updates

Requirements:

- Your vehicle does not have a built-in communication module.
- An Internet-enabled mobile phone is connected to the multimedia system (→ page 298).

- ▶ Select [Search for new updates](#).
The list of available updates is refreshed.
- ▶ Select an update and start the update.
The selected update is downloaded via the connected mobile phone.

Activating the software update

- ▶ Restart the system.

Important system updates

Important system updates may be necessary for the security of your multimedia system's data. Please install these updates, or else the security of your multimedia system cannot be ensured.

- ❗ If automatic software updates are activated, the system updates will be downloaded automatically (→ page 270).

As soon as an update is available for download, a corresponding message appears on the multimedia system display.

You have the following selection options:

- [Download](#)
The update will be downloaded in the background.
- [Details](#)
Information about the pending update is displayed.
- [Later](#)
The update can be downloaded manually at a later time (→ page 270).

If the download is completed and the update is ready for installation, you will be informed of this after the next ignition cycle, for example:

Requirements for the installation:

- The ignition is switched off.
- Notes and warnings have been read and accepted.
- The electric parking brake is applied.

If all requirements are met, the update will be installed. The multimedia system cannot be operated while the update is being installed and vehicle functions are restricted.

If errors should occur during the installation, the multimedia system automatically attempts to restore the previous version. If restoration of the previous version is not possible, a symbol appears on the centre console display. Please consult a qualified specialist workshop to resolve the problem.

Reset function

Multimedia system:

➞ System ➞ Reset

Personal data is deleted, for example:

- station presets
- connected mobile phones

▶ Select **Yes**.

If PIN protection is activated, a prompt appears asking if you also wish to restore this to the factory settings during a reset.

▶ Select **Yes**

▶ Enter the current PIN.
The PIN is reset.

Or

▶ Select **No**.

The current PIN stays the same after resetting.

 If you have forgotten your PIN, a Mercedes-Benz Service Centre can deactivate your PIN protection for you.

A prompt appears again asking whether you really wish to reset.

▶ Select **Yes**.

The multimedia system is reset to the factory settings.

Navigation

Inserting/removing an SD card with digital map data

 **DANGER** Risk of fatal injury from swallowing SD cards

SD cards are small parts.

They could be swallowed and lead to choking.

▶ Keep SD cards out of the reach of children.

▶ Seek medical attention immediately if an SD card has been swallowed.

 **NOTE** Damage from manual changes

Manual changes can damage the SD card.

- ▶ Do not change or manipulate the contents of the SD card manually.

This excludes map updates.

! **NOTE** Damage caused by high temperatures

High temperatures can damage the SD memory card.

- ▶ Remove the SD memory card after use and take it out of the vehicle.

Inserting

The multimedia connection unit is located in the stowage compartment under the armrest.

- ▶ Insert the SD card with the digital map data in the SD card slot until it engages. The side with the contacts must face downwards. When inserting an SD card into the SD card slot for the first time, you will see a message on the media display.

Subsequently, the SD card will be made available exclusively to your vehicle. It is then no longer possible to use it in another vehicle.

- ▶ Confirm the message.
The navigation system is activated.

i If a fault message is displayed during the installation saying that the SD card is locked, the SD card may be damaged. Consult a Mercedes-Benz service centre.

Removing

- ▶ Press the SD card.
- ▶ Remove the SD card.

Switching navigation on

Multimedia system:

➞ Navigation




- ▶ Alternatively: press the **NAVI** button.
The map appears and shows current vehicle position **i**.
- i** If a climate control setting is changed, a climate bar appears briefly.

Showing/hiding the navigation menu

Requirement:

- The map displays the current vehicle position.

→ Navigation

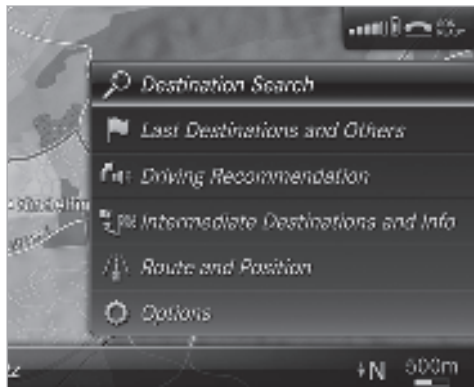

- ▶ **To show:** swipe left on the touchpad or Touch Control.

or

- ▶ Slide the controller to the left.
- ▶ **To hide:** swipe right on the touchpad or Touch Control.

or

- ▶ Slide the controller to the right.
- ① To show or hide lower menu levels, swipe or slide to the left or right as many times as necessary.

Destination entry

Entering a POI or address

Multimedia system:

→ Navigation



- ▶ Show the navigation menu.
- ▶ Select  **Enter destination**.
The country in which the vehicle is located is set ①.
There are two available methods of destination entry:
 - free search ②
 - search step-by-step ③

Method 1: free search

- ▶ Enter a POI or address ②. The entries can be made in any order. During destination entry, suggestions are made by the multimedia system. A selection of destinations appears in a list.

The following entries can be made, for example:

- city, street, house number
- street, city
- postcode
- POI name
- POI category, e.g. [Petrol station](#)
- city, POI name

Examples:

- if you are searching for Königsstraße in Stuttgart, for example, you can enter STUT and KÖN.
- if you are searching for a POI in the United Kingdom, for example, you can enter THE SHARD.

To try both examples, the country setting must also be changed (method 2).

- ▶ **To switch to handwriting recognition:** select ⑤ .
- ▶ Write characters on the touchpad.
- ▶ **To switch to character selection:** press the  button.

or

- ▶ Press the touchpad.
- ▶ **To delete an entry:** select ④  (if available).
 - Press briefly: deletes the last character entered or the last suggestion adopted.
 - Press and hold: deletes the entire entry.
- ▶ **To set the language:** select ⑧.
- ▶ Select a language.

- ① This function is useful for countries in which several character sets are supported. An example is Russia, which uses Cyrillic and Latin characters.

- ▶ **To call up the online search function:** select ⑥ [Online search](#).

Once an Internet connection is established, a list appears. It shows online destinations related to the previous entry.

Online destinations are provided by the Internet service provider.

Select the online destination.

or

- ▶ Enter an online destination in the input line.

- ① Online search is not available in all countries.

Requirements:

- You have a Mercedes me account.
- The service has been activated at a Mercedes-Benz Service Centre.

Further information can be found at: <http://www.mercedes.me>

- ▶ **To call up the list:** press the  button.

or

- ▶ If the top line of the character bar is highlighted, navigate upwards.

- ▶ Select a destination in the list.
- ▶ **To adopt a destination:** select [Select destination](#) ⑦.
If there are several listings for a destination, a list appears.
- ▶ Select the destination.
The destination address is shown.

Method 2: search step-by-step

- ▶ Press the  button.
- or
- ▶ If the top line of the character bar is highlighted, navigate upwards.
The character bar is hidden. [City or postcode](#) is highlighted. Additional entry fields, e.g. for [POI](#), are available.
 - ▶ Select [City or postcode](#).
The character bar appears.
 - ▶ Enter a city or postcode.
During destination entry, suggestions are made by the multimedia system. A selection of destinations appears in a list.

The address can be entered in various orders, for example:

- [City or postcode](#), [Street](#), [House no.](#)
A street intersection may be entered, if available.
- [Street](#), [City or postcode](#)
- [POI](#), e.g. [Petrol station](#), [City or postcode](#)

❶ The functions described for the free search can be used:

- to switch to handwriting recognition
- to switch to character selection
- to delete an entry
Entries in the [POI](#) field, for example, can also be deleted by pressing . Navigate to the left to do so.
- call up online search function (if available)
- calls up a list

- ▶ **To change the country:** select the country.
- ▶ Enter a country. You only need to enter the first character.

- ▶ Select a country in the list.
- ▶ **To adopt a destination:** select [Select destination](#).
If there are several listings for a destination, a distance-orientated list appears.
- ▶ Select the destination.
The destination address is shown.

Selecting a POI

Multimedia system:

➞ [Navigation](#) ➞ [Previous and other destinations](#) ➞ [POIs](#)

Method 1

- ▶ Select a category.
If route guidance is not active: the search begins in the vicinity of the current vehicle position. The list is sorted by distance in ascending order.
If route guidance is active: the search begins after selecting a search position.
The POIs show the following information:
 - name of POI
 - linear distance to the POI

- the direction of the linear distance to the POI (arrow) is displayed when searching for the vehicle's current position

▶ Select a POI.

▶ **Route guidance is active:** select the search position prior to choosing a POI.

▶ If intermediate destinations are set, these can also be selected as the search position after selecting [Near destination](#).

Method 2

▶ Select [All categories](#).

▶ Select a category.

▶ Select a POI.

▶ **Route guidance is active:** select the search position prior to choosing a POI.

▶ If intermediate destinations are set, these can also be selected as the search position after selecting [Near destination](#).

Alternatively filtering the display by POI

▶ Enter a search term in the  [Search:](#) line.

The results list shows relevant POIs.

Example: if you enter [Italy](#), POIs are shown:

- whose name includes the word [Italy](#)
- which belong to the category [Italian cuisine](#)

▶ Select .

The first POI in the list is highlighted.

▶ Select a POI.

Example: setting the search position for the parking category during active route guidance

▶ Select [In the vicinity](#), [Near destination](#) or [Along the route](#).

The list shows the located POIs or opens an overview of the route destination after selecting [Near destination](#).

▶ Select a POI.

▶ Select [Near destination](#): select an intermediate destination or destination.

Selecting previous destinations

Multimedia system:

 [Navigation](#)  [Previous and other destinations](#)

▶ Select [Previous destinations](#).

▶ Select a destination suggestion or a destination.

The destination address is shown.

▶ **Alternatively:** if a favourite has been saved (→ page 287), select [From global favourites](#).

▶ Select a favourite.

The destination address is shown.

Selecting a contact

Requirement:

- a mobile phone is connected to the multimedia system (→ page 298).

Multimedia system:

 [Navigation](#)  [Previous and other destinations](#)  [Contacts](#)

▶ Select the contact.

The contact details are displayed.

- ▶ Select an address.
- ▶ **Alternatively, to filter the display by contacts:** enter names or telephone numbers, for example, into the search field.
- ▶ Select **ok**.
The first contact in the list is highlighted.
- ▶ Select the contact.
- ▶ Select an address.
- ❗ Route guidance to a contact address is reliable in the following cases:
 - the contact address is complete.
 - the contact data matches the map data in the digital map.

Enter geo-coordinates

Multimedia system:

➞ **Navigation** ➞ **Previous and other destinations** ➞ **Geo-coordinates**

- ▶ Enter geo-coordinates as latitude and longitude coordinates in degrees, minutes and seconds.
The map shows the position.
- ▶ Confirm the entry.

- ▶ **To calculate a route:** select **Start route guidance**.
- ▶ If a route has already been created, select **Start new route guidance** or **Set as intermediate destination**.

Selecting from the map

Multimedia system:

➞ **Navigation** ➞  **Options** ➞ **Map menu**

- ▶ **Alternatively:** if the map is displayed in full screen mode, press Touch Control, the controller or the touchpad.
The map menu appears.
- ▶ Select "Move map" in map menu ②
(→ page 291).
- ▶ Swipe in any direction on Touch Control or touchpad.

or

- ▶ Slide the controller in any direction.
The map moves in the corresponding direction under the crosshair. The more you move your finger away from the starting position on the touchpad, the faster the map moves.

- ▶ Press Touch Control, the controller or the touchpad.
If several destinations are located around the crosshair, a list shows the available POIs and roads.
If a destination is located exactly on the crosshair, the destination address is displayed.
- ▶ Select a destination in the list.
The destination address is shown.

Setting the map orientation to 2D or 3D

- ▶ Highlight **Map orientation: 2D/3D**.
- ▶ Press Touch Control, the touchpad or the controller.
The map will be displayed in the selected map orientation.

Showing traffic messages in the vicinity of the map

- ▶ Select **Traffic messages for the vicinity**.
The map appears.
- ▶ Swipe left or right on the touchpad.

or

- ▶ Slide the controller to the left or right. The previous or next traffic incident is highlighted on the map. Information on the traffic incident is displayed.

Showing POIs in the vicinity of the map

- ▶ Select **Surrounding POIs**.
- ▶ Swipe left or right on the touchpad.

or

- ▶ Slide the controller to the left or right. The previous or next POI is highlighted on the map. The name or address is displayed.
- ▶ **Alternatively, to filter the display by POI category:** swipe down on Touch Control or the touchpad.

or

- ▶ Slide the controller down.
- ▶ Select a POI category.

- ▶ **i** **User defined** allows personal POI symbols to be selected (→ page 292).

Entering an intermediate destination

Requirement:

- A destination is entered.

Multimedia system:

➞ **Navigation** ➞ **Intermediate destinations and info**

- ▶ Select **Search for an intermediate destination**.
- ▶ Enter an intermediate destination as a POI or address (→ page 273).
- ▶ Select an intermediate destination.
- ▶ Select **Set as destination**.

or

- ▶ Select an intermediate destination using  **Enter destination** during route guidance.
- ▶ Select **Set as next intermediate destination** after entering the destination.

Calculating a route with intermediate destinations

Requirement:

- Enter the destination and at least one intermediate destination.

Multimedia system:

➞ **Navigation** ➞ **Intermediate destinations and info**

- ▶ Select **Start new route guidance**. The route is calculated with the set intermediate destinations.

Editing intermediate destinations

Requirement:

- A destination is entered.

Multimedia system:

➞ **Navigation** ➞ **Intermediate destinations and info**

- ▶ **To change the order of destinations:** highlight the destination or intermediate destination.
- ▶ Select  **Move**.
- ▶ Move the intermediate destination to the desired position.
- ▶ Press Touch Control, the controller or the touchpad.

- ▶ **To call up the map:** highlight the destination or intermediate destination.
- ▶ Select  **Map.**
- ▶ **To delete a destination:** highlight a destination or intermediate destination.
- ▶ Select  **Delete.**

Starting an automatic filling station search

Requirement:

- The automatic filling station search is activated ☒ (→ page 282).

Driving situation

Route guidance is active. The fuel level in the fuel tank reaches the reserve fuel level.

The **Fuel tank reserve level Do you want to start the search for filling stations?** message is shown.

- ▶ Select **Yes.**
The automatic filling station search begins. The available filling stations along the route or in the vicinity of the vehicle's current position are displayed.

- ▶ Select the filling station.
The address of the filling station is displayed.
- ▶ Method 1: if route guidance is not active, select **Start route guidance.**
The selected filling station is set as the destination. Route guidance begins.
- ▶ Method 2: if route guidance is active, select **Start new route guidance** or **Set as next intermediate destination.**
Start new route guidance: the selected filling station is set as a new destination. The previous destinations and intermediate destinations are deleted. Route guidance to the filling station begins.
Set as next intermediate destination: the selected filling station is set as the next intermediate destination. Route guidance begins.
- ▶ **If there are already four intermediate destinations:** select **Yes** in the prompt.
The selected filling station is entered into position 1 of the intermediate destinations menu. Intermediate destination 4 is deleted. Route guidance begins.

Route

Calculating a route

Requirement:

- The destination has been entered. The destination address is shown.
- ▶ Method 1: if route guidance is not activated, select **Start route guidance.**
The route to the destination is calculated. The map shows the route. Route guidance then begins.
 - ▶ Method 2: if route guidance is activated, select **Start new route guidance** or **Set as next intermediate destination.**
Start new route guidance: the selected destination address is set as a new destination. The previous destinations and intermediate destinations are deleted. Route guidance to the new destination begins.
Set as next intermediate destination: the selected destination address is set as the next intermediate destination. Route guidance begins.

Taking alternative routes into consideration

- ▶ Select an alternative route (→ page 281).

Other menu functions

- ▶ **To save the destination:** select  **Store** in "Previous destinations".
- ▶ **To display on the map:** select  **Map**.
- ▶ **To call a telephone number:** select  **Call**.
- ▶ **To call up an Internet address:** select  **www** (if available).

Selecting a route type

Multimedia system:

➡ Navigation ➡  **Route and position**

- ▶ Select **Route settings**.
- ▶ Select a route type.
A route has already been created: the route is calculated on the basis of the new route type.
A route has not been created: the next route is calculated on the basis of the new route type.

- **Eco route**

An economical route is calculated. The journey time may be somewhat longer than for quicker routes.

The symbol for the current vehicle position is displayed in green.

- **Fast route**

A route with a quick journey time is calculated.

- **Short route**

A route with a short driving distance is calculated.

Automatic traffic jam avoidance can be switched on ☒ or off ☐ for these route types. If **Automatic traffic jam avoidance** is switched on, **Ask in the event of traffic jam avoidance** can be selected.

The route types **Automatic traffic jam avoidance** and **Ask in the event of traffic jam avoidance** are not available in every country.

- **Automatic traffic jam avoidance**

The route is calculated with the currently set route type.

Traffic messages via Live Traffic Information or FM RDS-TMC are taken into account.

Live Traffic Information and FM RDS-TMC are not available in all countries.

- **Ask in the event of traffic jam avoidance**

A prompt appears when a new route is detected with a shorter journey time based on traffic reports. You can continue to use the current route or use the dynamic route instead.

Selecting route options

Multimedia system:

➡ Navigation ➡  ➡ **Route and position** ➡ **Avoid options**

Avoiding areas

- ▶ Select **Areas** (→ page 293).

Avoiding motorways, ferries, motorail trains, tunnels, unpaved roads

- ▶ Select ☒ or deselect ☐ avoid option.

Using routes requiring a special toll sticker

- ▶ Select [Use vignette roads](#).
- ▶ Select ☒ or deselect ☐ [All](#) or countries. The route takes into account roads in the selected countries which require you to pay a time-based fee (vignette). A vignette allows for the use of a route network for a limited time period.

Using toll roads

- ▶ Select [Use toll roads](#).
- ▶ Select [Payment in cash](#) or [Electronic billing](#) or [Off](#). The route takes into account roads that require the payment of a usage fee (toll). If [Off](#) is selected, toll roads are not taken into account.

These route options are not available in every country.

The selected route options cannot always be implemented. Therefore, a route may include a ferry, for instance, even though the avoid [Ferries](#)

option is enabled. A message appears and you will hear a corresponding message.

Selecting notifications

Multimedia system:

→ [Navigation](#) ▶  [Options](#) ▶ [Announcements](#)

- ▶ Switch announcements on ☒ or off ☐.
 - [Announce traffic warnings](#)
This function is not available in all countries.
 - [Driving safety voice announcements](#)
If the function is switched on, an announcement is given before sections of road which have a maximum permissible speed.
 - [Announce street names](#)

The multimedia system announces the names of the roads that will follow the upcoming change of direction.

This function is not available in all countries and languages.

Displaying destination information

Requirement:

- A destination is entered.

Multimedia system:

→ [Navigation](#)

- ▶ Select [Intermediate destinations and info](#). The following information is displayed:
 - intermediate destinations and destination
 - The route can also include up to four intermediate destinations.
 - name, address
 - remaining driving distance
 - time of arrival

Selecting an alternative route

Multimedia system:

→ [Navigation](#) ▶  [Route and position](#)

- ▶ Select [Alternative route](#). The routes are displayed in accordance with the setting made in the route settings.

The currently selected route is shown with a dark blue line.

- ▶ Select an alternative route.

Switching the automatic filling station search on/off

Multimedia system:

Navigation ▶  Options

- ▶ Switch **Reserve fuel level** on ☒ or off ☐. Switched on ☒: when the fuel reserve level is reached, a prompt appears asking whether you want to start searching for filling stations.

Starting the automatic service station search

Requirements:

- ATTENTION ASSIST and the **Suggest rest area** function are activated (→ page 229).

Driving situation

The **Attention Assist Do you want to start the rest area search?** message is shown.

- ▶ Select **Yes**. The service station search starts. The available service stations along the route or in the vicinity of the vehicle's current position are displayed.
- ▶ Select a service station. The service station address is displayed.
- ▶ Method 1: if route guidance is not activated, select **Start route guidance**. The selected service station is set as a destination. Route guidance begins.
- ▶ Method 2: if route guidance is activated, select **Start new route guidance** or **Set as next intermediate destination**. **Start new route guidance**: the selected service station is set as a new destination. The previous destination and all intermediate destinations are deleted. Route guidance to the service station begins. **Set as next intermediate destination**: the selected service station is set as the next destination. Route guidance begins.

Route guidance

Notes on route guidance

Route guidance begins once a route has been calculated.

The road and traffic rules and regulations always have priority over multimedia system driving recommendations.

Driving recommendations are:

- Navigation announcements
- route guidance displays
- Lane recommendations

If you do not follow the navigation announcements or if you leave the calculated route, a new route is calculated automatically.

Driving recommendations may differ from the actual road and traffic conditions if:

- the route is diverted
- the direction of a one-way street has changed

For this reason, you must always observe road and traffic rules and regulations during your journey.

The route may differ from the ideal route due to the following:

- roadworks
- incomplete digital map data

Notes on driving manoeuvres



There are three phases when changing direction:

- Preparation phase

If there is enough time between the changes of direction, the multimedia system prepares you for the upcoming change of direction. A navigation announcement, e.g. "Prepare to turn right", is issued.

The map appears in full-screen mode.

- Announcement phase

The multimedia system announces the upcoming change of direction, e.g. by announcing "Turn right in 100 m".

The display is split into two parts. The map is displayed on the left; on the right, there is a detailed image of the junction or a 3D image of the upcoming change of direction.

- Change-of-direction phase

The multimedia system announces the imminent change of direction, e.g. by announcing "Now turn right".

The display is split into two parts.

The vehicle has successfully changed direction when the light-coloured bar on the right drops down to 0 metres and the current vehi-

cle position symbol has reached the highlighted change-of-direction point.

When the change of direction is complete, the map appears in full-screen mode.

- ❗ Changes of direction are also shown in the Instrument Display.

Information on lane recommendations

This display appears for multi-lane roads.

If the digital map contains the relevant data, the multimedia system can display lane recommendations for the next two changes of direction.



- ① Recommended lane
- ② Possible lane
- ③ Lanes not recommended

- Recommended lane ①

In this lane, you will be able to complete both the next change of direction and the one after that.

- Possible lane ②

In this lane, you will only be able to complete the next change of direction.

- Lane not recommended ③

In this lane, you will not be able to complete the next change of direction without changing lane.

During the change of direction, new lanes may be added.

- ① Lane recommendations can also be displayed in the Instrument Display and in the head-up display.

Destination reached

Once the destination is reached, you will see the chequered flag . Route guidance is finished.

When an intermediate destination has been reached, you will see the intermediate destination flag with the number of your intermediate destination . After this, route guidance is continued.

Switching navigation announcements on/off

Requirements:

- a route has already been created.

- route guidance is active.

- ▶ **To switch off:** press the button on the multifunction steering wheel during a navigation announcement.

or

- ▶ Press on the volume control to the right of the controller during a navigation announcement (→ page 259).

The **Spoken driving recommendations have been deactivated.** message appears.

or

- ▶ Show the navigation menu (→ page 273).

- ▶ Select **Driving recommendation.** The symbol changes to .

- ▶ **To switch on:** select **Driving recommendation.**

The current navigation announcement is played.

- ① In the following situations, navigation announcements are switched on automatically:

- A new route guidance is started.

- The route is recalculated.

i You can access and add this function as a favourite under [Spoken driving recommendations on/off](#).

Switching navigation announcements on/off during a phone call

- ▶ Select [System](#).
- ▶ Select  [Audio](#).
- ▶ Select [Navigation and traffic announcements](#).
- ▶ Switch [Driving recommendations during phone call](#) on ☒ or off ☐.

Adjusting the volume of navigation announcements

Requirements:

- a route has already been created.
- route guidance is active.

- ▶ Press the  or  button on the multi-function steering wheel during a navigation announcement.

or

- ▶ Turn the volume control to the right of the controller during a navigation announcement (→ page 259).

i In the following situations, the volume is raised to the minimum volume or lowered to the maximum volume:

- A new route guidance is started.
- The route is recalculated.

i The minimum volume can be individually set at a Mercedes-Benz Service Centre.

- ▶ **Alternatively:** select [System](#).
- ▶ Select  [Audio](#).
- ▶ Select [Navigation and traffic announcements](#).
- ▶ Select [Driving recommendation volume](#).
- ▶ Set the volume.

Switching audio fadeout on/off during navigation announcements

- ▶ Select [System](#).
- ▶ Select  [Audio](#).

- ▶ Select [Navigation and traffic announcements](#).
- ▶ Switch [Audio fadeout during driving recommendation](#) on ☒ or off ☐.

Repeating navigation announcements

Requirements:

- a route has already been created.
- route guidance is active.

Multimedia system:

↳ [Navigation](#)

- ▶ Select  [Driving recommendation](#).
- ▶ Select  [Driving recommendation](#).
The current navigation announcement is repeated.

i You can access and add this function as a favourite under [Repeat spoken driving recommendation](#).

Cancelling route guidance

Requirements:

- a route has already been created.

- Route guidance is active.

Multimedia system:

 [Navigation](#)

-  Select [Cancel route guidance](#).

Continuing route guidance

Requirements:

- a route has already been created.
- route guidance is interrupted.

-  If the journey was interrupted for less than 2 hours, route guidance continues automatically.

Multimedia system:

 [Navigation](#)  [Route and position](#)

-  Select [Continue route guidance](#).
The route is recalculated.

Route guidance to an off-road destination

Off-road destination: the destination is within the digital map. However, the map contains no roads that lead to the destination.

You can enter off-road destinations on the map. Route guidance guides you for as long as possi-

ble with navigation announcements and displays on roads that are known to the multimedia system.

Shortly before you reach the last known position on the map, you will hear the "Please follow the direction arrow" announcement. The display shows a direction arrow and the linear distance to the destination.

Route guidance from an off-road location to a destination

Off-road position: the current vehicle position is located within the digital map on roads that are not available.

The following displays appear when route guidance begins:

- the [Road not mapped](#) message
- a direction arrow showing the linear direction to the POI

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

Notes on the off-road status during route guidance

Due to roadworks, for example, there may be differences between the data on the digital map and the actual course of the road. In such cases, the multimedia system will temporarily be unable to locate the vehicle's current position on the digital map. The vehicle is off-road.

The following displays appear when the vehicle is off-road:

- the [Road not mapped](#) message
- a direction arrow showing the linear direction to the POI

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

Destination

Saving the current vehicle position

Multimedia system:

Navigation

- ▶ Alternatively: if the map is displayed in full screen mode, press Touch Control, the controller or the touchpad. The map menu appears.
- ▶ Select ① on the map menu (→ page 291). The current vehicle position is saved to the "Previous destinations" memory.

Storing a map position

Multimedia system:

Navigation

The map is in full-screen mode.

- ▶ Press Touch Control, the controller or the touchpad.
- ▶ Select "Move map" in map menu ② (→ page 291).
- ▶ Select a position on the map. If multiple entries are available for a map position, a list appears.

- ▶ Highlight the entry.
- ▶ Select  Store in "Previous destinations". The map position is saved to the "Previous destinations" memory.

Editing the previous destinations

Multimedia system:

Navigation ▶ Previous and other destinations ▶ Previous destinations

- ▶ Highlight one of the previous destinations.
- ▶ **To save as a favourite:** select  Save as global favourite. The favourites are displayed.
- ▶ Move the favourite to the desired position. If a favourite has already been added at this position, it will be overwritten.
- ▶ **To save as "Home" address:** select  Save as "Home" address.
- ▶ **To save as "Work" address:** select  Save as "Work" address.

To delete a single or all destinations:

- ▶ select  Delete or Delete all. A prompt appears.
- ▶ Select Yes.
- ▶ **To display destination information:** select  Details.

Using external destinations

External destinations can be received from the following sources:

- Mercedes-Benz Apps
- door-to-door navigation

A prompt appears on the media display. Received destinations are saved in the previous destinations.

- ▶ **If a destination is received:** select Yes and continue with method 1 or 2.

or

- ▶ If a destination was received with photo information, select Start route guidance. Route guidance starts.

- ▶ Method 1: if route guidance is not activated, select [Start route guidance](#).

The route to the destination is calculated. The map shows the route. Route guidance then begins.

- ▶ Method 2: if route guidance is active, select [Start new route guidance](#) or [Set as next intermediate destination](#).

[Start new route guidance](#): the received destination address is set as a new destination. The previous destinations and intermediate destinations are deleted. Route guidance to the new destination begins.

[Set as next intermediate destination](#): the received destination address is set as the next new destination. Route guidance begins.

Route guidance with current traffic reports

Traffic information overview

- ❗ The services are not available in every country.

Traffic reports can be received with the following services:

- Live Traffic Information
- FM RDS-TMC

It is not possible to use both services simultaneously.

Live Traffic Information or FM RDS-TMC is displayed with a symbol.

- ❗ Hazard alerts can be received using the Car-to-X service.
- ❗ There may be differences between the traffic reports received and the actual road and traffic conditions.

Important information on Live Traffic Information:

- Current traffic reports are received via the Internet connection or via data roaming (for selected countries).
- The traffic situation is updated at short, regular intervals.

- In selected countries, the subscription service is available free of charge for a period of three years from the manufacturing date. The status of the subscription can be displayed (→ page 289).

Information on the vehicle's position is regularly sent to Daimler AG. The data is immediately rendered anonymous by Daimler AG and forwarded to the traffic data provider. Using this data, traffic reports relevant to the vehicle's position are sent to the vehicle. The vehicle acts as a sensor for the flow of traffic and helps to improve the quality of the traffic reports.

If you do not wish to transmit your vehicle position, you can have this service deactivated at a Mercedes-Benz Service Centre.

Useful information on FM RDS-TMC:

- A FM RDS-TMC radio station broadcasts traffic reports alongside the radio programme.
- FM RDS-TMC is not available in all countries.

Displaying subscription information

Requirement:

- The vehicle is equipped with Live Traffic Information.

Multimedia system:

Navigation ► Options

The subscription expiry date is automatically displayed:

- one month before the expiry date.
- one week before the expiry date.
- on the expiry date.

► **To display manually:** select **Live Traffic Subscription Info**.

Depending on the status, one of the following messages appears:

- The period of validity for the subscription is displayed.
- The subscription has expired.

Displaying the traffic map

Requirements:

- For Live Traffic Information: the vehicle is equipped with a communication module featuring an activated, integrated SIM card.

When the vehicle is started, the communication module automatically establishes an Internet connection. Traffic information is made available shortly afterwards.

Multimedia system:

Navigation ► Options ► Map menu

► Alternatively: if the map is displayed in full screen mode, press Touch Control, the controller or the touchpad. The map menu appears.

► Activate ☒ .

The traffic map can show the following information:

- traffic incidents, for example:
 - roadworks
 - road blocks

- warning messages

The symbols for traffic incidents are displayed in colour (on the route) or grey (off the route).

- traffic flow information:
 - traffic jam (red line)
 - slow-moving traffic (yellow line)
 - free-flowing traffic (green line)
- display for traffic delays on the route lasting at least one minute
- warning message symbols:
 - symbol 
 - additional road safety notes when approaching a traffic incident, e.g. the end of a traffic jam

If the vehicle approaches a danger area on the route, a warning message is displayed on the map. A warning message may also be issued (→ page 290).

Displaying traffic incidents

Multimedia system:

→ Navigation ►  Options ► Map content

- Activate ☒ [Traffic incidents](#). Roadworks, road blocks, local area reports (e.g. fog) and warning messages are displayed.

Activating free flow and traffic display

- Activate ☒ [Free-flowing traffic](#) and [Traffic delays](#).

 The traffic delay is displayed for the current route. Traffic delays lasting one minute or longer are taken into consideration.

Displaying details

- Display the traffic map (→ page 289).
- Move the map (→ page 292).
- Method 1: when a traffic report symbol is under the crosshair, press Touch Control, the controller or the touchpad. The traffic report details are displayed.

- Method 2: press Touch Control, the controller or the touchpad.
- Select [Information on traffic reports](#). The map shows the traffic report symbols in the vicinity. Traffic report information is displayed in the status line:
 - traffic report symbol
 - reason for the traffic report, e.g. traffic jam
 - warning message (highlighted in red)
- **To select a traffic report symbol:** select [Next](#) or [Previous](#).
- Press Touch Control, the controller or the touchpad. The traffic report details are displayed.

Issuing hazard alerts

Multimedia system:

→ Navigation ►  Options ► Announcements

- Activate ☒ [Announce traffic warnings](#). Warning messages are issued and tailbacks which pose a risk are announced.

Map and compass

Map and compass overview



- ① To save the current vehicle position
- ② To move the map
- ③ To select the map orientation and map view
- ④ To select the function depending on the equipment:
 - To transmit a hazard alert (Car-to-X)

- To filter the display of POIs in the vicinity according to POI category
- ⑤ To switch the display of personal POI symbols on the map on or off
- ⑥ To switch one of the following displays on or off depending on the equipment:
 - Weather information
 - Traffic incidents
- ⑦ To switch the traffic map display on or off

The map and satellite images are shown in globe projection. This allows for a realistic map display in all map scales. The map uses elevation modeling.

Depending on the map data, important buildings in many cities are depicted realistically on the map in small map scales (e.g. 20 m, 50 m). Other buildings are shown as models.

- ① You can set the unit of measurement of the map scale (→ page 266).

If online information is available, fuel prices and the availability of parking spaces in multi-storey car parks are displayed, for example.

① Requirements:

- You have a Mercedes me account.
- The service has been activated at a Mercedes-Benz Service Centre.

Further information can be found at: <http://www.mercedes.me>

Depending on the map data, speed limits can be displayed on the map. The function for displaying speed limits is not available in all countries.

- ① Company logos displayed on the map are trademarks of the respective companies and used solely for the purpose of indicating the locations of these companies. The use of such logos on the map does not indicate approval of, support of or advertising by these companies for the navigation system itself.

Setting the map scale

Multimedia system:

➡ Navigation

The map is shown.

▶ **To zoom in:** swipe down on Touch Control.

or

- ▶ Turn the controller anti-clockwise.

or

- ▶ Move two fingers apart on the touchpad.
- ▶ **To zoom out:** swipe up on Touch Control.

or

- ▶ Turn the controller clockwise.

or

- ▶ Move two fingers together on the touchpad.

- ① You can set the unit of measurement for the map scale (→ page 266).

Moving the map

Multimedia system:

→ Navigation ▶  Options ▶ Map menu

- ▶ Alternatively: if the map is displayed in full screen mode, press Touch Control, the controller or the touchpad. The map menu appears.
- ▶ Select "Move map" in map menu ② (→ page 291).

- ▶ Swipe in any direction on Touch Control or touchpad.

or

- ▶ Slide the controller in any direction. The map moves in the corresponding direction under the crosshair. The more you move your finger away from the starting position on the touchpad, the faster the map moves.

Selecting the map orientation

Multimedia system:

→ Navigation ▶  Options ▶ Map menu

- ▶ Alternatively: if the map is displayed in full screen mode, press Touch Control or the touchpad. The map menu appears.
- ▶ In map menu ③, select **N**, **2D** or **3D** (→ page 291).
 - **N**: the 2D map view is aligned so that north is always at the top.
 - **2D**: the 2D map view is aligned to the direction of travel.

- **3D**: the 3D map view is aligned to the direction of travel.

Selecting POI symbols

Multimedia system:

→ Navigation ▶  Options ▶ Map content

POIs include filling stations and hotels, for example. These can be displayed as symbols on the map. Not all POIs are available everywhere.

- ▶ Select **POI symbols**. The • dot indicates the current setting. **Standard** displays symbols of predefined categories on the map. **User defined** allows you to personally select the symbols for the available categories. **None** switches the display off.
- ▶ Select the setting.
- ▶ **User defined**: select categories. The POI symbols of the selected categories are displayed ☒ or not displayed ☐.

Selecting text information

Multimedia system:

Navigation ► Options ► Text information

- Select text information.

Current street shows the street you are currently driving on at the bottom of the display.

When the map is moved, the street name, the POI name or the area name appears under the crosshair.

Geo-coordinates displays the following information:

- longitude and latitude
- elevation

The elevation shown may deviate from the actual elevation.

- number of satellites from which a signal can be received

When the map is moved, this information does not appear.

Climate control displays the current climate control settings.

None switches the display off.

Displaying the next intersecting street

Requirement:

- Route guidance is not active.

Multimedia system:

Navigation ► Options

- Switch **Next intersecting street** on ☒ or off ☐.
- If the function is switched on ☒, the name of the next intersecting street will be displayed at the upper edge of the display.

Displaying the map version

Multimedia system:

Navigation ► Options

- Select **Map version**.
- Select **Details**.
- ❗ Information about new versions of the digital map can be obtained from a Mercedes-Benz service centre.

Avoiding an area

You can define areas that you would like to avoid.

Avoiding a new area

Multimedia system:

Navigation ► Route and position ► Avoid options ► Areas

- Select **Avoid new area**.
- Variant 1: select **Using map**.
- Move the map.
- Variant 2: select **Address entry**.
- Enter the address.
- Select **Select destination**.
The map appears.
- **To display an area:** press Touch Control, the touchpad or the controller.
A red rectangle appears. This designates the area that should be avoided.
- **To change the size of the area:** swipe up or down on Touch Control or the touchpad.

or

- ▶ Slide the controller up or down.
The map scale is enlarged or reduced and changes the size of the area.
- ▶ **To set the area:** press Touch Control, the touchpad or the controller.
The area is entered into the list.

Changing an area

Multimedia system:

➞ Navigation ➞  Route and position ➞ Avoid options ➞ Areas

- ▶ Highlight an area in the list.
- ▶ Select  Edit.

Moving the area on the map

- ▶ Swipe in any direction on Touch Control or touchpad.
- or
- ▶ Slide the controller in any direction.

Changing the size of the area

- ▶ Press Touch Control, the touchpad or the controller.

- ▶ Swipe up or down on Touch Control or the touchpad.
- or
- ▶ Slide the controller up or down.
- ▶ Press Touch Control, the touchpad or the controller.

Taking the area for the route into account

- ▶ Avoid ☒ an area in the list.
Route guidance active: a new route is calculated.
No route has been created: the setting is carried over to the next route guidance.
The route can include an area that is to be avoided in the following cases:
 - the destination is located in an area that is to be avoided
 - there is no sensible alternative route

Deleting one or all areas

Multimedia system:

➞ Navigation ➞  Route and position ➞ Avoid options ➞ Areas

- ▶ Highlight an area in the list.
- ▶ Select  Delete or  Delete all.
- ▶ Confirm the prompt with Yes.
One or all areas are deleted.

Updating the map data

The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimal route guidance can only be provided by the navigation system in conjunction with the most up-to-date map data. Information about new versions of the digital map can be obtained from a Mercedes-Benz service centre.

You can obtain map and software updates from a Mercedes-Benz service centre. In some countries, map and software updates are available as downloads via the Mercedes-Benz Download Manager or on the SD card in the Mercedes-Benz App Shop.

- ❗ The SD card can only be installed on a navigation system. It is not possible to install the SD card on other navigation systems.

Free map update after first installing the SD card

If there is a more recent map update, you can obtain this, under certain conditions, free of charge within 60 days of the SD card being first installed.

You can download the map update via the Download Manager on your PC.

Map data and map software

Variant 1: an SD card for navigation is provided with the vehicle. The SD card contains map data and software for navigation.

Once you insert the SD card into the SD card slot, the SD card is only made available to your vehicle. It is then no longer possible to use it in another vehicle. You will see a note on the media display.

Variant 2: if no SD card for navigation is provided with the vehicle, navigation cannot be used.

You can obtain an SD card from a Mercedes-Benz Service Centre at a later date.

Displaying the compass

Multimedia system:

➔ Navigation ➔  Route and position

- ▶ Select **Compass**.

The compass display shows the following information:

- the current direction of travel with bearing (360 degree format) and compass direction
- longitude and latitude coordinates in degrees, minutes and seconds
- height (rounded)
- number of GPS satellites from which a signal can be received

Displaying Qibla

Multimedia system:

➔ Navigation ➔  Route and position

- ▶ Select **Qibla** (if available).

The arrow on the compass shows the direction of prayer to Mecca in relation to the current direction of travel.

The number of satellites received is shown.

- ❗ This function is not available in all countries.

Setting the map scale automatically

Multimedia system:

➔ Navigation ➔  Options

The map scale is set automatically depending on your driving speed.

- ▶ Switch **Auto zoom** on ☒ or off ☐.

- ❗ The automatically selected map scale can be changed manually. After a few seconds, this is automatically reset.

Displaying weather information

Multimedia system:

Navigation ► Options ► Map content

- Switch **Weather information** on ☒ or off ☐. When the function is switched on ☒, current weather information is displayed on the navigation map, e.g. temperature or cloud cover. This function is not available in all countries.
- Alternatively: in map menu ⑥ switch on ☒ or off ☐ (→ page 291).

Requirements:

- You have a Mercedes me account.
- The service has been activated at a Mercedes-Benz Service Centre.

Further information can be found at: <http://www.mercedes.me>

Calling up the Digital Owner's Manual (navigation)

Information on navigation

Multimedia system:


Navigation ► Options ► Information on navigation

- Select the topic.

Telephone

Telephony

Telephone menu overview

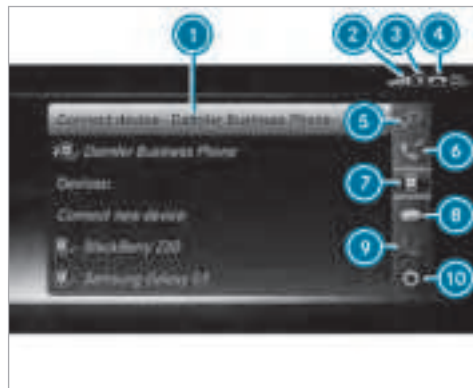

- ① Bluetooth® device name of the currently connected mobile phone
- ② Signal strength of the mobile phone network

- ③ Battery status of the connected mobile phone
- ④  (telephone ready) or  (call active)
- ⑤ Contacts (→ page 303)
- ⑥ Call list (→ page 305)
- ⑦ To connect the device (→ page 298)
- ⑧ Text messages
- ⑨ Active call
- ⑩ Options

Symbols ① to ④ are not shown until after a mobile phone has been connected to the multimedia system. The symbols depend on your mobile phone and your mobile phone network provider.

Bluetooth® profile overview

Bluetooth® profile of the mobile phone	Function
PBAP (P hone B ook A ccess P rofile)	Contacts are automatically displayed in the multimedia system
MAP (M essage A ccess P rofile)	Message functions can be used

Telephony operating modes overview

Depending on your equipment, the following telephony operating modes are available:

- A mobile phone is connected to the multimedia system via Bluetooth® (→ page 298).
- A mobile phone is connected to the multimedia system as an SAP (**S**im **A**ccess **P**rofile) telephone (→ page 299).
- Only a SIM card is connected to the multimedia system (→ page 299).
A mobile phone is being used parallel to a SIM card (→ page 299).

Notes on telephony

⚠ WARNING Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

⚠ WARNING Risk of distraction from operating mobile communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation.

This could also cause you to lose control of the vehicle.

Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

Further information can be obtained from a Mercedes-Benz service centre or at: <http://www.mercedes-benz.com/connect>.

To improve voice quality, the multimedia system supports telephone calls in HD Voice®.

In order to use this function, the mobile phones and the mobile phone network provider of the person you are calling must support HD Voice®.

Depending on the quality of the connection, the voice quality may fluctuate.

The following situations can lead to the call being disconnected while the vehicle is in motion:

- there is insufficient network coverage in the area
- you move from one GSM or UMTS transmitter/receiver area (cell) into another and no communication channels are free
- the SIM card used is not compatible with the network available
- a mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

Connecting a mobile phone (Bluetooth® telephony)

Requirements:

- Bluetooth® is activated on the mobile phone (see the manufacturer's operating instructions).
- Bluetooth® is activated on the multimedia system (→ page 264).

Multimedia system:

➞ Telephone ➞  Connect device

Searching for a mobile phone

- ▶ Select **Use Bluetooth telephony only**.
- ▶ Select **Connect new device**.
- ▶ Select **Start search on the system**.
The available mobile phones are displayed. If a new mobile phone is found, it is indicated by the  symbol.

Connecting a mobile phone (authorisation using Secure Simple Pairing)


- ▶ Select the mobile phone.
A code is displayed in the multimedia system and on the mobile phone.
- ▶ **If the codes match:** confirm the code on the mobile phone.

Connecting a mobile phone (authorisation by entering a passkey)

- ▶ Select the mobile phone.
- ▶ Choose a one to sixteen-digit number combination as a passkey.

- ▶ **On the multimedia system:** enter the passkey and select **OK**.
- ▶ **On the mobile phone:** enter the passkey again and confirm.
- ① Up to 15 mobile phones can be authorised on the multimedia system. Authorised mobile phones are reconnected automatically.

Using a SIM card for business telephony

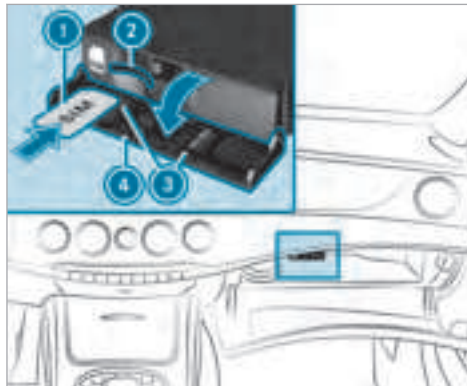

- ▶ Lightly press cover ④ of the compartment for the SIM card reader in the glove box. The compartment opens.
- ▶ Insert SIM card ① in card slot ②. Micro or nano cards can be used with adapters ③.

Setting up business telephony

Requirements:

- **Using a mobile phone:**
 - Bluetooth® is activated on the mobile phone (see the manufacturer's operating instructions).
 - Bluetooth® is activated on the multimedia system (→ page 264).
 - If the mobile phone supports the Bluetooth® SAP profile (**SIM Access Profile**), the SIM card PIN must be entered and confirmed.
- **Using a SIM card:**
 - A SIM card is inserted in the card slot in the glove box (→ page 299).
 - The SIM card PIN is entered in the multimedia system.

Multimedia system:

➞ **Telephone** ➞ **Connect device**

Connecting a mobile phone

- ▶ Select **Activate Business telephony**.

- ▶ Select **Connect a new device**.
- ▶ Select **Start search on the system**.
- ▶ Select the mobile phone.
- ▶ Connect the mobile phone with the multimedia system via Secure Simple Pairing or the passkey (→ page 298).
- ▶ Enter the SIM card PIN and confirm. The reception and call quality are improved when the vehicle's exterior aerial is connected.

i If the mobile phone is connected as an SAP telephone, calls cannot be made on the mobile phone, since the SIM card is inserted in the vehicle. Connect the mobile phone to the vehicle hotspot for data reception (→ page 263).

Connecting the SIM card

- ▶ Select the SIM card.
- ▶ Enter the SIM card PIN and confirm.
- ▶ **Parallel use with a mobile phone:** select an authorised mobile phone.

- ▶ Select **Yes, SIM card and <Mobile phone>** and, if necessary, enter the SIM card PIN. Access to the mobile phone data is available. Incoming and outgoing calls are available using the SIM card.

Calling up the business telephony settings

Multimedia system:

↳ **Telephone**

- ▶ Select  **Options**.

The following settings are available:

- **Phone number blocking**
- **Call waiting**
- **Call forwarding**

Disconnecting a mobile phone (deauthorising)

Multimedia system:

↳ **Telephone** ▶  **Connect device**

- ▶ Select the mobile phone from the device list.
- ▶ Select .
- ▶ Select **Deauthorise**.
- ▶ Select **Yes**.

Switching mobile phones

Requirement:

- The mobile phones are authorised (→ page 298).

Multimedia system:

↳ **Telephone** ▶  **Connect device**

- ▶ In the device list, select a mobile phone which has already been authorised.

i Only one mobile phone can be connected at any one time. The connected mobile phone is displayed at the top of the list.


Using the mobile phone with Near Field Communication (NFC)

Requirements:

- NFC is activated on the mobile phone (see the manufacturer's operating instructions)
- the mobile phone's screen is switched on and unlocked (see the manufacturer's operating instructions)

NFC enables short-range wireless data transfer.

It is possible to use a mobile phone via NFC with Bluetooth telephony.

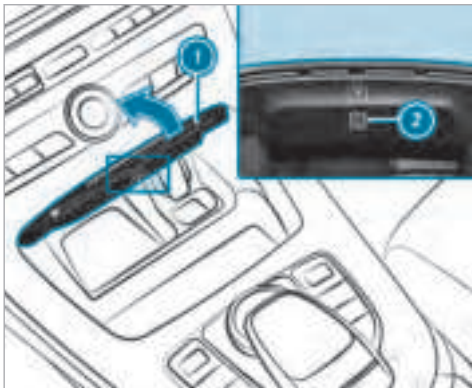

- ▶ **To connect a mobile phone:** open stowage compartment cover ①.

- ▶ Place the NFC area of the mobile phone (see manufacturer's operating instructions) on NFC logo ② on the inside of the cover. The mobile phone is connected to the multimedia system.

- ▶ **To change mobile phones:** place the NFC area of the mobile phone (see manufacturer's operating instructions) on NFC logo ②. If the mobile phone has already been authorised on the multimedia system, it is now connected.

If the mobile phone is authorised on the multimedia system for the first time, it is connected after confirming the mobile phone instructions (see the manufacturer's operating instructions).

Further information can be found at: <http://www.mercedes-benz.com/connect>

Further functions without having a mobile phone authorised on the multimedia system (see manufacturer's operating instructions):

- transferring a URL to be viewed in the multimedia system

Setting the reception and transmission volume

Requirement:

- A mobile phone is authorised (→ page 298).

Multimedia system:

➞ Telephone ➞ Connect device

This function ensures optimal language quality.

- ▶ Highlight the mobile phone in the device list.
- ▶ Select .
- ▶ Select **Reception volume** or **Transmission volume**.
- ▶ Set the volume.

Further information on the recommended reception and transmission volume: <http://www.mercedes-benz.com/connect>

Adjusting the call and ringtone volume

Multimedia system:

➞ System ➞ Audio ➞ Telephone

- ▶ Select **Speech volume** or **Ringtone volume**.
- ▶ Set the volume.

Starting/stopping mobile phone voice recognition

Requirements:

- the mobile phone is connected to the multimedia system (→ page 298).

Starting mobile phone voice recognition

- Press and hold the  button on the multi-function steering wheel for more than one second.
You can use mobile phone voice recognition.

Stopping mobile phone voice recognition

- Press the  or  button on the multi-function steering wheel.

Calls

Telephone operation

Multimedia system:

→ Telephone →  Contacts

Making a call

- Select [Numerical keypad](#).

- Enter the number.
- Select .
The call is made.

Accepting a call

- Select [Accept](#).

Rejecting a call

- Select [Reject](#).

Ending a call

- Select .

Activating functions during a call

- To show all functions, navigate down.

The following functions are available during a call:

- [End call](#)
- [Make additional call](#)
- [Keyboard](#) (show to send DTMF tones)
- Switch [Mute mic](#) on ☒ or off ☐.
- [Private Mode](#) (an active call in hands-free mode is transferred over to the telephone)

-  Private mode is not available for business telephony.

Conducting calls with several participants

Requirements:

- There is an active call (→ page 302).
- Another call is being made.

Switching between calls

- Select call ●.
The selected call is active. The other call is on hold.

Activating or ending a call on hold

- Select [Continue call](#) or [End call](#).

Conducting a conference call

- Select [Create conference call](#) in the telephone menu.
The new participant is included in the conference call.

Ending an active call

- Select .

- ❗ On some mobile phones, the call on hold is activated as soon as the active call is ended.

Incoming call during an existing call (call waiting)

Requirement:

- There is an active call (→ page 302).

If you receive a call while already in a call, a message is displayed. An acoustic signal also sounds.

- ▶ Select **Accept**.
The incoming call is active. The previous call is on hold.
- ▶ Select **Reject**.

- ❗ This function and behaviour depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

Contacts

Information about the contacts menu

The contacts menu contains all contacts from existing data sources, e.g. mobile phone or memory card.

It is possible to store up to 6,000 contacts:

- 3,000 entries are for permanently saved contacts.
- 3,000 for contacts loaded from the mobile phone.

From the contacts menu, you can perform the following actions:

- Telephone operation
 - Calling a contact (→ page 305)
 - Calling a new number (→ page 305)
- Navigation (→ page 276)

If a mobile phone is connected to the multimedia system (→ page 298) and automatic calling up (→ page 303) is activated, the mobile phone's contacts are displayed in the address book.

Downloading mobile phone contacts

Multimedia system:

➞ Telephone ➞ ⚙ Options

Automatically

- ▶ Activate ☒ **Synchronise contacts automatically**.

Manually

- ▶ Deactivate ☐ **Synchronise contacts automatically**.
- ▶ Select **Synchronise contacts**.

Calling up contacts

Multimedia system:

➞ Telephone ➞ 🔍 Contacts

Depending on the character set, the following options can be used to search for contacts:

- search by initials
- search by name
- search by phone number

- ▶ Enter characters into the search field.
A selection of possible contacts appears.
Entering more characters into the search field narrows down the number of possible selections.

- ▶ Select the contact.

A contact can contain the following details:

- phone numbers
- navigation addresses
- geo-coordinates
- Internet address

Editing the format of a contact's name

Multimedia system:

☞ Telephone ➤ ⚙ Options ➤ Name
format

The following options are available:

- Surname, first name
- Surname First name
- First name Surname

- ▶ Select an option.

Overview of importing contacts

Importing contacts as electronic business cards

Source	Requirements:
 Memory card	The SD memory card is inserted.
 USB device	The USB device is inserted in the USB port.

Source	Requirements:
 Bluetooth® connection	If the sending of vCards via Bluetooth® is supported, vCards can be received on mobile phones or netbooks, for example. Bluetooth® is activated in the multimedia system and on the respective device (see the manufacturer's operating instructions).
 Mobile phone	The mobile phone is connected to the multimedia system.

Importing contacts into the contacts menu

Multimedia system:

☞ Telephone ➤ ⚙ Options

- ▶ Select **Import**.
- ▶ Select an option.

Saving a mobile phone contact

Multimedia system:

➞ Telephone ➞ 🔍 Contacts

- ▶ Select the  mobile phone contact.
- ▶ Select .
- ▶ Select [Save in vehicle](#).
The contact saved in the multimedia system is identified by the  symbol.

Calling a contact

Multimedia system:

➞ Telephone ➞ 🔍 Contacts

- ▶ Enter characters into the search field.
- ▶ Select the contact.
- ▶ Select the telephone number.
The number is dialled.

Selecting further options in the contacts menu

Multimedia system:

➞ Telephone ➞ 🔍 Contacts

- ▶ Select a contact.
- ▶ Select .

Depending on the stored data, the following options are available:

- [Call](#)
- [Show website](#) (if a web address has been stored)
- [Navigate](#) (if an address has been stored)
- [Save as global favourite](#)
- [Send DTMF tones](#) (for a number with DTMF tones)

- ▶ Select an option.

Deleting a contact

Multimedia system:

➞ Telephone ➞ 🔍 Contacts

You can delete contacts stored in the vehicle.

- ▶ Search for the contact.
- ▶ Select the contact.
- ▶ Select .
- ▶ Select [Delete contact](#).
- ▶ Select [Yes](#).

Call list

Call list overview

If your mobile phone supports the PBAP Bluetooth® profile:

- The call lists from the mobile phone are displayed in the multimedia system.
- When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

If your mobile phone does not support the PBAP Bluetooth® profile:

- The multimedia system generates its own call lists.
- The call list is not synchronised with the call lists in the mobile phone.

Making a call from the call list

Multimedia system:

➞ Telephone ➞ 📞 Call list - Mobile phone

- ▶ Select an entry.
The call is made.

Options in the call list

Multimedia system:

→ Telephone ➤  Call list -
Mobile phone

▶ Highlight an entry.

▶ Select .

The following options are available:

- [Open contact](#)

Text messages

Notes on the text message functions

If the connected mobile phone supports the MAP Bluetooth® profile, the text message functions can be used on the multimedia system.

You can obtain further information about settings and supported functions of Bluetooth®-capable mobile phones from a Mercedes-Benz Service Centre or at: <http://www.mercedes-benz.com/connect>

Some mobile phones require further settings after being connected to the multimedia system (see manufacturer's operating instructions).

New messages are identified by the  symbol in the multimedia system's display and an audible signal.

Depending on the mobile phone, the multimedia system only displays new incoming text messages or the 100 newest text messages.

The  symbol is displayed when the mobile phone's message memory is full.

Configuring the displayed text messages

Multimedia system:

→ Telephone ➤  Options ➤ Message display

▶ Select .

A menu with the following options is shown:

- [All messages](#)
- [New and unread messages](#)
- [New messages](#)
- [Off](#) (The text messages are not displayed automatically.)

▶ Select an option.

Reading text messages

Multimedia system:

→ Telephone ➤  Text message

Reading a text message

▶ Select a text message.
The message text is displayed.

Using the read-aloud function

▶ Select a text message.
▶ Select [Read aloud](#).
The text message is read aloud.

Calling a text message sender

Multimedia system:

→ Telephone ➤  Text message

▶ Select the text message.
▶ Select .

▶ Select [Call sender](#).

Further options in the text message menu

Multimedia system:

→ Telephone ➤  Text message

▶ Select .

- **To delete a text message:** select [Delete](#).

Apple CarPlay™

Overview of Apple CarPlay™

iPhone® functions can be used via the multimedia system using Apple CarPlay™. They are operated using the controller or the Siri® voice-operated control system. You can activate the voice-operated control system by pressing and holding the  button on the multifunction steering wheel.

Only one mobile phone at a time can be connected via Apple CarPlay™ to the multimedia system.

The availability of Apple CarPlay™ may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

Notes on Apple CarPlay™

While using Apple CarPlay™ various functions of the multimedia system, e.g. telephony or the

media source Bluetooth® audio and iPod® are unavailable.

Only one route guidance can be active at a time. If a route guidance is active on the multimedia system, it is closed when a route guidance is started on the mobile phone.

Connecting an iPhone® via Apple CarPlay™

Requirements:

- Apple® operating system version iOS 8.3 or above is installed on the iPhone®.
- There is an Internet connection for the full range of functions for Apple CarPlay™.
- The iPhone® is connected to the multimedia system via the USB port  using a suitable cable (→ page 327).

Multimedia system:

➞ [Connect](#) ➞ [Apple CarPlay](#)

Setting automatic or manual start

A message appears when connected for the first time.

- **Automatic start:** select [Automatically](#). [Start automatically](#) is activated ☒.

Apple CarPlay™ will now start immediately after the iPhone® is connected to the multimedia system using a USB cable.

- **Manual start:** select [Manually](#).

- Select the iPhone® in the device list.

Accepting/rejecting the data protection regulations

A message with the data protection regulations appears.

- Select [Accept & Start](#).

or

- Select [Decline & End](#).

If you selected automatic start, you will have to start Apple CarPlay™ manually the next time you want to use it.

Exiting Apple CarPlay™

- Press the  button on the multifunction steering wheel, for example.

- ❗ If Apple CarPlay™ was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay® in the main menu.

Calling up Apple CarPlay™ tone settings

Multimedia system:

➞ **Connect** ➞ **Apple CarPlay** ➞ **Sound**

- ▶ Select the tone menu (→ page 336).

Ending Apple CarPlay™

Multimedia system:

➞ **Connect** ➞ **Apple CarPlay**

- ▶ Select **Disconnect**.
The connection is ended.
The mobile phone continues to be supplied with electricity.
- or
- ▶ Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

Android Auto

Android Auto overview

Mobile phone functions can be used with Android Auto using the Android operating system on the multimedia system. It is operated using the controller or the voice-operated control system. You can activate the voice-operated control system by pressing and holding the  button on the multifunction steering wheel.

Only one mobile phone at a time can be connected via Android Auto to the multimedia system.

The availability of Android Auto and Android Auto Apps may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

Notes on Android Auto

While using Android Auto, various functions of the multimedia system, for example, the media source Bluetooth® audio, are not available.

Only one route guidance can be active at a time. If route guidance is active on the multimedia sys-

tem, it is closed when route guidance is started on the mobile phone.

Connecting a mobile phone via Android Auto

Requirements:

- The first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary for safety reasons.
- The mobile phone supports Android Auto from Android 5.0.
- The Android Auto App is installed on the mobile phone.
- In order to use the telephone functions, a mobile phone must be connected to the multimedia system via Bluetooth® (→ page 298).
If there was no prior Internet connection, this is established with the use of the mobile phone with Android Auto.
- The mobile phone is connected to the multimedia system via the USB port  using a suitable cable (→ page 327).
- The full range of functions for Android Auto is only possible with an Internet connection.

Multimedia system:

➞ [Connect](#) ➞ [Android Auto](#)

- ▶ Select the mobile phone from the device list.

Accepting/rejecting the data protection regulations

A message with the data protection regulations appears.

- ▶ Select [Accept & Start](#).

or

- ▶ Select [Decline & End](#).

Activating automatic start

- ▶ Select [Start automatically](#) ☒.

Starting manually

- ▶ Select the mobile phone from the device list.

Exiting Android Auto

- ▶ Press the  button on the multifunction steering wheel, for example.

- ❗ If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected.

You can call up Android Auto in the main menu.

Calling up the Android Auto tone settings

Multimedia system:

➞ [Connect](#) ➞ [Android Auto](#) ➞ [Sound](#)

- ▶ Select the tone menu (→ page 336).

Ending Android Auto

Multimedia system:

➞ [Connect](#) ➞ [Android Auto](#)

- ▶ Select [Disconnect](#).

The connection is ended.

The mobile phone continues to be supplied with electricity.

or

- ▶ Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

Transferred vehicle data when using Apple CarPlay™ and Android Auto

Notes on transferred vehicle data

When using Android Auto or Apple CarPlay™, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

System information:

- software release of the multimedia system
- system ID (anonymised)

The transfer of this data is used to optimise communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle ID is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset (→ page 271).

Driving status data:

- transmission position engaged

- distinction between parked, standstill, rolling and driving
- day/night mode of the instrument cluster

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

Position data:

- coordinates
- speed
- compass direction
- acceleration direction

This data is only transferred while the navigation system is active in order to improve it (e.g. so it can continue functioning when in a tunnel).

Mercedes me connect

Notes on Mercedes me connect

Mercedes me connect provides the following services:

- breakdown management
- appointment requests or similar

- accident management
- Mercedes-Benz emergency call system

The Mercedes-Benz Customer Centre and the Mercedes-Benz emergency call centre are available for you around the clock.

The Info call button, the breakdown assistance button and the emergency call button can be found on the overhead control panel of the vehicle (→ page 311).

You can also use the multimedia system to make the call (→ page 310).

Please note that Mercedes me connect is a Mercedes-Benz service. In emergencies, always call the national emergency services first using the standard national emergency service phone numbers. In emergencies, you can also use the Mercedes-Benz emergency call system (→ page 313).

Further information on Mercedes me connect, the provided service scope and operation: http://manuals.daimler.com/baix/cars/connectme/de_DE/index.html

Calling the Mercedes-Benz Customer Centre using the multimedia system

Requirements:

- you have access to a GSM network
- the contract partner's GSM network coverage is available in the respective region
- the ignition is switched on so that vehicle data can be transferred automatically

Multimedia system:

➞ Telephone ➞  Contacts


► Call [Mercedes me connect](#).
After confirmation, the multimedia system sends the required vehicle data.
The data transfer is shown in the display. Then, you can select a service and be connected to a specialist at the Mercedes-Benz Customer Centre.

Further information on Mercedes me connect, the provided service scope and operation is available at: http://manuals.daimler.com/baix/cars/connectme/de_DE/index.html

Making a call via the overhead control panel

Requirements:

- you have access to a GSM network
- the contract partner's GSM network coverage is available in the respective region
- the ignition is switched on so that vehicle data can be transferred automatically

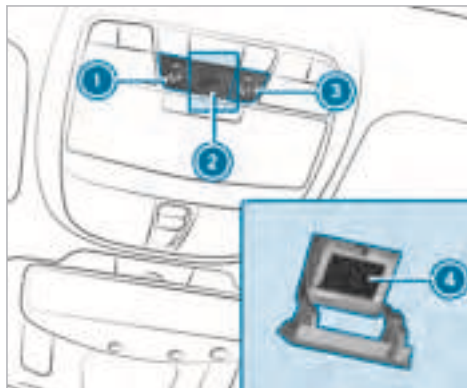

- ① Breakdown assistance call
- ② SOS button cover
- ③ MB Info call
- ④ SOS button

► **To make a breakdown assistance call:** press button ①.

► **To make an emergency call:** press SOS button cover ② briefly to open.

► Press and hold SOS button ④ for at least one second.

► **To make an MB Info call:** press button ③.

An emergency call can be initiated even if a breakdown assistance or MB Info call is active. This has priority over all other active calls.

Calls via the overhead control panel are only possible with an available mobile phone network.

More information on Mercedes me connect and further services can be found at: <http://www.mercedes.me>

Information on the MB Info call

An Info call to the Mercedes-Benz Customer Centre has been initiated via the overhead control panel (→ page 311) or the multimedia system (→ page 310).

You can find information on the following topics:

- activation of Mercedes me connect
- operating the vehicle
- nearest Mercedes-Benz Service Centre

- other products and services from Mercedes-Benz

Data is transmitted during the connection to the Mercedes-Benz Customer Centre (→ page 313).

Information on the breakdown assistance call

A breakdown assistance call to the Mercedes-Benz Customer Centre has been initiated via the overhead control panel (→ page 311) or the multimedia system (→ page 310).

- A qualified Mercedes-Benz technician carries out repairs on site and/or the vehicle will be towed to the nearest Mercedes-Benz service centre.

You may be charged for these services.

Data is transferred during the connection to the Mercedes-Benz Customer Centre (→ page 313).

Information on Mercedes me connect accident management

The Mercedes me connect accident management is an extension of the Mercedes-Benz emergency call system (→ page 313).

An emergency call is made to the Mercedes-Benz emergency call centre after an accident:

- a voice connection is made to a contact person at the Mercedes-Benz emergency call centre
- if necessary, the contact person at the Mercedes-Benz emergency call centre forwards the call to Mercedes me connect accident management
- if necessary, the vehicle will be towed to a Mercedes-Benz service centre

Arranging a service appointment using Mercedes me connect

If you have activated the maintenance management service, relevant vehicle data is transferred automatically to the Mercedes-Benz Customer Centre. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt

appears asking if you would like to make an appointment.

▶ **To arrange a service appointment:** select [Call](#).

After your confirmation, the vehicle data is sent and a Mercedes-Benz Customer Centre employee deals with your appointment. The information is then sent to your desired service outlet.

This service outlet will then contact you within 24 hours.

❗ If you select [Call later](#) after the service message appears, the message is hidden and reappears after a certain period of time.

Consenting to data transfer for Mercedes me connect

Requirement:

- There is an active breakdown assistance or Info call on the multimedia system (→ page 310) or the overhead control panel (→ page 311).

If the breakdown and Mercedes me connect Concierge services are not activated on

Mercedes me, the [Do you want to transmit vehicle data and the vehicle's position to the Mercedes-Benz Customer Centre in order to improve the processing of your request?](#) message appears.

- ▶ Select **Yes**.
The relevant vehicle data is sent automatically.

More information on Mercedes me: <http://www.mercedes.me>

Transferred data during a service call

In certain countries you must confirm the data transfer.

When you make service calls via Mercedes me connect, the following data is transferred:

Overview of transferred data

Service call	Transferred data
MB Info call Breakdown assistance call	- current vehicle location - vehicle identification number - service code - selected data about the status of the vehicle

Mercedes-Benz emergency call system

Notes on the Mercedes-Benz emergency call system

The Mercedes-Benz emergency call system only functions in areas where mobile phone coverage is available from the relevant contract partner. Insufficient network coverage from the relevant contract partner may result in an emergency call not being transmitted.

The ignition must be switched on before an automatic emergency call can be made.

Overview of the Mercedes-Benz emergency call system

The Mercedes-Benz emergency call system can help to decisively reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access.

The emergency call can be made automatically (→ page 314) or manually. Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

Messages in the multimedia system display:

SOS READY: emergency call available

SOS NOT READY: the ignition is not on or there is a malfunction with the emergency call system.

During an active emergency call,  appears in the display.

You can find more information on the regional availability of the Mercedes-Benz emergency call system at: http://www.mercedes-benz.com/connect_ecall.

- ❗ If an emergency call is unavailable, a message to this effect also appears in the multifunction display of the instrument cluster.

Automatic emergency call

Requirements:

- The ignition is switched on.
- The starter battery has sufficient charge.

If restraint systems such as airbags or seat belt tensioners have been activated after an accident, the Mercedes-Benz emergency call system may automatically initiate an emergency call.

The emergency call has been made:

- a voice connection is made to the Mercedes-Benz emergency call centre.
- a message with accident data is transmitted to the Mercedes-Benz emergency call centre.

The Mercedes-Benz emergency call centre can transmit the vehicle position data to one of the public emergency services call centres.

- in certain situations additional data is transmitted to the Mercedes-Benz emergency call centre.

This allows measures for rescue, recovery or towing to a Mercedes-Benz service centre to be initiated quickly.

If your vehicle is equipped with an SOS button in the overhead control panel, it flashes until the emergency call has been completed.

It is not possible to immediately end an automatic emergency call.

If the Mercedes-Benz emergency call system cannot connect to the Mercedes-Benz emergency call centre, the emergency call is automatically sent to the public emergency services call centre.

If no connection can be made to the public emergency services, a corresponding message appears in the display.

- ▶ Dial the emergency call number 999 or 112 on your mobile phone.

If an emergency call has been initiated:

- remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre operator.
- on the basis of the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- if no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

Triggering a manual emergency call

- ▶ If the vehicle has an SOS button in the overhead control panel: press and hold the button for at least one second.

The emergency call has been made:

- a voice connection is made to the Mercedes-Benz emergency call centre.
- remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre operator.

- on the basis of the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- a message with accident data is transmitted to the Mercedes-Benz emergency call centre. The Mercedes-Benz emergency call centre can transmit the vehicle position data to one of the public emergency services call centres.
- in certain situations additional data is transmitted to the Mercedes-Benz emergency call centre.

This allows measures for rescue, recovery or towing to a Mercedes-Benz Service Centre to be initiated quickly.

If the Mercedes-Benz emergency call system cannot connect to the Mercedes-Benz emergency call centre, the emergency call is automatically sent to the public emergency services call centre.

If no connection can be made to the public emergency services, a corresponding message appears in the display.

- ▶ Dial the emergency call number 999 or 112 on your mobile phone.

Ending an unintentional emergency call

- ▶ Select  on the multifunction steering wheel.

Transmitted data with the Mercedes-Benz emergency call system

The following data is transmitted to the Mercedes-Benz emergency call centre:

- the vehicle's GPS position data
- the last GPS position data on the route (a few hundred metres before the incident)
- direction of travel
- vehicle identification number
- the vehicle drive type
- the estimated number of people in the vehicle
- whether Mercedes me connect is available or not
- whether the emergency call was initiated manually or automatically

- the time of the accident
- the language setting on the multimedia system

For accident clarification purposes, the following measures can be taken up to an hour after the emergency call has been initiated:

- the current vehicle position can be called up
- a voice connection to the vehicle occupants can be established

 For Russia: various functions, e.g. receiving traffic information, cannot be used for up to two hours after sending an emergency call.

Starting/ending ERA-GLONASS test mode (Russia)

Requirements:

- The starter battery has sufficient charge.
- The ignition is switched on.
- The vehicle has been stationary for at least one minute.

- ▶ **To start the test mode:** press and hold the  button on the multifunction steering wheel for at least five seconds. The test mode is started and automatically ends after the language test has been performed.
- ▶ **To end the test mode manually:** switch off the ignition. The test mode is ended.

Online and Internet functions

Internet connection

Information about the Internet connection

⚠ WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ▶ Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Depending on the vehicle's equipment, you can establish an Internet connection in the following ways:

- **Vehicles with a communication module:** Internet use including Mercedes me connect services and data roaming (→ page 316).
- **Vehicles without a communication module:**
 - via Bluetooth® with a data-enabled mobile phone (→ page 318)
 - via Wi-Fi with a data-enabled mobile phone (→ page 316)
 - via business telephony (→ page 317)

The Internet functions can only be used to a limited degree whilst driving.

Internet connection via communication module

On vehicles with a built-in communication module, the Internet connection is established via an integrated SIM card.

If the data volume limit is reached, the availability of Mercedes me connect services is limited. The data volume must be purchased on Mercedes me connect.

Setting up an Internet connection via Wi-Fi

Requirements:

- the Wi-Fi function is activated on the multimedia system (→ page 264).
- the Wi-Fi function is activated on the external device (see the manufacturer's operating instructions).
- Internet access via Wi-Fi is activated (see the manufacturer's operating instructions).

The Internet connection via Wi-Fi is restricted or does not function if:

- the mobile phone is switched off
- mobile data use is deactivated on the mobile phone
- the Wi-Fi function is deactivated on the multimedia system
- the Wi-Fi function is deactivated on the external device
- Internet access via Wi-Fi is deactivated on the external device

Multimedia system:

➤ System ➤  Connectivity ➤ Internet settings ➤ Search for Wi-Fi networks

➤ Select the network.

➤ Logging in to Wi-Fi network (→ page 264).

Setting up an Internet connection using business telephony

Requirements:

- For use with a mobile phone:

- The mobile phone supports the Bluetooth® SAP profile (**SIM Access Profile**) (see manufacturer's operating instructions).
- **Using a SIM card:**
 - A SIM card is inserted in the card slot in the glove box (→ page 299).
 - The SIM card PIN is entered in the multimedia system.

The Internet connection using business telephony can be restricted or not function if:

- the mobile phone is switched off
- the mobile phone is only connected in the Hands-Free Profile and not as an SAP telephone

Multimedia system:

➤ System ➤  Connectivity ➤ Internet settings

➤ Select mobile phone or SIM card.

➤ **To select the predefined access data of the mobile phone network provider:** select [Predefined settings](#).

A list of countries appears.

➤ Select the country of your mobile phone network provider.
The list of available providers appears.

➤ Select your mobile phone network provider.
When an overview of the provider settings appears, make the necessary settings.

➤ Select [Confirm settings](#).

➤ **To manually set the access data of the mobile phone network provider:** select [Manual settings](#).

An overview of the provider settings appears.

➤ Set access data.

➤ Select [Confirm settings](#).

ⓘ Set the access data in accordance with your data package. Otherwise, additional costs may be incurred. You can contact your mobile phone network provider to obtain the precise access data.

Setting up an Internet connection via Bluetooth®

Requirements:

- A mobile phone is connected to the multimedia system via Bluetooth® (→ page 298).

To connect via Bluetooth®, the mobile phone supports one of the following Bluetooth® profiles:

- DUN (**D**ial-**U**p **N**etworking)
- PAN (**P**ersonal **A**rea **N**etwork)

The Internet connection via Bluetooth® is restricted or does not function if:

- the mobile phone is switched off
- the mobile phone network coverage is insufficient
- mobile data use is deactivated on the mobile phone
- the Bluetooth® function on the multimedia system is switched off and the mobile phone is to be connected via Bluetooth®

- the Bluetooth® function is switched off on the mobile phone and the mobile phone is to be connected via Bluetooth®
- neither the mobile phone network nor the mobile phone allow simultaneous use of a phone and an Internet connection
- the mobile phone has not been enabled for Internet access via Bluetooth®

If a mobile phone is connected to the multimedia system for the first time via Bluetooth®, you will be assisted through the process of setting up an Internet connection.

The Internet connection can also be configured manually.

Further information can be obtained at <http://www.mercedes-benz.com/connect> or from a Mercedes-Benz Service Centre.

Multimedia system:

➞ System ➞  Connectivity ➞ Internet settings

Bluetooth® connection via PAN

- ▶ Select the mobile phone.
The Internet connection is established.

Bluetooth® connection via DUN

- ▶ Select the mobile phone.
- ▶ Select the predefined access data of the mobile phone network provider (→ page 317).

or

- ▶ Manually set the access data of the mobile phone network provider (→ page 317).
- ❗ Set the access data in accordance with your data package. Otherwise, additional costs may be incurred. You can contact your mobile phone network provider to obtain the precise access data.

Switching the Bluetooth® profile

Requirement:

The mobile phone supports the DUN and PAN Bluetooth® profiles.

Multimedia system:

→ System »  Connectivity » Internet settings

- ▶ **To switch from DUN to PAN:** select mobile phone.
- ▶ Select .
- ▶ Select [Change configuration](#).
- ▶ Activate ☒ [Automatic configuration](#).
The Internet connection is automatically configured using the PAN Bluetooth® profile.
- ▶ **To switch from PAN to DUN:** select mobile phone.
- ▶ Select .
- ▶ Select [Change configuration](#).
- ▶ Deactivate ☐ [Automatic configuration](#).
- ▶ Select [Configure settings using COMAND](#).

- ▶ Configure the Internet connection using pre-set or manual access data (→ page 318)

ⓘ While using business telephony, it is not possible to switch Bluetooth® profiles.

Editing access data

Requirement:

The mobile phone supports the Bluetooth® DUN profile.

Multimedia system:

→ System »  Connectivity » Internet settings

- ▶ Highlight a mobile phone.
- ▶ Select .
- ▶ Select [Change configuration](#).
- ▶ **For mobile phones with PAN and DUN:** select [Configure settings using COMAND](#).
- ▶ Configure the Internet connection using pre-set or manual access data (→ page 318)

Cancelling Internet access permission for a mobile phone

Multimedia system:

→ System »  Connectivity » Internet settings

- ▶ Highlight a mobile phone.
- ▶ Select .
- ▶ Select [Delete configuration](#).
- ▶ Select [Yes](#).

Displaying mobile phone details

Multimedia system:

→ System »  Connectivity » Internet settings

- ▶ Highlight a mobile phone.
- ▶ Select .
- ▶ Select [Details](#).

Establishing an Internet connection

Multimedia system:

- ▶ → [Connect](#)
- ▶ For example, select  [Browser](#).

- ① The multimedia system usually establishes the Internet connection automatically. If the multimedia system is not connected to the Internet, the Internet connection is established when an Internet application is used.

Connection status

Connection status overview



- ① Display of existing connection and reception field strength of the communication module or of the connected Bluetooth® device

Displaying the connection status

Multimedia system:

→ System → Connectivity

- ▶ Select **Internet status**.
- ▶ If business telephony is connected as a hot-spot: select **Internet status**.
- ① When connected via Wi-Fi or a Bluetooth® device, the approximate data volume transmitted is displayed. The exact values can be requested from your mobile phone network provider.

Mercedes-Benz Apps

Calling up Mercedes-Benz Apps

Requirements:

- The registration for the use of Mercedes-Benz Apps has been completed.
- The general terms and conditions have been confirmed.

Multimedia system:

→ Connect → MB Apps

- ▶ Select the App.

Further Mercedes-Benz Apps and information can be obtained at: <http://apps.mercedes-benz.com/apps/>

- ① The available features are country-dependent.
Licence fees may be applicable.

Web browser

Calling up a web page

Multimedia system:

→ Connect → Browser → Enter URL

- ▶ Enter a web address.
- ▶ **To finish the entry and call up the website:** select .

Showing/hiding the web browser menu

If you call up a website by selecting a link, for example, the web browser menu is hidden.

- ▶ **To show/hide:** press the  button.
- ① The web browser supports video playback.
 - ① No websites or videos are displayed while the vehicle is in motion.

Web browser overview



- ① URL entry
- ② Bookmarks

- ③ Web page, back
- ④ Web page, forwards
- ⑤ Options
- ⑥ To close the browser

Calling up web browser options

Multimedia system:

↳ Con-
nect ▶  Browser ▶  Options

The following functions are available:

- Refresh page/Cancel
 - Zoom
 - Browser settings
 - Delete browser data
- ▶ Select an option.
- ▶ Make the desired changes to the settings.

Calling up the web browser settings

Multimedia system:

↳ Con-
nect ▶  Browser ▶  Options ▶ Bro
wser settings

The following functions are available:

- Block popups
- Enable Javascript
- Enable cookies

▶ Switch the function on ☒ or off ☐.

Deleting browser data

Multimedia system:

↳ Con-
nect ▶  Browser ▶  Options ▶ Del
ete browser data

The following options are available:

- All
- Cache
- Cookies
- Entered URLs

- **Form data**

- ▶ Select an option.
- ▶ Select **Yes**.

Managing bookmarks

Multimedia system:

↪ **Connect** ▶  **Browser** ▶  **Bookmarks**

Selecting a bookmark

- ▶ Select an entry.

Creating a bookmark

- ▶ Select **Add new bookmark**.
- ▶ Enter a URL and a name.
- ▶ Select .

Editing a bookmark

- ▶ Highlight a bookmark.
- ▶ Select .
- ▶ Select **Edit**.
- ▶ Enter a URL and a name.
- ▶ Select .

Deleting a bookmark

- ▶ Highlight a bookmark.
- ▶ Select .
- ▶ Select **Delete**.
- ▶ Select **Yes**.

Closing the browser

Multimedia system:

- ↪ **Connect** ▶  **Browser**
- ▶ Select  **Close browser**.

Internet radio

Calling up the Internet radio

Requirements:

- There is an account on <http://www.mercedes.me>.
- The Internet radio service is activated.
- The data volume is available.
Depending on the country, data volume may need to be purchased.

- A fast Internet connection for data transmission free of interference.

The services are country-dependent.


For more information, consult a Mercedes-Benz Service Centre.

Multimedia system:

↪ **Radio** ▶  **Radio source**

- ▶ Select **TuneIn radio**.
The Internet radio display appears. The last station set starts playing.
- ① The connection quality depends on the local mobile phone reception.

Internet radio overview

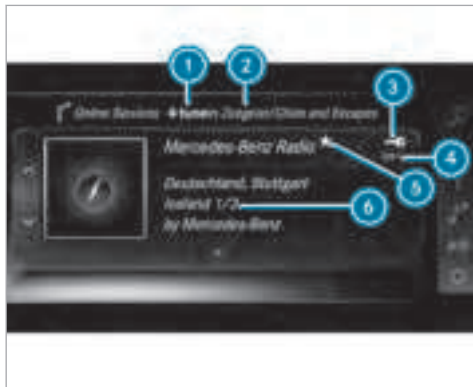

- ① Internet radio provider
- ② Selected category
- ③ Display (if connected to private user account)
- ④ Data transfer rate
- ⑤ Current station is stored as a favourite
- ⑥ Additional information on the current station

Selecting and connecting to Internet radio stations

Multimedia system:

➤ Radio ➤ Radio source ➤ Tuneln radio ➤ Search

- Select a category.
 - Select a station.
- The connection is established automatically.

or

- Select **Free search**.
- Enter a station name using the entry field.

ⓘ A relatively large volume of data can be transmitted when using Internet radio.

Saving/deleting Internet radio stations as favourites

Multimedia system:

➤ Radio ➤ Radio source ➤ Tuneln radio

- Select a station.

- Press and hold the touchpad or controller until an audible signal sounds. The symbol appears by the station name.
 - Select **Favourites**. The list of saved favourite stations appears.
- or
- Create an account for the online provider (Tuneln radio) and then log in on the multimedia system. Your favourites are imported to the multimedia system.

Deleting favourites

- Select **Favourites**.
- Select a station.
- Press and hold the touchpad or controller until an audible signal sounds. The symbol by the station name disappears.

Setting the Internet radio options

Multimedia system:

➡ Radio ➡  Radio source ➡ TuneIn radio ➡  Options

The following options are available:

- **Select stream:** select the stream quality.
- **Log in to TuneIn account:** log in to your TuneIn user account.
- **Log out of account:** log out of your TuneIn user account.

▶ Select an option.

Media

Audio mode

Information on the audio mode



WARNING Risk of distraction when handling data storage media

If you handle a data storage medium while driving, your attention is diverted from the

traffic conditions. This could also cause you to lose control of the vehicle.



Only handle a data storage medium when the vehicle is stationary.

Permissible file systems:

- FAT32
- exFAT
- NTFS

Permissible data storage medium:

- SD card
- USB storage device
- iPod®/iPhone®
- MTP devices
- Bluetooth® audio equipment



- The multimedia system supports a total of up to 50,000 files.
- Data storage media up to 2 TB are supported (32-bit address space).

Supported formats:

- MP3
- WMA
- AAC
- WAV
- FLAC
- ALAC

 Observe the following notes:

- Due to the large variety of available music files regarding encoders, sampling rates and bit rates, playback cannot always be guaranteed.
- Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB devices.
- Copy-protected music files or DRM encrypted files cannot be played back.
- MP3 players must support Media Transfer Protocol (MTP).

Notes on copyright

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection. In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder. Make sure that you know about the applicable copyright regulations and that you comply with these.

Switching on media mode

Multimedia system:

➞ Media ➞  Media sources

- ▶ Select a media source.
Playable music files are played back.

Inserting/removing an SD card

⚠ DANGER Risk of fatal injury from swallowing SD cards

SD cards are small parts.

They could be swallowed and lead to choking.

- ▶ Keep SD cards out of the reach of children.
- ▶ Seek medical attention immediately if an SD card has been swallowed.

! **NOTE** Damage caused by high temperatures

High temperatures can damage the SD memory card.

- ▶ Remove the SD memory card after use and take it out of the vehicle.

Multimedia system:

➞ Media ➞  Media sources ➞ Mem. card

Inserting


The multimedia connection unit is located in the stowage compartment under the armrest.

- ▶ Insert the SD memory card into the SD card slot until it engages. The side with the contacts must face downwards.
Playable music files are played back.

Removing

- ▶ Press the SD card.
- ▶ Remove the SD card.

Overview of the audio mode

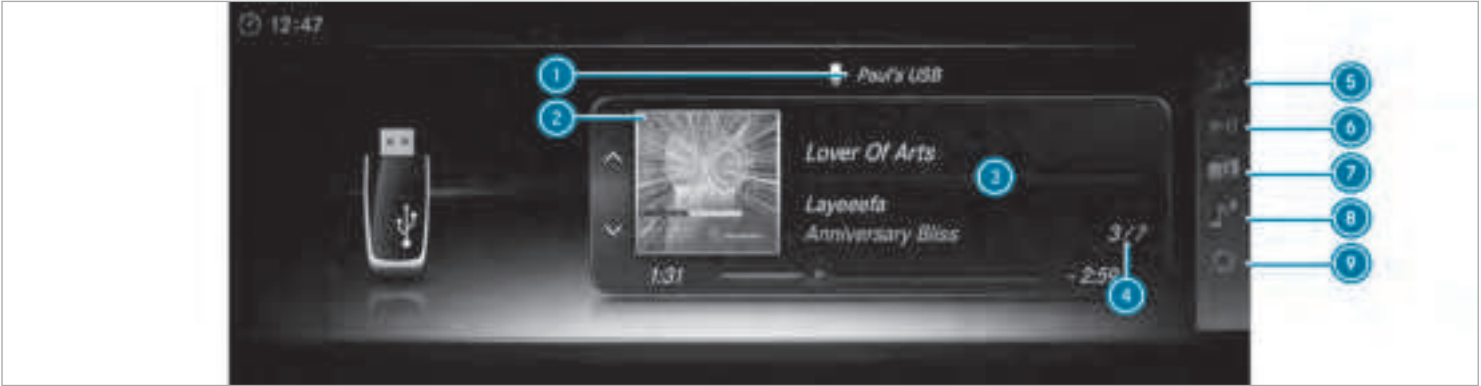

- ① Active data storage medium
- ② Album cover
- ③ Track, artist, album
- ④ Track number and number of tracks in the track list

- ⑤ Search
- ⑥ Playback control
- ⑦ Media sources
- ⑧ Sound

- ⑨ Options

Connecting USB devices

NOTE Damage caused by high temperatures

High temperatures can damage USB devices.

- ▶ Remove the USB device after use and take it out of the vehicle.

The multimedia connection unit is found in the stowage compartment under the armrest and has two USB ports. Depending on the vehicle's equipment, additional USB ports can be found in the stowage compartment of the centre console or rear folding compartment.

- ▶ Connect the USB device to the USB port. Playable music files are played back only if the corresponding media display is activated.

Selecting a track

Multimedia system:

→ Media

Selecting a track by skipping to a track

- ▶ **To skip backwards or forwards to a track:** navigate up or down.

Selecting a track using the current track list

- ▶ Select .
- ▶ Select **Current track list**.
- ▶ Select a track.

Selecting playback options

Multimedia system:

→ Media →  Options

Playback mode

- ▶ Select **Random playback of the current track list**.
The current track list is played in random order.
- ▶ Select **Random playback of the current medium**.
All tracks on the active data storage medium are played in random order.
- ▶ Select **Normal track sequence**.
The current track list is played in the order it appears on the data storage medium.

Controlling media playback

Multimedia system:

→ Media → ▶▶▶ | Playback control

A bar with playback controls is shown.

- ▶ **To pause playback:** press the controller. The  symbol is displayed.
- ▶ **To continue playback:** press the controller again. The  symbol is displayed.

To fast forward/rewind

- ▶ Move  on the timeline: turn the controller

To hide the playback controls

- ▶ Press the  button.

Media search

Starting the media search

Multimedia system:

➞ Media ➞  Search

Depending on the connected media sources and files, the following categories are listed:

- [Current track list](#)
- [Keyword search](#)
- [Playlists](#)
- [Artists](#)
- [Albums](#)
- [Tracks](#)
- [Folder](#)
- [Music genres](#)
- [Year](#)
- [Composers](#)

- [Podcasts](#) (Apple® devices)
- [Audiobooks](#) (Apple® devices)

▶ Select a category.

 The categories are available as soon as the entire media content has been read in and analysed.

Media Interface

Information about the Media Interface

Media Interface is a universal interface for the connection of mobile audio equipment. The multimedia system has two USB ports. The USB ports are located in the stowage compartment under the armrest.

Supported devices

The Media Interface allows you to connect the following data storage media:

- iPod®

- iPhone®
- MP3 player
- USB devices

For details and a list of supported devices, visit our website at <http://www.mercedes-benz.com/connect>. Follow the instructions in the "Media Interface" section.


Switching to Media Interface

Multimedia system:

➞ Media ➞  Media sources

- ▶ Connect a data storage medium to the USB port (→ page 327).
- ▶ Select a media device.
Playable music files are played back.

Overview of Media Interface

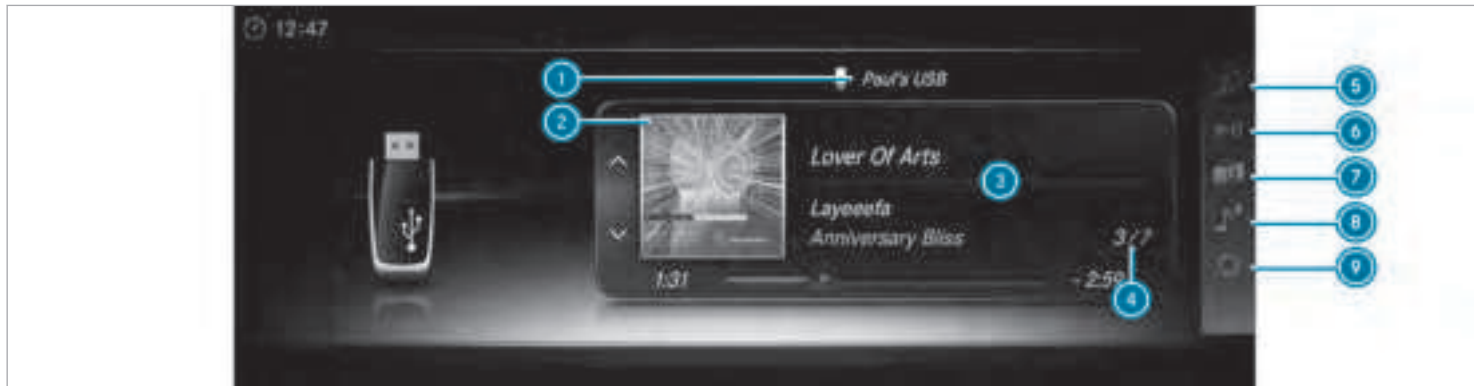

- ① Active data storage medium
- ② Cover
- ③ Artist, track and album
- ④ Track number and number of tracks in the track list

- ⑤ Search
- ⑥ Playback control
- ⑦ Media sources
- ⑧ Sound


- ⑨ Options

Bluetooth® audio

Information about Bluetooth® audio

Before using your Bluetooth® audio equipment with the multimedia system for the first time, you will need to authorise it (→ page 331).

Bluetooth® Audio overview

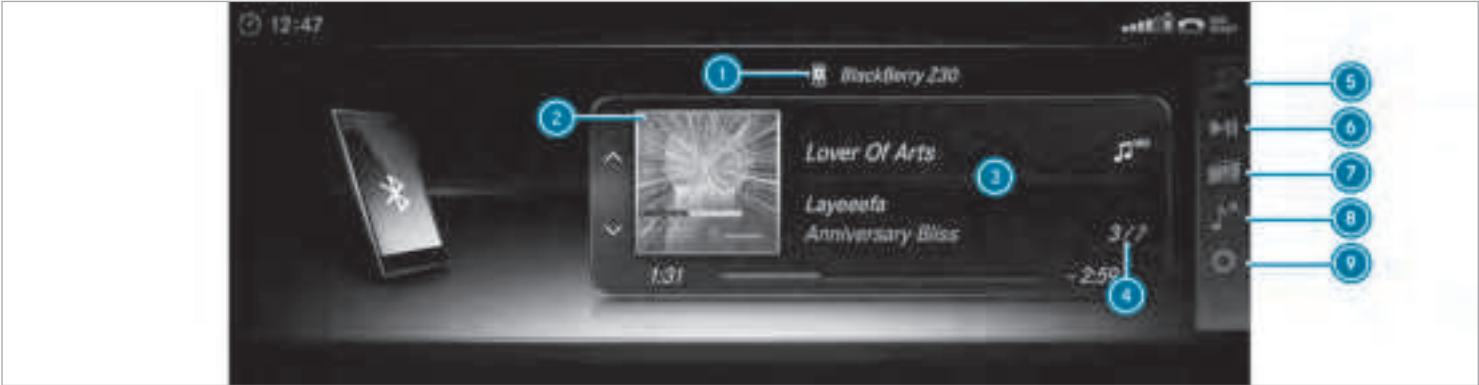

- ① Active data storage medium
- ② Cover art

- ③ Track, artist, album

- ④ Track number and number of tracks in the track list

- ⑤ Search
- ⑥ Playback control

Searching for and authorising a Bluetooth® audio device

Requirements:

- Bluetooth® is activated on the multimedia system and on the audio equipment (→ page 264).
- The audio equipment supports the Bluetooth® audio profiles A2DP and AVRCP.
- The audio equipment is "visible" for other devices.

Multimedia system:

Media ▶▶  Media sources ▶▶  Bluetooth audio

Authorising new Bluetooth® audio equipment

- ▶ Select .
- ▶ Select **Add new Bluetooth audio device.**

- ⑦ Media sources
- ⑧ Sound

- ▶ Select **Start search on the system.**
Detected audio equipment is displayed in the device list.
- ▶ Select a Bluetooth® audio device.
Authorisation starts. A code is displayed on the multimedia system and on the mobile phone.
- ▶ If the codes are identical, confirm on the audio equipment.
The audio equipment is connected and playback starts.

Selecting Bluetooth® audio equipment that has already been authorised

- ▶ Select .
- ▶ Select a Bluetooth® audio device.

Establishing a connection from the Bluetooth® audio equipment

The Bluetooth® device name of the multimedia system is **MB BLUETOOTH XXXXX**.

- ⑨ Options

- ▶ Select **Search from device.**
- ▶ Start the authorisation on the audio equipment (see manufacturer's operating instructions).
A code is displayed on the multimedia system and on the mobile phone.
- ▶ Confirm on both devices if the codes are identical.
The audio equipment is connected and playback starts.

With some audio equipment, playback must be initially started on the device itself so that the multimedia system can play the audio files.

- ① Device-specific information on authorising and connecting Bluetooth®-capable mobile phones can be obtained at <http://www.mercedes-benz.com/connect> or from a Mercedes-Benz Service Centre.

Activating Bluetooth® audio

Multimedia system:

→ Media →  Media sources

- ▶ Select  Bluetooth audio.
The multimedia system activates the connected Bluetooth® audio equipment.

Selecting a music player

Multimedia system:

→ Media →  Media sources →  Bluetooth audio

- ▶ Select a Bluetooth® audio device.
If multiple music players are present on the Bluetooth® audio equipment a list appears.
- ▶ Select a music player.
Playback starts.

Searching for a track

Multimedia system:

→ Media →  Media sources →  Bluetooth audio

- ▶ Select .

- ▶ Select a category.
A track list appears.

- ▶ Select a track.

- ① The function is only available when the mobile phone and the music player selected on the mobile phone support this function.

Switching Bluetooth® audio equipment via NFC**Requirements:**

- Observe the notes on using NFC (→ page 300).
- The Bluetooth® audio overview is displayed (→ page 332).

- ▶ Lightly press the NFC area on the mobile phone (see the manufacturer's operating instructions).
If the mobile phone has already been authorised on the multimedia system as Bluetooth® audio equipment, it is now connected.
If the mobile phone is authorised on the multimedia system as Bluetooth® audio equip-

ment for the first time, it is connected after confirming the instructions for the mobile phone (see the manufacturer's operating instructions).

Disconnecting Bluetooth® audio equipment

Multimedia system:

→ Telephone →  Media sources

- ▶ Select a Bluetooth® audio device.
- ▶ Select  Deauthorise.
- ▶ Select Yes.


Radio**Switching on the radio**

Multimedia system:

→ Radio

- ▶ Alternatively: press the  button.
The radio display appears. You will hear the last station played on the last frequency band selected.

Radio overview

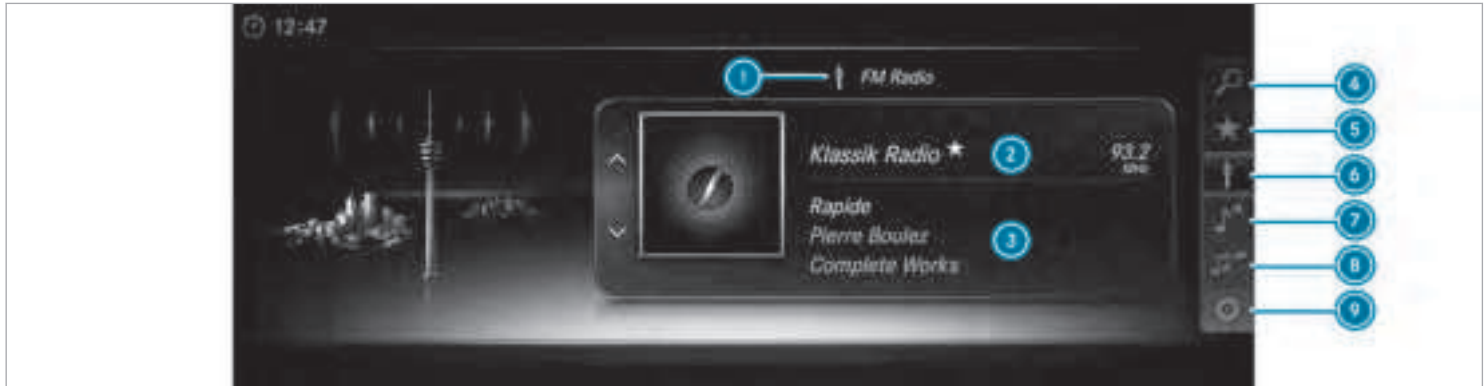

- ① Active frequency band
- ② Station name or set frequency
- ③ Artist, title, album and radio text

- ④ Station list
- ⑤ Presets
- ⑥ Radio source

- ⑦ Sound
- ⑧ Tag this song
- ⑨ Options

Setting the frequency band

Multimedia system:

↪ Radio ➤  Radio source

- ▶ Select a frequency band.

Selecting a radio station

Multimedia system:

↪ Radio

- ▶ Navigate up or down.

Calling up the radio station list

Multimedia system:

↪ Radio ➤ 

- ▶ Select a station.

Searching for radio stations using station names or direct frequency entry

Multimedia system:

↪ Radio ➤  ➤ 

- ▶ Enter a station name or frequency.
- ▶ Select **OK**.
The search results are displayed.
- ▶ Select a station.

Storing radio stations

Multimedia system:

↪ Radio ➤  Presets

- ▶ Select **Store current station in the presets**.

Editing radio station presets

Multimedia system:

↪ Radio ➤  Presets

Moving stations:

- ▶ Highlight a preset entry and navigate to the left.

- ▶ Select **Move highlighted station**.
- ▶ Select a preset.

Deleting stations:

- ▶ Highlight a preset entry and navigate to the left.
- ▶ Select **Delete highlighted station**.
- ▶ Select **Yes**.

Calling up a slide show (FM/DAB radio mode)

Multimedia system:

↪ Radio ➤  Radio source ➤ FM/
DAB radio stations



Slide show ❶ displays additional information provided by the station as an image. This can include logos, album covers, music tracks, programmes, news or service information, for example. The additional information is shown in full-screen mode by selecting ❷.

- ▶ **To activate full-screen mode:** select  Full screen.
- ▶ **To deactivate full-screen mode:** select .

Activating or deactivating the frequency fix function

Multimedia system:

- ▶  Radio ▶  Options ▶ Frequency fix
- ▶ Activate ☒ or deactivate ☐ the function. If the function is activated, the set frequency is kept even if the reception is poor.

Tagging music tracks

Multimedia system:

- ▶  Radio

If radio stations provide the relevant information, this function allows you to transfer information on the music track currently playing to an Apple® device. You can then purchase the audio file from the iTunes Store®.

- ▶ Select  Tag this song.
The track information is saved.

Switching traffic announcements on/off

Multimedia system:

- ▶  System ▶  Audio ▶ Navigation and traffic announcements

- ▶ Switch the function on ☒ or off ☐.

- ▶ Press and hold the  button on the multi-function steering wheel.

Setting the traffic information service volume increase

Multimedia system:

- ▶  System ▶  Audio ▶ Navigation and traffic announcements

- ▶ Select Traffic announcements volume increase.
- ▶ Select No increase or a value.

Activating/deactivating radio text

Multimedia system:

- ▶  Radio ▶  Options ▶ Display radio text information

- ▶ Activate ☒ or deactivate ☐ the function.

Sound

Tone settings

Information about the sound system

The sound system has a total output of 100 watts and is equipped with 7 speakers. It is

available for all functions in the radio and media modes.

Calling up the sound menu

Multimedia system:

➞ Media ➞  Sound

The following functions are available:

- Equaliser
- Balance and Fader
- Automatic volume adjustment
- Other sound settings

▶ Select a sound menu.

Adjusting treble, mid and bass settings

Multimedia system:

➞ Media ➞  Sound ➞ Equaliser

- ▶ Select Treble, Mid or Bass.
- ▶ Change the settings.

Activating/deactivating automatic volume adjustment

Multimedia system:

➞ Media ➞  Sound ➞ Automatic volume adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

▶ Activate ☒ or deactivate ☐ the function.

Adjusting the balance/fader

Multimedia system:

➞ Media ➞  Sound ➞ Balance and Fader

▶ Adjust the balance and fader.

▶ To exit the menu: press the  button.

Burmester® surround sound system

Information about the Burmester® surround sound system

The Burmester® surround sound system has a total output of 590 watts and is equipped with

13 speakers. It is available for all functions in the radio and media modes.

Calling up the sound menu in the Burmester® surround sound system

Multimedia system:

➞ Media ➞  Sound

The following functions are available:

- Equaliser
- Balance and Fader
- Automatic volume adjustment
- Surround sound
- Sound focus
- Other sound settings

▶ Select a function.

Adjusting the treble, mid and bass settings on the Burmester® surround sound system

Multimedia system:

➞ Media ➞  Sound ➞ Equaliser

- ▶ Select Treble, Mid or Bass.
- ▶ Set the desired values.

Activating/deactivating volume adjustment in the Burmester® surround sound system

Multimedia system:

↪ Media ➤  Sound ➤ Automatic volume adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

- ▶ Activate ☒ or deactivate ☐ the function.

Adjusting the balance/fader in the Burmester® surround sound system

Multimedia system:

↪ Media ➤  Sound ➤ Balance and Fader

- ▶ Adjust the balance and fader.
- ▶ **To exit the menu:** press the  button.

Switching surround sound on/off in the Burmester® surround sound system

Multimedia system:

↪ Media ➤  Sound ➤ Surround sound

- ▶ Activate ☒ or deactivate ☐ the function.

Adjusting the sound focus in the Burmester® surround sound system

Multimedia system:

↪ Media ➤  Sound ➤ Sound focus

- ▶ Adjust the sound focus.

ASSYST PLUS service interval display

Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display in the Instrument Display provides information on the remaining time or distance before the next service due date.

You can hide this service message using the back button on the left-hand side of the steering wheel.

You can obtain further information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.

Displaying the service due date

On-board computer:

➞ Service ➞ ASSYST PLUS

The next service due date is displayed.

► **To exit the display:** press the back button on the left-hand side of the steering wheel.

Make sure to observe the following further related subject:

- Operating the on-board computer (→ page 243).

Carrying out service work at regular intervals

! **NOTE** Premature wear through failure to observe service due dates

Service work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

- Always observe the prescribed service intervals.
- Always have the prescribed service work carried out at a qualified specialist workshop.

Special service requirements

The prescribed service interval is based on normal operation of the vehicle. Service work will

need to be performed more often if the vehicle is operated under arduous conditions or increased loads, for example:

- regular city driving with frequent intermediate stops.
- if the vehicle is primarily used to travel short distances.
- for frequent operation in mountainous terrain or on poor road surfaces.
- if the engine is often left idling for long periods.
- in particularly dusty conditions and/or if air-recirculation mode is frequently used.

In these or similar operating conditions, have the interior air filter, engine air filter, engine oil, oil filter etc. changed more frequently. The tyres must be checked more frequently if the vehicle is operated under increased loads. Further information can be obtained at a qualified specialist workshop.

Battery disconnection periods

The ASSYST PLUS service interval display can only calculate the service due date when the battery is connected.

- ▶ Note down the service due date displayed in the Instrument Display before disconnecting the battery (→ page 338).

Engine compartment

Active bonnet (pedestrian protection)

Operation of the active bonnet (pedestrian protection)

In certain accident situations, the risk of injury to pedestrians can be reduced by the actuation of the active bonnet. The rear area of the engine bonnet is raised by approximately 85 mm.

For the drive to the workshop, reset the triggered active bonnet yourself. If the active bonnet has been triggered, pedestrian protection may be limited.

A qualified specialist workshop must re-instate the full functionality of the active bonnet.


The active bonnet is not available in all countries.

Resetting the active bonnet

⚠ WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

- ▶ Let the engine cool down and only touch the component parts described below:

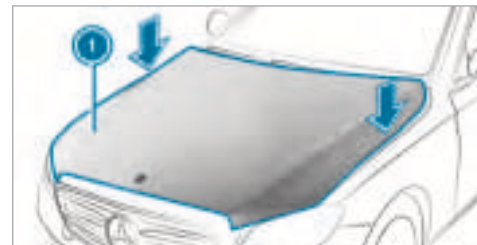

- ▶ With your hand flat, push down active bonnet ① in the area around the hinges on both sides (arrows). The engine bonnet must engage in position.
- ▶ If the active bonnet can be raised slightly at the rear in the area of the hinges, repeat the step until it engages correctly in position.

Opening/closing the bonnet

WARNING Risk of accident due to driving with the engine bonnet unlocked

An unlocked engine bonnet may open up when the vehicle is in motion and block your view.

- ▶ Never unlock the engine bonnet when driving.
- ▶ Before every trip, ensure that the engine bonnet is locked.

WARNING Risk of accident and injury when opening and closing the engine bonnet

When opening or closing the engine bonnet, it may suddenly drop into the end position. There is a risk of injury for anyone in the engine bonnet's range of movement.

- ▶ Only open or close the engine bonnet when there are no persons in the engine bonnet's range of movement.

WARNING Danger of burns when opening the bonnet

If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- ▶ Before opening the bonnet, allow the engine to cool down.
- ▶ In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.

WARNING Risk of injury due to moving parts

Certain components in the engine compartment may continue to move or suddenly move again even after the ignition has been switched off, e.g. the cooler fan.

Make sure of the following before performing tasks in the engine compartment:

- ▶ Switch the ignition off.

- ▶ Never touch the danger zone surrounding moving component parts, e.g. the rotation area of the fan.
- ▶ Remove jewellery and watches.
- ▶ Keep items of clothing and hair away from moving parts.

WARNING Risk of injury from touching component parts under voltage

The ignition system and the fuel injection system work under high voltage. If you touch component parts which are under voltage, you could receive an electric shock.

- ▶ Never touch components of the ignition system or the fuel injection system when the ignition is switched on.

WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine,

the radiator and parts of the exhaust system.


- ▶ Let the engine cool down and only touch the component parts described below:

⚠ WARNING Risk of injury from using the windscreen wipers while the engine bonnet is open


When the engine bonnet is open, and the windscreen wipers are set in motion, you can be trapped by the wiper linkage.

- ▶ Always switch off the windscreen wipers and ignition before opening the engine bonnet.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

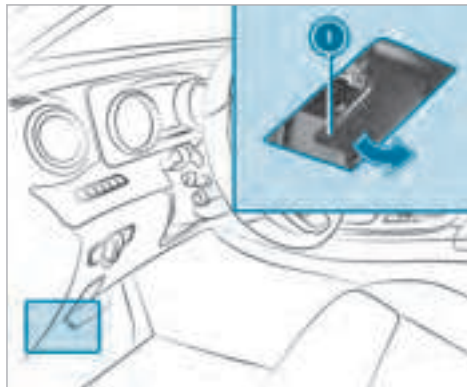

- ▶ **To open:** pull lever ❶ to release the bonnet.

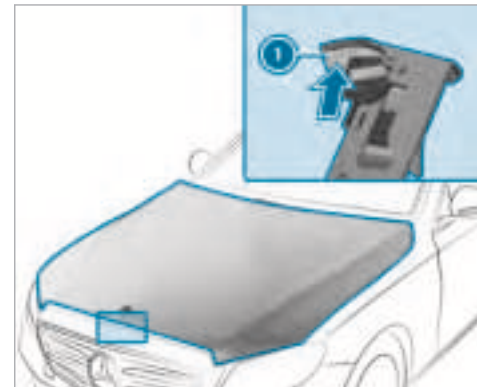

- ▶ Push bonnet catch ❶ upwards and lift the bonnet by approximately 40 cm.
- ▶ **To close:** lower the bonnet and let it fall from a height of approximately 20 cm.
- ▶ If the bonnet can still be lifted slightly, open the bonnet again and close it with a little more force until it engages correctly.

Engine oil

Checking the engine oil level using the oil dipstick

⚠ WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.


▶ Let the engine cool down and only touch the component parts described below:

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Depending on the engine, the oil dipstick may be installed in the engine compartment in different locations.

Waiting time before checking the oil level:

- Engine at normal operating temperature: five minutes.
- Engine not at normal operating temperature (e.g. the engine was only started briefly): 30 minutes.

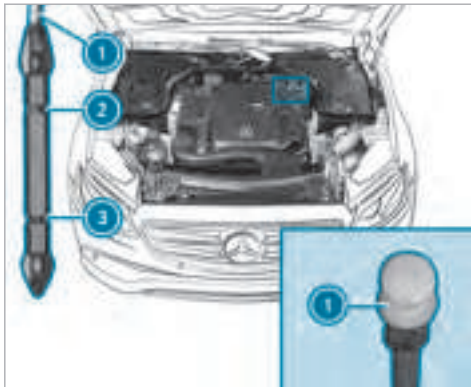

- ▶ Park the vehicle on a flat surface.
- ▶ Remove oil dipstick ① and wipe off.

- ▶ Slowly slide oil dipstick ① into the guide tube to the stop, and take it out again after approximately three seconds.
 - Oil level is correct: oil level is between ② and ③.
 - Oil level too low: oil level is at ③ or below.
 - Oil level too high: oil level is above ②.
- ▶ If the oil level is too low, top up with 1 l of engine oil.
- ▶ If the oil level is too high, drain off excess engine oil. Consult a qualified specialist workshop.

Checking the engine oil level using the on-board computer (E 220 d)

The engine oil level is determined during driving. The oil level display is only available after a driving time of up to 30 minutes and if the ignition is switched on, depending on the driving profile.

It is not possible to correctly measure the oil level if:

- The vehicle is not level during the measuring process.

- The bonnet was previously opened.

The engine must be restarted and the engine oil level will be determined again during driving.

On-board computer:

↪ Service ➤ Engine oil level:

You will see one of the following display messages in the multifunction display:

- ▶ **Engine oil level Measuring now:** measurement of the oil level is not yet possible. Repeat the request after a maximum of 30 minutes' driving.
- ▶ **Engine oil level OK** and the bar display for indicating the oil level in the multifunction display is green and is between "min" and "max": the oil level is correct.
- ▶ **Engine oil level Add 1.0 l** and the bar display for indicating the oil level in the multifunction display is orange and is below "min": top up with 1 l of engine oil.
- ▶ **Reduce engine oil level** and the bar display for indicating the oil level in the multifunction display is orange and is above "max": drain

off the excess engine oil. Consult a qualified specialist workshop.

- ▶ **For engine oil level turn on ignition:** switch on the ignition to check the engine oil level.
- ▶ **Engine oil level System inoperative:** sensor faulty or not connected. Consult a qualified specialist workshop.
- ▶ **Engine oil level System currently unavail.:** close the engine bonnet.

Topping up engine oil

⚠ WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

- ▶ Let the engine cool down and only touch the component parts described below:

⚠ WARNING Risk of fire and injury from engine oil

If engine oil comes into contact with hot component parts in the engine compartment, it may ignite.

- ▶ Make sure that no engine oil is spilled next to the filler opening.
- ▶ Allow the engine to cool off and thoroughly clean the engine oil from component parts before starting the vehicle.

❗ NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives


- ▶ Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.
- ▶ Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- ▶ Do not use additives.

- ▶ Follow the instructions in the service interval display regarding the oil change.

! NOTE Damage caused by topping up too much engine oil

Topping up too much engine oil can cause damage to the engine or the catalytic converter.

- ▶ Have excess engine oil removed at a qualified specialist workshop.

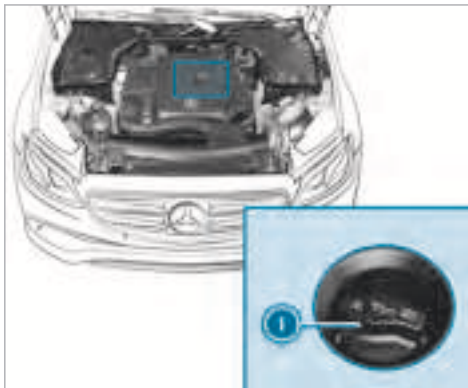

- ▶ Turn cap ❶ anti-clockwise and remove it.
- ▶ Top up the engine oil.
- ▶ Replace cap ❶ and turn it clockwise as far as it will go.
- ▶ Check the oil level again (→ page 342).

Checking the coolant level

! WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

- ▶ Let the engine cool down and only touch the component parts described below:

! WARNING Danger of burns from hot coolant

The engine cooling system is pressurised, particularly when the engine is warm. If you open the cap, you could be scalded by hot coolant spraying out.

- ▶ Let the motor cool down before opening the cap.
- ▶ When opening the cap, wear gloves and protective eyewear.

- ▶ Slowly turn the cap half a turn to allow pressure to escape.



- ▶ Park the vehicle on a flat surface.
- ▶ Check the coolant temperature display in the instrument cluster.
The coolant temperature must be below 70 °C.

- ▶ Slowly turn cap ① anti-clockwise to relieve overpressure.
- ▶ Continue turning cap ① anti-clockwise and remove it.

The coolant level is correct:

- If the engine is cold, up to marker bar ②
- If the engine is warm, up to 1.5 cm over marker bar ②
- ▶ If necessary, top up with coolant that has been approved by Mercedes-Benz.
- Further information on coolant (→ page 406)

Topping up the windscreen washer system

⚠ WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

- ▶ Let the engine cool down and only touch the component parts described below:

⚠ WARNING Danger of burns when opening the engine bonnet


If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- ▶ Before opening the engine bonnet, allow the engine to cool down.
- ▶ In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.

⚠ WARNING - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- ▶ Make sure that no windscreen washer concentrate spills out next to the filler opening.

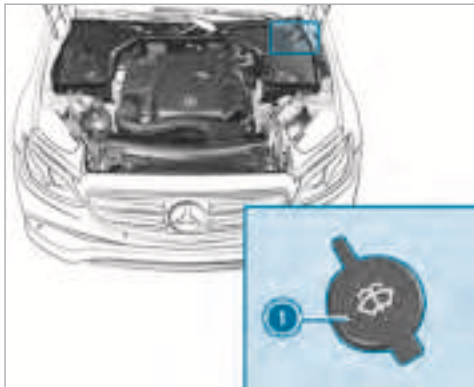

- ▶ Remove cap ① by the tab.
- ▶ Top up the washer fluid.

Cleaning and care

Information on washing the vehicle in a car wash

⚠ WARNING Risk of an accident due to reduced braking power after washing the vehicle

Braking efficiency is reduced after washing the vehicle.

- ▶ After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until braking power has been fully restored.

To avoid damage to your vehicle when using a car wash, ensure the following beforehand:

- Active Distance Assist DISTRONIC and the HOLD function are deactivated.
- The 360° Camera or the reversing camera is switched off.
- The side windows and sliding sunroof are completely closed.

- The blower for the ventilation/heating is switched off.
- The windscreen wiper switch is in position **0**.
- In car washes with a towing mechanism: neutral **N** is engaged.
- The key is at a distance of at least 3 m away from the vehicle, otherwise the boot lid could open unintentionally.
- ① If, after the car wash, you remove the wax from the windscreen and wiper rubber, this will prevent smearing and reduce wiper noise.

Information on using a high-pressure cleaner

⚠ WARNING Risk of an accident when using high-pressure cleaners with circular jet nozzles

The water jet of a circular jet nozzle (dirt grinder) can cause externally invisible damage to the tyres or chassis parts.

Components damaged in this way may unexpectedly fail.

- ▶ Do not use high-pressure cleaners with circular jet nozzles to clean the vehicle.
- ▶ Have damaged tyres or chassis parts replaced immediately.

To avoid damage to your vehicle, observe the following when using a high-pressure cleaner:

- Keep the key at least 3 m away from the vehicle. Otherwise the boot lid could open unintentionally.
- Maintain a distance of at least 30 cm to the vehicle.
- **Vehicles with decorative foil:** parts of your vehicle are covered with a decorative foil. Maintain a distance of at least 70 cm between the foil-covered parts of the vehicle and the nozzle of the high pressure cleaner. Move the high-pressure cleaner nozzle around whilst cleaning.
- Observe the information on the correct distance in the equipment manufacturer's operating instructions.
- Do not point the nozzle of the high-pressure cleaner directly at sensitive parts such as tyres, slits, electrical component parts, batteries, light sources and ventilation slots.

Washing the vehicle by hand

Observe the legal requirements, e.g. in a number of countries, washing by hand is only permitted in specially designated washing areas.

- ▶ Use a mild cleaning agent, e.g. car shampoo.
- ▶ Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- ▶ Carefully hose the vehicle off with water and dry using a chamois. Take care not to point the water jet directly towards the air inlet grille.

Notes on paintwork/matt finish paintwork care

Observe the following information:

Information on cleaning and care		Avoiding damage to the paintwork
Paint	• Insect remains: soak with insect remover and rinse off the treated areas afterwards. • Bird droppings: soak with water and rinse off afterwards. • Coolant, brake fluid, tree resins, oils, fuel and greases: gently rub with a cloth soaked in petroleum ether or lighter fluid. • Tar stains: use tar remover. • Wax: use silicone remover.	• Do not apply stickers, films etc. • Remove dirt immediately, where possible.
Matt finish	• The vehicle should preferably be washed by hand using a soft sponge, car shampoo and plenty of water. • Only use care products recommended by Mercedes-Benz.	• Do not polish the vehicle and light-alloy wheels. • Do not have your vehicle cleaned at an automatic car wash too frequently and do not use wash programs which finish with a hot wax vehicle treatment. • Do not use paint cleaner, buffing or polishing products such as a gloss preserver, e.g. wax. • Always have paintwork repairs carried out at a qualified specialist workshop.

Notes on care of vehicle parts

⚠ WARNING Risk of entrapment if the windscreen wipers are switched on while the windscreen is being cleaned

If the windscreen wipers are set in motion while you are cleaning the windscreen or wiper blades, you can be trapped by the wiper arm.

▶ Always switch off the windscreen wipers and the ignition before cleaning the windscreen or wiper blades.

⚠ WARNING Risk of burns from tailpipes and tailpipe trim

The tailpipe and tailpipe trim can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

▶ Always be particularly careful around the tailpipe and the tailpipe trim.
▶ Allow the vehicle parts to cool down before you touch them.

Observe the following information:

Information on cleaning and care		Avoiding vehicle damage
Wheels/rims	Use water and acid-free wheel cleaners.	- Do not use acidic wheel cleaners to remove brake dust. This could damage wheel bolts and brake components. - To avoid corrosion of the brake discs and brake linings, drive the vehicle for a few minutes after cleaning before parking it. The brake discs and brake linings warm up and dried out.
Windows	Clean the windows on the inside and outside using a damp cloth and cleaning products recommended by Mercedes-Benz.	Do not use dry cloths, abrasive products or cleaning agents containing solvents to clean the inside of the windows.

Information on cleaning and care		Avoiding vehicle damage
Wiper blades	Fold out the wiper blades and clean them using a damp cloth.	Do not clean the wiper blades too often.
Exterior lighting	Clean the lens with a wet sponge and mild detergent, e.g. car shampoo.	Only use cleaning agents or cleaning cloths that are suitable for plastic lenses.
AIRPANEL	If the vehicle is very dusty or there are salt deposits in the AIRPANEL mechanics, the adjustment range of the shutters in the radiator trim may be restricted. • Switch on the ignition, and the shutters open automatically after approximately 120 seconds. • Clean the bearing points of the shutters with a high-pressure water jet.	When using a high-pressure water jet, maintain a minimum distance of 30 cm.
Sensors	Clean the sensors in the front and rear bumpers and in the radiator grille with a soft cloth and car shampoo.	When using a high-pressure water jet, maintain a minimum distance of 30 cm.
Reversing camera and 360° Camera	• Open the camera cover with the multimedia system . • Use clear water and a soft cloth to clean the camera lens.	Do not use a high-pressure water jet.

Information on cleaning and care		Avoiding vehicle damage
Tailpipes	Clean with cleaning agents recommended by Mercedes-Benz, particularly in the winter and after washing the vehicle.	Use acid-free cleaning agents.
Trailer hitch	• Remove rust on the ball, e.g. with a wire brush. • Remove dirt with a lint-free cloth. • After cleaning, oil or grease the ball head lightly. • Observe the cleaning instructions in the operating instructions of the trailer hitch manufacturer.	Do not clean the ball neck with solvents or a high-pressure cleaner.

Notes on care of the interior

⚠ WARNING Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous.

When the airbags are deployed, plastic parts may break away.

▶ Do not use any care or cleaning products containing solvents to clean the cockpit.

⚠ WARNING Risk of injury or death from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

▶ Never bleach or dye seat belts.

Observe the following information:


Information on cleaning and care		Avoiding vehicle damage
Seat belts	Clean with warm water and soap solution.	• Do not use chemical cleaning agents. • Do not dry seat belts by heating them to over 80 °C or exposing them to direct sunlight.
Display	Clean the surface carefully with a microfibre cloth and TFT/LCD display cleaner.	• Switch off the display and allow to cool. • Do not use any other cleaning products.
Plastic trim	• Clean with a damp microfibre cloth. • If the trim is very dirty: use a cleaning agent recommended by Mercedes-Benz.	• Do not apply stickers, films etc. • Do not allow cosmetics, insect repellent or sun cream to come in contact with the plastic trim.
Genuine wood/trim elements	• Clean with a microfibre cloth. • Black piano-lacquer look: clean with a damp cloth and soap solution. • If the trim is very dirty: use a cleaning agent recommended by Mercedes-Benz.	Do not use solvent-based cleaning agents, polishes or waxes.
Roof lining	Clean with a brush or dry shampoo.	
Carpet	Use carpet and textile cleaning agents recommended by Mercedes-Benz.	

	Information on cleaning and care	Avoiding vehicle damage
Genuine leather seat covers	• Clean with a damp cloth and then wipe with a dry cloth. • Leather care: use leather care agents that have been recommended by Mercedes-Benz.	Do not allow the leather to become too damp. Do not use a microfibre cloth.
DINAMICA seat covers	Clean with a damp cloth.	Do not use a microfibre cloth.
Artificial leather seat covers	Clean with a damp cloth and 1% soap solution.	Do not use a microfibre cloth.
Cloth seat covers	Clean with a damp cloth and 1% soap solution and allow to dry.	
EASY-PACK boot box	Clean with a damp cloth.	Do not use any alcohol-based thinners, petrol or abrasive cleaning agents.

Emergency

Removing the safety vest


The safety vests are located in the safety vest compartments in the driver's and front passenger door stowage compartments.

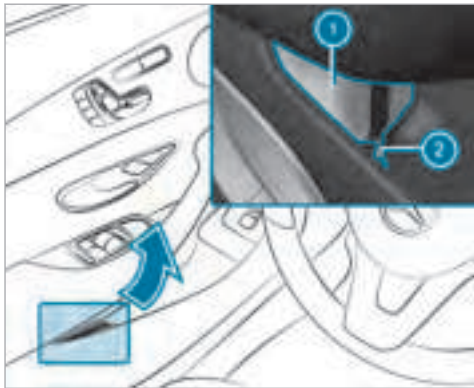

▶ **To remove:** pull out safety vest bag ① by loop ②.

▶ Open safety vest bag ① and pull out the safety vest.

① There are also safety vest compartments in the rear door stowage compartments in which safety vests can be stowed.

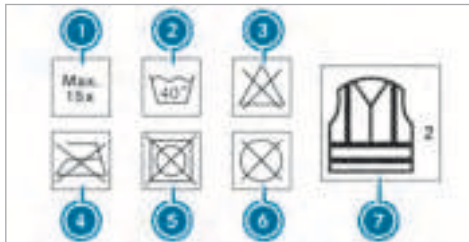

- ① Maximum number of washes
- ② Maximum wash temperature
- ③ Do not bleach
- ④ Do not iron
- ⑤ Do not use a laundry dryer
- ⑥ Do not dry-clean
- ⑦ This is a class 2 vest


The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.

Replace the safety vest if:

- it is damaged or dirt on the reflective strips can no longer be removed
- the maximum number of washes is exceeded
- the fluorescence of the safety vest has faded

Warning triangle

Removing the warning triangle

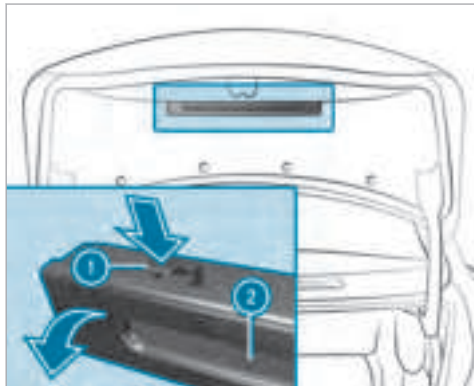


- ▶ Push both sides of warning triangle holder ① in the direction of the arrow and open it.
- ▶ Remove warning triangle ②.

Setting up the warning triangle




- ▶ Fold side reflectors ① upwards to form a triangle and attach at the top using press stud ②.
- ▶ Fold legs ③ down and out to the side.

First-aid kit (soft sided)

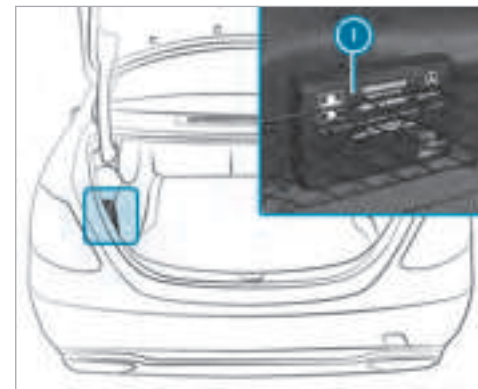

First-aid kit (soft sided) ① is in the boot in the left-hand stowage net.

Removing the fire extinguisher

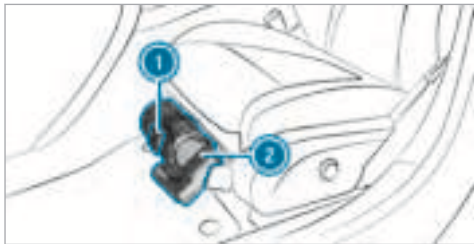

- ▶ **Left-hand drive vehicle:** Pull tab ❶ upwards.
- ▶ **Right-hand drive vehicle:** Pull tab ❶ downwards.
- ▶ Remove fire extinguisher ❷.

Flat tyre

Notes on flat tyres

⚠ WARNING Risk of accident due to a flat tyre

A flat tyre severely affects the driving characteristics as well as the steering and braking of the vehicle.

Tyres without run-flat characteristics:

- ▶ Do not drive on with a flat tyre.
- ▶ Change the flat tyre immediately with the emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tyres with run-flat characteristics:

- ▶ Observe the information and warning notes on MOExtended tyres (run-flat tyres).

In the event of a flat tyre, the following options are available depending on your vehicle's equipment:

- **Vehicles with MOExtended tyres:** it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tyres (run-flat tyres) (→ page 357).
 - **Vehicles with a TIREFIT kit:** you can repair the tyre so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (→ page 358).
 - **Vehicles with Mercedes me connect:** you can make a call for breakdown assistance via the overhead control panel in the case of a breakdown (→ page 311).
 - **All vehicles:** change the wheel (→ page 388).
- ❶ The emergency spare wheel is only available in certain countries.

MOExtended tyres (run-flat tyres)

⚠ WARNING Risk of accident when driving in limp-home mode

When driving in emergency mode the handling characteristics are impaired. e.g. when cornering, when accelerating strongly and when braking.

- ▶ Do not exceed the specified maximum speed.
- ▶ Avoid any abrupt steering and driving manoeuvres as well as driving over obstacles (kerbs, pot holes, off-road). This applies, in particular, to a loaded vehicle.
- ▶ Stop driving in the emergency mode if you notice:
 - banging noise
 - vehicle vibration
 - smoke which smells like rubber
 - continuous ESP® intervention
 - cracks in tyre side walls

- ▶ After driving in emergency mode have the rims checked by a qualified specialist workshop with regard to their further use.
- ▶ The defective tyre must be replaced in every case.

With MOExtended tyres (run-flat tyres), you can continue to drive your vehicle even if there is a total loss of pressure in one or more tyres. However, the tyre affected must not show any clearly visible damage.

You can recognise MOExtended tyres by the MOExtended marking which appears on the side wall of the tyre.

Vehicles with tyre pressure loss warning system: MOExtended tyres may only be used in conjunction with an activated tyre pressure loss warning system.

Vehicles with tyre pressure monitoring system: MOExtended tyres may only be used in conjunction with an activated tyre pressure monitoring system.

If a pressure loss warning message appears in the multifunction display:

- Check the tyre for damage.
- If driving on, observe the following notes.

Driving distance possible in limp-home mode after the pressure loss warning:

Load condition	Driving distance possible in limp-home mode
Partially laden	80 km
Fully laden	30 km

- The driving distance possible in limp-home mode may vary depending on the driving style.
- Maximum permissible speed 80 km/h.

If a tyre has gone flat and cannot be replaced with an MOExtended tyre, you can use a standard tyre as a temporary measure.

Using the TIREFIT kit

Have the following readily available:

- tyre sealant bottle
- enclosed TIREFIT sticker
- tyre inflation compressor

You can use TIREFIT tyre sealant to seal punctures of up to 4 mm, particularly those in the tyre contact surface. You can use TIREFIT in outside temperatures down to -20 °C.

⚠ WARNING Risk of accident when using tyre sealant

In the following situations, the tyre sealant is unable to provide sufficient breakdown assistance, as it is unable to seal the tyre properly:

- there are cuts or punctures in the tyre larger than those previously mentioned.
- the wheel rim is damaged.
- you have driven at very low tyre pressures or on a flat tyre.

- ▶ Do not drive on.
- ▶ Consult a qualified specialist workshop.

⚠ WARNING Risk of injury and poisoning from tyre sealant

Tyre sealant is hazardous to health and causes irritation. Do not allow it to come into contact with your skin, eyes or clothing, and do not swallow it. Do not inhale any vapours. Keep the tyre sealant away from children.

Observe the following if you come into contact with the tyre sealant:

- ▶ Rinse off the tyre sealant from your skin using water immediately.
- ▶ If tyre sealant gets into your eyes, thoroughly rinse them using clean water immediately.
- ▶ If tyre sealant has been swallowed, thoroughly rinse out your mouth immediately and drink plenty of water. Do not induce vomiting and seek medical attention immediately.

- ▶ Change out of clothing which has come into contact with tyre sealant immediately.
- ▶ If an allergic reaction occurs, seek medical attention immediately.


! NOTE Overheating due to the tyre inflation compressor running too long

- ▶ Do not run the tyre inflation compressor for longer than ten minutes without interruption.

Comply with the manufacturer's safety notes on the sticker on the tyre inflation compressor.

Have the tyre sealant bottle replaced every four years at a qualified specialist workshop.

- ▶ Do not remove any foreign objects which have penetrated the tyre.

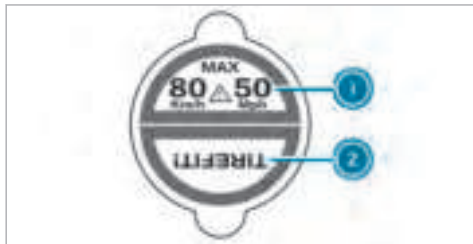

- ▶ Affix part ① of the TIREFIT sticker to the instrument cluster within the driver's field of vision.
- ▶ Affix part ② of the TIREFIT sticker near the valve on the wheel with the defective tyre.



- ▶ Pull plug ④ with the cable and hose ⑤ out of the tyre inflation compressor housing.
- ▶ Push the plug of hose ⑤ into flange ⑥ of tyre sealant bottle ① until the plug engages.
- ▶ Place tyre sealant bottle ① head downwards into recess ② of the tyre inflation compressor.



- ▶ Remove the cap from valve ⑦ on the faulty tyre.
- ▶ Screw filling hose ⑧ onto valve ⑦.
- ▶ Insert plug ④ into a 12 V socket in your vehicle.
- ▶ Switch the ignition on.
- ▶ Press on and off switch ③ on the tyre inflation compressor. The tyre inflation compressor is switched on. The tyre is inflated. First, tyre sealant is pumped into the tyre. The pressure may briefly rise to approximately 500 kPa (5 bar/73 psi).

Do not switch off the tyre inflation compressor during this phase.

- ▶ Let the tyre inflation compressor run for a maximum of ten minutes. The tyre should then have attained a tyre pressure of at least 200 kPa (2.0 bar/ 29 psi).

If tyre sealant leaks out, make sure you clean the affected area as quickly as possible. It is preferable to use clean water.

If you get tyre sealant on your clothing, have it cleaned as soon as possible with perchloroethylene.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has not been achieved:

- ▶ Switch off the tyre inflation compressor.
- ▶ Unscrew the filling hose from the valve of the defective tyre.

Please note that tyre sealant may leak out when unscrewing the filling hose.

- ▶ Very slowly drive forwards or reverse approximately 10 m.
- ▶ Pump up the tyre again. After a maximum of ten minutes the tyre pressure must be at least 200 kPa (2.0 bar/ 29 psi).

⚠ WARNING Risk of accident due to the specified tyre pressure not being achieved

If the specified tyre pressure is not achieved after the specified time, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

Damaged tyres and a tyre pressure that is too low can significantly impair braking and handling characteristics.

- ▶ Do not drive on.
- ▶ Consult a qualified specialist workshop.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has been achieved:

⚠ WARNING Risk of accident from driving with sealed tyres

A tyre temporarily sealed with tyre sealant impairs handling characteristics and is not suitable for higher speeds.

- ▶ Adapt your driving style accordingly and drive carefully.
- ▶ Do not exceed the specified maximum speed with a tyre that has been sealed using tyre sealant.

- ▶ Observe the maximum permissible speed for a tyre sealed with tyre sealant 80 km/h.
- ▶ Affix the upper section of the TIREFIT sticker to the instrument cluster where it will be easily seen by the driver.

! NOTE Staining from leaking tyre sealant

After use, excess tyre sealant may leak out from the filling hose.

- ▶ Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.

 **ENVIRONMENTAL NOTE** Environmental pollution caused by environmentally irresponsible disposal

Tyre sealant contains pollutants.

- ▶ Have the tyre sealant bottle disposed of professionally, e.g. at a Mercedes-Benz Service Centre.

- ▶ Switch off the tyre inflation compressor.
- ▶ Unscrew the filling hose from the valve of the defective tyre.
- ▶ Stow the tyre sealant bottle, the tyre inflation compressor and the warning triangle.
- ▶ **Pull away immediately.**
- ▶ Stop after driving for approximately ten minutes and check the tyre pressure using the tyre inflation compressor. The tyre pressure must now be at least 130 kPa (1.3 bar/19 psi).

 **WARNING** Risk of accident due to the specified tyre pressure not being achieved


If the specified tyre pressure is not achieved after a brief drive, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

Damaged tyres and a tyre pressure that is too low can significantly impair braking and handling characteristics.

- ▶ Do not drive on.
- ▶ Consult a qualified specialist workshop.

Countries that have Mercedes-Benz Service24h: a sticker with the phone number can also be found in your vehicle, e.g. on the B-pillar on the driver's side.

- ▶ Correct the tyre pressure if it is still at least 130 kPa (1.3 bar/19 psi). See the tyre pressure table on the fuel filler flap for values.
- ▶ **To increase the tyre pressure:** switch on the tyre inflation compressor.

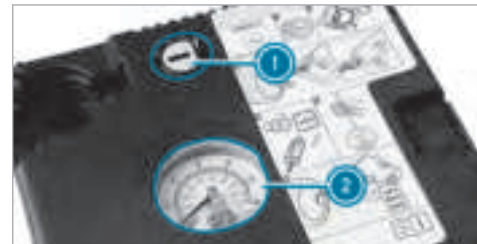

- ▶ **To reduce the tyre pressure:** press pressure release button ① next to manometer ②.
- ▶ When the tyre pressure is correct, unscrew the filling hose from the valve of the sealed tyre.
- ▶ Screw the valve cap onto the tyre valve of the sealed tyre.
- ▶ Pull the tyre sealant bottle out of the tyre inflation compressor. The filling hose stays on the tyre sealant bottle.

- ▶ Drive to the nearest qualified specialist workshop and have the tyre, tyre sealant bottle and filling hose replaced there.

Battery (vehicle)

Notes on the 12 V battery

Plug-in hybrid: make sure that you read the separate operating instructions. You could otherwise fail to recognise dangers, e.g. due to high voltage.

⚠ WARNING Risk of an accident due to work carried out incorrectly on the battery

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can lead to function restrictions in safety-relevant systems, e.g. the lighting system, ABS (anti-lock braking system) or ESP® (Electronic Stability Program). The operating safety of your vehicle may be restricted.

You could lose control of the vehicle in the following situations:

- when braking
 - in the event of abrupt steering manoeuvres and/or when the vehicle's speed is not adapted to the road conditions
- ▶ In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
 - ▶ Do not continue driving.
 - ▶ Always have work on the battery carried out at a qualified specialist workshop.

- Further information on ABS (→ page 183)
- Further information on ESP® (→ page 183)

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz. These batteries provide increased impact protection to prevent vehicle occupants from suffering acid burns should the battery be damaged in the event of an accident.

All vehicles except vehicles with a lithium-ion battery

⚠ WARNING Risk of explosion due to electrostatic charge

Electrostatic charge can cause sparks which may ignite the highly flammable gas mixture in the battery.

- ▶ To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

⚠ WARNING Danger of chemical burns from the battery acid

Battery acid is caustic.

- ▶ Avoid contact with the skin, eyes or clothing.
- ▶ Do not lean over the battery.

- ▶ Do not inhale battery gases.
- ▶ Keep children away from the battery.
- ▶ Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

All vehicles

 **ENVIRONMENTAL NOTE** Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.



Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified

specialist workshop or to a collection point for used batteries.

If you have to connect the 12 volt battery, contact a qualified specialist workshop.

Comply with safety notes and take protective measures when handling batteries.



Risk of explosion



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor if necessary.



Wear safety glasses.



Keep children away.



Observe this Owner's Manual.

If you do not intend to use the vehicle over an extended period of time:

- Activate standby mode, or
- Connect the battery to a battery charger approved by Mercedes-Benz, or
- Consult a qualified specialist workshop to disconnect the battery

Starting assistance and charging the 12 V battery

Vehicles with a lithium-ion battery

- ▶ When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.

! **NOTE** Damage to the battery from over-voltage

When charging using a battery charger without a maximum charging voltage, the battery or the on-board electronics may be damaged.

- ▶ Only use battery chargers with a maximum charging voltage of 14.4 V.

! **NOTE** Shortening the service life of the battery by charging the battery at low temperatures

Charging the battery at very low temperatures may shorten the service life of the battery and have a negative effect on starting.

- ▶ Do not charge the battery at very low temperatures.

All other vehicles

- ▶ When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.

! **NOTE** Damaging the battery through overvoltage

When using a battery charger without a maximum charging voltage, the battery or the vehicle electronics may be damaged.

- ▶ Only use battery chargers with a maximum charging voltage of 14.8 V.

! **WARNING** Risk of explosion from hydrogen gas igniting

A battery generates hydrogen gas during the charging process. If there is a short circuit or sparks start to form, there is a danger of the hydrogen gas igniting.

- ▶ Make sure that the positive terminal of the connected battery does not come into contact with vehicle parts.
- ▶ Never place metal objects or tools on a battery.
- ▶ When connecting and disconnecting the battery, you must observe the described order for the battery clamps.
- ▶ When giving starting assistance, always make sure that you only connect battery terminals with identical polarity.
- ▶ During starting assistance, you must observe the described order for connecting and disconnecting the jump lead.
- ▶ Do not connect or disconnect the battery clamps while the engine is running.

! **WARNING** Risk of explosion during charging process and starting assistance

During the charging process and starting assistance, the battery may release an explosive gas mixture.

- ▶ Avoid fire, naked flames, creating sparks and smoking.
- ▶ Make sure that there is sufficient ventilation during the charging process and during starting assistance.
- ▶ Do not lean over a battery.

If the indicator/warning lamps in the instrument cluster do not light up at low temperatures, it is very likely that the discharged battery has frozen.

⚠ WARNING Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point.

During starting assistance or battery charging, battery gas may be released.

- ▶ Always thaw a frozen battery out first before charging it or performing starting assistance.

The service life of a battery that has been thawed may be dramatically shortened.

It is recommended that you have a thawed battery checked at a qualified specialist workshop.

Plug-in hybrid: make sure that you read the separate operating instructions. You could otherwise fail to recognise dangers, e.g. due to high voltage.

All vehicles

! **NOTE** Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.

- ▶ Avoid numerous and extended attempts to start the engine.

Observe the following points during starting assistance and when charging the battery:

- Only use undamaged jump lead/charging cables with a sufficient cross-section and insulated terminal clamps.
- Non-insulated parts of the terminal clamps must not come into contact with other metal parts while the jump lead/charging cable is


connected to the battery/jump-start connection point.

- The jump leads/charging cable must not come into contact with any parts which may move when the engine is running.
- Always make sure that neither you nor the battery is electrostatically charged.
- Keep away from fire and naked flames.
- Do not lean over the battery.
- **When charging:** only use battery chargers tested and approved by Mercedes-Benz and read the battery charger's operating instructions before charging the battery.

Observe the additional following points during starting assistance:

- Starting assistance may only be provided using batteries with a nominal voltage of 12 V.
- The vehicles must not touch.
- **Petrol engine:** Only accept starting assistance if the engine and exhaust system are cold.

- ▶ Secure the vehicle by applying the electric parking brake.
- ▶ **Automatic transmission:** Shift the transmission to position **P**.
- ▶ **Manual transmission:** Shift into neutral.
- ▶ Make sure that the ignition and all electrical consumers are switched off.
- ▶ Open the engine bonnet.

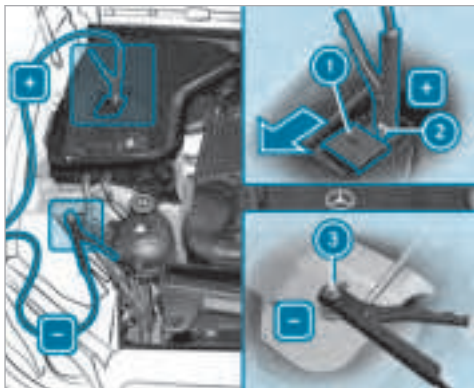

- ▶ Slide cover ① of positive clamp ② on the jump-starting connection point in the direction of the arrow.
- ▶ Connect positive clamp ② on your vehicle to positive pole of donor battery using the jump lead/charging cable. Always begin with positive clamp ② on your own vehicle first.
- ▶ **During the starting assistance procedure:** start the engine of the donor vehicle and run at idle speed.
- ▶ Connect the negative pole of the donor battery and earth point ③ of your own vehicle by using the jump lead/charging cable. Begin with the donor battery first.
- ▶ **During starting assistance:** start the engine of your own vehicle.
- ▶ **During the charging process:** start the charging process.
- ▶ **During starting assistance:** let the engines run for several minutes.
- ▶ **During starting assistance:** before disconnecting the jump lead, switch on an electrical

consumer on your own vehicle, e.g. the rear window heater or lighting.

When the starting assistance/charging process is complete:

- ▶ First, remove the jump lead/charging cable from earth point ③ and negative pole of the donor battery, then from positive clamp ② and positive pole of the donor battery. Begin each time with the contacts on your own vehicle first.
- ▶ After removing the jump lead/charging cable, close cover ① of positive clamp ②.

You can obtain further information on starting assistance at any qualified specialist workshop.

Tow starting or towing away

Permitted towing methods

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it away.

! **NOTE** Damage to the vehicle due to towing away incorrectly

► Observe the instructions and notes on towing away.

Permitted towing methods

			
	Both axles on the ground	Front axle raised	Rear axle raised
Vehicles with manual transmission	Yes, maximum 50 km at 50 km/h	Yes, maximum 50 km at 50 km/h	Yes, maximum 50 km at 50 km/h
Vehicles with automatic transmission	Yes, maximum 50 km at 50 km/h	No	Yes, if the steering wheel is fixed in the centre position with a steering wheel lock.
4MATIC vehicles	Yes, maximum 50 km at 50 km/h	No	No

Towing with a raised axle: towing should be performed by a towing company.

Towing the vehicle with both axles on the ground

► Observe the notes on the permitted towing methods (→ page 366) (→ page 367).

- ▶ Make sure that the battery is connected and charged.

When the battery is discharged:

- the engine cannot be started.
- the electric parking brake cannot be released or applied.
- **vehicles with automatic transmission:** the automatic transmission cannot be shifted to position **N** or **P**.

i Vehicles with automatic transmission: if the automatic transmission cannot be shifted to position **N**, have the vehicle transported away (→ page 369). A towing vehicle with lifting equipment is required for vehicle transportation.

! NOTE Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- ▶ A towing speed of 50 km/h must not be exceeded.
- ▶ A towing distance of 50 km must not be exceeded.

! WARNING Risk of accident when towing a vehicle which is too heavy

If the vehicle being tow-started or towed away is heavier than the permissible gross mass, the following situations can occur:

- the towing eye may become detached.
- the car/trailer combination may swerve or even overturn.
- ▶ If another vehicle is tow-started or towed away, its weight must not exceed the permissible gross mass of your own vehicle.

If a vehicle must be tow-started or towed away, its weight must not exceed the permissible gross mass of the towing vehicle.

- ▶ Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate .

▶ **Vehicles with automatic transmission:** do not open the driver's door or front passenger door, otherwise the automatic transmission automatically shifts to position **P**.

▶ Fit the towing eye (→ page 371).

▶ Attach the tow bar.

! NOTE Damage due to incorrect connection

- ▶ Only connect the tow rope or tow bar to the towing eyes.

i You can also attach the tow bar to the trailer hitch.

▶ Deactivate the automatic locking mechanism (→ page 69).

▶ Do not activate the HOLD function.

▶ Deactivate tow-away protection (→ page 87).

▶ Deactivate Active Brake Assist (→ page 191).

▶ **Vehicles with automatic transmission:** shift the automatic transmission to position **N**.

▶ **Vehicles with manual transmission:** shift to neutral **N**.

▶ Release the electric parking brake.

▶ **Vehicles with manual transmission:** switch on the ignition, otherwise the steering wheel locking may engage.

⚠ WARNING Risk of accident due to limited safety-related functions during the towing process

Safety-related functions are limited or no longer available in the following situations:

- the ignition is switched off.
- the brake system or power steering system is malfunctioning.
- the energy supply or the on-board electrical system is malfunctioning.

When your vehicle is then towed away, significantly more effort may be required to steer and brake than is normally required.

▶ Use a tow bar.

▶ Make sure that the steering wheel can move freely, before towing the vehicle away.

! NOTE Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

▶ Pull away slowly and smoothly.

Loading the vehicle for transport

▶ Observe the notes on towing away (→ page 367).

▶ Connect the tow bar to the towing eye to load the vehicle.

① You can also attach the tow bar to the trailer hitch.

▶ **Vehicles with automatic transmission:** shift the automatic transmission to position **N**.

① **Vehicles with automatic transmission:** the automatic transmission may be locked in position **P** in the event of damage to the electrical system. To shift to **N**, provide the on-board electrical system with power (→ page 364).

▶ **Vehicles with manual transmission:** shift to neutral.

▶ Load the vehicle onto the transporter.

▶ **Vehicles with automatic transmission:** shift the automatic transmission to position **P**.

▶ **Vehicles with manual transmission:** engage first or reverse gear.

▶ Use the electric parking brake to secure the vehicle and prevent it from rolling away.

▶ Only secure the vehicle by the wheels.

Vehicles with ADS PLUS (Adaptive Damping System PLUS)

⚠ WARNING Risk of an accident when transporting vehicles with Adaptive Damping System PLUS

The reduced damping forces on the vehicle being transported can cause the vehicle/trailer combination to start to swing.

As a result, when transporting vehicles with the Adaptive Damping System PLUS, the vehicle/trailer combination may start to skid. Consequently, you could lose control of your vehicle.


- ▶ When transporting, ensure that:
 - the vehicle has been loaded onto the transporter correctly
 - the vehicle is secured at all four wheels with suitable tensioning straps
 - the maximum permissible speed of 60 km/h is not exceeded when transporting

! NOTE Damage to the vehicle from securing it incorrectly

- ▶ After loading, the vehicle must be secured on all four wheels. Otherwise, the vehicle could be damaged.
- ▶ A minimum distance of 20 cm upwards and 10 cm downwards must be kept to the transport platform.

- ▶ Secure the vehicle on all four wheels after loading.

4MATIC vehicles/vehicles with automatic transmission

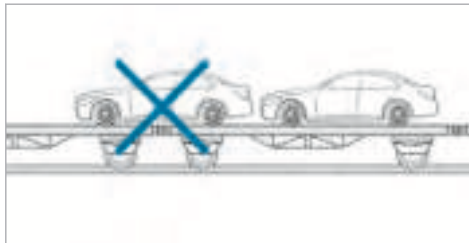


- ▶ Make sure that the front and rear axles come to rest on the same transport vehicle.

! NOTE Damage to the drivetrain due to incorrect positioning


- ▶ Do not position the vehicle above the connection point of the transport vehicle.

Towing eye storage location

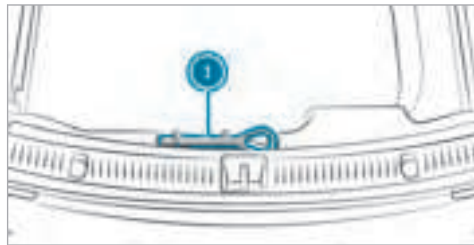

Towing eye ① is attached to the edge of the boot under the boot floor.

Fitting the towing eye

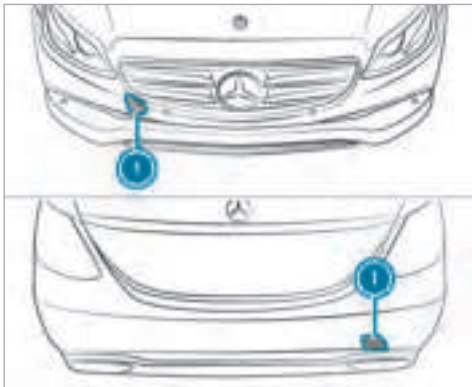

- ▶ Press the mark on cover ❶ inwards and remove.
- ▶ Screw in the towing eye clockwise to the stop.

Vehicles with a trailer hitch: vehicles with a trailer hitch do not have a bracket at the back for

the towing eye. Connect the tow bar to the trailer hitch.

- ❶ Make sure that cover ❶ engages in the bumper when you remove the towing eye.

! **NOTE** Damage due to incorrect use of the towing eye

When a towing eye is used to recover a vehicle, the vehicle may be damaged in the process.

- ▶ Only use the towing eye to tow away or tow start the vehicle.

Tow-starting the vehicle (emergency engine start)

Vehicles with automatic transmission

! **NOTE** Damage to the automatic transmission due to tow-starting

The automatic transmission may be damaged in the process of tow-starting vehicles with automatic transmission.

- ▶ Vehicles with automatic transmission must not be tow-started.

- ▶ Vehicles with automatic transmission must not be tow-started.

Vehicles with manual transmission

- ▶ Observe the notes on towing away (→ page 367).
- ▶ If necessary, allow the engine and exhaust system to cool down.
- ▶ Switch the ignition on.
- ▶ Engage second gear.
- ▶ Release the electric parking brake.
- ▶ Tow-start the vehicle while the clutch pedal is fully depressed.
- ▶ Slowly release the clutch pedal.
- ▶ Immediately shift to neutral if the engine starts.
- ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions.

- ▶ Remove the tow bar.
- ▶ Remove the towing eye.
- ▶ Have the vehicle checked at a qualified specialist workshop.

Electrical fuses

Notes on electrical fuses

⚠ WARNING Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- ▶ Always replace faulty fuses with specified new fuses containing the correct amperage.

! NOTE Damage caused by incorrect fuses

Incorrect fuses may cause damage to electrical components or systems.

- ▶ Only use Mercedes-Benz approved fuses with the correct fuse rating.

Blown fuses must be replaced with fuses of the same rating, which you can recognise by the colour and fuse rating. The fuse ratings are listed in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the boot .

! NOTE Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- ▶ When the fuse box is open, make sure that no moisture can enter the fuse box.
- ▶ When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause traced and rectified at a qualified special-

ist workshop, e.g. a Mercedes-Benz Service Centre.

Ensure the following before replacing a fuse:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The ignition is switched off.

The electrical fuses are located in various fuse boxes:

- Fuse box in the engine compartment on the driver's side (→ page 373)
- Fuse box on the driver's side of the cockpit (→ page 374)
- Fuse box in the front-passenger footwell (→ page 374)
- Fuse box in the boot on the right-hand side of the vehicle, when viewed in the direction of travel

Fuse box in the engine compartment

Requirements:

Observe the notes on electrical fuses
(→ page 372).

Have the following readily available:


- A dry cloth
- A screwdriver

Opening


⚠ WARNING Risk of injury from using the windscreen wipers while the engine bonnet is open

When the engine bonnet is open, and the windscreen wipers are set in motion, you can be trapped by the wiper linkage.

- ▶ Always switch off the windscreen wipers and ignition before opening the engine bonnet.

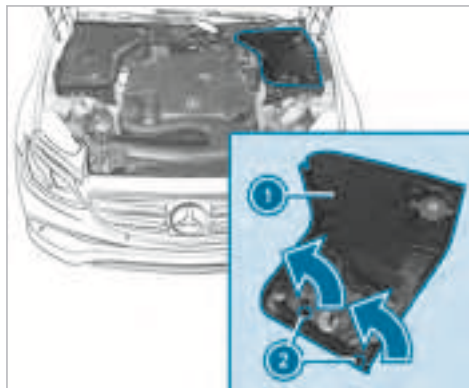

- ▶ Turn clip ② on cover ① a quarter-turn to the left.
- ▶ Pull cover ① upwards in the direction of the arrow.

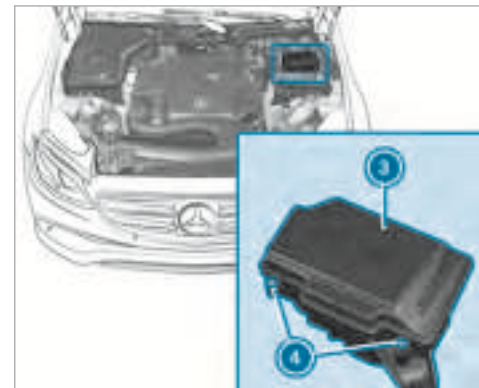

- ▶ Remove any existing moisture from the fuse box using a dry cloth.
- ▶ Loosen screws ④, remove fuse box lid ③ from the top.

Closing

- ▶ Check whether the seal is positioned correctly in the lid.

- ▶ Insert lid into the bracket at the rear of the fuse box.
- ▶ Fold down lid of the fuse box and tighten screws ④.
- ▶ Insert cover ① on both sides and engage safety clips.
- ▶ Close the engine bonnet.

Fuse box on the dashboard


The fuse box is on the side of the dashboard under a cover.

- ▶ Contact a Mercedes-Benz service centre for further information.

Fuse box in the front-passenger footwell

Requirement:

- Observe the notes on electrical fuses (→ page 372).

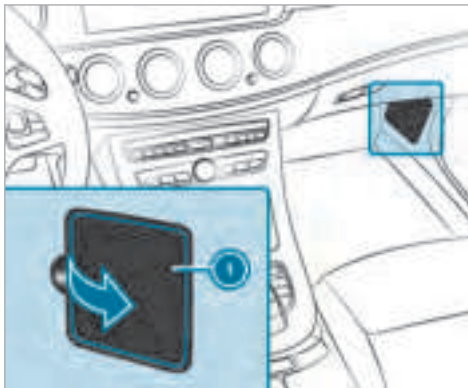

- ▶ Open cover ① in the direction of the arrow and remove it.

Noise or unusual handling characteristics

While driving, pay attention to vibrations, noises and unusual handling characteristics, e.g. pulling to one side. This may indicate that the wheels or tyres are damaged. If you suspect that a tyre is defective, reduce your speed immediately. Stop the vehicle as soon as possible to check the wheels and tyres for damage. Hidden tyre damage could also be causing the unusual handling characteristics. If you find no signs of damage, have the tyres and wheels checked at a qualified specialist workshop.

Regular checking of wheels and tyres

⚠ WARNING Risk of accident from damaged tyres

Damaged tyres can cause tyre pressure loss. As a result, you could lose control of your vehicle.

- ▶ Check the tyres regularly for signs of damage and replace any damaged tyres immediately.

⚠ WARNING Risk of aquaplaning due to insufficient tyre tread

Insufficient tyre tread will result in reduced tyre grip. The tyre tread is no longer able to dissipate water.

This means that in heavy rain or slush the risk of aquaplaning is increased, in particular where speed is not adapted to suit the conditions.

If the tyre pressure is too high or too low, tyres may exhibit different levels of wear at different locations on the tyre tread.

- ▶ Thus, you should regularly check the tread depth and the condition of the tread across the entire width of all tyres.

Minimum tread depth for:

- Summer tyres: 3 mm
- M+S tyres: 4 mm

- ▶ For safety reasons, replace the tyres before the legally prescribed limit for the minimum tread depth is reached.

Carry out the following checks on all wheels regularly, at least once a month or as required, e.g. prior to a long journey or driving off-road:

- Check the tyre pressure (→ page 376).
- Visual inspection of wheels and tyres for damage.
- Check the valve caps.
The valves must be protected against moisture and dirt by the valve caps approved especially for your vehicle by Mercedes-Benz.
- Visual check of the tread depth and the tyre contact surface across the entire width.

The minimum tread depth for summer tyres is 3 mm and for winter tyres 4 mm.

Notes on snow chains

⚠ WARNING Risk of accident due to incorrect snow chain fitting

If you have fitted snow chains to the front wheels, the snow chains may drag against the vehicle body or chassis components.

This could cause damage to the vehicle or the tyres.

- ▶ Never fit snow chains on the front wheels.
- ▶ Only fit snow chains on the rear wheels in pairs.

! NOTE Damage to the wheel trim from fitted snow chains

If snow chains are fitted to steel wheels, the wheel trims can be damaged.

- ▶ Remove the wheel trims of steel wheels before fitting snow chains.

- Snow chains are only permissible for certain wheel/tyre combinations. You can obtain information about this from a Mercedes-Benz Service Centre.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains with the same quality standard.

- If snow chains are fitted, the maximum permissible speed is 50 km/h.
- **Vehicles with Parking Pilot:** Do not use Parking Assist PARKTRONIC if snow chains are fitted.
- **Vehicles with AIR BODY CONTROL:** If snow chains are fitted, only drive at raised vehicle level.
- ① You can permanently limit the maximum vehicle speed for driving with winter tyres (→ page 195).
- ① You can deactivate ESP® to pull away (→ page 186). This allows the wheels to spin, achieving an increased driving force.

Tyre pressure

Notes on tyre pressure

⚠ WARNING Risk of accident due to insufficient or excessive tyre pressure

Underinflated or overinflated tyres pose the following risks:

- The tyres may burst, especially as the load and vehicle speed increase.
- The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction.
- The driving characteristics, as well as steering and braking, may be greatly impaired.

- ▶ Comply with the recommended tyre pressure and check the tyre pressure of all tyres including the spare wheel regularly:

- at least once a month
- when the load changes

- before embarking on a longer journey
 - if operating conditions change, e.g. off-road driving
- ▶ Adjust the tyre pressure as necessary.

Driving with tyre pressure that is too high or too low can:

- Shorten the service life of the tyres.
- Cause increased tyre damage.
- Adversely affect handling characteristics and thus driving safety, e.g. due to aquaplaning.

⚠ WARNING Risk of accident from repeated tyre pressure drop

If the tyre pressure drops repeatedly, the wheel, valve or tyre may be damaged.

Insufficient tyre pressure can cause the tyres to burst.

- ▶ Inspect the tyre for signs of foreign objects.

- ▶ Check whether the wheel or valve has a leak.
- ▶ If you are unable to rectify the damage, contact a qualified specialist workshop.

Information on the recommended tyre pressure for the vehicle's factory-fitted tyres can be found on the tyre pressure table on the inside of the fuel filler flap (→ page 377).

Use a suitable pressure gauge to check the tyre pressure. The outer appearance of a tyre does not permit any reliable conclusion about the tyre pressure.

Vehicles with a tyre pressure monitoring system: You can also check the tyre pressure using the on-board computer.

Only correct tyre pressures when the tyres are cold. Conditions for cold tyres:

- The vehicle has been parked with the tyres out of direct sunlight for at least three hours.
- The vehicle has travelled less than 1.6 km.

A rise in the tyre temperature of 10 °C increases the tyre pressure by approx. 10 kPa (0.1 bar,


1.5 psi). Take this into account when checking the tyre pressure of warm tyres.

Trailer operation notes

Always inflate the rear axle tyres to the recommended tyre pressures on the tyre pressure table for increased load.

Tyre pressure table

The tyre pressure table is on the inside of the fuel filler flap.

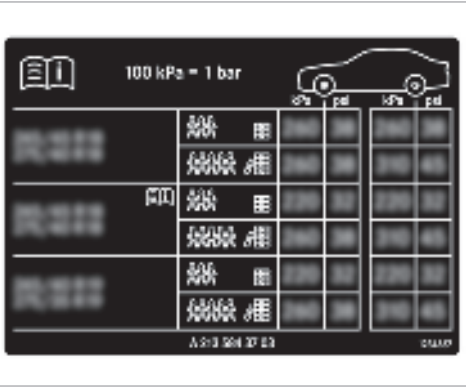

		kPa		psi	
175/65 R15	Partial	250	260	36	38
	Full	280	290	41	42
195/65 R15	Partial	250	260	36	38
	Full	280	290	41	42
205/55 R16	Partial	250	260	36	38
	Full	280	290	41	42

The tyre pressure table shows the recommended tyre pressure for all tyres approved for this vehicle. The recommended tyre pressures apply for cold tyres under various operating conditions, i.e. loading and/or speed of the vehicle.

If one or more tyre sizes precede a tyre pressure, the tyre pressure information following is only valid for those tyre sizes.

If the preceding tyre sizes are complemented by the  symbol, the tyre pressure information following shows alternative tyre pressures. These tyre pressures may improve your vehicle's ride comfort. Fuel consumption may then increase slightly.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 376)

Tyre pressure monitoring system

Function of the tyre pressure monitoring system

The system checks the tyre pressure and the tyre temperature of the tyres fitted to the vehicle by means of a tyre pressure sensor.

New tyre pressure sensors, e.g. in winter tyres, are automatically taught-in the first time they are driven.

The tyre pressure and the tyre temperature appear in the multifunction display (→ page 245).

If there is a substantial pressure loss or if the tyre temperature is excessive, a warning will be given:

- Via display messages (→ page 449).
- Via the  warning lamp in the instrument cluster (→ page 486).

It is the driver's responsibility to set the tyre pressure to the recommended cold tyre pressure suitable for the operating situation. Set the tyre pressure for cold tyres using a tyre pressure gauge. Note that the correct tyre pressure for the current operating situation must first be taught-in to the tyre pressure monitoring system.

In most cases, the tyre pressure monitoring system will automatically update the new reference values after you have changed the tyre pressure. You can, however, also update the reference values by restarting the tyre pressure monitoring system manually (→ page 379).

System limitations

The tyre pressure monitoring system does not issue a warning:

- If the tyre pressure is set incorrectly.
- If there is a sudden pressure loss caused, for example by a foreign object penetrating the tyre.
- If there is a malfunction caused by another radio signal source.

Make sure to observe the following further related subject:

- Notes on tyre pressure (→ page 376)

Checking the tyre pressure with the tyre pressure monitoring system

Requirement:

- The ignition is switched on.

On-board computer:

→ Service → Tyres

One of the following displays appears:

- Current tyre pressure and tyre temperature of the individual wheels:



- **Tyre pressures will be displayed after a few minutes of driving**
- **Tyre pressure monitor active:** the teach-in process of the system is not yet complete. The tyre pressures are already being monitored.

▶ Compare the tyre pressure with the recommended tyre pressure for the current operating condition (→ page 377). Observe the notes on tyre temperature (→ page 376).

❗ The values displayed in the multifunction display may deviate from those of the tyre pressure gauge as they refer to sea level. At high altitudes, the tyre pressure values indicated

by pressure gauges are higher than those shown by the on-board computer. In this case, do not reduce the tyre pressure.

Make sure to observe the following further related subject:

- Notes on tyre pressure (→ page 376)

Restarting the tyre pressure monitoring system

Requirement:

- The recommended tyre pressure is correctly set for the respective operating condition on each of the four wheels (→ page 376).

Restart the tyre pressure monitoring system in the following situations:

- The tyre pressure has changed.
- The wheels or tyres have been changed or newly fitted.

On-board computer:

➡ Service ➡ Tyres

- ▶ Swipe downwards on the Touch Control on the left-hand side of the steering wheel. The **Use current pressures as new reference values** message is shown in the multifunction display.
- ▶ Press **OK** to confirm the restart. The **Tyre press. monitor restarted** message is shown in the multifunction display. Current warning messages are deleted and the **(U)** yellow warning lamp goes out. After you have driven for a few minutes, the system checks whether the current tyre pressures are within the specified range. The current tyre pressures are then accepted as reference values and monitored.

Make sure to observe the following further related subject:

- Notes on tyre pressure (→ page 376)

Radio-type approval of the tyre pressure monitoring system

Radio equipment approval numbers

Country	Radio equipment approval number
Abu Dhabi	TRA REGISTERED NO: ER37156/15. DEALER NO: DA0047074/10
Argentina	AFTIC:H14788
Dubai	TRA REGISTERED NO: ER37156/15. DEALER NO: DA0047074/10
European Union	Hereby, Schrader Electronics Ltd., declares that this TPMS is in compliance with the essential requirements and other provisions of directive 1999/5/EC. The declaration of conformity may be consulted at emcteam@schrader.co.uk

Country	Radio equipment approval number
Jordan	Kingdom of Jordan Type approval for Tyre Pressure sensor. Manufacturer: Schrader Electronics Ltd. Model: AG5SP4 Type Approval Number: TRC/LPD/2015/21 Kingdom of Jordan Type approval for Tyre Pressure sensor. Manufacturer: Schrader Electronics Ltd. Model: MFR Type Approval Number: TRC/LPD/2015/223
Malaysia	RCDD/04A/0615/S(15-2095)
Morocco	AGREE PAR L'ANRT MAROC Numero d'agrement :MR 10216 ANRT 2015 Date d'agrement :18/3/2015

Country	Radio equipment approval number
Mexico	IFT:RCPSCAG 15-0627 IFT:RLVSCMF 15-0959
Moldova	
Philippines	 NTC Type Approved. No:ESD-1510576CNTC
Serbia	
Singapore	Complies with IDA Standards DA 105282

Country	Radio equipment approval number
South Africa	 TA-2015/072 Approved TA-2015/117 Approved

Country	Radio equipment approval number
Ukraine	 Schrader Electronics цім стверджує, що обладнання Радіопередавач моделі AG5SP4 системи контролю тиску в шині автомобіля відповідає вимогам Технічного регламенту радіообладнання і телекомунікаційного кінцевого (термінального) обладнання (Постанова КМУ № 679 від 24 червня 2009 р.) Декларація відповідності знаходиться на сайті Schrader Electronics та надається за запитом на електронну адресу emc-team@schrader.co.uk Schrader Electronics цім стверджує, що обладнання

Country	Radio equipment approval number
	Радіопередавач моделі MFR системи контролю тиску в шині автомобіля відповідає вимогам Технічного регламенту радіообладнання і телекомунікаційного кінцевого (термінального) обладнання (Постанова КМУ № 679 від 24 червня 2009 р.) Декларація відповідності знаходиться на сайті Schrader Electronics та надається за запитом на електронну адресу emc-team@schrader.co.uk
United Arab Emirates	TRA REGISTERED NO :ER37156 / 15. DEALER NO:DA0047074 / 10

Brazil



Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Vietnam



Tyre pressure loss warning system

Function of the tyre pressure loss warning system
The tyre pressure loss warning system warns the driver by means of display messages when there is a severe tyre pressure loss.
After a change in tyre pressure, a wheel rotation or a wheel change, the tyre pressure loss warning system has to be taught-in again by being restarted (→ page 383).

The tyre pressure loss warning system does not replace the need to regularly check the tyre pressures.

System limitations

The tyre pressure loss warning system does not issue a warning:

- If the tyre pressure is set incorrectly.
- If there is a sudden pressure loss caused, for example by a foreign object penetrating the tyre.
- If the pressure loss in several tyres decreases at the same rate.

The tyre pressure loss warning system has a limited or delayed function:

- When the road surface is poor, e.g. snow or gravel.
- When driving with snow chains.
- When driving in a very sporty driving style with high cornering speeds or sudden acceleration.
- When towing a very heavy or large trailer.
- When driving with a high load.

Be sure to also observe the following further related subjects:

- Display messages about the tyres (→ page 449)
- Notes on tyre pressure (→ page 376)

Restarting the tyre pressure loss warning system

Requirement:

- The recommended tyre pressure is correctly set for the respective operating condition on each of the four wheels (→ page 376).

On-board computer:

↪ Service ➤ Tyres

The **Run Flat Indicator active** Restart with OK message is shown in the multifunction display.

Restart the tyre pressure loss warning system in the following situations:

- The tyre pressure has changed.
- The wheels or tyres have been changed or newly fitted.

▶ Press **OK** to begin the new start. The **Tyre pressure now OK?** message is shown in the multifunction display.

▶ Select **Yes**.

▶ Press **OK** to confirm the restart. The **Run Flat Indicator restarted** message is shown in the multifunction display.

After you have driven for a few minutes, the tyre pressure loss warning system monitors the set tyre pressures of all the tyres.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 376)

Wheel change

Notes on selecting, fitting and replacing tyres

Mercedes-AMG vehicles: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

You can ask for information regarding permitted wheel/tyre combinations at a Mercedes-Benz Service Centre.

⚠ WARNING Risk of accident due to incorrect dimensions of wheels and tyres

If wheels and tyres of the wrong size are used, the wheel brakes or wheel suspension components may become damaged.

- ▶ Always replace wheels and tyres with those that fulfil the specifications of the original part.

When replacing wheels, make sure to fit the correct:

- Designation
- Type

When replacing tyres, make sure to fit the correct:

- Designation
- Manufacturer
- Type

⚠ WARNING Risk of injury through exceeding the specified tyre load-bearing capacity or the permissible speed rating

Exceeding the specified tyre load-bearing capacity or the permissible speed rating may lead to tyre damage and to the tyres bursting.

- ▶ Therefore, only use tyre types and sizes approved for your vehicle model.
- ▶ Observe the tyre load-bearing capacity rating and speed rating required for your vehicle.

! NOTE Damage to vehicle and tyres due to non-approved tyre types and sizes

For safety reasons, only use wheels, tyres and accessories which have been approved for your vehicle by Mercedes-Benz.

These tyres have been specially adapted for use with the control systems, e.g. ABS or ESP®, and are marked as follows:

- MO = Mercedes-Benz Original
- MOE = Mercedes-Benz Original Extended (run-flat tyres only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tyres)

Certain characteristics, e.g. handling, vehicle noise emissions or fuel consumption, may otherwise be adversely affected. In addition, when driving with a load, tyre dimension variations could cause the tyres to come into contact with the body and axle components. This could result in damage to the tyres or the vehicle.

Only use tyres, wheels or accessories tested and approved by Mercedes-Benz.

! **NOTE** Risk to driving safety from retreaded tyres

Retreaded tyres are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tyres.

For this reason driving safety cannot be guaranteed.

- ▶ Do not use used tyres if you have no information about their previous usage.

! **NOTE** Possible damage to wheels or tyres when driving over obstacles

Large wheels have a lower tyre section width. The lower the tyre section width, the greater is the risk of damage to wheels or tyres when driving over obstacles.

- ▶ Avoid obstacles or drive particularly carefully.

! **NOTE** Damage to electronic component parts from the use of tyre-fitting tools

Vehicles with a tyre pressure monitoring system: electronic component parts are located in the wheel. Tyre-fitting tools should not be applied in the area of the valve.

The tools could damage the electronic component parts.

- ▶ Have the tyres changed at a qualified specialist workshop only.

! **NOTE** Damage to summer tyres at low ambient temperatures

Using summer tyres at very low ambient temperatures can cause cracks to form, thereby damaging the tyres permanently.

- ▶ At temperatures below 7 °C use M+S-tyres.

Accessory parts that are not approved for your vehicle by Mercedes-Benz or are not being used correctly can impair the operating safety.

Before purchasing and using non-approved accessories, visit a qualified specialist workshop and enquire about:

- Suitability
- Legal stipulations
- Factory recommendations

! **WARNING** Risk of accident with high performance tyres

The special tyre tread in combination with the optimised tyre compound, means that the risk of skidding or hydroplaning on wet roads is increased.

In addition, the tyre grip is greatly reduced at a low outside temperature and tyre running temperature.

- ▶ Switch on the ESP® and adapt your driving style accordingly.
- ▶ Use M+S tyres at outside temperatures of less than 50 °F.

Observe the following when selecting, fitting and replacing tyres:

- Country-specific requirements for tyre approval that define a specific tyre type for your vehicle.
Furthermore, the use of certain tyre types in certain regions and areas of operation can be highly beneficial.
- Only use tyres and wheels of the same type (summer tyres, winter tyres, MOExtended tyres) and the same make.
- Only fit wheels of the same size on one axle (left and right).

It is only permissible to fit a different wheel size in the event of a flat tyre in order to drive to the specialist workshop.

- Only fit tyres of the correct size onto the wheels.
- Do not make any modifications to the brake system, the wheels or the tyres.

The use of shims or brake dust shields is not permitted and may invalidate the vehicle's general operating permit.

- **Vehicles with a tyre pressure monitoring system:** All fitted wheels must be equipped with functioning sensors for the tyre pressure monitoring system.
- At temperatures below 7 °C, use winter tyres or all-season tyres marked M+S for all wheels.

Winter tyres bearing the  snowflake symbol in addition to the M+S marking provide the best possible grip in wintry road conditions.

- For M+S tyres, only use tyres with the same tread.
- Observe the maximum permissible speed for the M+S tyres fitted.

If this is below the vehicle's maximum speed, this must be indicated in an appropriate label in the driver's field of vision.

- Run in new tyres at moderate speeds for the first 100 km.
- Replace the tyres after six years at the latest, regardless of wear.

- **When replacing with tyres that do not feature run-flat characteristics:** Vehicles with MOExtended tyres are not equipped with a TIREFIT kit at the factory. Equip the vehicle with a TIREFIT kit after replacing with tyres that do not feature run-flat characteristics, e.g. winter tyres.

For more information on wheels and tyres, contact a qualified specialist workshop.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 376)
- Tyre pressure table (→ page 377)
- Notes on the emergency spare wheel (→ page 393)

Notes on interchanging wheels

 **WARNING** Risk of injury through different wheel sizes

Interchanging the front and rear wheels if the wheels or tyres have different dimensions

may severely impair the driving characteristics.

The disk brakes or wheel suspension components may also be damaged.

- ▶ Rotate front and rear wheels only if the wheels and tyres are of the same dimensions.

Interchanging the front and rear wheels if the wheels or tyres have different dimensions can render the general operating permit invalid.

The wear patterns on the front and rear wheels differ:

- Front wheels wear more on the shoulder of the tyre
- Rear wheels wear more in the centre of the tyre

On vehicles with the same front and rear wheel size, you can interchange the wheels every 5000 to 10000 km, depending on the wear. Ensure the direction of rotation is maintained for the wheels.

It is imperative to observe the instructions and safety notes on "Wheel change" when doing so.

Notes on storing wheels

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tyres from contact with oil, grease or fuel.

Overview of the tyre-change tool kit


Apart from some country-specific variants, vehicles are not equipped with a tyre-change tool kit. For more information on which tyre-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

Necessary tyre-changing tools may include, for example:

- jack
- chock
- wheel spanner
- centring pin

- ① The jack weighs approximately 3.4 kg. The maximum load capacity of the jack can be found on the sticker affixed to the jack. The jack is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.


The tyre-change tool kit is located under the boot floor.

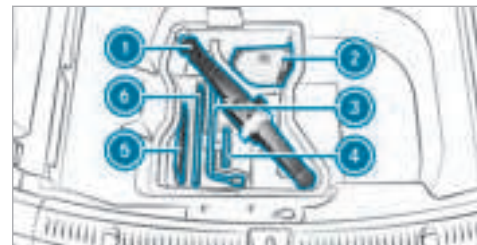

- ① Jack
- ② Gloves
- ③ Wheel spanner
- ④ Centring pin

- ⑤ Folding chock
- ⑥ Ratchet for jack

Setting up the folding wheel chock

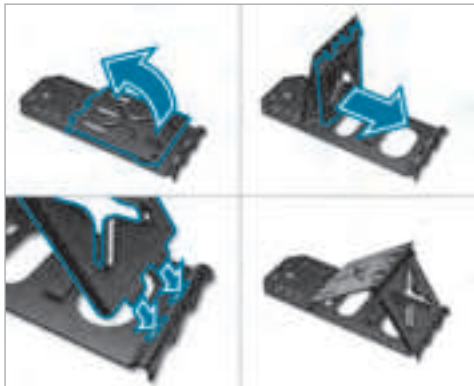

Preparing the vehicle for a wheel change

Requirements:

- The required tyre-change tool kit is available. If your vehicle is not equipped with the tyre-change tool kit, consult a qualified specialist workshop to find out about suitable tools.
 - The vehicle is not on a slope.
 - The vehicle is on solid, non-slippery and level ground.
- ▶ Apply the electric parking brake manually.
 - ▶ Move the front wheels to the straight-ahead position.
 - ▶ **Vehicles with manual transmission:** Engage first or reverse gear.
 - ▶ **Vehicles with automatic transmission:** Shift into position **P**.
 - ▶ **Vehicles with AIR BODY CONTROL:** Set the normal vehicle level (→ page 206).
 - ▶ Switch off the engine.
 - ▶ Make sure that the engine cannot be started.

- ▶ Place chocks or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
- ▶ Remove the hub caps if necessary (→ page 388).
- ▶ Raise the vehicle (→ page 389).

Removing and fitting hub caps


Requirement:

- The vehicle is prepared for a wheel change (→ page 388).

Plastic hub cap

- ▶ **To remove:** turn the centre cover of the hub cap anti-clockwise and remove the hub cap.
- ▶ **To fit:** make sure that the centre cover of the hub cap is turned anti-clockwise.
- ▶ Position the hub cap and turn the centre cover clockwise until the hub cap engages physically and audibly.

Aluminium hub cap

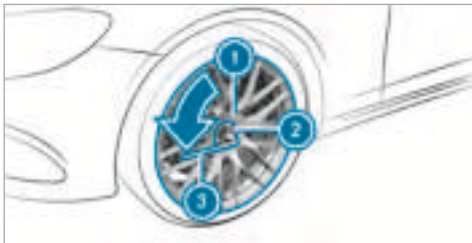

▶ **To remove:** position socket ② on hub cap ①.

❗ The socket can be found in the tyre-change tool kit.

▶ Position wheel spanner ③ on socket ②.

▶ Using wheel spanner ③, turn hub cap ① anti-clockwise and remove it.

▶ **To fit:** position hub cap ① and turn until it is completely flush with the wheel.

▶ Position socket ② on hub cap ①.

▶ Attach wheel spanner ③ to socket ② and tighten the hub cap clockwise.

Specified tightening torque: 25 Nm.

▶ Raising the vehicle (→ page 389).

Raising the vehicle when changing a wheel


Requirements:

- There are no persons in the vehicle.
- The vehicle is prepared for a wheel change (→ page 388).
- The hub caps have been removed (→ page 388).

Important notes on using the jack:

- Only use the vehicle-specific jack that has been tested and approved by Mercedes-Benz to raise the vehicle.
- The jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.

- The jack must be placed on a firm, flat and non-slip surface. If necessary, use a large, load-bearing, non-slip underlay.
- The base of the jack must be positioned vertically under the jack support point.

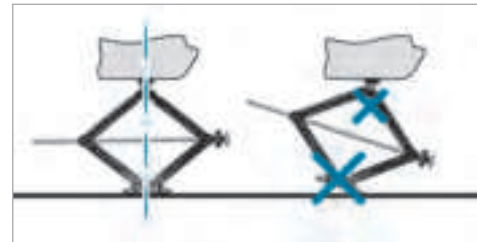


Rules of conduct when the vehicle is raised:

- Never place your hands or feet under the vehicle.
- Do not lie under the vehicle.
- Do not start the engine and do not release the electric parking brake.
- Do not open or close any doors or the boot lid.



- ▶ Using the wheel spanner, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the screws completely.

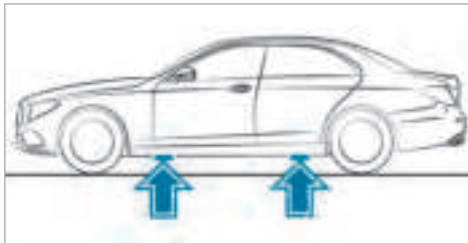

Position of jack support points

⚠ WARNING Risk of injury from incorrect positioning of the jack

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.


- ▶ Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

! NOTE Vehicle damage from the jack

If you do not position the jack correctly at the appropriate jack support point of the vehicle, the jack could tip over with the vehicle raised.

- ▶ The jack is designed exclusively for jacking up the vehicle at the jack support points.

- ▶ Take the ratchet ring spanner out of the tyre-change tool kit and place it on the hexagon nut of the jack so that the letters AUF are visible.

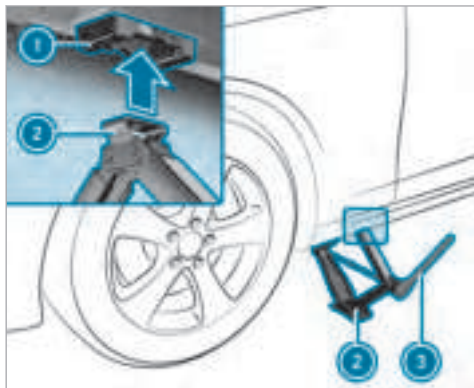

- ▶ Position jack ② at jack support point ①.
- ▶ Turn ratchet ring spanner ③ clockwise until jack ② sits completely on jack support point ① and the base of the jack lies evenly on the ground.
- ▶ Continue to turn ratchet ring spanner ③ until the tyre is raised a maximum of 3 cm off the ground.
- ▶ Loosen and remove the wheel (→ page 391).

Removing a wheel

Requirement:


- The vehicle is raised (→ page 389).

When changing a wheel, avoid applying any force to the brake discs, since this could impair the level of comfort when braking.

! NOTE Damage to threading from dirt on wheel bolts

▶ Do not place wheel bolts in sand or on a dirty surface.

- ▶ Unscrew the uppermost wheel bolt completely.

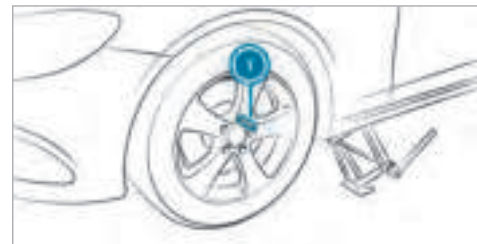

- ▶ Screw centring pin ① instead of the wheel bolt into the threading.
- ▶ Unscrew the remaining wheel bolts fully.
- ▶ Remove the wheel.
- ▶ Fit the new wheel (→ page 391).

Fitting a new wheel

Requirement:

- The wheel is removed (→ page 391).

⚠ WARNING Risk of accident from losing a wheel

Oiled, greased or damaged wheel bolt/wheel nut threads or wheel hub/wheel mounting bolt threads can cause the wheel bolts/wheel nuts to come loose.

As a result, you could lose a wheel while driving.

- ▶ Never oil or grease the threads.
- ▶ In the event of damage to the threads, contact a qualified specialist workshop immediately.
- ▶ Have the damaged wheel bolts or damaged hub threads replaced.
- ▶ Do not continue driving.

- ▶ Observe the information on the choice of tyres (→ page 383).

For tyres with a specified direction of rotation, an arrow on the side wall of the tyre indicates the correct direction of rotation. Observe the direction of rotation when fitting.

- ▶ Slide the wheel to be mounted onto the centring pin and push it on.

⚠ WARNING Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.


- ▶ Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.

- ▶ For safety reasons, only use wheel bolts which have been approved for Mercedes-Benz and the wheel in question.
- ▶ Tighten the wheel bolts until they are finger-tight.
- ▶ Unscrew the centring pin.
- ▶ Tighten the last wheel bolt until it is finger-tight.
- ▶ Lower the vehicle (→ page 392).

Lowering the vehicle after a wheel change

Requirement:

- The new wheel has been fitted (→ page 391).
- ▶ Place the ratchet ring spanner onto the hexagon nut of the jack so that the letters "AB" are visible.
 - ▶ **To lower the vehicle:** turn the ratchet ring spanner of the jack anti-clockwise.

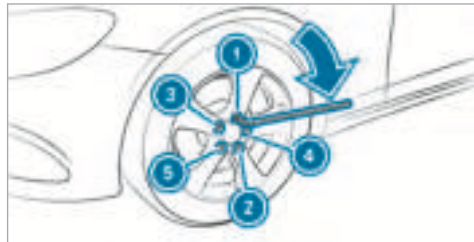

- ▶ Tighten the wheel bolts evenly in a crosswise pattern in the sequence indicated (① to ⑤).
Specified tightening torque: 150 Nm.

⚠ WARNING Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- ▶ Have the tightening torque checked immediately at a qualified specialist workshop after changing a wheel.

- ▶ Check the tyre pressure of the newly mounted wheel and adjust accordingly.
- ▶ **Vehicles with tyre pressure loss warning system:** Restart the tyre pressure loss warning system (→ page 383).
Exception: if the new wheel is an emergency spare wheel.
- ▶ **Vehicles with a tyre pressure monitoring system:** Restart the tyre pressure monitoring system (→ page 379).
Exception: if the new wheel is an emergency spare wheel.

Make sure to observe the following further related subject:

- Notes on tyre pressure (→ page 376)

Emergency spare wheel

Notes on the emergency spare wheel

⚠ WARNING Risk of accident caused by incorrect wheel and tyre dimensions

The wheel or tyre size and the tyre type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. Mounting an emergency spare wheel/spare wheel may severely impair the driving characteristics.

To prevent hazardous situations:

- ▶ Adapt your driving style accordingly and drive carefully.
- ▶ Never fit more than one emergency spare wheel or spare wheel that differs in size.

- ▶ Only use an emergency spare wheel or spare wheel of a different size briefly.
- ▶ Do not switch off ESP®.
- ▶ >Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist workshop. The new wheel must have the correct dimensions.

Check the tyre pressure of the emergency spare wheel fitted. Correct the pressure as necessary. The maximum permissible speed with an emergency spare wheel fitted is 80 km/h.

Do not fit the emergency spare wheel with snow chains.

Replace the emergency spare wheel after six years at the latest, regardless of wear.

- i Vehicles with a tyre pressure loss warning system:** If an emergency spare wheel is fitted the tyre pressure loss warning system cannot function reliably. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Vehicles with a tyre pressure monitoring

system: If an emergency spare wheel is fitted the tyre pressure monitoring system cannot function reliably. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Vehicles with a tyre pressure monitoring

system: For a few minutes after an emergency spare wheel is fitted, the system may still display the tyre pressure of the removed wheel.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 376)
- Tyre pressure table (→ page 377)

Removing the emergency spare wheel

The emergency spare wheel is secured in the emergency spare wheel bag in the boot.

- ▶ Observe the information on mounting tyres (→ page 383).
- ▶ Open the boot.

- ▶ Detach the fastening straps.
- ▶ Unhook the retaining spring hooks of the fastening straps from the brackets.
- ▶ Remove the emergency spare wheel bag with the emergency spare wheel.
- ▶ Open the emergency spare wheel bag and remove the emergency spare wheel.

Notes on technical data

Mercedes-AMG vehicles: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

Plug-in hybrid: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

The technical data was determined in accordance with EU Directives. The data stated only applies to vehicles with standard equipment. You can obtain further information from a Mercedes-Benz Service Centre.

Only for certain countries: you can find vehicle-specific vehicle data in the COC documents (CERTIFICATE OF CONFORMITY). These documents are delivered with your vehicle.

On-board electronics

Notes on tampering with the engine electronics

! **NOTE** Premature wear through improper maintenance

Improper maintenance may cause vehicle components to wear more quickly and the vehicle's operating permit may be invalidated.

► Always have work on the engine electronics and related components carried out at a qualified specialist workshop.

Two-way radios

Notes on fitting two-way radios

⚠ **WARNING** Risk of accident due to improper work on two-way radios

The electromagnetic radiation from two-way radios can interfere with the on-board elec-

tronics if RF transmitters are manipulated or retrofitted incorrectly.

This could jeopardise the operating safety of the vehicle.

► You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

⚠ **WARNING** Risk of accident from incorrect operation of two-way radios

If you operate two-way radios incorrectly in the vehicle, the electromagnetic radiation could interfere with the on-board electronics, e.g.:

- if the two-way radio is not connected to an exterior aerial
- if the exterior aerial is not correctly mounted or is not of low reflection

This could jeopardise the operating safety of the vehicle.


► Have the low-reflection exterior aerial fitted at a qualified specialist workshop.

- ▶ When operating two-way radios in the vehicle, always connect them to the low-reflection exterior aerial.

! NOTE Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- ▶ Only use approved frequency bands.
- ▶ Observe the maximum permissible output power in these frequency bands.
- ▶ Only use approved aerial positions.

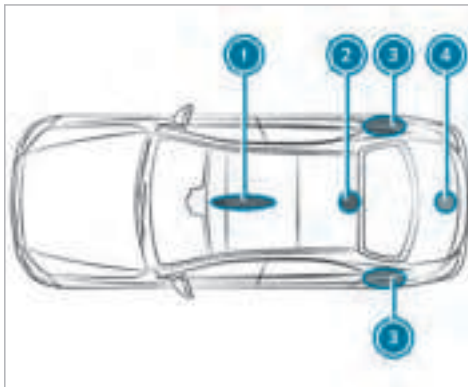

- ① Front roof area
- ② Rear roof area
- ③ Rear wing
- ④ Boot lid

On vehicles with a panoramic sliding sunroof, fitting an aerial to the front or rear roof area is not permitted.

On the rear wings, it is recommended that you position the aerial on the side of the vehicle closest to the centre of the road.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMC guidelines for installation of aftermarket radio frequency transmitting equipment") when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle has fittings for two-way radio equipment, use the power supply or aerial connections intended for use with the basic wiring. Be sure to observe the manufacturer's Supplements when fitting.

Two-way radio transmission output

The maximum transmission output (PEAK) at the base of the aerial must not exceed the values in the following table:

Frequency band and maximum transmission output


Frequency band	Maximum transmission output
Short wave 3 - 54 MHz	100 W
4 m waveband 74 - 88 MHz	30 W
2 m waveband 144 - 174 MHz	50 W
Trunked radio system/Tetra 380 - 460 MHz	10 W
70 cm waveband 420 - 450 MHz	35 W
Mobile communications (2G/3G/4G)	10 W


The following can be used in the vehicle without restrictions:

- Two-way radios with a maximum transmission output of up to 100 mW
- Two-way radios with transmitter frequencies in the 380 - 410 MHz frequency band and a maximum transmission output of up to 2 W (trunked radio system/Tetra)
- Mobile phones (2G/3G/4G)

There are no restrictions when positioning the aerial on the outside of the vehicle for the following frequency bands:

- Trunked radio system/Tetra
- 70 cm waveband and
- 2G/3G/4G

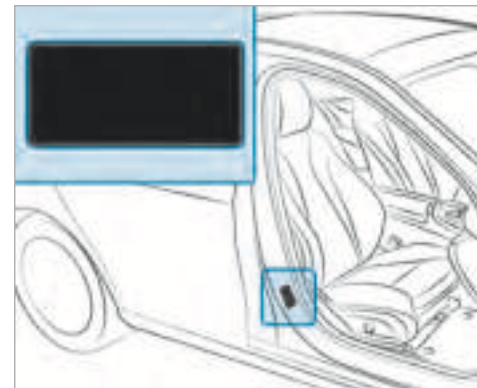Vehicle identification plate, VIN and engine number**Vehicle identification plate**

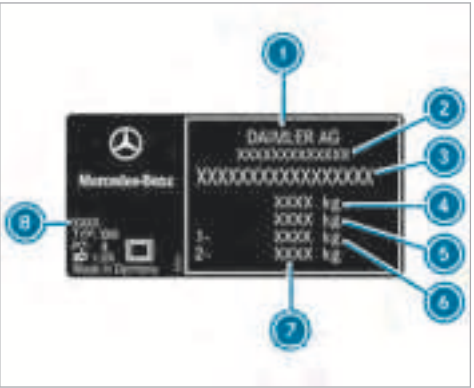


- ⑥ Permissible front axle load (kg)
- ⑦ Permissible rear axle load (kg)
- ⑧ Paint code
- ① The data shown in the image is example data.

- Vehicle identification plate (example: Kuwait)
- ① Vehicle manufacturer
 - ② Place of manufacture
 - ③ Manufacturing date
 - ④ Vehicle model
 - ⑤ VIN

- Vehicle identification plate (example: all other countries)
- ① Vehicle manufacturer
 - ② EU type approval number (only for certain countries)
 - ③ VIN (vehicle identification number)
 - ④ Permissible gross mass (kg)
 - ⑤ Permissible gross mass of vehicle/trailer combination (kg) (only for specific countries)

VIN in front of the right-hand front seat

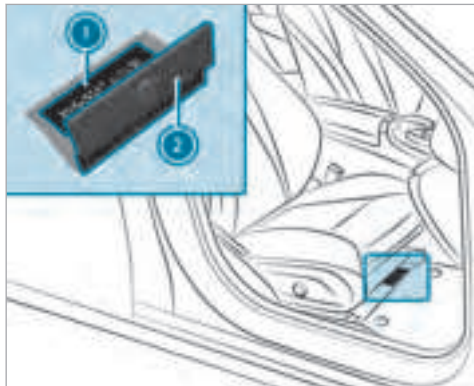

- ① VIN (vehicle identification number)
- ② Floor covering

VIN on the lower edge of the windscreen



- ① VIN (vehicle identification number)

The VIN on the lower edge of the windscreen is only available in some countries.

Engine number

The engine number is stamped into the crankcase. You can obtain further information from any qualified specialist workshop.

Operating fluids

Notes on operating fluids

Mercedes-AMG vehicles: be sure to observe the notes in the Supplement. Otherwise, you may fail to recognise dangers.

⚠ WARNING Risk of injury from operating fluids harmful to your health

Operating fluids may be poisonous and harmful to your health.

- ▶ Observe the text on the original containers when using, storing or disposing of operating fluids.
- ▶ Always store operating fluids sealed in their original containers.
- ▶ Always keep children away from operating fluids.



ENVIRONMENTAL NOTE Environmental pollution caused by environmentally irresponsible disposal



Dispose of operating fluids in an environmentally responsible manner.

Operating fluids include the following:

- fuels
- exhaust gas aftertreatment additives, e.g. AdBlue®
- lubricants
- coolant
- brake fluid
- windscreen washer fluid
- climate control system refrigerant

Only use products recommended by Mercedes-Benz. Damage caused by using vehicle products which have not been recommended is not covered by the Mercedes-Benz guarantee, warranty or goodwill gestures.

You can identify operating fluids approved by Mercedes-Benz by the following inscription on the containers:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

Further information on approved operating fluids:

- in the Mercedes-Benz Specifications for operating fluids at <http://bevo.mercedes-benz.com> (by entering the designation)
- at a qualified specialist workshop



WARNING - Risk of fire or explosion caused by fuel

Fuels are highly inflammable.

- ▶ You must avoid fire, naked flames, creating sparks and smoking.
- ▶ Before refuelling, switch off the engine and auxiliary heating if your vehicle is equipped with auxiliary heating.



WARNING Risk of injury from fuel

Fuels are poisonous and harmful to your health

- ▶ Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapour.
- ▶ Keep children away from fuel.

If you or other people come into contact with fuel, observe the following:

- ▶ Immediately rinse fuel off your skin with soap and water.
- ▶ If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- ▶ If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- ▶ Change immediately out of clothing that has come into contact with fuel.

Fuel

Information on fuel grades for vehicles with a petrol engine

Observe the notes on operating fluids
(→ page 399).

! NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel using premium-grade unleaded fuel that conforms to EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10 % ethanol. Your vehicle is suitable for use with E10 fuel.

Do not refuel using:

- Diesel
- E85, E100
- Petrol containing methanol (M15, M30, M85, M100)

- Petrol with additives containing metal

If you accidentally refuel with the wrong fuel:

- ▶ Do not switch the ignition on.
- ▶ Consult a qualified specialist workshop.

E 200, E 250, E 400 4MATIC: Observe the information on sulphur content on the information table in the fuel filler flap:



! NOTE Damage to the emission control system caused by fuel with a too high sulphur content

- ▶ Only use sulphur-free fuel (sulphur content ≤ 10 ppm).

All other models: If the available fuel is not sufficiently low in sulphur, this can produce unpleasant odours.

Recommended fuel: the recommended octane number for your vehicle can be found in the information table in the fuel filler flap (→ page 168).

As a temporary measure, if the recommended fuel is not available, you may also use unleaded regular petrol with an octane number of at least:

- **E 250:** 93 RON
- **All other models:** 91 RON

This may reduce engine output and increase fuel consumption.

Never refuel using fuel with a lower RON.

Further information on fuel can be found:

- At a filling station
- At a qualified specialist workshop

Information on additives in petrol

Observe the notes on operating fluids
(→ page 399).

! NOTE Damage caused by non-approved additives

Even small amounts of the wrong additive may lead to malfunctions occurring.

- ▶ Only add cleaning additives recommended by Mercedes-Benz to the fuel.

Mercedes-Benz recommends that you use fuel brands that have additives.

The fuel grade available in some countries may not be sufficient. Residue could build up in the fuel injection system as a result. In this case, in consultation with a Mercedes-Benz Service Centre, the fuel may be mixed with the cleaning additive recommended by Mercedes-Benz.

Always observe the notes and mixing ratios specified on the container.

Information on fuel grades for vehicles with a diesel engine

General notes

Observe the notes on operating fluids
(→ page 399).

⚠ WARNING Risk of fire through fuel mixture

If you mix diesel fuel with petrol, the flash point of the fuel mixture is lower than that of pure diesel fuel.

While the engine is running, component parts in the exhaust system may overheat unnoticed.

- ▶ Never refuel using petrol.
- ▶ Never mix diesel fuel with petrol.

! NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel using diesel fuel that conforms to European standard EN 590, or an equivalent specification.

▶ **Vehicles with diesel particulate filters:** In countries outside the EU, only use low-sulphur Euro diesel with a sulphur content of under 50 ppm.

Do not use the following:

- Petrol
- Marine diesel
- Heating oil
- Bio-diesel
- Vegetable oil
- Paraffin
- Kerosene

Information on low outside temperatures

Refuel your vehicle with as much winter diesel as possible at the beginning of winter.

Before changing over to winter diesel, the fuel tank should be empty, if possible. When refilling with winter diesel for the first time, keep the fuel level low, for example at reserve level. The fuel tank can be filled as usual when next refuelling.

Further information on fuel can be found:

- At a filling station
- At a qualified specialist workshop

Tank capacity and reserve fuel level

The total capacity of the fuel tank may vary, depending on the vehicle equipment.

Filling capacity

Model	Total capacity
E 300	66.0 l
E 400 4MATIC	66.0 l or 80.0 l
All other models	50.0 l or 66.0 l
Model	Of which reserve fuel
E 400 4MATIC	7.0 l or 12.0 l
All other models	7.0 l

AdBlue®**Notes on AdBlue®**

Observe the notes on operating fluids (→ page 399).

AdBlue® is a water-soluble fluid for the exhaust gas aftertreatment of diesel engines.

! **NOTE** Damage caused by mixing additives with AdBlue® or from diluting AdBlue®

The BlueTEC exhaust gas aftertreatment system could be destroyed by:

- Additives in AdBlue®
- Diluting AdBlue®

► Only use AdBlue® in accordance with ISO 22241.

► Do not add additives.

► Do not dilute AdBlue®.

! NOTE Damage and malfunctions due to impurities in AdBlue®

Impurities in AdBlue® lead to:

- Increased emissions values
- Damage to the catalytic converter
- Engine damage
- BlueTEC exhaust gas aftertreatment malfunctions

► Avoid impurities in AdBlue®.

ENVIRONMENTAL NOTE Contamination caused by AdBlue®

AdBlue® residues crystallise after a period of time, and contaminate the surfaces with which they come into contact.

► Surfaces that have come into contact with AdBlue® while refilling must be immediately rinsed with water, or AdBlue® must be removed with a damp cloth and cold water.

If AdBlue® has already crystallised, clean it with a sponge and cold water.

When you open the AdBlue® tank, small amounts of ammonia vapour may escape. Do not inhale any ammonia vapours that may be released. Only fill the AdBlue® tank in well-ventilated areas.

AdBlue® filling capacity

Total capacity of AdBlue® tank

Model	Total capacity
All models	23.5 l

Engine oil

Notes on engine oil

Observe the notes on operating fluids (→ page 399).



! NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives

- Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.
- Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- Do not use additives.
- Have the engine oil renewed at regular intervals.

Mercedes-Benz recommends that you have the oil change carried out at a qualified specialist workshop.

Only Mercedes-Benz approved engine oils may be used in Mercedes-Benz engines.

Further information on engine oils and oil filters:

- in the Mercedes-Benz Specifications for operating fluids at <http://bevo.mercedes-benz.com> (by entering the designation)
- at a qualified specialist workshop

Petrol engines: For certain countries, different engine oils can be used in conjunction with reduced maintenance intervals. For more information, please contact a qualified specialist workshop.

Quality and filling capacity of engine oil

MB-Freigabe or MB-Approval

Petrol engines	MB-Freigabe or MB-Approval
All models	229.5, 229.6

MB-Freigabe or MB-Approval

Diesel engines	MB-Freigabe or MB-Approval
E 350 d	228.51, 229.31, 229.51, 229.52
All other models	228.51, 229.31, 229.51, 229.52, 229.71

If the engine oils listed in the table are not available, you may add a maximum of 1.0 l of the following engine oils once only:

- **Petrol engines:** MB-Freigabe or MB-Approval 229.3 or ACEA A3/B3
- **Diesel engines:** MB-Freigabe or MB-Approval 229.3, 229.5 or ACEA C3

The following values refer to an oil change, including the oil filter.

Replacement amount

Model	Replacement amount
E 200 d E 220 d E 220 d 4MATIC	6.3 l
E 200 4MATIC E 400 4MATIC	6.5 l
E 350 d	9.0 l
All other models	7.0 l

Notes on brake fluid

Observe the notes on operating fluids (→ page 399).

⚠ WARNING Risk of an accident due to vapour pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapour pockets may form in the brake system when the brakes are applied hard.

This impairs the braking effect.

- ▶ Have the brake fluid renewed at the specified intervals.

Have the brake fluid regularly changed at a qualified specialist workshop.

Only use brake fluid approved by Mercedes-Benz according to MB-Freigabe or MB-Approval 331.0.

Further information on brake fluid:

- In the Mercedes-Benz Specifications for Operating Fluids <http://bevo.mercedes-benz.com>.
- at a qualified specialist workshop

Coolant

Notes on coolant

Observe the notes on operating fluids (→ page 399).

⚠ WARNING Risk of fire- and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- ▶ Allow the engine to cool down before you top up the antifreeze.
- ▶ Make sure that no antifreeze spills out next to the filler opening.
- ▶ Thoroughly clean the antifreeze from component parts before starting the vehicle.

! NOTE Damage caused by incorrect coolant

- ▶ Only add coolant that has been pre-mixed with the required antifreeze protection.

Further information on coolant:

- In the Mercedes-Benz Specifications for Operating Fluids 310.1, e.g. online at <http://bevo.mercedes-benz.com>.
- At a qualified specialist workshop.

! NOTE Overheating at high outside temperatures

If an inappropriate coolant is used, the engine cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- ▶ Always use coolant approved by Mercedes-Benz.
- ▶ Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 310.1.

Have the coolant regularly changed at a qualified specialist workshop.

The proportion of corrosion inhibitor/antifreeze concentrate in the engine cooling system should be:

- A minimum of 50% (antifreeze protection down to approximately -37 °C).
- A maximum of 55% (antifreeze protection down to -45 °C).

Notes on windscreen washer fluid

Observe the notes on operating fluids (→ page 399).

⚠ WARNING - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- ▶ Make sure that no windscreen washer concentrate spills out next to the filler opening.

! NOTE Damage to the exterior lighting due to unsuitable windscreen washer fluid

Unsuitable windscreen washer fluids may damage the plastic surface of the exterior lighting.

- ▶ Only use windscreen washer fluids which are also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

! NOTE Blocked spray nozzles caused by mixing windscreen washer fluids

- ▶ Do not mix MB SummerFit and MB WinterFit with other windscreen washer fluids.

Do not use distilled or de-ionised water as the fill level sensor may be triggered erroneously.

Recommended windscreen washer fluid:

- Above freezing point: e.g. MB SummerFit
- Below freezing point: e.g. MB WinterFit

For the correct mixing ratio refer to the information on the antifreeze reservoir.


Mix the washer fluid with the windscreen washer fluid all year round.

Vehicle data

Vehicle dimensions

The heights specified may vary as a result of the:

- tyres
- load
- condition of the suspension
- optional equipment

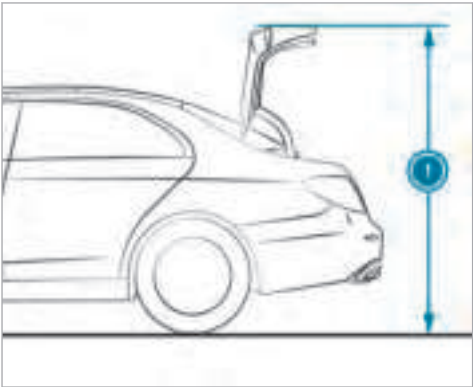

Opening height

Model	i Opening height
E 250 E 350 d	1839 mm
E 300	1826 mm

Model	i Opening height
E 200 4MATIC E 220 d 4MATIC	1845 mm
All other models	1833 mm

Vehicle dimensions

All models	
Vehicle length	4923 mm
Vehicle width including out-side mirrors	2065 mm
Vehicle width excluding out-side mirrors	1852 mm
Wheelbase	2939 mm

Model	Vehicle height
E 200 4MATIC E 220 d 4MATIC	1480 mm
E 250 E 350 d	1474 mm
E 300	1460 mm
E 400 4MATIC	1467 mm
All other models	1468 mm

Weights and loads

Please note that for the specified vehicle data:

- items of optional equipment increase the unladen weight and reduce the maximum payload.
- vehicle-specific weight information can be found on the vehicle identification plate .

Roof load

All models	
Maximum roof load	100 kg

Trailer hitch**General notes on the trailer hitch**

Not all models can be used to tow a trailer (→ page 235).

Modifications to the engine cooling system may be necessary, depending on the vehicle model. The retrofitting of a trailer hitch is only permissible if a towing capacity is specified in your vehicle documents.

Further information on the trailer hitch can be obtained at a qualified specialist workshop.

Permissible towing capacity

The tongue weight is not included in the towing capacity.

Permissible towing capacity, braked (at a minimum start-off gradeability of 8%)

Model	Manual transmission	Automatic transmission
E 180	—	1900 kg
E 200	1500 kg	1900 kg
E 250 E 200 4MATIC	—	2000 kg
All other models	—	2100 kg

Permissible towing capacity, braked (at a minimum start-off gradeability of 12%)

Model	Manual transmission	Automatic transmission
E 180	—	1900 kg
E 200	1500 kg	1900 kg

Model	Manual transmission	Automatic transmission
E 250 E 200 4MATIC	—	2000 kg
All other models	—	2100 kg

Permissible towing capacity, unbraked

Model	Permissible towing capacity, unbraked
All models	750 kg

Maximum tongue weight

! **NOTE** Damage caused by the trailer coming loose

If the tongue weight used is too low, the trailer may come loose.

- ▶ The tongue weight must not be below 50 kg.
- ▶ Use a tongue weight that is as close as possible to the maximum permissible tongue weight.

Tongue weight

Model	Maximum tongue weight
All models	84 kg

Permissible rear axle load during trailer operation

Axle load

Model	Axle load
E 180	1335 kg
E 200, manual transmission	1340 kg

Model	Axle load
E 200, automatic transmission	1345 kg
E 250	
E 200 4MATIC	
E 300	1370 kg
E 200 d	1375 kg
E 220 d	
E 220 d 4MATIC	1360 kg
E 350 d	1400 kg
E 400 4MATIC	

Display messages

Introduction

Notes on display messages

Display messages appear in the multifunction display.

Display messages with graphic symbols are simplified in the Owner's Manual and may differ from the symbols in the multifunction display. The multifunction display shows high-priority display messages in red. Certain display messages are accompanied by a warning tone.

Please respond in accordance with the display messages and follow the additional notes in this Owner's Manual.

For some display messages, a symbol is also shown:

-  Further information

-  Hide display message

You can select the desired symbol by swiping left or right on the left-hand side of Touch Control. Press the  symbol to show further information. Press the  symbol to hide the display message.

You can hide low-priority display messages by pressing the  button or the left-hand side of Touch Control. The display messages are then stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The multifunction display shows these display messages continuously until the cause for the message has been rectified.

Calling up stored display messages

On-board computer:

 **Service**  **1 message**

If there are no display messages, **No messages** appears in the multifunction display.

▶ Scroll through the display messages by swiping upwards or downwards on Touch Control on the left-hand side of the steering wheel.

▶ **To exit the message memory:** press the  button.


Safety systems

Display messages	Possible causes/consequences and ► Solutions
 inoperative See Owner's Manual	* ABS and ESP® are malfunctioning. Other driving and driving safety systems may also be faulty.  WARNING Risk of skidding if ABS and ESP® are malfunctioning If ABS and ESP® are malfunctioning, the wheels could lock when braking and ESP® cannot carry out vehicle stabilisation. The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ABS and ESP® checked immediately at a qualified specialist workshop. ► Drive on carefully. ► Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
 currently unavailable See Owner's Manual	* ABS and ESP® are temporarily unavailable. Other driving and driving safety systems may also be faulty. ▲ WARNING Risk of skidding if ABS and ESP® are malfunctioning If ABS and ESP® are malfunctioning, the wheels could lock when braking and ESP® cannot carry out vehicle stabilisation. The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ABS and ESP® checked immediately at a qualified specialist workshop. ► Carefully drive on a suitable stretch of road, making slight steering movements at a speed above 30 km/h. ► If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

Display messages	Possible causes/consequences and ► Solutions
 currently unavailable See Owner's Manual	* ESP® is temporarily unavailable. Other driving and driving safety systems may also be faulty.  WARNING Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ESP® checked at a qualified specialist workshop.  Carefully drive on a suitable stretch of road, making slight steering movements at a speed above 30 km/h.  If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

Display messages	Possible causes/consequences and ► Solutions
 inoperative See Owner's Manual	* ESP® is malfunctioning. Other driving and driving safety systems may also be faulty. The brake system continues to operate normally. The braking distance may increase in an emergency braking situation. ⚠ WARNING Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ESP® checked at a qualified specialist workshop. ► Drive on carefully. ► Consult a qualified specialist workshop immediately.

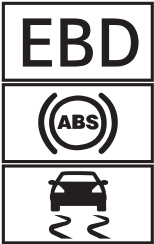Display messages	Possible causes/consequences and ► Solutions
 inoperative See Owner's Manual	* EBD, ABS and ESP® are malfunctioning. Other driving and driving safety systems may also be faulty. ▲ WARNING Risk of skidding if EBD, ABS and ESP® are malfunctioning If EBD, ABS and ESP® are malfunctioning, the wheels can lock when braking and ESP® cannot carry out vehicle stabilisation. The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop. ► Drive on carefully. ► Consult a qualified specialist workshop immediately.
 Turn on the ignition to release the parking brake	* The red  indicator lamp is lit. You have attempted to release the electric parking brake with the ignition switched off. ► Switch on the ignition.

Display messages	Possible causes/consequences and ► Solutions
 Release parking brake	* The red  indicator lamp flashes. The electric parking brake is applied while driving: • A condition for automatic release of the electric parking brake is not fulfilled . • You are performing emergency braking using the electric parking brake . ► Check that the conditions for automatic release of the electric parking brake are fulfilled. ► Release the electric parking brake manually.

Display messages



Parking brake See Owner's Manual

Possible causes/consequences and ► Solutions

* The yellow  indicator lamp is lit. The electric parking brake is malfunctioning.

To apply:

- Switch off the ignition and switch it back on.
- Apply the electric parking brake manually .

If it is not possible to apply the electric parking brake:

- Consult a qualified specialist workshop.
- Where necessary, also safeguard the parked vehicle against rolling away.

The yellow  indicator lamp and the red  indicator lamp are lit. The electric parking brake is malfunctioning.

To release:

- Switch off the ignition and switch it back on.
- Release the electric parking brake manually .

or

- Release the electric parking brake automatically .

If it is still not possible to release the electric parking brake:

- Do not continue driving under any circumstances. Consult a qualified specialist workshop.

The yellow  indicator lamp is lit and the red  indicator lamp is flashing. The electric parking brake is malfunctioning.

The electric parking brake could not be applied or released.

Display messages	Possible causes/consequences and ► Solutions
	► Switch off the ignition and switch it back on. To apply: ► Release and then apply the electric parking brake manually . To release: ► Apply and then release the electric parking brake manually. If it is not possible to apply the electric parking brake or the red  indicator lamp continues to flash: ► Do not continue driving under any circumstances. Consult a qualified specialist workshop. ► Where necessary, also safeguard the parked vehicle against rolling away. The yellow  indicator lamp is lit and the red  indicator lamp flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning. If the battery charge level is too low: ► Charge the battery. To apply: ► Switch the ignition off. The electric parking brake is applied automatically.

Display messages	Possible causes/consequences and ► Solutions
	If the electric parking brake should not be applied, leave the ignition switched on, e.g. when washing the vehicle in an automatic car wash or when having the vehicle towed away. Do not do this when having the vehicle towed with the rear axle raised. If the electric parking brake is not applied automatically: ► Switch off the ignition and switch it back on. ► Release and then apply the electric parking brake manually . If it is still not possible to apply the electric parking brake: ► Consult a qualified specialist workshop. ► Where necessary, also safeguard the parked vehicle against rolling away. To release: ► If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually . If it is still not possible to release the electric parking brake: ► Do not continue driving under any circumstances. Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Brake immediately	* Vehicles with manual transmission: A malfunction has occurred while the HOLD function was activated. A tone may also sound at regular intervals. If you attempt to lock the vehicle, the tone becomes louder. You cannot start the engine. ► Immediately depress the brake pedal firmly until the display message disappears. You can restart the engine.
 Check brake fluid level	* There is insufficient brake fluid in the brake fluid reservoir. ⚠ WARNING Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. Do not top up the brake fluid. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. Do not top up the brake fluid.

Display messages	Possible causes/consequences and ► Solutions
 Check brake pad wear	* The brake linings have reached the wear limit. ► Consult a qualified specialist workshop.
 Inoperative	* One or more main functions of the Mercedes me connect system are malfunctioning. ► Consult a qualified specialist workshop.
Radar sensors dirty See Owner's Manual	* The radar sensor system is malfunctioning. Possible causes: • soiling of the sensors • heavy rain • extended country driving without moving traffic, e.g. in the desert Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, driving systems and driving safety systems are available again. If the display message does not disappear: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Clean all sensors . ► Restart the engine.

Display messages	Possible causes/consequences and ► Solutions
Active Brake Assist Functions currently limited See Owner's Manual	* Vehicles with the Driving Assistance Package: Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS are temporarily unavailable or only partially available. Vehicles without the Driving Assistance package: Active Brake Assist is temporarily unavailable. The ambient conditions are outside the system borders . ► Drive on. As soon as the ambient conditions are within the system borders, the system will become available again. ► If the display message does not disappear, stop the vehicle while paying attention to road and traffic conditions and restart the engine.
Active Brake Assist Functions limited See Owner's Manual	* Vehicles with Driving Assistance Package: Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS is malfunctioning. Vehicles without the Driving Assistance Package: Active Brake Assist is malfunctioning. ► Consult a qualified specialist workshop.
PRE-SAFE inoperative See Owner's Manual	* PRE-SAFE® functions are malfunctioning. ► Consult a qualified specialist workshop.
PRE-SAFE impulse side inoperative See Owner's Manual	* PRE-SAFE® Impulse Side is malfunctioning or inoperative after having already been triggered. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Radar sensors dirty See Owner's Manual	* The radar sensor system is malfunctioning. Possible causes: • soiling of the sensors • heavy rain • extended country driving without moving traffic, e.g. in the desert Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, driving systems and driving safety systems are available again. If the display message does not disappear: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Clean all sensors . ► Restart the engine.

Display messages	Possible causes/consequences and ► Solutions
Restraint sys. malfunction Consult workshop	* The restraint system is faulty . ⚠ WARNING Risk of injury or fatal injury due to a malfunction in the restraint system If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This may affect the seat belt tensioner or airbag, for example. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. Detection of a restraint system malfunction: • the  restraint system warning lamp does not light up when the ignition is switched on • the  restraint system warning lamp lights up continuously or repeatedly during a journey ► Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
 Example:Front left malfunction Consult workshop	* The corresponding restraint system is malfunctioning . ⚠ WARNING Risk of injury or fatal injury due to a malfunction in the restraint system If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This may affect the seat belt tensioner or airbag, for example. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. Detection of a restraint system malfunction: • the  restraint system warning lamp does not light up when the ignition is switched on • the  restraint system warning lamp lights up continuously or repeatedly during a journey ► Consult a qualified specialist workshop immediately.
 Example:Left windowbag malfunction Consult workshop	* The corresponding window airbag is malfunctioning . ⚠ WARNING Risk of injury or fatal injury due to a malfunction in the window airbag The window airbag might be triggered unintentionally or might not be triggered at all in the event of an accident with high deceleration. ► Have the window airbag checked and repaired immediately at a qualified specialist workshop. ► Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
Front-passenger airbag disabled See Owner's Manual	* The front passenger airbag is disabled, even though an adult or a person with a build corresponding to that of an adult is seated on the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low. ⚠ WARNING - Risk of injury or even fatal injury when the front passenger airbag is disabled If the front passenger airbag is disabled, It will not be deployed in the event of an accident and cannot perform its intended protective function. A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the dashboard. ► Be aware of the status of the front passenger airbag both before and during the journey. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Check the status of the automatic front passenger airbag shutoff . ► If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
Front-passenger airbag enabled See Owner's Manual	* The front passenger airbag is enabled while the vehicle is in motion: • even when a child, a small adult or an object weighing less than the system weight threshold is located on the front passenger seat • even when the front passenger seat is not occupied The system may detect objects or forces that are adding to the weight applied to the seat.  WARNING - Risk of injury or even fatal injury from using a child restraint system when the front passenger airbag is enabled If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident. The child could be struck by the airbag. ► Be aware of the status of the front passenger airbag both before and during the journey. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Check the status of the automatic front passenger airbag shutoff . ► If necessary, consult a qualified specialist workshop immediately.

Driving systems

Display messages	Possible causes/consequences and ► Solutions
 ATTENTION ASSIST: Take a break!	* ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver (→ page 228). ► If necessary, take a break.
 ATTENTION ASSIST inoperative	* ATTENTION ASSIST is malfunctioning. ► Consult a qualified specialist workshop.
 Vehicle rising	* Your vehicle is adjusting to the level you have selected.
 Lowering	* Your vehicle is adjusting to the level you have selected.

Display messages	Possible causes/consequences and ► Solutions
 Vehicle rising Please wait	* The vehicle level is too low and the vehicle rises to the selected vehicle level. ► Wait until the display message disappears before pulling away.
 Stop vehicle Vehicle too low	* You have pulled away although the vehicle level was too low. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. The vehicle rises to the selected vehicle level. ► Wait until the display message disappears before pulling away. If the display message does not disappear and a warning tone also sounds, AIR BODY CONTROL is malfunctioning: ► Do not drive faster than 80 km/h and consult a qualified specialist workshop immediately. ! NOTE The tyres of the front axle or the front wings could be damaged by large steering movements ► Avoid large steering movements while driving and listen for scraping sounds. ► If you hear scraping sounds, pull over and stop the vehicle safely, paying attention to road and traffic conditions, and set a higher vehicle level if possible. ► Set a higher vehicle level . Depending on the malfunction, the vehicle is raised.

Display messages	Possible causes/consequences and ► Solutions
 Fault Drive at max. 80 km/h	* The AIR BODY CONTROL function is restricted. The vehicle's handling characteristics may be affected. ► Drive in a manner appropriate for the current level, but do not exceed 80 km/h. ► Consult a qualified specialist workshop. DYNAMIC BODY CONTROL is malfunctioning. The vehicle's handling characteristics may be affected. ► Do not drive faster than 80 km/h. ► Consult a qualified specialist workshop.
 Please reduce speed	* You are driving too fast for the selected vehicle level. ► In order to adjust the vehicle level, you must not drive faster than 80 km/h. ► In order to adjust the vehicle level during trailer operation, you must not drive faster than 30 km/h.
 Compressor is cooling	* Due to frequent level changes within a short space of time, the compressor first needs to cool down in order to set the selected vehicle level. ► Drive on in a manner appropriate for the current level. Make sure that there is sufficient ground clearance. When the compressor has cooled down, the vehicle continues rising to the selected vehicle level.

Display messages	Possible causes/consequences and ► Solutions
Active Lane Keeping Assist currently unavailable See Owner's Manual	* Active Lane Keeping Assist is temporarily unavailable. The ambient conditions are outside the system borders (→ page 232). Vehicles with Active Steering Assist: the camera view may be restricted by the windscreen. ► Drive on. As soon as the ambient conditions are within the system borders, the system will become available again. - If the display message does not disappear on vehicles with Active Steering Assist: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Clean the windscreen.
Active Lane Keeping Assist inoperative	* Active Lane Keeping Assist is malfunctioning. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Active Lane Keeping Assist Camera view restricted See Owner's Manual	* Vehicles without Active Steering Assist: the camera view is restricted. Possible causes: • dirt on the windscreen in the camera's field of vision • heavy rain, snow or fog Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, driving systems and driving safety systems are available again. If the display message does not disappear: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Clean the windscreen.
Blind Spot Assist currently unavailable See Owner's Manual	* Blind Spot Assist is temporarily unavailable. The system borders have been reached (→ page 229). ► Drive on. Once the cause of the problem is no longer present, the system will be available again. or ► If the display message does not disappear, stop the vehicle while paying attention to road and traffic conditions and restart the engine. ► If necessary, clean the rear bumper. If the bumper is extremely dirty, the sensors in the bumper may be malfunctioning.

Display messages	Possible causes/consequences and ► Solutions
Active Blind Spot Assist currently unavailable See Owner's Manual	* Active Blind Spot Assist is temporarily unavailable. The system borders have been reached (→ page 229). ► Drive on. Once the cause of the problem is no longer present, the system will be available again. ► If the display message does not disappear, stop the vehicle while paying attention to road and traffic conditions and restart the engine.
Blind Spot Assist not available when towing a trailer See Owner's Manual	* When you establish the electrical connection to the trailer, Blind Spot Assist is unavailable. ► Press the left-hand side of Touch Control and confirm the display message.
Active Blind Spot Assist not available when towing a trailer See Owner's Manual	* When you establish the electrical connection to the trailer, Active Blind Spot Assist is unavailable. ► Press the left-hand side of Touch Control and confirm the display message.

Display messages	Possible causes/consequences and ► Solutions
 Fault Drive at max. 80 km/h	* The AIR BODY CONTROL function is restricted. The vehicle's handling characteristics may be affected. ! NOTE The tyres of the front axle or the front wings could be damaged by large steering movements ► Avoid large steering movements while driving and listen for scraping sounds. ► If you hear scraping sounds, pull over and stop the vehicle safely, paying attention to road and traffic conditions, and set a higher vehicle level if possible. ► Do not drive faster than 80 km/h. ► Consult a qualified specialist workshop. DYNAMIC BODY CONTROL is malfunctioning. The vehicle's handling characteristics may be affected. ! NOTE The tyres of the front axle or the front wings could be damaged by large steering movements ► Avoid large steering movements while driving and listen for scraping sounds. ► If you hear scraping sounds, pull over and stop the vehicle safely, paying attention to road and traffic conditions, and set a higher vehicle level if possible. ► Do not drive faster than 80 km/h. ► Consult a qualified specialist workshop.
Blind Spot Assist inoperative	* Blind Spot Assist is malfunctioning. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Active Blind Spot Assist inoperative	* Active Blind Spot Assist is malfunctioning. ► Consult a qualified specialist workshop.
Example:Active Parking Assist Parking cancelled	* The parking assistance systems of Active Parking Assist were interrupted. You have opened the driver's door or touched the steering wheel, for example. ► Steer and brake manually.
Active Parking Assist and PARKTRONIC inoperative See Owner's Manual	* Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning. ► Stop the vehicle, paying attention to road and traffic conditions, and restart the engine. ► If the display message continues to be displayed, consult a qualified specialist workshop.
Active Parking Assist Manoeuvring assistance limited See Owner's Manual	* Active Parking Assist and Parking Assist PARKTRONIC are temporarily unavailable. The ambient conditions are outside the system borders (→ page 217). Beware of the entire vehicle surroundings. ► As soon as the ambient conditions are within the system borders, the system will become available again.
HOLD Off	* The HOLD function is deactivated because the vehicle is skidding or a condition for activation is not met. ► Reactivate the HOLD function later or check the activation conditions for the HOLD function .
Active Distance Assist available again	* Active Distance Assist DISTRONIC is operational again and can be activated (→ page 198).

Display messages	Possible causes/consequences and ► Solutions
Active Distance Assist currently unavailable See Owner's Manual	* Active Distance Assist DISTRONIC is temporarily unavailable. The ambient conditions are outside the system borders (→ page 195). ► Drive on. As soon as the ambient conditions are within the system borders, the system will become available again.
Active Distance Assist inoperative	* Active Distance Assist DISTRONIC is malfunctioning. Other driving and driving safety systems may also be faulty. ► Consult a qualified specialist workshop.
 Active Steering Assist currently unavailable See Owner's Manual	* Active Steering Assist is temporarily unavailable. The ambient conditions are outside the system borders (→ page 201). ► Drive on. As soon as the ambient conditions are within the system borders, the system will become available again. ► If necessary, clean the windscreen in the camera's field of vision.
 Active Steering Assist inoperative	* Active Steering Assist is malfunctioning. Active Distance Assist DISTRONIC remains available. ► Consult a qualified specialist workshop.
Limiter passive	* If you depress the accelerator pedal beyond the pressure point (kickdown), the limiter is switched to passive mode (→ page 193).

Display messages	Possible causes/consequences and ► Solutions
 --- km/h	* Cruise control cannot be activated as not all activation conditions are fulfilled. ► Observe the activation conditions for cruise control .
Cruise control off	* Cruise control has been deactivated. If there is an additional warning tone, cruise control has been deactivated automatically (→ page 192).
Cruise control inoperative	* Cruise control is malfunctioning. ► Consult a qualified specialist workshop.
Cruise control and Limiter inoperative	* Cruise control and the limiter are malfunctioning. ► Consult a qualified specialist workshop.
Limiter inoperative	* The limiter is malfunctioning. ► Consult a qualified specialist workshop.
 --- km/h	* The limiter cannot be activated as not all activation conditions have been fulfilled. ► Observe the activation conditions of the limiter .
Speed limit (winter tyres) XXX km/h	* You have reached the stored maximum speed for winter tyres. It is not possible to exceed this speed.

Display messages	Possible causes/consequences and ► Solutions
 Maximum speed exceeded	* The maximum permissible speed has been exceeded (only for certain countries). ► Drive more slowly.

Engine

Display messages	Possible causes/consequences and ► Solutions
Top up coolant See Owner's Manual	* The coolant level is too low. ! NOTE Engine damage due to insufficient coolant ► Avoid long journeys with insufficient coolant. ► Add coolant .

Display messages	Possible causes/consequences and ► Solutions
 Coolant Stop vehicle Switch engine off	* The coolant is too hot. ► Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. ⚠ WARNING Danger of burns when opening the bonnet If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids. ► Before opening the bonnet, allow the engine to cool down. ► In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service. ► Wait until the engine has cooled down. ► Make sure that the air supply to the radiator is not obstructed. ► Avoiding high loads on the engine, drive on to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

Display messages	Possible causes/consequences and ► Solutions
 See Owner's Manual	* The battery is not being charged. ! NOTE Possible engine damage if you continue driving ► Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. ► Consult a qualified specialist workshop.
 See Owner's Manual	* The battery is not being charged. ! NOTE Possible engine damage if you continue driving ► Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Start engine See Owner's Manual	* The engine is off and the battery charge level is too low. ► Switch off electrical consumers that are not required. ► Leave the engine running for a few minutes, or drive for a longer distance. The battery charges.
 Stop vehicle See Owner's Manual	* The battery is no longer being charged and the battery charge level is too low. ! NOTE Possible engine damage if you continue driving ► Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Switch off the engine. ► Consult a qualified specialist workshop.
 Stop vehicle Leave engine running	* The battery charge level is too low. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Start the engine. ► Wait until the display message disappears before pulling away.

Display messages	Possible causes/consequences and ► Solutions
 Check eng. oil lev. when next refuelling	* The engine oil level has dropped to the minimum level. ! NOTE Engine damage caused by driving with insufficient engine oil ► Avoid long journeys with insufficient engine oil. ► Check the engine oil level when next refuelling. Top up the engine oil (→ page 343). Notes on engine oil (→ page 404).
 Engine oil level Stop vehicle Switch engine off	* Display message only for certain engines: The engine oil level is too low. ! NOTE Engine damage caused by driving with insufficient engine oil ► Avoid long journeys with insufficient engine oil. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Switch off the engine. ► Check the engine oil level. Top up the engine oil (→ page 343). Notes on engine oil (→ page 404).

Display messages	Possible causes/consequences and ► Solutions
 Engine oil level Reduce oil level	* Display message only for certain engines: The engine oil level is too high. ! NOTE Engine damage caused by driving with excess engine oil ► Avoid long journeys with excess engine oil. ► Consult a qualified specialist workshop immediately and have engine oil siphoned off.
 Add 1 litre engine oil when next refuelling	* Display message only for certain engines: The engine oil level has dropped to the minimum level. ! NOTE Engine damage caused by driving with insufficient engine oil ► Avoid long journeys with insufficient engine oil. ► Check the engine oil level when next refuelling. Top up the engine oil (→ page 343). Notes on engine oil (→ page 404).

Display messages	Possible causes/consequences and ► Solutions
 Engine oil pressure Stop Switch off engine	* Display message only for certain engines: The engine oil pressure is too low. ! NOTE Engine damage caused by driving with insufficient engine oil pressure ► Avoid long journeys with insufficient engine oil pressure. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop.
 Engine oil level cannot be measured	* The electrical connection to the oil level sensor is interrupted or the oil level sensor is faulty. The engine oil level has dropped to the minimum level. ► Consult a qualified specialist workshop.
 Refill AdBlue See Owner's Manual	* The AdBlue® level has fallen below the reserve range. ► Refill AdBlue® immediately .

Display messages	Possible causes/consequences and ► Solutions
 Clean the fuel filter	* Vehicles with a diesel engine: the water in the fuel filter must be drained off. ► Consult a qualified specialist workshop.
 Refill AdBlue Eng. start not possible	* The AdBlue® tank is empty. you can no longer start the engine ► Top up at least 4.5 l of AdBlue® . ► Switch the ignition on. You can restart the engine after approximately one minute.
 Check AdBlue See Owner's Manual	* The AdBlue® system is malfunctioning. ► Consult a qualified specialist workshop.
 Reserve fuel level	* The fuel level has dropped into the reserve range. ► Refuel.

Display messages	Possible causes/consequences and ► Solutions
 Eng. start not possible in XXX km	* The AdBlue® system is malfunctioning. ► Consult a qualified specialist workshop immediately.
 Replace air cleaner	* Vehicles with a diesel engine: the engine air filter is dirty and must be replaced. ► Consult a qualified specialist workshop.
 Eng. start not possible	* The AdBlue® system is malfunctioning. you can no longer start the engine ► Consult a qualified specialist workshop immediately.
 Refill AdBlue No start in XXX km	* The AdBlue® level is only sufficient for the displayed distance. ► Refill AdBlue® immediately . ❗ The message disappears after driving at a speed above 15 km/h for approximately one minute.

Display messages	Possible causes/consequences and ► Solutions
	* The fan motor is defective. ► Avoiding high loads on the engine, drive on to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

Tyres

Display messages	Possible causes/consequences and ► Solutions
Tyre pressure Check tyres	* The tyre pressure loss warning system has detected a significant loss in pressure. ⚠ WARNING Risk of an accident due to insufficient tyre pressure Tyres with insufficient tyre pressure pose the following risks: • The tyres may burst, especially as the load and vehicle speed increase. • The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction. • - The driving characteristics, steering and braking may be greatly impaired. You could then lose control of the vehicle. ► Observe the recommended tyre pressures. ► Adjust the tyre pressure if necessary. ► Stop the vehicle, paying attention to road and traffic conditions. ► Check the tyre pressure and the tyres. ► When the tyre pressure is correct, restart the tyre pressure loss warning system .
Check tyre pressures then restart Run Flat Indicator	* The tyre pressure loss warning system generated a display message and has not been restarted since. ► When the tyre pressure is correct, restart the tyre pressure loss warning system .
Run Flat Indicator inoperative	* The tyre pressure loss warning system is malfunctioning. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Rectify tyre pressure	* The tyre pressure is too low in at least one of the tyres, or the tyre pressure difference between the wheels is too great. ► Check the tyre pressure and add air, if necessary. ► When the tyre pressure is correct, restart the tyre pressure monitoring system .
 Check tyre(s)	* The tyre pressure in one or more tyres has dropped significantly. The wheel position is displayed. ⚠ WARNING Risk of an accident due to insufficient tyre pressure Tyres with insufficient tyre pressure pose the following risks: • The tyres may burst, especially as the load and vehicle speed increase. • The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction. • - The driving characteristics, steering and braking may be greatly impaired. You could then lose control of the vehicle. ► Observe the recommended tyre pressures. ► Adjust the tyre pressure if necessary. ► Stop the vehicle, paying attention to road and traffic conditions. ► Check the tyre pressure and the tyres.

Display messages	Possible causes/consequences and ► Solutions
 Warning tyre defect	* The tyre pressure in one or more tyres has dropped suddenly. The wheel position is displayed. ▲ WARNING Risk of an accident from driving with a flat tyre Flat tyres are dangerous in the following ways: • The tyres can overheat and cause a fire. • - The driving characteristics, steering and braking may be greatly impaired. You could then lose control of the vehicle. ► Do not drive with a flat tyre. ► Observe the notes on flat tyres. Notes on flat tyres (→ page 356). ► Stop the vehicle, paying attention to road and traffic conditions. ► Check the tyres.
Tyre press. monitor currently unavailable	* No signals can be received from the tyre pressure sensors due to strong radio signal source interference. The tyre pressure monitoring system is temporarily unavailable. ► Drive on. The tyre pressure monitoring system restarts automatically as soon as the cause has been rectified.

Display messages	Possible causes/consequences and ► Solutions
 Wheel sensor(s) missing	* There is no signal from the tyre pressure sensor of one or more wheels. The pressure of the affected tyre is not displayed. ► Have the faulty tyre pressure sensor replaced at a qualified specialist workshop.
Tyre press. monitor inoperative No wheel sensors	* The wheels fitted do not have suitable tyre pressure sensors. The tyre pressure monitoring system is deactivated. ► Fit wheels with suitable tyre pressure sensors.
Tyre press. monitor inoperative	* The tyre pressure monitoring system is faulty. ⚠ WARNING There is a risk of an accident if the tyre pressure monitoring system is malfunctioning If the tyre pressure monitoring system is malfunctioning, it is not able to issue a warning if there is pressure loss in one or more of the tyres. Tyres with insufficient tyre pressure may, for example, affect the vehicle's handling characteristics, steering and braking. - ► Have the tyre pressure monitoring system checked at a qualified specialist workshop. ► Consult a qualified specialist workshop.
Tyre(s) overheated	* At least one tyre is overheated. The affected tyres are displayed in red. At temperatures close to the limit value, the tyres are displayed in yellow. ► Drive more slowly.

Display messages	Possible causes/consequences and ► Solutions
Tyre(s) overheated Reduce speed	* At least one tyre is overheated. ⚠ WARNING Risk of an accident from driving with overheated tyres Overheated tyres may burst, particularly at high speeds. ► Reduce speed so that the tyres cool down. ► Reduce speed so that the tyres cool down.

Key

Display messages	Possible causes/consequences and ► Solutions
 Replace key	* The key needs to be replaced. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Replace key See Owner's Manual	* Vehicles with a digital vehicle key: only a few or no authorisations remain for starting the engine. ► Make sure that the Internet connection is not limited by certain mobile phone settings. ► Open the Mercedes me connect web App http://www.mercedes.me. and call up the "digital vehicle key" service. ► Deactivate the service first and then activate it again. ► If the display message still appears, contact the Mercedes-Benz Customer Assistance Center (CAC).
 Change key batteries	* The key battery is discharged. ► Replace the battery .
 Key not detected (white display message)	* The key is currently undetected. ► Change the location of the key in the vehicle. ► If the key is still not recognised, start the engine with the key in the stowage compartment .

Display messages	Possible causes/consequences and ► Solutions
 Key not detected (red display message)	* The key cannot be detected and may no longer be in the vehicle. The key is no longer in the vehicle and you switch off the engine: • you can no longer start the engine • you cannot centrally lock the vehicle ► Ensure that the key is in the vehicle. If the key detection function has a malfunction due to a strong radio signal source: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Place the key in the stowage compartment for starting the engine with the key .
 Place the key in the marked space See Owner's Manual	* The key detection function is malfunctioning. ► Change the location of the key in the vehicle. ► Start the vehicle with the key in the stowage compartment .

Vehicle

Display messages	Possible causes/consequences and ► Solutions
 Trailer coupling extending...	* Retract or extend the ball neck. Do not attempt to speed up, slow down or initiate the retracting or extending process using your hand, foot or other aids. During the retracting or extending process, do not couple a trailer. When the ball neck has reached an operational position, the display message disappears.

Display messages	Possible causes/consequences and ► Solutions
 Check trailer hitch lock	* The trailer hitch is not operational. ⚠ WARNING Risk of an accident if the ball neck is not locked If the ball neck is not in the locked position, the trailer may come loose. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Uncouple the trailer and secure it against rolling away. ► Initiate a new swivelling procedure and do not re-couple the trailer until the display message disappears. ► Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. ► Uncouple the trailer and safeguard it against rolling away. ► Initiate a new swivelling procedure . ► When the display message disappears, couple up the trailer and drive on. If the display message does not disappear, the trailer hitch is defective and the ball neck is not locked. ► Do not couple up the trailer. Drive on without the trailer. Pay attention to the reduced ground clearance due to the unlocked ball neck. ► Consult a qualified specialist workshop.
Apply brake to deselect Park (P) position	* You have attempted to shift the transmission out of position P and into another transmission position. ► Depress the brake pedal.

Display messages	Possible causes/consequences and ► Solutions
To shift out of P or N, depress brake and start engine	* You have attempted to shift the transmission out of position P or N into another transmission position. ► Depress the brake pedal. ► Start the engine.
Risk of vehicle rolling Driver door open and transmission not in P	* The driver's door is not fully closed and the transmission is in position R, N or D. ► Shift the transmission to position P when you park the vehicle.
N permanently active Risk of vehicle rolling	* While the vehicle is rolling or while you are driving, the transmission has been shifted to position N. ► Depress the brake pedal to stop and, when the vehicle is stationary, shift the transmission to position P. ► To continue your journey, shift the transmission to position D or R.
Only select Park (P) when vehicle is stationary	* The transmission can only be shifted to position P when the vehicle is stationary.
Without changing gear, consult workshop	* The transmission is malfunctioning. The transmission position can no longer be shifted. ► When the transmission is in position D, consult a qualified specialist workshop and do not change the transmission position. ► For all other transmission positions, park the vehicle safely. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Vehicle is operational Switch off the ignition before exiting	* You are leaving the vehicle when it is in a ready-to-drive state. ► When you leave the vehicle, switch off the ignition and take the key with you. ► If you do not leave the vehicle, switch off the electrical consumers, e.g. the seat heater. Otherwise, the 12 V battery might discharge and it will then only be possible to start the vehicle using a donor battery (starting assistance).
Transmission Malfunction Stop	* The transmission is malfunctioning. The transmission shifts to position N automatically. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Switch the transmission to position P. ► Consult a qualified specialist workshop.
Reversing not poss. Con- sult workshop	* The transmission is malfunctioning. Reverse gear can no longer be engaged. ► Consult a qualified specialist workshop.
Stop vehicle Leave engine running Wait Transmission cooling	* The transmission has overheated. Pulling away can be temporarily impaired or not possible. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Start the engine. ► Wait until the display message disappears before pulling away.

Display messages	Possible causes/consequences and ► Solutions
Auxiliary battery malfunction	* The auxiliary battery for the transmission is no longer being charged. ► Consult a qualified specialist workshop. ► Until then, manually set the transmission to position P before you switch off the engine. ► Before leaving the vehicle, apply the electric parking brake.
Depress clutch fully to start engine	* You have attempted to start the engine without depressing the clutch pedal. ► Depress the clutch pedal and then start the engine. The engine has stalled while pulling away, e.g. because the clutch pedal was released too quickly. ► Depress the clutch pedal again. The engine starts automatically. ► Slowly release the clutch pedal to pull away.
Clutch overheated Avoid pulling away for XX:XX mins	* The clutch is under considerable load and is overheating. Avoid frequent pulling away and driving at walking pace over longer distances. ► Stop the vehicle, paying attention to road and traffic conditions and leave the engine running. The clutch is cooled more quickly when the engine is running. or ► If possible, continue driving at a steady speed and remove your foot from the clutch pedal. Do not ride the clutch. The clutch is cooled while driving. When the clutch has cooled down, the display message disappears.

Display messages	Possible causes/consequences and ► Solutions
Air conditioning Malfunction See Owner's Manual	* Operation of the climate control system is temporarily restricted. Airflow and fresh air supply are set to automatic mode. ► Have the climate control system checked at a qualified specialist workshop.
Apply brake to select R	* You have attempted to shift the transmission out of position D and into transmission position R. ► Depress the brake pedal. ► Switch the transmission to position R.
 Operation only possible in transmission position N	* You have attempted to displace the ball neck and the transmission is not in position N. ► Switch the transmission to position N.
 Operation only possible in transmission position P	* You have attempted to displace the ball neck and the transmission is in position R, N or D. ► Depress the brake pedal. ► Switch the transmission to position P.

Display messages	Possible causes/consequences and ► Solutions
 Before starting the engine, turn the steering wheel.	* Vehicles with manual transmission: The electric steering lock was unable to unlock the steering. ► Switch off the ignition. ► To unlock the steering, move the steering wheel slightly to the left and right. ► Switch the ignition back on.
 Steering malfunction See Owner's Manual	* Vehicles with manual transmission: the electric steering lock is malfunctioning. The steering may be locked by the electric steering lock. ▲ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
Let fresh air into the vehicle interior! Air conditioning malf. Visit workshop	* The climate control system is malfunctioning. ⚠ WARNING Risk of injury and accident due to an insufficient supply of fresh air If the climate control system is malfunctioning, carbon dioxide levels may increase in the passenger compartment. Breathing in carbon dioxide may cause dizziness. ► Open the window to ensure that there is a sufficient supply of fresh air. ► Open the window to ensure that there is a sufficient supply of fresh air. ► Consult a qualified specialist workshop immediately.
 Steering malfunction Drive carefully Visit workshop	* The power assistance of the steering is malfunctioning. You may need to use more force to steer. ► Drive on carefully. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Steering malfunction Stop immediately See Owner's Manual	* The steering is malfunctioning. Steering capability is considerably impaired. ⚠ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop.
 Steering malfunction Increased physical effort See Owner's Manual	* The power assistance of the steering is malfunctioning. ⚠ WARNING Risk of an accident due to altered steering characteristics If the power assistance of the steering fails partially or completely, you will need to use more force to steer. ► If safe steering is possible, drive on carefully. ► Visit or consult a qualified specialist workshop immediately. ► If safe steering is possible, drive on carefully. ► Visit or consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ► Solutions
 inoperative Battery low	* The on-board electrical system voltage is too low. The stationary heater has switched itself off. ► Drive a long distance until the battery has reached a sufficient charge level again.
 inoperative Refuel vehicle	* There is too little fuel in the fuel tank. The stationary heater cannot be switched on. ► Refuel the vehicle.
Active bonnet malfunction See Owner's Manual	* The active bonnet (pedestrian protection) is malfunctioning or inoperative after having already been triggered. ► Consult a qualified specialist workshop.
 inoperative See Owner's Man.	* The stationary heater is temporarily malfunctioning. ► When the vehicle is on a level surface and the engine has cooled down, make up to four attempts to switch on the stationary heater, waiting several minutes between each attempt. ► If the stationary heater does not switch on, consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
	* The engine bonnet is open. ⚠ WARNING Risk of accident due to driving with the engine bonnet unlocked An unlocked engine bonnet may open up when the vehicle is in motion and block your view. ► Never unlock the engine bonnet when driving. ► Before every trip, ensure that the engine bonnet is locked. ► Pull over and stop the vehicle safely as soon as possible. ► Close the engine bonnet.
	* At least one door is open. ► Close all doors.

Display messages	Possible causes/consequences and ► Solutions
	* The boot lid is open. ⚠ WARNING Risk of exhaust gas poisoning Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the boot lid is open when the engine is running, especially if the vehicle is in motion. ► Always switch off the engine before opening the boot lid. ► Never drive with the boot lid open. ► Close the boot lid.
 Example: Rear left seat backrest not locked	* The corresponding seat backrest of the rear bench seat is not engaged. ► Fold the corresponding seat backrest back until it engages.
 Top up washer fluid	* The washer fluid level in the washer fluid reservoir has dropped below the minimum. ► Top up the washer fluid .

Lights

Display messages	Possible causes/consequences and ► Solutions
 Example:Left dipped beam	* The corresponding light source is defective. ► Consult a qualified specialist workshop. or ► Check whether you are permitted to replace the light source yourself . ⓘ LED light bulbs: the display message for the corresponding lamp only appears when all the light-emitting diodes in the lamp have failed.
 Active Light System inoperative	* The active light function is faulty. ► Consult a qualified specialist workshop.
 Active Light System inoperative	* The active headlamps are faulty. ► Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ► Solutions
 Intelligent Light System inoperative	* The Intelligent Light System is faulty. The lighting system continues to function properly without the functions of the Intelligent Light System. ► Consult a qualified specialist workshop.
 Malfunction See Owner's Manual	* The exterior lighting is faulty. ► Consult a qualified specialist workshop. Vehicles with a trailer hitch: a fuse may have blown. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Check the fuses and replace them if necessary .
 AUTO lights inoperative	* The light sensor is faulty. ► Consult a qualified specialist workshop.
 Switch off lights	* You are leaving the vehicle and the lights are still switched on. ► Turn the light switch to the AUTO position.

Display messages	Possible causes/consequences and ► Solutions
 Switch on headlamps	* You are driving without dipped-beam headlamps. ► Turn the light switch to the  or AUTO position.
Adaptive Highbeam Assist Plus inoperative	* Adaptive Highbeam Assist Plus is faulty. ► Consult a qualified specialist workshop.
Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual	* Adaptive Highbeam Assist Plus is temporarily unavailable. The system borders have been reached (→ page 129). ► Drive on. Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Plus available again display message appears.
Adaptive Highbeam Assist Plus Camera view restricted See Owner's Manual	* The camera view is restricted. Possible causes: • dirt on the windscreen in the camera's field of vision • heavy rain, snow or fog Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, driving systems and driving safety systems are available again. If the display message does not disappear: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Clean the windscreen.

Display messages	Possible causes/consequences and ► Solutions
Adaptive Highbeam Assist inoperative	* Adaptive Highbeam Assist is malfunctioning. ► Consult a qualified specialist workshop.
Adaptive Highbeam Assist currently unavailable See Owner's Manual	* Adaptive Highbeam Assist is temporarily unavailable. The system borders have been reached (→ page 127). ► Drive on. Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist available again display message appears.
Adaptive Highbeam Assist Camera view restricted See Owner's Manual	* The camera view is restricted. Possible causes: • dirt on the windscreen in the camera's field of vision • heavy rain, snow or fog Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, driving systems and driving safety systems are available again. If the display message does not disappear: ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ► Clean the windscreen.

Warning and indicator lamps

Overview of warning and indicator lamps

Some systems perform a self-test when the ignition is switched on. Some warning and indicator lamps may briefly light up or flash. This behaviour is non-critical. These warning and indicator lamps only indicate a malfunction if they light up or flash after the engine is started or during a journey.

Instrument Display (standard)



Instrument Display in the Widescreen Cockpit



Progressive setting (Widescreen Cockpit)



If you select the progressive display setting in vehicles with a Widescreen Cockpit, the position of the indicator lamps in the Instrument Display changes.

Warning and indicator lamps:

-  Dipped beam (→ page 122)
-  Standing lights (→ page 122)
-  Main beam (→ page 124)
-  Turn signal light (→ page 124)
-  Rear fog light (→ page 122)
-  Seat belt is not fastened (→ page 479)
-  Brakes (red) (→ page 473)
-  ABS malfunctioning (→ page 473)
-  ESP® (→ page 473)
-  ESP® OFF (→ page 473)
-  Electric parking brake (→ page 473)
-  Steering assistance malfunctioning (→ page 481)
-  Electrical fault (→ page 483)
-  Restraint system (→ page 473)

	Engine diagnosis (→ page 483)		Distance warning (→ page 480)		Trailer hitch is not operational or is swivelling (→ page 481)
	Fuel reserve with fuel filler flap location indicator (→ page 483)		Preglow		
	Coolant too hot/cold (→ page 483)		Tyre pressure monitoring system (→ page 486)		

Safety systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Brake system warning lamp	The yellow brake system warning lamp is lit while the engine is running. ▲ WARNING Risk of an accident due to a brake system malfunction If the brake system is malfunctioning, braking characteristics may be impaired. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop. ► Adjust your speed and continue to drive carefully, leaving a suitable distance to the vehicle in front. ► If the multifunction display shows a display message, please observe this. ► Consult a qualified specialist workshop.

Warning/indicator lamp



Brake system warning lamp

Possible causes/consequences and ► Solutions

The red brake system warning lamp is lit while the engine is running.

Possible causes:

- The brake force boosting is malfunctioning and the braking characteristics may be affected.
- There is insufficient brake fluid in the brake fluid reservoir.

⚠ WARNING There is a risk of an accident if brake force boosting is malfunctioning

If brake force boosting is malfunctioning, the wheels may lock when braking. Braking characteristics may be impaired. The braking distance may increase in an emergency braking situation.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.

⚠ WARNING Risk of an accident due to low brake fluid level

If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
Do not top up the brake fluid.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Observe the messages in the multifunction display. ► Consult a qualified specialist workshop.
 ABS warning lamp	The yellow ABS warning lamp is lit while the engine is running. ABS is malfunctioning. If there is an additional acoustic warning signal, EBD is malfunctioning. Other driving systems and driving safety systems may also be faulty. ⚠ WARNING There is risk of skidding if EBD or ABS is malfunctioning If EBD or ABS is malfunctioning, the wheels could lock when braking The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop. ► Drive on carefully. ► Observe the messages in the multifunction display. ► Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 ESP® warning lamp flashes	The yellow ESP® warning lamp flashes while the vehicle is in motion. ESP® is intervening . ► Adapt your driving style to suit the road and weather conditions.
 ESP® warning lamp lights up	The yellow ESP® warning lamp is lit while the engine is running. ESP® is malfunctioning. Other driving and driving safety systems may also be faulty. ⚠ WARNING Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. ► Drive on carefully. ► Have ESP® checked at a qualified specialist workshop. ► Drive on carefully. ► Observe the messages in the multifunction display. ► Consult a qualified specialist workshop.

Warning/indicator lampESP[®] OFF warning lamp**Possible causes/consequences and ► Solutions**

The yellow ESP[®] OFF warning lamp is lit while the engine is running.
ESP[®] is deactivated.

▲ WARNING Risk of skidding when driving with ESP[®] deactivated

If ESP[®] is deactivated, ESP[®] cannot carry out vehicle stabilisation. The availability of further driving safety systems is also limited.

- Drive on carefully.
- Only deactivate ESP[®] for as long as the situation requires.

If ESP[®] cannot be activated, ESP[®] is malfunctioning.

- Have ESP[®] checked immediately at a qualified specialist workshop.

- Observe the notes on deactivating ESP[®] .

Warning/indicator lamp	Possible causes/consequences and ► Solutions
Red indicator lamp, electric parking brake applied Yellow electric parking brake indicator lamp is malfunctioning	The red electric parking brake indicator lamp flashes or is lit. The yellow indicator lamp is also lit if the electric parking brake malfunctions. ► Observe the messages in the multifunction display.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Restraint system warning lamp	The red restraint system warning lamp is lit while the engine is running. The restraint system is malfunctioning. ⚠ WARNING Risk of injury or fatal injury due to a malfunction in the restraint system If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This may affect the seat belt tensioner or airbag, for example. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. ► Drive on carefully. ► Observe the messages in the multifunction display. ► Consult a qualified specialist workshop immediately.

Seat belt

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Seat belt warning lamp lights up	The red seat belt warning lamp lights up after starting the engine. In addition, an acoustic warning tone may sound. The seat belt warning lamp reminds the driver and front passenger to fasten their seat belts. ► Fasten your seat belt . If you have placed objects on the front passenger seat, the warning lamp may remain lit.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Seat belt warning lamp flashes	The red seat belt warning lamp flashes and an intermittent warning tone sounds. The driver or front passenger has not fastened their seat belt while the vehicle is in motion. ► Fasten your seat belt . - There are objects on the front passenger seat. ► Remove the objects from the front passenger seat.

Driving systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Distance warning warning lamp	The red distance warning lamp lights up while the vehicle is in motion. The distance to the vehicle in front is too small for the speed selected. If there is an additional warning tone, you are approaching an obstacle at too high a speed. ► Be prepared to brake immediately. ► Increase the distance. Active Brake Assist .

Vehicle

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Trailer hitch warning lamp	The red trailer hitch warning lamp is on. The trailer hitch is not operational or swivels. ▲ WARNING Risk of an accident if the ball neck is not locked If the ball neck is not in the locked position, the trailer may come loose. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Uncouple the trailer and secure it against rolling away. ► Initiate a new swivelling procedure and do not re-couple the trailer until the display message disappears. ► Observe the messages in the multifunction display. If the trailer hitch swivels: ► Wait until the ball neck has reached the operational position.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Power steering system warning lamp	The red power steering system warning lamp is lit while the engine is running. The power steering assistance or the steering itself is malfunctioning. ⚠ WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardised. ► Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ► Consult a qualified specialist workshop. ► Observe the messages in the multifunction display.

Engine

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Engine diagnosis warning lamp	The yellow engine diagnosis warning lamp is lit while the engine is running. A malfunction has occurred in the engine, the exhaust system or the fuel system. The emission limit values may be exceeded and the engine may be running in emergency operation mode. ► Have the vehicle checked as soon as possible at a qualified specialist workshop. Vehicles with a diesel engine: the fuel tank has been run dry. ► Start the engine three to four times after refuelling. If the yellow engine diagnosis warning lamp goes out, emergency operation mode is cancelled. The vehicle need not be checked.
 Electrical fault warning lamp	The red electrical fault warning lamp is lit. There is a fault in the electrics. ► Observe the messages in the multifunction display.
 Fuel reserve warning lamp	The yellow fuel reserve warning lamp is lit while the engine is running. The fuel level has dropped into the reserve range. ► Refuel.

Warning/indicator lamp



Coolant warning lamp

Possible causes/consequences and ► Solutions

The red coolant warning lamp is lit while the engine is running.

Possible causes:

- The temperature sensor is malfunctioning
- Coolant level too low
- The air supply to the radiator is obstructed
- The radiator fan is faulty

If there is an additional warning tone, the coolant temperature has exceeded 120 °C.

⚠ WARNING Danger of burns when opening the bonnet

If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- Before opening the bonnet, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.

- Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. Do not continue driving under any circumstances.
- Observe the messages in the multifunction display.

If the coolant temperature display is at the lower end of the temperature scale:

- Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	Otherwise: ► Leave the vehicle and keep a safe distance from the vehicle until the engine has cooled down. ► Check the coolant level . ► Make sure that the air supply to the radiator is not obstructed. ► Avoiding high loads on the engine, drive on to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

Tyres

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 Tyre pressure monitoring system warning lamp lights up	The yellow tyre pressure monitoring system warning lamp (pressure loss/malfunction) is lit. The tyre pressure monitoring system has detected tyre pressure loss in at least one of the tyres.  WARNING Risk of an accident due to insufficient tyre pressure Tyres with insufficient tyre pressure pose the following risks: • The tyres may burst, especially as the load and vehicle speed increase. • The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction. • - The driving characteristics, steering and braking may be greatly impaired. You could then lose control of the vehicle.  Observe the recommended tyre pressures.  Adjust the tyre pressure if necessary.  Stop the vehicle, paying attention to road and traffic conditions.  Check the tyre pressure and the tyres.

Warning/indicator lamp

Tyre pressure monitoring system warning lamp flashes

Possible causes/consequences and ► Solutions

The yellow tyre pressure monitoring system warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit.

The tyre pressure monitoring system is faulty.

⚠ WARNING There is a risk of an accident if the tyre pressure monitoring system is malfunctioning

If the tyre pressure monitoring system is malfunctioning, it is not able to issue a warning if there is pressure loss in one or more of the tyres.

Tyres with insufficient tyre pressure may, for example, affect the vehicle's handling characteristics, steering and braking. -

► Have the tyre pressure monitoring system checked at a qualified specialist workshop.

► Consult a qualified specialist workshop.

- 1, 2, 3 ...**
- 12 V socket**
see Socket (12 V)
- 230 V socket**
see Socket (230 V)
- 360° Camera** 214
Assigning as a favourite 217
Care 349
Function 214
Selecting a view 217
- A**
- A/C function**
Activating/deactivating (control panel) 144
Activating/deactivating (multimedia system) 144
- ABS (Anti-lock Braking System)** 183
- Acceleration**
see Kickdown
- Access data**
Editing 319
Setting 318
- Setting up (business telephony) 317
- Acoustic locking verification signal**
Activating/deactivating 62
- Active Blind Spot Assist** 229
Activating/deactivating 231
Brake application 230
Function 229
System limitations 229
Trailer operation 230
- Active bonnet (pedestrian protection)** .. 339
Operation 339
Resetting 339
- Active Brake Assist** 187
Function/notes 187
Setting 191
- Active Distance Assist DISTRONIC** 195
Calling up a speed 198
Function 195
Increasing/decreasing speed 198
Requirements: 198
Selecting 198
Steering wheel buttons 198
Storing a speed 198
Switching off/deactivating 198
- Switching on/activating 198
System limitations 195
- Active headlamps function** 126
- Active Lane Keeping Assist** 232
Activating/deactivating 233
Function 232
Sensitivity (function/notes) 234
Setting the sensitivity 235
System limits 232
Trailer operation 232
- Active Parking Assist** 217
Cross Traffic Alert 227
Drive Away Assist 227
Exiting a parking space 220
Function 217
Parking 219
System limitations 217
- Active Steering Assist** 201
Activating/deactivating 202
Function 201
System limitations 201
- Adaptive brake lights** 191
- Adaptive cruise control**
see Active Distance Assist DISTRONIC

- Adaptive functions, MULTIBEAM LED**
see Intelligent Light System
- Adaptive Highbeam Assist**
 - Activating/deactivating 128
 - Function 127
- Adaptive Highbeam Assist Plus**
 - Activating/deactivating 130
 - Function 129
- AdBlue®** 403
 - Additives 403
 - Filling capacity 404
 - Notes 171
 - Purity 403
- Additional door lock** 65
- Additives** 404
 - AdBlue® 403
 - Engine oil 404
 - Fuel 402
- Additives (AdBlue®)**
see AdBlue®
- Additives (engine oil)**
see Additives
- Additives (fuel)**
see Fuel
- Address book**
see Contacts
- Adjusting the balance/fader**
 - Burmester® surround sound system ... 337
- Adjusting the headlamp range** 123
- Adjusting the sound focus**
 - Burmester® surround sound system ... 337
- ADS PLUS damping system**
see AIR BODY CONTROL
- Adverse weather light** 127
- After-sales service centre**
see ASSYST PLUS
- AIR BODY CONTROL** 204
 - Setting 206
 - Suspension 204
- Air conditioning system**
see Climate control
- Air distribution** 142
- Air freshener system**
see Fragrance system
- Air suspension**
see AIR BODY CONTROL
- Air vents** 152
 - Adjusting (front) 152
 - Adjusting (rear) 152
 - Glove box 152
- Air vents**
see Air vents
- Air-recirculation mode** 145
- Airbag** 34
 - Activation 28
 - Belt airbag 32
 - Front airbag (driver, front passenger) 34
 - Installation locations 34
 - Knee airbag 34
 - Overview 34
 - Protection 35
 - Reduced protection 36
 - Side impact airbag 34
 - Window airbag 34
- Airflow** 142
- AIRPANEL (Care)** 349

Alarm

see Panic alarm

Alarm system

see ATA (anti-theft alarm system)

Alternative route

see Route

Ambient lighting 131**Android Auto** 308

Connecting a mobile phone 308

Ending 309

Notes 308

Overview 308

Tone settings 309

Transferred vehicle data 309

Animals

Pets in the vehicle 60

Anti-lock braking system

see ABS (Anti-lock Braking System)

Anti-theft alarm system

see ATA (anti-theft alarm system)

Anti-theft protection

Additional door lock 65

Immobiliser 85

Anti-theft protection

see ATA (anti-theft alarm system)

Anticipatory occupant protection

see PRE-SAFE® (anticipatory occupant protection)

see PRE-SAFE® PLUS (anticipatory occupant protection plus)

Apple CarPlay™ 307

Connecting an iPhone® 307

Ending 308

Notes 307

Overview 307

Tone settings 308

Transferred vehicle data 309

Ashtray

Front centre console 115

Rear 115

Assistance graphic

Menu (on-board computer) 246

Assistance systems

see Driving safety system

ASSYST PLUS 338

Battery disconnection periods 339

Displaying the service due date 338

Function/notes 338

Regular service work 338

Special service requirements 338

ATA (anti-theft alarm system) 85

Activating/deactivating interior protection 87

Deactivating the alarm 86

Function 85

Function of interior protection 87

Function of tow-away protection 86

Priming/deactivating tow-away protection 87

ATTENTION ASSIST 228, 229

Function 228

Setting 229

System limitations 228

Attention assistant

see ATTENTION ASSIST

Audio 20

see Multimedia system

Audio mode

Activating media mode 325

Connecting USB devices 327

- | | | | | | |
|---|-----|--|-----|--|-----|
| Copyright | 325 | Automatic mirror folding function | | Battery | |
| Information | 324 | Activating/deactivating | 140 | Key | 63 |
| Inserting/removing an SD card | 325 | Automatic transmission | | Remote control (stationary heater) | 150 |
| Media search | 328 | DIRECT SELECT lever | 164 | Battery (vehicle) | |
| Overview | 326 | Drive program display | 162 | Charging | 364 |
| Pause and playback function | 327 | Drive programs | 161 | Notes | 362 |
| Selecting a track | 327 | DYNAMIC SELECT switch | 161 | Starting assistance | 364 |
| Selecting playback options | 327 | Engaging drive position | 165 | Belt | |
| Track list | 327 | Engaging reverse gear | 165 | see Seat belt | |
| Authorised workshop | | Kickdown | 167 | Belt airbag | |
| see Qualified specialist workshop | | Manual gearshifting | 166 | Activation | 28 |
| Automatic distance control | | Selecting park position | 165 | Function/notes | 32 |
| see Active Distance Assist DISTRONIC | | Shifting to neutral | 165 | Bicycle rack | |
| Automatic driving lights | 123 | Steering wheel gearshift paddles | 166 | Trailer operation | 239 |
| Automatic engine start (ECO start/stop function) | 160 | Transmission position display | 164 | Blind Spot Assist | 229 |
| Automatic engine stop (ECO start/stop function) | 160 | Transmission positions | 164 | Activating/deactivating | 231 |
| Automatic front passenger airbag shutoff | | Axle load | | Function | 229 |
| see Front passenger airbag shutoff | | Permissible | 397 | System limitations | 229 |
| Automatic lateral support adjustment | | Trailer operation | 410 | Blower | |
| Setting | 95 | | | see Climate control | |
| | | | | BlueTEC | |
| | | | | see AdBlue® | |
-
- | | |
|--|-----|
| B | |
| Ball neck | |
| Extending/retracting | 235 |
| BAS (Brake Assist System) | 183 |

- Bluetooth®**
 Activating/deactivating 264
 Setting up an Internet connection 318
 Settings 263
 Switching profile (DUN/PAN) 319
- Bluetooth® audio**
 Activating 332
 De-authorising (de-registering) the device 332
 Information 329
 Overview 330
 Searching for a track 332
 Searching for and authorising the device 331
 Selecting a music player 332
 Switching device via NFC 332
- Boot box**
 see EASY-PACK boot box
- Boot lid**
 Activating/deactivating the boot lid opening limiter 75
 Closing 71
 HANDS-FREE ACCESS 73
 Locked separately 75
- Opening 70
 Opening dimensions 407
- Brake Assist System**
 see BAS (Brake Assist System)
- Brake fluid**
 Notes 405
- Brake force distribution**
 EBD (Electronic Brake force Distribution) 186
- Brakes**
 ABS (Anti-lock Braking System) 183
 Adaptive brake lights 191
 BAS (Brake Assist System) 183
 Driving tips 158
 EBD (Electronic Brake force Distribution) 186
 HOLD function 202
 Limited braking effect (salt-treated roads) 158
 New/replaced brake linings/brake discs 157
 Running-in notes 157
- Brakes**
 see Active Brake Assist
- Braking assistance**
 see BAS (Brake Assist System)
- Breakdown**
 Assistance overview 14
 Tow-starting 371
 Towing away 367
 Transporting the vehicle 369
 Wheel change 388
- Breakdown**
 see Flat tyre
- Breakdown assistance call**
 see Service call
- Breakdown management**
 see Service call
- Burmester® surround sound system** 336
 Adjusting the balance/fader 337
 Adjusting the sound focus 337
 Adjusting treble, mid and bass settings 336
 Automatic volume adjustment 337
 Calling up the sound menu 336
 Information 336
 Switching the surround sound on/off 337

Business telephony

Setting up an Internet connection 317

Buttons

Steering wheel 243

C**Call list**

Making a call 305

Options in the call list 306

Overview 305

Calling up the sound menu

Burmester® surround sound system ... 336

Calls 302

Accepting 302

Activating functions during a call 302

Calls with several participants 302

Declining 302

Ending a call 302

Incoming call during an existing call ... 303

Making 302

Via the overhead control panel

(Mercedes me connect) 311

Camera

see 360° Camera

see Reversing camera

Car wash

see Care

Car wash (care) 346**Care** 351

AIRPANEL 349

Car wash 346

Carpet 351

Display 351

EASY-PACK boot box 351

Exterior lighting 349

Genuine wood/trim elements 351

High-pressure cleaner 346

Matt finish 348

Paint 348

Plastic trim 351

Reversing camera/360° Camera 349

Roof lining 351

Seat belt 351

Seat cover 351

Sensors 349

Tailpipes 349

Trailer hitch 349

Washing by hand 347

Wheels/rims 349

Windows 349

Wiper blades 349

Carpet (Care) 351**Changing bulbs** 132

Dipped beam 133

Fitting/removing cover (front wheel

arch) 133

Main beam 133

Notes 132

Opening/closing the side trim pan-

els 134

Overview 132

Reversing light 134

Turn signal light (front) 133

Turn signal light (rear) 134

Changing hub caps 388**Channel tracking**

Setting 335

Charging

Battery (vehicle) 364

Mobile phone (wireless) 119

USB port 118

Child safety lock

Rear door 58

Rear side windows	60	Chock	387	Glove box air vent	152
Child seat		Storage location	387	Inserting/removing the flacon (fragrance system)	146
Attaching (notes)	50	Cigarette lighter		Ionisation	146
Front passenger seat (notes)	48	Front centre console	116	Note	142
Front passenger seat (rearward-facing/forward-facing)	49	City lighting	127	Rear air vents	152
Front passenger seat (without airbag shutoff)	49	Cleaning		Rear operating unit	142
ISOFIX/i-Size (fitting)	46	see Care		Residual heat	145
Notes	42	Climate control	142	Setting the air distribution	142
Recommended child restraint systems	56	Activating/deactivating the A/C function (control panel)	144	Setting the airflow	142
Seats suitable for belt-secured child restraint systems	51	Activating/deactivating the A/C function (multimedia system)	144	Setting the climate style	144
Seats suitable for i-Size child restraint systems	56	Activating/deactivating the synchronisation function (control panel)	145	Setting the fragrance system	146
Seats suitable for ISOFIX child restraint systems	54	Activating/deactivating the synchronisation function (multimedia system)	145	Setting the temperature	142
Top Tether	47	Air distribution settings	144	Stationary heater/ventilation	147
Child seat		Air-recirculation mode	145	Switching on/off	143
see i-Size child seat securing system		Automatic control	144	Switching the rear window heater on/off	142
see ISOFIX child seat securing system		Climate style function	144	THERMATIC control panel	142
Children		Demisting the windows	145	THERMOTRONIC control panel	142
Restraint systems	42	Demisting the windscreen	142	Ventilating the vehicle (convenience opening)	78
		Front air vents	152	Windscreen heater	147
				Climate style	
				Function	144
				Setting	144

Cockpit	4
Overview	4
Combination switch see Turn signal light	
Compass	295
Computer	243
Connection status Displays	320
Overview	320
Contacts	303
Calling up	303
Deleting	305
Downloading (from mobile phone)	303
Importing	304
Information	303
Making a call	305
Name format	304
Options	305
Storing	305
Controller Operating	255
Convenience closing	79
Convenience opening	78

Coolant (engine) Level check	344
Notes	406
Cooling see Climate control	
Copyright	26
Cornering light	126
Cover	75
Cross Traffic Alert	227
Crosswind Assist Function/notes	186
Cruise control	192
Activating	193
Calling up a speed	193
Deactivating	193
Function	192
Lever	193
Requirements	193
Selecting	193
Setting a speed	193
Storing a speed	193
System limits	192

Cup holder see Cup holders	
Cup holders	113
Fitting/removing (centre console)	113
Rear	114

D

Dashboard see Cockpit	
Dashboard lighting	245
Data acquisition Vehicle	23, 25
Data import/export Function/notes	267
Importing/exporting	267
Date Setting the time and date automati- cally	262
Deactivating the alarm (ATA)	86
Declaration of conformity Electromagnetic compatibility	20
Jack	20
TIREFIT kit	21

-
- Wireless vehicle components 20
 - Designs**
 - Menu (on-board computer) 252
 - Destination** 287
 - Editing intermediate destinations 278
 - Editing the last destinations 287
 - External 287
 - Saving (current vehicle position) 287
 - Saving as global favourite 287
 - Storing a map position 287
 - Destination entry** 273, 275
 - Enter geo-coordinates 277
 - Entering a POI or address 273
 - Entering an intermediate destination ... 278
 - Selecting a contact 276
 - Selecting a POI 275
 - Selecting from the map 277
 - Selecting previous destinations 276
 - Detecting inattentiveness**
 - see ATTENTION ASSIST
 - Diagnostics connection** 22
 - Diesel**
 - Low outside temperatures 402
 - Notes 402
 - Digital Owner's Manual** 16
 - Digital speedometer** 247
 - Dipped beam**
 - Activating/deactivating 122
 - Changing bulbs 133
 - Setting 130
 - Setting for abroad (symmetrical) 122
 - DIRECT SELECT lever** 164
 - Function 164
 - DIRECT SELECT selector lever**
 - Engaging drive position 165
 - Engaging park position automatically .. 165
 - Engaging reverse gear 165
 - Selecting park position 165
 - Shifting to neutral 165
 - Display**
 - Care 351
 - Display (multimedia system)**
 - Notes 254
 - Settings 261
 - Display (on-board computer)**
 - Displays in the multifunction display ... 245
 - Display message** 411
 - Calling up (on-board computer) 411
 - Notes 411
 - Display messages**
 -  448
 -  466
 -  466
 -  467
 -  438
 - Active Blind Spot Assist currently unavailable See Owner's Manual 434
 - Active Blind Spot Assist inoperative 436
 - Active Blind Spot Assist not available when towing a trailer See Owner's Manual 434
 - Active bonnet malfunction See Owner's Manual 465
 - Active Brake Assist Functions currently limited See Owner's Manual 423
 - Active Brake Assist Functions limited See Owner's Manual 423

- Active Distance Assist available again 436
- Active Distance Assist currently unavailable See Owner's Manual 437
- Active Distance Assist inoperative 437
- Active Lane Keeping Assist Camera view restricted See Owner's Manual ... 433
- Active Lane Keeping Assist currently unavailable See Owner's Manual 432
- Active Lane Keeping Assist inoperative 432
-  Active Light System inoperative .. 468
- Active Parking Assist and PARKTRONIC inoperative See Owner's Manual 436
- Active Parking Assist Manoeuvring assistance limited See Owner's Manual 436
-  Active Steering Assist currently unavailable See Owner's Manual 437
-  Active Steering Assist inoperative 437
- Adaptive Highbeam Assist Camera view restricted See Owner's Manual 471
- Adaptive Highbeam Assist currently unavailable See Owner's Manual 471
- Adaptive Highbeam Assist inoperative 471
- Adaptive Highbeam Assist Plus Camera view restricted See Owner's Manual 470
- Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual 470
- Adaptive Highbeam Assist Plus inoperative 470
-  Add 1 litre engine oil when next refuelling 444
- Air conditioning Malfunction See Owner's Manual 461
- Apply brake to deselect Park (P) position 457
- Apply brake to select R 461
-  ATTENTION ASSIST inoperative ... 429
-  ATTENTION ASSIST: Take a break! 429
-  AUTO lights inoperative 469
- Auxiliary battery malfunction 460
-  Before starting the engine, turn the steering wheel. 462
- Blind Spot Assist currently unavailable See Owner's Manual 433
- Blind Spot Assist inoperative 435
- Blind Spot Assist not available when towing a trailer See Owner's Manual ... 434
- Brake immediately 421
-  Change key batteries 454
-  Check AdBlue See Owner's Manual 446
-  Check brake fluid level 421

-  Check eng. oil lev. when next refuelling 443
-  Check trailer hitch lock 457
-  Check tyre(s) 450
-  Clean the fuel filter 446
- Clutch overheated Avoid pulling away for XX:XX mins 460
-  Compressor is cooling 431
-  Coolant Stop vehicle Switch engine off 440
- Cruise control and Limiter inoperative 438
- Cruise control inoperative 438
- Cruise control off 438
-  currently unavailable See Owner's Manual 413
-  currently unavailable See Owner's Manual 414
- Depress clutch fully to start engine 460
- LIM** 438
-  Eng. start not possible in XXX km 447
-  Eng. start not possible 447
-  Engine oil level cannot be measured 445
-  Engine oil level Reduce oil level ... 444
-  Engine oil level Stop vehicle Switch engine off 443
-  Engine oil pressure Stop Switch off engine 445
- Example: Active Parking Assist Parking cancelled 436
-  Example: Front left malfunction Consult workshop 426
-  Example: Left dipped beam 468
-  Example: Left windowbag malfunction Consult workshop 426
-  Example: Rear left seat backrest not locked 467
- Fault Drive at max. 80 km/h 431, 435
- Front-passenger airbag disabled See Owner's Manual 427
- Front-passenger airbag enabled See Owner's Manual 428
-  inoperative See Owner's Manual 412
-  inoperative See Owner's Manual 415
- EBD** inoperative See Owner's Manual 416
-  Inoperative 422
-  Intelligent Light System inoperative 469
-  Key not detected (red display message) 455
-  Key not detected (white display message) 454
- Let fresh air into the vehicle interior!
- Air conditioning malf. Visit workshop .. 463
- Limiter inoperative 438

- Limiter passive 437
-  Lowering 429
-  Malfunction See Owner's Manual 469
-  Maximum speed exceeded 439
- N permanently active Risk of vehicle rolling 458
-  Off 436
- Only select Park (P) when vehicle is stationary 458
-  Operation only possible in transmission position N 461
-  Operation only possible in transmission position P 461
-  Parking brake See Owner's Manual 418
-  Place the key in the marked space See Owner's Manual 455
-  Please reduce speed 431
- PRE-SAFE impulse side inoperative See Owner's Manual 423
- PRE-SAFE inoperative See Owner's Manual 423
- Radar sensors dirty See Owner's Manual 422, 424
-  Rectify tyre pressure 450
-  Refill AdBlue Eng. start not possible 446
-  Refill AdBlue No start in XXX km 447
-  Refill AdBlue See Owner's Manual 445
-  Release parking brake 417
-  Replace air cleaner 447
-  Replace key See Owner's Manual 454
-  Replace key 453
-  Reserve fuel level 446
-  Restraint sys. malfunction Consult workshop 425
- Reversing not poss. Consult workshop 459
- Risk of vehicle rolling Driver door open and transmission not in P 458
-  See Owner's Manual 441
- Speed limit (winter tyres) XXX km/h ... 438
-  Start engine See Owner's Manual 442
-  Steering malfunction Drive carefully Visit workshop 463
-  Steering malfunction Increased physical effort See Owner's Manual 464
-  Steering malfunction See Owner's Manual 462
-  Steering malfunction Stop immediately See Owner's Manual 464
- Stop vehicle Leave engine running Wait Transmission cooling 459

-  Stop vehicle Leave engine running 442
-  Stop vehicle See Owner's Manual 442
-  Stop vehicle Vehicle too low 430
-  Switch off lights 469
-  Switch on headlamps 470
- To shift out of P or N, depress brake and start engine 458
- Top up coolant See Owner's Manual ... 439
-  Top up washer fluid 467
-  Trailer coupling extending... 456
- Transmission Malfunction Stop 459
-  Turn on the ignition to release the parking brake 416
- Tyre press. monitor currently unavailable 451
- Tyre press. monitor inoperative 452
- Tyre press. monitor inoperative No wheel sensors 452
- Tyre pressure Check tyres 449
- Tyre(s) overheated 452
- Tyre(s) overheated Reduce speed 453
-  Vehicle is operational Switch off the ignition before exiting 459
-  Vehicle rising Please wait 430
-  Vehicle rising 429
-  Warning tyre defect 451
-  Wheel sensor(s) missing 452
- Without changing gear, consult workshop 458
- Distance control**
see Active Distance Assist DISTRONIC
- Distance recorder** 247
- DISTRONIC**
see Active Distance Assist DISTRONIC
- Door**
Additional door lock 65
Locking (emergency key) 70
Opening (from inside) 65
Unlocking (emergency key) 70
Unlocking (from inside) 65
- Door control panel** 12
- Drive Away Assist** 227
- Drive position**
Selecting 165
- Drive program display** 162
- Drive programs**
see DYNAMIC SELECT
- Driver's seat**
see Seat
- Driving abroad**
Symmetrical dipped beam 122
- Driving light**
see Automatic driving lights
- Driving safety system** 182
ABS (Anti-lock Braking System) 183
Active Brake Assist 187
Adaptive brake lights 191
BAS (Brake Assist System) 183
EBD (Electronic Brake force Distribution) 186
ESP® (Electronic Stability Program)
Crosswind Assist 186

ESP® (Electronic Stability Program)	
trailer stabilisation	186
Overview	182
Radar sensors	182
Responsibility	182
STEER CONTROL	187
Driving safety system	
see ESP® (Electronic Stability Program)	
Driving system	
DYNAMIC BODY CONTROL	204
Driving system	
see 360° Camera	
see Active Blind Spot Assist	
see Active Distance Assist DISTRONIC	
see Active Lane Keeping Assist	
see Active Parking Assist	
see Active Steering Assist	
see AIR BODY CONTROL	
see ATTENTION ASSIST	
see Blind Spot Assist	
see Cruise control	
see Driving safety system	
see HOLD function	
see Limiter	
see Parking Assist PARKTRONIC	

see Remote Parking Assist	
see Reversing camera	
Driving tips	
Driving abroad (symmetrical dipped beam)	122
General driving tips	158
Running-in notes	157
Drowsiness detection	
see ATTENTION ASSIST	
DYNAMIC BODY CONTROL	
Suspension	204
Dynamic handling control system	
see ESP® (Electronic Stability Program)	
DYNAMIC SELECT	161
Configuring drive program I	162
Displaying engine data	162
Displaying vehicle data	162
Drive program display	162
Drive programs	161
Function	161
Operating (DYNAMIC SELECT switch)	162
Selecting the drive program	162

E	
E10	401
Easy entry feature	
Operation/notes	101
Setting	101
Easy exit feature	
Operation/notes	101
Setting	101
EASY-PACK boot box	111
Adjusting the height to any position	109
Care	351
Installing/removing	111
EBD (Electronic Brake force Distribution)	
Function/notes	186
ECO display	
Function	161
Resetting	248
ECO start/stop function	160
Automatic engine start	160
Automatic engine stop	160
Operation	160
Switching off/on	160

-
- Electric parking brake** 178, 179, 180, 181
 - Applying automatically 178
 - Applying or releasing manually 180
 - Emergency braking 181
 - Releasing automatically 179
 - Electrical fuses**
 - see Fuses
 - Electromagnetic compatibility**
 - Declaration of conformity 20
 - Electronic Stability Program**
 - see ESP® (Electronic Stability Program)
 - Electronics** 395
 - Emergency**
 - Assistance overview 14
 - Fire extinguisher 356
 - First-aid kit (soft sided) 355
 - Removing the warning triangle 355
 - Safety vest 354
 - Setting up the warning triangle 355
 - Emergency braking** 181
 - Emergency call system**
 - see Mercedes-Benz emergency call system
 - Emergency engine start** 371
 - Emergency key element**
 - Inserting/removing 63
 - Locking a door 70
 - Unlocking a door 70
 - Emergency operation mode**
 - Starting the vehicle 157
 - Emergency spare wheel** 393
 - Notes 393
 - Removing 394
 - Energy consumption**
 - Key 62
 - Engine**
 - ECO start/stop function 160
 - Engine number 397
 - Starting (emergency operation mode) 157
 - Starting (mobile phone) 156
 - Starting (start/stop button) 155
 - Starting assistance 364
 - Switching off (start/stop button) 173
 - Engine bonnet**
 - Function (active bonnet) 339
 - Opening/closing 340
 - Resetting (active bonnet) 339
 - Engine data**
 - Displaying 162
 - Engine electronics**
 - Notes 395
 - Engine number** 397
 - Engine oil** 343
 - Additives 404
 - Checking the oil level using the oil dipstick 342
 - Checking the oil level using the on-board computer 342
 - Filling capacity 405
 - MB-Freigabe or MB-Approval 405
 - Quality 405
 - Topping up 343
 - Entering characters**
 - Function/notes 260
 - On the touchpad 261
 - Using the controller 260
 - ERA-GLONASS test mode**
 - Starting/ending 315
 - ESC (Electronic Stability Control)**
 - see ESP® (Electronic Stability Program)

- | | | | |
|--|---|----------------|-----|
| ESP® | | | |
| Crosswind Assist | 186 | | |
| Trailer stabilisation | 186 | | |
| ESP® (Electronic Stability Program) | 183 | | |
| Activating/deactivating | 186 | | |
| Function/notes | 183 | | |
| EU type approval number | 397 | | |
| Exterior lighting | | | |
| Care | 349 | | |
| Exterior lighting | | | |
| see Lights | | | |
| F | | | |
| Fatigue detection | | | |
| see ATTENTION ASSIST | | | |
| Fault message | | | |
| see Display message | | | |
| Favourites | | | |
| Adding | 258 | | |
| Calling up | 258 | | |
| Deleting | 259 | | |
| Moving | 258 | | |
| Overview | 257 | | |
| | | Renaming | 258 |
| | Filling station search | | |
| | Starting an automatic filling station | | |
| | search | 279 | |
| | Switching the automatic filling station | | |
| | search on/off | 282 | |
| | Fire extinguisher | 356 | |
| | First-aid kit (soft sided) | 355 | |
| | Flacon | | |
| | Inserting/removing | 146 | |
| | Flat tyre | 356 | |
| | MOExtended tyres | 357 | |
| | Notes | 356 | |
| | TIREFIT kit | 358 | |
| | Wheel change | 388 | |
| | Floor mats | 120 | |
| | Fog light (extended range) | 127 | |
| | Fragrance | | |
| | see Fragrance system | | |
| | Fragrance system | 146 | |
| | Inserting/removing the flacon | 146 | |
| | Setting | 146 | |
| | Free software | 26 | |
| | Frequencies | | |
| | Mobile phone | 396 | |
| | Two-way radio | 396 | |
| | Frequency band | | |
| | Selecting (on-board computer) | 249 | |
| | Front airbag (driver, front passenger) | 34 | |
| | Front passenger airbag shutoff | 37 | |
| | PASSENGER AIR BAG indicator lamp | 38 | |
| | Points to remember when the front | | |
| | passenger seat is occupied | 37 | |
| | Status display | 38 | |
| | System self-test | 38 | |
| | Front passenger airbag shutoff | | |
| | see Occupant safety | | |
| | Front passenger seat | | |
| | Adjusting from the driver's seat | 92 | |
| | Front passenger seat | | |
| | see Seat | | |
| | Front wheel arch | | |
| | Fitting/removing the cover | 133 | |
| | Front wheel arch cover | | |
| | Fitting/removing | 133 | |

Fuel	402
Additives	402
Diesel	402
E10	401
Low outside temperatures	402
Petrol	401
Quality (diesel)	402
Quality (petrol)	401
Refuel	168
Reserve fuel level	403
Sulphur content	401
Tank capacity	403
Fuel consumption	
On-board computer	247
Function seat	
see Door control panel	
Fuse insert	
see Fuses	
Fuses	372
Assignment diagram	372
Before changing	372
Fuse box in the engine compartment ..	373
Fuse box in the front-passenger foot- well	374

Fuse box on the dashboard	374
Notes	372

G

Garage door opener

Clearing the memory	177
Opening or closing the garage door	176
Programming buttons	174
Radio equipment approval numbers	177
Resolving problems	176
Synchronising the rolling code	175

Gearshift paddles

 see Steering wheel gearshift paddles

Gearshift recommendation	163, 166
---------------------------------------	----------

Genuine parts	18
----------------------------	----

Genuine wood (Care)	351
----------------------------------	-----

Glide mode	167
-------------------------	-----

Glove box

Air vent	152
Locking/unlocking	104

Gross mass	397
-------------------------	-----

H

Handbrake

 see Electric parking brake

Handling characteristics (unusual)	375
---	-----

HANDS-FREE ACCESS	73
--------------------------------	----

Hands-free system	66
--------------------------------	----

Hazard warning lights	125
------------------------------------	-----

Head restraint	93
-----------------------------	----

Front (adjusting manually)	93
Front (luxury head restraint)	94
Rear (adjusting)	95
Rear (removing/fitting)	95

Head-up display

Adjusting brightness (on-board com- puter)	251
Adjusting display elements (on-board computer)	251
Function	252
Menu (on-board computer)	251
Setting the position (on-board com- puter)	251
Using the memory function	102

- Head-up display**
 - see Menu (on-board computer)
 - Head-up display menu**
 - see On-board computer
 - Headlamp flashing** 124
 - Heating**
 - see Climate control
 - High-pressure cleaner (care)** 346
 - Hill start assist** 202
 - HOLD function** 202
 - Activating/deactivating 202
 - Function/notes 202
 - Hotspot**
 - Setting up (Wi-Fi) 265
 - Via business telephony 263
- I**
- i-Size child seat attachment**
 - Seats suitable for attaching 56
 - i-Size child seat securing system** 45
 - Fitting 46
 - Notes 45
 - Identification plate**
 - Engine 397
 - Vehicle 397
 - Ignition**
 - Switching on (start/stop button) 154
 - Ignition key**
 - see Key
 - Immobiliser** 85
 - Implied warranty**
 - Vehicle 23
 - Indicator lamp**
 - see Warning/indicator lamps
 - Individual drive program**
 - Configuring 162
 - Selecting 162
 - Instrument cluster** 8, 472
 - Instrument cluster**
 - see Instrument Display
 - Instrument Display** 242
 - Adjusting the lighting 245
 - Function/notes 242
 - Overview 8, 242
 - Warning/indicator lamps 472
 - Instrument display**
 - see Instrument cluster
 - Instrument Display**
 - see Instrument cluster
 - Instrument lighting** 245
 - Instrument lighting**
 - see Dashboard lighting
 - Intelligent Light System** 125
 - Activating/deactivating 127
 - Active headlamps function 126
 - Adaptive Highbeam Assist Plus 129
 - Adverse weather light 127
 - City lighting 127
 - Cornering light 126
 - Fog light (extended range) 127
 - Motorway mode 126
 - Overview 125
 - Interior lighting** 131
 - Ambient lighting 131
 - Setting 131
 - Switch-off delay time 132
 - Interior lighting**
 - see Interior lighting
 - see Lighting

- see Lights
- Interior protection**
- Activating/deactivating 87
 - Function 87
- Intermediate destination**
- Calculating a route with intermediate destinations 278
 - Editing 278
 - Entering 278
 - Starting an automatic filling station search 279
 - Starting the automatic service station search 282
- Internet**
- Deleting a bookmark 322
 - Deleting browser data 321
 - Managing bookmarks 322
- Internet connection**
- Cancelling permission 319
 - Connection status 320
 - Displaying the connection status 320
 - Editing access data 319
 - Establishing 319
 - Information 316
 - Mobile phone details 319
 - Restrictions 316
 - Setting access data 318
 - Setting up (Bluetooth®) 318
 - Setting up (business telephony) 317
 - Switching Bluetooth® profile (DUN/PAN) 319
 - Via Bluetooth® 318
 - Via communication module 316
 - Via Wi-Fi 316
- Internet radio**
- Calling up 322
 - Deleting stations 323
 - Logging in 324
 - Logging out 324
 - Overview 323
 - Saving stations 323
 - Selecting and connecting to a station 323
 - Selecting stream 324
 - Setting options 324
 - Terms of use 324
- Ionisation** 146
- iPhone®**
- see Apple CarPlay™
- ISOFIX child seat attachment**
- Seats suitable for attaching 54
- ISOFIX child seat securing system** 45
- Fitting 46
 - Notes 45
- J**
- Jack**
- Declaration of Conformity 20
 - Storage location 387
- Jump-start connection** 364
- K**
- Key** 61
- Battery 63
 - Emergency key element 63
 - Energy consumption 62
 - Features 61
 - Key ring attachment 63
 - Overview 61
 - Panic alarm 62
 - Problem 64

Unlocking setting	62
KEYLESS-GO	
Locking the vehicle	67
Problem	68
Unlocking setting	62
Unlocking the vehicle	67

Kickdown	167
Using	167

Knee airbag	34
--------------------------	----

L

Laden	108
Notes	103
Roof rack	112
Stowage space under the boot floor	111
Tie-down eyes	108

Lamp	
see Interior lighting	

Lamp (instrument display)	
see Warning/indicator lamps	

Lane Keeping Assist	
see Active Lane Keeping Assist	

Language	
Notes	266
Setting	266

LED light	
see Intelligent Light System	

Level control system	
see AIR BODY CONTROL	

Light switch	
Overview	122

Lighting	131
-----------------------	-----

Lighting	
see Lights	

Lights	122, 131
Active headlamps function	126
Adaptive Highbeam Assist	127
Adaptive Highbeam Assist Plus	129
Adjusting the instrument lighting	245
Adverse weather light	127
Automatic driving lights	123
Changing bulbs	132
City lighting	127
Combination switch	124
Cornering light	126
Dipped beam	122

Driving abroad	122
Fog light (extended range)	127
Hazard warning lights	125
Headlamp flashing	124
Headlamp range	123
Intelligent Light System	125
Light switch	122
Main beam	124
Motorway mode	126
Parking lights	122
Rear fog light	123
Responsibility for lighting systems	122
Setting the dipped beam	130
Setting the surround lighting	130
Standing lights	122
Turn signal light	124

Limiter	192
Activating	193
Calling up a speed	193
Deactivating	193
Function	192
Lever	193
Passive mode	192
Permanent setting	195
Requirements	193

-
- | | | | | | |
|--|-----|-------------------------------------|-----|--|-----|
| Selecting | 193 | Luggage | | Displaying Qibla | 295 |
| Setting a speed | 193 | Securing | 103 | Displaying the compass | 295 |
| Storing a speed | 193 | Lumbar support | | Displaying the map version | 293 |
| System limits | 192 | see Lumbar support (4-way) | | Displaying the next intersecting | |
| Limiting speed | | Lumbar support (4-way) | 93 | street | 293 |
| see Limiter | | | | Displaying the traffic map | 289 |
| Live Traffic Information | | | | Displaying weather information | 296 |
| Displaying subscription information | 289 | | | Map data | 295 |
| Displaying the traffic map | 289 | | | Moving | 292 |
| Displaying traffic incidents | 290 | | | Overview | 291 |
| Extending a subscription | 289 | | | Selecting POI symbols | 292 |
| Issuing hazard alerts | 290 | | | Selecting text information | 293 |
| Registering on Mercedes me | 289 | | | Selecting the map orientation | 292 |
| Loading guidelines | 103 | | | Setting the map scale | 291 |
| Loads | | | | Setting the map scale automatically | 295 |
| Securing | 103 | | | Updating | 294 |
| Locking/unlocking | 66 | | | Map and compass | |
| Additional door lock | 65 | | | Overview | 291 |
| KEYLESS-GO | 67 | | | Massage programmes | |
| Unlocking and opening the doors | | | | Overview | 96 |
| from the inside | 65 | | | Selecting the front seats | 97 |
| Lubricant additives | | | | Massage settings | |
| see Additives | | | | Resetting | 97 |
| | | | | Matt finish (cleaning instructions) | 348 |
-
- | | |
|-------------------------------------|----------|
| M | |
| Main beam | |
| Activating/deactivating | 124 |
| Adaptive Highbeam Assist | 127 |
| Adaptive Highbeam Assist Plus | 129 |
| Changing bulbs | 133 |
| Maintenance | |
| see ASSYST PLUS | |
| Malfunction | |
| Restraint system | 28 |
| Manual transmission | |
| Operating the gearshift lever | 163 |
| Map | 289, 291 |
| Avoiding an area | 293 |
| Avoiding an area (overview) | 293 |
| Changing an area | 294 |
| Deleting an area | 294 |

- | | | |
|--|--|---|
| <p>Maximum speed
 see Limiter</p> <p>MB Info call
 see Service call</p> <p>Mecca 295</p> <p>Media
 Menu (on-board computer) 250
 Searching 328</p> <p>Media display
 Notes 254</p> <p>Media Interface
 Information 328
 Overview 329
 Switching on 328</p> <p>Media mode
 Activating 325</p> <p>Media playback
 Operating (on-board computer) 250</p> <p>Media search
 Starting 328</p> <p>Media source
 Selecting (on-board computer) 250</p> | <p>Memory function
 Head-up Display – Calling up saved
 settings 102
 Head-up Display – Saving settings 102
 Operating 102
 Outside mirror – Calling up saved
 settings 102
 Outside mirror – Saving settings 102
 Seat – Calling up saved settings 102
 Seat – Saving settings 102
 Steering wheel – Calling up saved
 settings 102
 Steering wheel – Saving settings 102</p> <p>Menu (on-board computer) 251
 Assistance graphic 246
 Designs 252
 Media 250
 Navigation 248
 Overview 243
 Radio 249
 Service 246
 Telephone 250
 Trip 247</p> <p>Mercedes me connect
 Accident management 312</p> | <p>Arranging a service appointment 312
 Breakdown assistance call 312
 Calling the Mercedes-Benz Customer
 Centre 310
 Consenting to data transfer 312
 Making a call via the overhead con-
 trol panel 311
 MB Info call 311
 Notes 310
 Transferred data 313</p> <p>Mercedes-AMG vehicles
 Notes 154</p> <p>Mercedes-Benz Apps
 Calling up 320</p> <p>Mercedes-Benz emergency call sys-
 tem 313
 Automatic emergency call 314
 Manual emergency call 314
 Notes 313
 Overview 313
 Starting/ending ERA-GLONASS test
 mode 315
 Transferred data 315</p> |
|--|--|---|

Mercedes-Benz service centre

see Qualified specialist workshop

Message (multifunction display)

see Display message

Message memory 411**Messages**

see Text messages

Mirrors

see Outside mirror

see Outside mirrors

Mobile phone 250, 396

Authorising (Remote Parking Assist) ... 226

Cancelling permission for Internet

connection 319

Frequencies 396

Locking the vehicle 66

Starting the vehicle 156

Transmission output (maximum) 396

Unlocking the vehicle 66

Wireless charging 120

Mobile phone

see Android Auto

see Apple CarPlay™

see Hands-free system

see Locking/unlocking

see Mobile phone

see Telephone

Mobile phone voice recognition

Starting 302

Stopping 302

Model type 397**MOExtended tyres** 357**Motorway mode** 126**MULTIBEAM LED**

see Intelligent Light System

Multifunction display (on-board computer) 245**Multifunction steering wheel**

Overview of buttons 243

Multifunction steering wheel

see Steering wheel

Multimedia system 254, 261

Activating/deactivating standby

mode 181

Adjusting the volume 259

Central control elements 254

Configuring display settings 261

Main functions 257

Overview 254

Rear climate control 145

Restoring the factory settings 271

Switching the sound on/off 259

N**Navigation**

Calling up the Digital Owner's Man-

ual 296

Menu (on-board computer) 248

Showing/hiding the menu 273

Switching on 272

Updating the map data 294

Navigation

see Destination

see Destination entry

see Map

see Route

see Route guidance

see Traffic information

Navigation announcements

Activating/deactivating 284

Adjusting the volume 285

Repeating 285

Switching audio fadeout on/off	285
Switching on/off during a phone call ..	284
Navigation messages	
On-board computer	248
Navigation mode	
Inserting/removing an SD card	271
Near Field Communication (NFC)	300
Connecting the mobile phone to the multimedia system	300
Starting the vehicle (mobile phone)	156
Switching Bluetooth® audio equipment	332
Switching mobile phones	300
Neutral	
Selecting	165
NFC	
see Near Field Communication (NFC)	
O	
Occupant safety	37
Pets in the vehicle	60
Occupant safety	
see Airbag	

see PRE-SAFE® (anticipatory occupant protection)	
see PRE-SAFE® Impulse Side	
see PRE-SAFE® PLUS (anticipatory occupant protection plus)	
see Restraint system	
see Seat belt	
Odometer	
see Total distance recorder	
Oil	
see Engine oil	
On-board computer	251
Assistance graphic menu	246
Displaying the service due date	338
Media menu	250
Menu designs	252
Menus	243
Multifunction display	245
Navigation menu	248
Operating	243
Radio menu	249
Service menu	246
Telephone menu	250
Trip menu	247

On-board computer	
see Computer	
see Operating system	
On-board diagnostics interface	
see Diagnostics connection	
On-board electronics	
Engine electronics	395
Notes	395
Two-way radios	395
On-board electronics	
see Electronics	
Open-source software	26
Opening the boot lid using your foot	
HANDS-FREE ACCESS	73
Operating fluids	
AdBlue®	403
Additives (fuel)	402
Brake fluid	405
Coolant (engine)	406
Engine oil	404
Fuel (diesel)	402
Fuel (petrol)	401
Notes	399
Windscreen washer fluid	407

Operating safety

Declaration of Conformity (electromagnetic compatibility)	20
Declaration of conformity (jack)	20
Declaration of conformity (TIREFIT kit) ..	21
Declaration of conformity (wireless vehicle components)	20
Information	19

Operating system	243
-------------------------------	-----

Outside mirror	139
-----------------------------	-----

Parking position	139
------------------------	-----

Outside mirrors	138, 139
------------------------------	----------

Anti-dazzle mode (automatic)	139
------------------------------------	-----

Automatic mirror folding function	140
---	-----

Folding in/out	138
----------------------	-----

Setting	138
---------------	-----

Using the memory function	102
---------------------------------	-----

Overhead control panel	10
-------------------------------------	----

Making calls (Mercedes me connect) ...	311
--	-----

Owner's Manual

Vehicle equipment	19
-------------------------	----

Owner's Manual (digital)	16
---------------------------------------	----

P

Paint (cleaning instructions)	348
--	-----

Paint code	397
-------------------------	-----

Panel heating

Setting	98
---------------	----

Panic alarm	62
--------------------------	----

Activating/deactivating	62
-------------------------------	----

Panorama sliding sunroof

see Sliding sunroof

Park position

Selecting	165
-----------------	-----

Selecting automatically	165
-------------------------------	-----

Parking

see Electric parking brake

Parking aid

see Parking Assist PARKTRONIC

Parking Assist

Manoeuvring assistance	228
------------------------------	-----

Parking Assist PARKTRONIC	207
--	-----

Activating	209
------------------	-----

Adjusting warning tones	210
-------------------------------	-----

Function	207
----------------	-----

Side impact protection	208
------------------------------	-----

Switching off	209
---------------------	-----

System limitations	207
--------------------------	-----

Parking assistance systems

see Active Parking Assist

Parking brake

see Electric parking brake

Parking lights	122
-----------------------------	-----

Parking position

Outside mirror	139
----------------------	-----

Storing the position of the passenger	
---------------------------------------	--

outside mirror using reverse gear	140
---	-----

Parking up	181
-------------------------	-----

Pedestrian protection

see Active bonnet (pedestrian protection)

Perfume

see Fragrance system

Perfume vial

see Fragrance system

Period out of use

Activating/deactivating standby	
---------------------------------	--

mode	181
------------	-----

Permissible axle load	397
------------------------------------	-----

Permissible gross mass	397
Permitted towing methods	366
Personalisation see User profile	
Petrol	401
Pets in the vehicle	60
Phone book see Contacts	
PIN protection Activating/deactivating	267
Plastic trim (Care)	351
Playback options Selecting	327
POI symbols Custom	292
Power supply Switching on (start/stop button)	154
PRE-SAFE® (anticipatory occupant protection)	41
Function	41
PRE-SAFE® Sound	41
Reversing measures	41

PRE-SAFE® Impulse Side	42
Activation	28
Function	42
PRE-SAFE® PLUS (anticipatory occupant protection plus)	42
Function	42
Reversing measures	41
Preventative occupant protection system see PRE-SAFE® (anticipatory occupant protection)	
Previous destinations Selecting	276
Programs see DYNAMIC SELECT	
Protection of the environment Notes	17
Take-back of end-of-life vehicles	17

Q

Qibla	295
QR code Rescue card	23

Qualified specialist workshop	22
--	----

R

Radar sensors	182
Radiator shutters see AIRPANEL (Care)	
Radio Activating	332
Activating/deactivating radio text	335
Calling up a slide show	334
Calling up the channel list	334
Deleting channels	334
Direct frequency entry	334
Displaying information	335
Displaying radio text	335
Editing station presets	334
Frequency fix	335
Menu (on-board computer)	249
Moving stations	334
Overview	333
Searching for stations	334
Setting a station	334
Setting station tracking	335
Setting the frequency band	334

-
- Setting the traffic information service volume increase 335
 - Storing radio stations 334
 - Switching traffic announcements on/off 335
 - Tagging music tracks 335
 - Radio station list**
 - Calling up 334
 - Radio stations**
 - Selecting (on-board computer) 249
 - Rain-closing feature**
 - Sliding sunroof 83
 - Range**
 - Displaying 247
 - Reading lamp**
 - see Interior lighting
 - Rear climate control**
 - Setting 145
 - Rear door (child safety lock)** 58
 - Rear fog light** 123
 - Rear seat**
 - see Seat
 - Rear seat belt**
 - Status display 33
 - Rear seat belt status display** 33
 - Rear window**
 - Roller sunblind 76
 - Rear window heater** 142
 - Rear-view mirror**
 - see Outside mirrors
 - Recycling**
 - see Take-back of end-of-life vehicles
 - Reducing agent**
 - see AdBlue®
 - Refuelling**
 - Refuelling the vehicle 168
 - Topping up AdBlue® 171
 - Registration**
 - Vehicle 23
 - Remote control (stationary heater)**
 - Displays 150
 - Problems 151
 - Replacing the battery 150
 - Setting 149
 - Remote Parking Assist** 222
 - Authorising a mobile phone 226
 - Function 222
 - Operating 223
 - System limitations 222
 - Replacing a bulb**
 - see Changing bulbs
 - Rescue card** 23
 - Reserve**
 - Fuel 403
 - Reset function (multimedia system)** 271
 - Residual heat** 145
 - Restoring (factory settings)**
 - see Reset function (multimedia system)
 - Restraint system** 27
 - Children 42
 - Function in an accident 28
 - Functionality 28
 - Malfunction 28
 - Protection 27
 - Reduced protection 27
 - System self-test 28
 - Warning lamp 28

Reverse gear	
Selecting	165
Reversing camera	211
Activating/deactivating automatic operation (360° Camera)	217
Assigning as a favourite	217
Care	349
Function	211
Opening the camera cover (360° Camera)	217
Reversing light (changing bulbs)	134
Rims (Care)	349
Roll away protection	
see HOLD function	
Roller sunblind	
Rear window	76
Side windows	75
Roller sunblind	
see Cover	
Roof lining (care)	351
Roof load	408
Roof rack	112

Route	279, 281
Calculating	279
Displaying destination information	281
Selecting a type	280
Selecting an alternative route	281
Selecting notifications	281
Selecting options	280
Starting the automatic service station search	282
Switching the automatic filling station search on/off	282
With intermediate destinations	278
Route guidance	282
Cancelling	285
Changing direction	283
Continuing	286
Destination reached	284
From an off-road location	286
Lane recommendations	283
Notes	282
Off-road	286
To an off-road destination	286
Run-flat characteristics	
MOExtended tyres	357
Running-in notes	157

S

Safety systems

 see Driving safety system

Safety vest	354
--------------------------	-----

SD card

Inserting/removing	325
--------------------------	-----

Seat	89, 105
-------------------	---------

4-way lumbar support	93
Adjusting (electrically)	92
Adjusting (manually and electrically)	89
Adjusting (Seat Comfort)	91
Backrest (rear) folding forwards	105
Backrest (rear) locking	107
Correct driver's seat position	88
Folding the backrest (rear) back	106
Massage programme overview	96
Panel heating	98
Resetting the settings	97
Selecting a massage programme	97
Setting automatic lateral support adjustment	95
Setting options	12
Using the memory function	102

Seat

see Head restraint

Seat belt 29, 33

Activating/deactivating seat belt
adjustment 33
Adjusting the height 32
Belt airbag 32
Care 351
Fastening 32
Protection 29
Rear seat belt status display 33
Reduced protection 30
Releasing 33
Seat belt adjustment (function) 32
Warning lamp 33

Seat belt adjustment

Activating/deactivating 33
Function 32

Seat belt tensioners

Activation 28

Seat belt warning

see Seat belt

Seat cover (Care) 351**Seat heater**

Switching on/off 97

Seat ventilation

Switching on/off 99

Selecting a gear

see Shifting gears

Selecting a POI

see Destination entry

Selector lever

see DIRECT SELECT lever

Sensors (Care) 349**Service**

Menu (on-board computer) 246

Service

see ASSYST PLUS

Service call 312

Breakdown assistance call 312

MB Info call 311

Service centre

see Qualified specialist workshop

Service interval display

see ASSYST PLUS

Setting a speed

see Cruise control

Setting summer time 262**Setting the date format** 263**Setting the distance unit** 266**Setting the map scale**

see Map

Shifting gears 166

Gearshift recommendation 163, 166

Manual 166

Short text messages

see Text messages

Side impact airbag 34**Side impact protection** 208**Side windows** 77

Child safety lock in the rear 60

Closing 77

Closing with the key 79

Convenience closing 78

Convenience opening 78

Opening 77

Opening with the key 78

Problem 79

Roller sunblind	75	Software update		Switching off the vehicle	173
Ski/snowboard bag	107	Important system updates	270	Switching on the power supply or	
Skid chains		Information	269	ignition	154
see Snow chains		Performing	270	Start/stop function	
Sliding sunroof	80	Sound		see ECO start/stop function	
Automatic features	83	PRE-SAFE® Sound	41	Starting assistance	
Closing	80	wheels and tyres	375	see Jump-start connection	
Closing with the key	79	Sound		Starting the engine	
Opening	80	see Burmester® surround sound system		see Vehicle	
Opening with the key	78	see Tone settings		Starting-off aid	
Problem	83	Spare wheel		see Hill start assist	
Rain-closing feature	83	see Emergency spare wheel		Station	
Smartphone		Spectacles compartment	105	Deleting	334
see Android Auto		Speed limit for winter tyres		Direct frequency entry	334
see Apple CarPlay™		Setting	195	Frequency fix	335
see Telephone		Speedometer		Moving	334
Snow chains	375	Digital	247	Searching	334
Socket (12 V)	116	Standby mode		Setting	334
Boot	118	Activating/deactivating	181	Storing	334
Front centre console	116	Function	181	Station presets	
Rear passenger compartment	116	Standing lights	122	Editing	334
Socket (230 V)	117	Start/Stop button		Stationary heater/ventilation	
Rear	117	Starting the vehicle	155	Displays (remote control)	150
				Problems (remote control)	151

Setting (remote control)	149	Spectacles compartment	105	Switching the surround sound on/off	
Setting (using the multimedia system)	149	Stowage compartments		Burmester® surround sound system ...	337
Switching on/off (control panel)	147	see Laden		Synchronisation function	
STEER CONTROL		see Stowage compartment		Activating/deactivating (control panel)	145
Function/notes	187	Stowage space under the boot floor	111	Activating/deactivating (multimedia system)	145
Steering wheel	243	Sulphur content	401	System settings	
Adjusting (electrically)	100	Sun visor		Language	266
Adjusting (manually)	99	Operating	140	Notes on language selection	266
Buttons	243	Surround lighting		Reset function (multimedia system)	271
Steering wheel heater	100	Setting	130	Setting the distance unit	266
Using the memory function	102	Surround View		Software update	270
Steering wheel gearshift paddles	166	see 360° Camera		System settings	
Steering wheel heater		Suspension		see Multimedia system	
Switching on/off	100	Damping characteristics	204		
Stowage areas		DYNAMIC BODY CONTROL	204	T	
see Laden		Setting the suspension level	206	Tailpipes (Care)	349
see Stowage compartment		Suspension		Take-back of end-of-life vehicles	17
Stowage compartment	104	see AIR BODY CONTROL		Protection of the environment	17
Armrest	104	Suspension level		Tank capacity	
Centre console	104	Setting	206	AdBlue®	404
Door	104	Switch-off delay time		Fuel	403
Glove box	104	Interior	132		
Rear armrest	105				

Reserve (fuel)	403	Importing contacts	304	Telephone operation	
Technical data		Incoming call during an existing call	303	see Calls	
Axle load (trailer operation)	410	Locking the vehicle (mobile phone)	66	Telephony operating modes	
Information	395	Menu (on-board computer)	250	Bluetooth® Telephony	297
Notes (trailer hitch)	409	Mobile phone voice recognition	302	Business telephony	297
Tongue weight	409	Notes	297	Temperature	142
Towing weight (towing a trailer)	409	Operating modes	297	Text messages	306
Tyre pressure monitoring system	380	Reception and transmission volume	301	Calling a message sender	306
Vehicle identification plate	397	Starting the vehicle (mobile phone)	156	Changing folders	306
Telephone	296	Switching mobile phones	300	Configuring the displayed text mes-	
Activating functions during a call	302	Switching mobile phones (Near Field		sages	306
Authorising a mobile phone (Remote		Communication (NFC))	300	Deleting	306
Parking Assist)	226	Telephone menu overview	296	Drafts	306
Business telephony settings	300	Telephone operation	302	Notes	306
Call and ringtone volume	301	Unlocking the vehicle (mobile phone)	66	Outbox	306
Calls with several participants	302	Using a SIM card for business tel-		Read-aloud function	306
Connecting a mobile phone (busi-		ephony	299	Reading	306
ness telephony)	299	Using Near Field Communication		Through-loading feature	
Connecting a mobile phone (Near		(NFC)	300	see Seat	
Field Communication (NFC))	300	Wireless charging (mobile phone)	120	Tie-down eyes	108
Connecting a mobile phone (Pass-		Telephone		Time	
key)	298	see Mobile phone		Manual time setting	263
Connecting a mobile phone (Secure		Telephone number		Setting summer time	262
Simple Pairing)	298	Dialling (on-board computer)	250		
Disconnecting a mobile phone	300				

-
- Setting the time and date automatically 262
 - Setting the time zone 262
 - Setting the time/date format 263
 - TIREFIT kit**
 - Declaration of Conformity 21
 - Using 358
 - Tone settings** 335
 - Adjusting the balance/fader 336
 - Adjusting treble, mid and bass settings 336
 - Automatic volume adjustment 336
 - Calling up the sound menu 336
 - Information 335
 - Tongue weight** 409
 - Top Tether** 47
 - Total distance recorder** 247
 - Displaying 247
 - Touch Control**
 - On-board computer 243
 - Operating 255
 - Setting the sensitivity 255
 - Touchpad**
 - Activating/deactivating 256
 - Operating 256
 - Reading the handwriting recognition aloud 257
 - Selecting a station and track 257
 - Setting the sensitivity 257
 - Tow-away protection**
 - Activating/deactivating 87
 - Function 86
 - Tow-starting** 371
 - Towing a trailer**
 - Coupling up/uncoupling a trailer 237
 - Extending/retracting the ball neck 235
 - Towing away** 367
 - Towing eye**
 - Fitting 371
 - Storage location 370
 - Towing methods** 366
 - Track**
 - Selecting (audio mode) 327
 - Traffic announcements**
 - Switching on/off 335
 - Traffic announcements volume increase**
 - Setting 335
 - Traffic information** 288
 - Displaying the traffic map 289
 - Displaying traffic incidents 290
 - Issuing hazard alerts 290
 - Live Traffic Information 289
 - Overview 288
 - Traffic map**
 - see Map
 - Trailer hitch**
 - Axle load 410
 - Bicycle rack 239
 - Care 349
 - Extending/retracting the ball neck 235
 - General notes 409
 - Notes 235
 - Power socket 235
 - Tongue weight 409
 - Trailer operation**
 - Active Blind Spot Assist 230
 - Active Lane Keeping Assist 232
 - Bicycle rack 239

Notes	235	see Trip meter		TIREFIT kit	358
Power socket	235	Trip meter	247	Tyre pressure loss warning system (function)	382
Trailer stabilisation		Turn signal indicator		Tyre pressure monitoring system (function)	378
Function/notes	186	see Turn signal light		Tyre pressure table	377
Trailer tow hitch		Turn signal light	124	Tyre pressure loss warning system	
Towing weight	409	Activating/deactivating	124	Function	382
Transferred vehicle data		Changing bulbs (front)	133	Restarting	383
Android Auto	309	Changing bulbs (rear)	134	Tyre pressure monitoring system	
Apple CarPlay™	309	Two-way radio telephone		Checking the tyre pressures	379
Transmission position display	164	see Mobile phone		Checking the tyre temperature	379
Transporting		Two-way radios		Function	378
Vehicle	369	Frequencies	396	Restarting	379
Trim element (Care)	351	Notes on installation	395	Technical data	380
Trip		Transmission output (maximum)	396	Tyre pressure table	377
Menu (on-board computer)	247	Type approval number (EU)	397	Tyre temperature	
Trip computer		Tyre pressure		Checking (tyre pressure monitoring system)	379
Displaying	247	Checking (tyre pressure monitoring system)	379	Tyre pressure monitoring system (function)	378
Resetting	248	Notes	376	Tyre tread	375
Trip distance		Restarting the tyre pressure loss warning system	383	Tyre-change tool kit	
Displaying	247	Restarting the tyre pressure monitor- ing system	379	Overview	387
Resetting	248				
Trip distance					
see Distance recorder					

Tyres

Changing	388
Changing hub caps	388
Checking	375
Checking the tyre pressure (tyre pressure monitoring system)	379
Flat tyre	356
MOExtended tyres	357
Mounting	391
Noise	375
Notes on fitting	383
Removing	391
Replacing	383
Restarting the tyre pressure loss warning system	383
Restarting the tyre pressure monitoring system	379
Selection	383
Snow chains	375
Storing	387
TIREFIT kit	358
Tyre pressure (Notes)	376
Tyre pressure loss warning system (function)	382
Tyre pressure monitoring system (function)	378

Tyre pressure table	377
Unusual handling characteristics	375

U**Units of measurement**

Setting	266
---------------	-----

Unlocking setting 62**USB devices**

Connecting	327
------------------	-----

USB port 118**User profile** 268

Creating	268
Importing/exporting	269
Selecting	268

V**Vehicle** 155, 157

Activating/deactivating standby mode	181
Additional door lock	65
Correct use	23
Data acquisition	23, 25
Diagnostics connection	22
Equipment	19

Implied warranty	23
Locking (automatically)	69
Locking (emergency key)	69
Locking (from inside)	66
Locking (KEYLESS-GO)	67
Locking (mobile phone)	66
Lowering	392
Parking up	181
QR code rescue card	23
Qualified specialist workshop	22
Raising	389
Registration	23
Starting (emergency operation mode)	157
Starting (mobile phone)	156
Starting (start/stop button)	155
Switching off (start/stop button)	173
Unlocking (from inside)	66
Unlocking (KEYLESS-GO)	67
Unlocking (mobile phone)	66
Ventilating (convenience opening)	78

Vehicle data

Displaying (DYNAMIC SELECT)	162
Roof load	408
Vehicle height	407

Vehicle length	407
Vehicle width	407
Wheelbase	407

Vehicle data storage

Electronic control units	23
--------------------------------	----

Vehicle dimensions	407
--------------------------	-----

Vehicle identification number

see VIN

Vehicle identification plate

EU type approval number	397
Paint code	397
Permissible axle load	397
Permissible gross mass	397
VIN	397

Vehicle identification plate

see Model type

Vehicle key

see Key

Vehicle maintenance

see ASSYST PLUS

Vehicle position

Transmitting	263
--------------------	-----

Vehicle tool kit

Towing eye	370
------------------	-----

Ventilating

Convenience opening	78
---------------------------	----

Ventilation

see Climate control

Vents

see Air vents

VIN	397
-----------	-----

Identification plate	397
----------------------------	-----

Seat	397
------------	-----

Windscreen	397
------------------	-----

Visibility

Demisting the windows	145
-----------------------------	-----

Windscreen heater	147
-------------------------	-----

W

Warning lamp

see Warning/indicator lamps

Warning system

see ATA (anti-theft alarm system)

Warning triangle

Removing	355
----------------	-----

Setting up	355
------------------	-----

Warning/indicator lamp

 ABS warning lamp	475
--	-----

 Brake system warning lamp	
---	--

.....	473, 474
-------	----------

 Coolant warning lamp	484
--	-----

 Distance warning warning lamp ..	480
--	-----

 Electrical fault warning lamp	483
---	-----

 Engine diagnosis warning lamp ...	483
---	-----

 ESP® OFF warning lamp	477
---	-----

 ESP® warning lamp flashes	476
---	-----

 ESP® warning lamp lights up	476
---	-----

 Fuel reserve warning lamp	483
---	-----

 Power steering system warning	
---	--

lamp	482
------------	-----

 Red indicator lamp, electric	
--	--

parking brake applied	478
-----------------------------	-----

 Restraint system warning lamp ...	479
---	-----

 Seat belt warning lamp flashes ...	480
--	-----

-  Seat belt warning lamp lights up 479
-  Trailer hitch warning lamp 481
-  Tyre pressure monitoring system warning lamp flashes 487
-  Tyre pressure monitoring system warning lamp lights up 486
-  Yellow electric parking brake indicator lamp is malfunctioning 478
- Warning/indicator lamps** 472
 - Instrument display (overview) 8
 - Overview 472
 - PASSENGER AIR BAG 38
- Warranty** 23
- Washer fluid**
 - see Windscreen washer fluid
- Washing by hand (care)** 347
- Weather information** 296
- Web browser**
 - Calling up a website 320
 - Calling up options 321
 - Calling up the settings 321
 - Deleting a bookmark 322
 - Deleting browser data 321
 - Ending 322
 - Managing bookmarks 322
 - Overview 321
 - Showing/hiding the menu 320
- Website**
 - Calling up 320
 - Showing/hiding the web browser menu 320
- Wheel change**
 - Fitting a new wheel 391
 - Lowering the vehicle 392
 - Preparation 388
 - Raising the vehicle 389
 - Removing a wheel 391
 - Removing/fitting hub caps 388
- Wheel change**
 - see Emergency spare wheel
- Wheel chock**
 - see Chock
- Wheel rotation** 386
- Wheels**
 - Care 349
 - Changing 388
 - Changing hub caps 388
 - Checking 375
 - Checking the tyre pressure (tyre pressure monitoring system) 379
 - Flat tyre 356
 - Interchanging 386
 - MOExtended tyres 357
 - Mounting 391
 - Noise 375
 - Notes on fitting 383
 - Removing 391
 - Replacing 383
 - Restarting the tyre pressure loss warning system 383
 - Restarting the tyre pressure monitoring system 379
 - Selection 383
 - Snow chains 375
 - Storing 387
 - TIREFIT kit 358
 - Tyre pressure (Notes) 376
 - Tyre pressure loss warning system (function) 382

- Tyre pressure monitoring system
(function) 378
- Tyre pressure table 377
- Unusual handling characteristics 375
- Wi-Fi**
 - Overview 264
 - Setting 264
 - Setting up a hotspot 265
 - Setting up an Internet connection 316
- Window airbag** 34
- Window lifter**
see Side windows
- Windows**
see Side windows
- Windows (Care)** 349
- Windscreen** 136, 142
 - Demisting 142
 - Infrared reflective 141
 - Replacing the wiper blades 136
- Windscreen**
see Windscreen
- Windscreen heater** 147
- Windscreen heating**
see Windscreen heater
- Windscreen washer fluid** 407
 - Notes 407
- Windscreen washer system**
Topping up 345
- Windscreen wipers**
 - Activating/deactivating 135
 - Replacing the wiper blades 136
- Winter operation**
Snow chains 375
- Winter tyres**
Setting the permanent speed limit 195
- Wiper blades**
 - Care 349
 - Changing 136
- Wireless charging**
 - Function/notes 119
 - Mobile phone 120
- Wireless vehicle components**
Declaration of conformity 20
- Workout programme**
Overview 96
- Workshop**
see Qualified specialist workshop

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mercedes-benz.com>

<http://www.daimler.com>

Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Owner's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service,
70546 Stuttgart, Germany

©Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

Vehicle manufacturer

Daimler AG

Mercedesstrasse 137

70327 Stuttgart

Germany

As at 28.09.16



Digital – in the vehicle

Familiarise yourself with the contents of the Owner's Manual directly via the vehicle's multimedia system (menu item "Vehicle"). Start with the quick guide, discover your vehicle's highlights or broaden your knowledge with useful tips.



Vehicle document wallet

Here you can find comprehensive information about operating your vehicle and about services and warranties in printed form.



Digital – on the Internet

You can find the Owner's Manual on the Mercedes-Benz homepage.



Digital – as an App

The Mercedes-Benz Guides App is available free-of-charge in familiar App stores.



2135844509Z102

Order no. P213 0823 02 Part no. 213 584 45 09 Z102
Edition ÄJ2017-1b



Apple® iOS



Android™