

[Search](#)[nordichifi.com/](#)[English](#)[Home](#) / [Turntables](#) / [Argon Audio TT-4 MK2](#) / [Manual: Argon Audio TT-4 MK2](#)

Manual: Argon Audio TT-4 MK2


 Last updated on May 27, 2025 at 9:45 PM

1. Included Items

NOTE: Before setting up the TT-4 MK2 Turntable, please check thoroughly and make sure you find the following items that are included in the box:

- Turntable
 - Turntable Lid
 - 2x Lid Hinges
 - Platter
 - Drive Belt
 - Counterweight
 - Headshell with Ortofon 2M Blue Pickup pre-mounted
 - Pair of Audio Cables (RCA)
 - AC Adapter
-

2. Components, Features and Connections

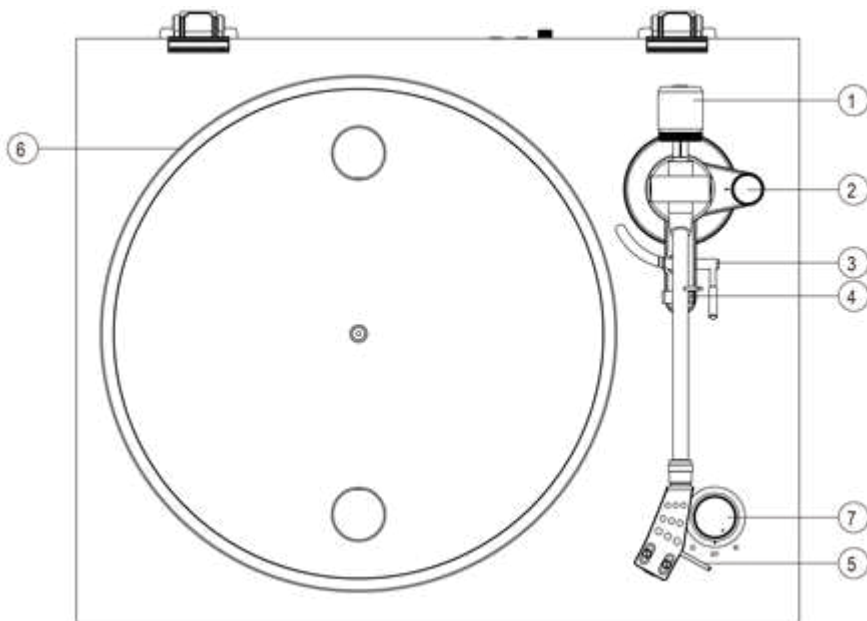

1. Counterweight

The counterweight is used to precisely adjust the stylus pressure on the vinyl record, ensuring the tonearm is properly balanced

2. Anti-Skating Control

Use this to set the anti-skating function of the tonearm.

3. Tonearm Lever

Use this lever to lower or raise the tonearm.

4. Tonearm Lock (armrest)

Use this to lock the tonearm in place when not in use.

5. Headshell


This holds the stylus (“needle”) in place.

6. Platter

Put the slip mat onto the platter before placing the record disc.

7. 33/45 RPM Switch (33/OFF/45)

Select 33 or 45 rpm for playing a vinyl record, and switch to “OFF” to stop the platter from spinning.

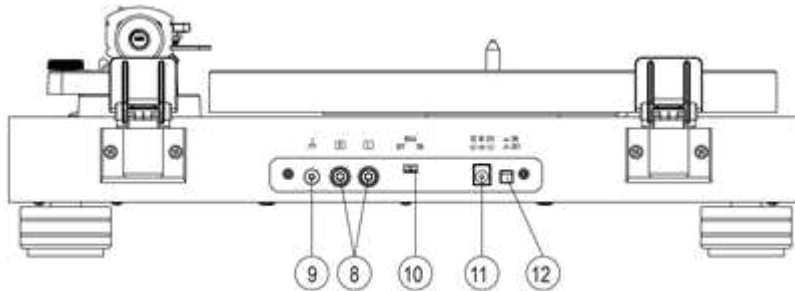

8. Signal Connectors

Plug in the RCA cable and connect the cable to the audio amplifier/system

9. Ground Terminal

Connect a ground wire. (If used with an external RIAA/Phono Stage)

10. Phono ON/OFF

If used with an external Phono stage/RIAA, set this to off.

11. Power Supply Jack

Plug-in DV12/0.5A switching adapter for power supply.

12. Power Switch

3. Turntable Platter and Belt Setup



1. Install the drive belt over the inner ring under the platter and make sure it won't fall off during the setup.

- 
2. Place the platter through the turntable spindle, then rotate the platter until you see the drive motor pulley through the window at the top left corner.
 3. Carefully grab the drive belt and put it around the slot of the motor pulley.
 4. Connect the power adapter to the turntable and power on the turntable. Set the speed to either 33 or 45. If the platter does not spin, try the steps listed above again.
 5. Place the slip mat on the platter before playing any records.
-

4. Cartridge Downforce Adjustment

1. Gently push and turn the Counterweight onto the rear of the tonearm (with the scale facing toward the front of the turntable).
2. Remove the cartridge protection cap.
3. Lower the tonearm lift and position the cartridge in the space between the tonearm rest and the platter.
4. Carefully rotate the Counterweight until the tonearm balances out/floats freely. The tonearm should return to the balanced position if it is moved up or down. This adjustment must be done carefully.
5. Once the tonearm is correctly balanced return it to its rest. Hold the Counterweight without moving it, and gently rotate the downforce Scale ring (the part with numbers on it) to 0. Check whether the arm still balances out.
6. Turn the counterweight counterclockwise (seen from the front) to adjust the tracking force. The Ortofon 2M Blue cartridge supports 1.6 - 2.0g.

NOTE: The recommended tracking force at **1.8 g**.

5. Anti-Skating Adjustment

Adjust the **Anti-Skating Control** to match the downforce value (1.8g). This initial setting serves as a good starting point for further adjustments.

Determining the appropriate level of anti-skating is relatively simple. As you lower the cartridge into the groove, carefully observe the cartridge and cantilever from the front. They should descend straight down into the groove without being pulled to either side. If you notice any deviation, the anti-skating is likely set incorrectly.

6. Mains Connection

An external power supply (DC12V 0.5A) is supplied with this turntable. Connect the turntable to a mains voltage of 110V/60Hz or 230V/50Hz.

7. Amplifier Connection

External Phono Stage/RIAA

Locate the **RCA outputs** on the rear panel of the turntable. Connect the **RCA cable** to this output and your (amplifier's) **PHONO INPUT**.

Red plug into Right channel input, **White** plug into Left channel input. remember to connect the ground cable between the turntable and the external phono stage, and make sure (**Phono ON/OFF**) is turned **OFF** on the back of the turntable

Internal Phono Stage

If your amplifier doesn't have a Phono Input, you can turn **ON** the internal phono stage on the back of the TT-4 MK2. In this case, you will need to use an **ANALOGUE INPUT** on the amplifier

NOTE: The TT-4 MK2 features a high-grade phono stage that pairs excellently with the pre-installed Ortofon 2M Blue cartridge.

In many setups, utilizing the internal phono stage provides optimal performance.

8. Playing a Record

1. Place the record on the turntable.

If it is a 45 rpm record, you need to place the single adapter on the record spindle, since most 45 rpm records have a bigger center hole.

2. Switch on the power (on the back of the turntable)

3. Pull up the arm lifter, and then release the arm lock clip.

4. Place the cartridge vertically over the first track of the record.

5. Rotate the RPM knob to the speed you want to play, which will cause the platter to start spinning.

6. Lower the arm lifter.

The stylus will touch the record and start playing music.

7. When the record is done, lift the tone arm by pulling up the arm lifter, lead the tonearm back to the armrest, and lock it.

- 
8. To pause the record, lift the tone arm by pulling up the arm lifter, and then turn the speed knob to "OFF".
-

9. Replacing the Cartridge

NOTE: If you are unfamiliar or uncomfortable with completing this procedure, we recommend consulting with a professional/your point of purchase to perform the installation.

1. Unscrew the headshell from the tonearm.
2. Unscrew the cartridge from the headshell, and disconnect the 4 wires to take off the cartridge as below:

White Wire: Left Channel, Positive Pole

Blue Wire: Left Channel, Negative Pole

Red Wire: Right Channel, Positive Pole

Green Wire: Left Channel, Negative Pole

3. Tightly screw the new cartridge to the headshell, and connect the wires correctly using the information above.
 4. Remember to adjust the counterweight stylus pressure and anti-skate value according to the new cartridge specifications.
-

10. Tips & Tricks

We aim to ensure you experience the full potential of your turntable. Therefore, we've put together an article containing valuable Tips & Tricks to help you achieve optimal performance with your turntable.

Article: [**Tips & Tricks: TURNTABLES**](#)

11. Specifications

Drive Method	Belt Drive
Motor	DC Motor
Speed	33-1/3 rpm, 45 rpm



Rotation Speed Variation	±2 %
Wow and Flutter	0.2 %
Platter	Aluminum die-cast (Diameter 30 cm) With rubber damping
Platter Weight	1700 g
Output Level	RIAA on: 528 mV / RIAA off: 5.5 mV
Signal-to-Noise Ratio	67 dB or higher (A-weighted, 20 kHz, LPF)
Tonearm	Carbon Static Balance Straight Tonearm
Effective Arm Length	223.5 mm
Effective Tonearm Mass	16.2 g
Overhang	18.6 mm
Acceptable Cartridge Weight	15.5-21.5 g (including headshell)





Cartridge Type	MM type
Output Voltage	5.5 mV (at 1 kHz, 5 cm/sec)
Stylus Pressure	1.6 - 2 g
Cartridge Weight	7.2 g
Headshell Weight	10.6 g (including screws, nuts, and wires)
Output Terminal	RCA: RIAA on/off
Power Consumption	1.5 W
Dimensions (W×H×D)	420 mm x 142 mm x 355 mm
Weight	7.4 kg

Colors

