 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Black & Decker BLM10350MB Owner's Manual

[Shop genuine replacement parts for Black & Decker
BLM10350MB](#)

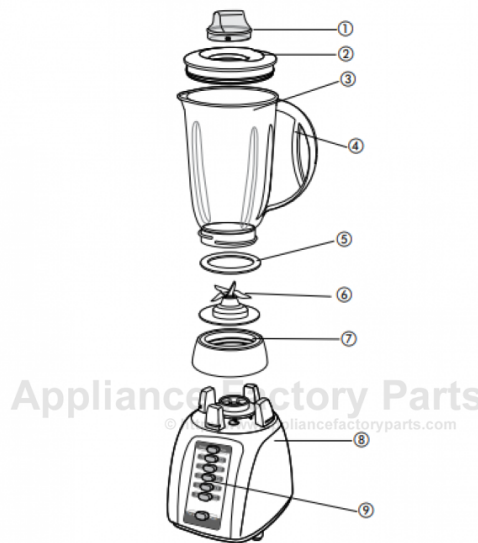

1. Lid cap
2. Lid
3. Glass blending jar 1.26 L / 46 oz.
4. Handle
5. Gasket
6. Blade assembly
7. Jar base
8. Unit base
9. Controls (see A)

[Find Your Black & Decker Blender Parts - Select From 63 Models](#)

----- Manual continues below -----

[illegible]

Para retirar la jarra de la base, sujétela del asa y gírela hacia el símbolo para desengancharla. Retire la tapa para verter.



A

[illegible]

LIMPIEZA RÁPIDA

1. La característica de limpieza rápida facilita lavar la jarra porque ayuda a desprender las partículas de comida. Puede usar esta característica llenando la jarra con agua tibia hasta la mitad de la jarra. Agregue un poco de detergente de losa para las manchas persistentes (después de preparar salsa, malleadas o aderezo de ensalada). Sujete la tapa y oprima cualquier botón. Permita que la unidad funcione por unos 5 segundos y enseguida oprima el botón de Apagar.

2. Desconecte la unidad, gire la jarra hacia el símbolo [■], retire la jarra.
 3. Las partes de la licuadora pueden lavarse a mano. Siga las instrucciones para LAVAR A MANO a continuación.
- Para lavar a mano las partes de la licuadora:**
1. Antes de limpiar, apague y desconecte la licuadora.
 2. Enjuague las partes de inmediato después de licuar para facilitar la limpieza.
 3. Limpie la base de la licuadora con un paño húmedo y séquela bien. Elimine las manchas persistentes frotándolas con una esponja húmeda con un limpiador no abrasivo. No sumerja la base en ningún líquido.
 4. Las partes removibles pueden ser lavadas a mano o en una máquina lavaplatos. No coloque las jarras ni las partes en líquidos hirviendo.
 5. Si tiende a derramarse líquido sobre la base, límpiela con un paño bien lavado y séquela cuidadosamente. No limpie ni limpie los abrasivos en ninguna de las partes ni en el acabado de la licuadora.

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto.

NO devuélva el producto al fabricante. Lleve o lleve el producto a un centro de servicio autorizado.

• La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

• Por dos años a partir de la fecha original de compra mientras que tenga una prueba de la compra.

 
• Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

• Conserve el recibo original de compra.

• Por favor llame al número del centro de servicio autorizado.

- Los productos que han sido utilizados en condiciones distintas a las normales.
- Los daños ocasionados por el mal uso, el abuso o negligencia.
- Los productos que han sido alterados de alguna manera.
- Los daños ocasionados por el uso comercial del producto.
- Los productos utilizados o reparados fuera del país original de compra.
- Las piezas de vidrio y demás accesorios empacados con el aparato.
- Los gastos de tramitación y embarque asociados al reemplazo del producto.
- Los daños y perjuicios indirectos o incidentales.

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.



350 W	120 V $\sim$ 60 Hz
-------	--------------------



Applica®
Applica Consumer Products, Inc.

© 2009 - 2010 Applica Consumer Products, Inc.
Fabricado en México
Impreso en México
Made in Mexico
Printed in Mexico

Importado por / Imported by:
APPLICA AMERICAS, INC.
Av. Juan B Justo 637 Piso 10
C1425FSA) Ciudad Autónoma de Buenos Aires
Argentina
C.U.I.T. No. 30-69729892-0

Comercializado por / Commercialized by:
APPLICA MANUFACTURING, S. DE R. L. DE C. V.
 Presidente Mazarik No 111, 1er Piso
 Col. Chapultepec Morales, Mexico D.F.
 Deleg. Miguel Hidalgo
 CP 11570
 MEXICO
 Teléfono: (55) 5263-9900
Del interior marque sin costo
 01 (800) 714 2503

R12009/7-30-76S/E



BLACK&DECKER Home

Customer Care Line:

Mexico
01-800 714-2503

USA
1-800-231-9786

Accesorios/Partes (EE.UU.)

Accesorios/Parts (USA)

1-800-738-0245



MODEL OS/MODE

- ☐ BLM10350MB
- ☐ BLM10350MN
- ☐ BLM10350MW

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- Do not blend hot liquids.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

Important: To maintain performance, dry blades after cleaning.

FAST CLEAN

1. The fast clean feature helps make it easier to clean the blender jar by loosening food particles. You may use the fast clean feature by filling the jar half full with lukewarm water. Add a little dish detergent for tough cleaning jobs (such as after making salsa, shakes or salad dressing). Hold the lid and press any button. Let the unit run for about 5 seconds, then press Apagar (off).

2. Unplug the unit, twist to unlock (🔓), lift the jar off the unit base and rinse.

3. Parts may be hand-washed. Follow the HAND-WASHING instructions below.

For hand-washing parts:

1. Before cleaning, turn off and unplug the blender.
2. Rinse parts immediately after blending for easier cleanup.
3. Wipe the unit base with a damp cloth and dry thoroughly. Remove stubborn spots by rubbing with a damp cloth and non-abrasive cleaner. Do not immerse the base in liquid.
4. Removable parts can be washed by hand or in a dishwasher. Do not place jars or parts in boiling liquids.
5. If liquids spill into the base, wipe with a damp cloth and dry thoroughly. Do not use rough scouring pads or cleansers on parts or finish.

POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRICAL CORD

 
- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel. In Latin America, by an authorized service center.

Product may vary slightly from what is illustrated.

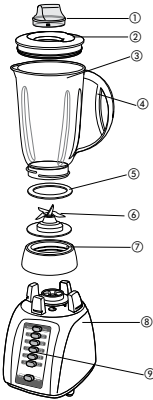

1. Lid cap
2. Lid
3. Glass blending jar 1.26 L / 46 oz.
4. Handle
5. Gasket
6. Blade assembly
7. Jar base
8. Unit base
9. Controls (see A)

How to Use

 
This product is for household use only.

BLENDER JAR ASSEMBLY

1. Before first use, wash all parts except the unit base. Put the gasket on top of the blade assembly.
2. Place the blade assembly into the jar base and turn the jar base clockwise until tight.
3. **Interlock System:** Place the assembled jar onto the unit base and toward lock (🔒) until secured in place. You've engaged the interlock system if you lift the jar handle and the entire blender lifts together as one unit.

USING YOUR BLENDER

1. Be sure the unit is Off (Apagar) and plug the cord into a standard electrical outlet.
2. Place the food to be blended into the jar and the lid on the jar before blending.
3. When crushing ice or hard foods, keep one hand on the lid.



4. Choose the speed that best suits your task for food or beverage blending (A). Press the Baja (Low) button in combination with the task button when choosing or switching speeds.
5. Use the Pulso (pulse) button for a few seconds, then release for quick or delicate blending tasks. Releasing the pulse automatically turns the blender off.
6. When finished blending, push the Apagar/Pulso (off/pulse) button.

7. To remove the jar, grasp the handle, twist toward the unlock (🔓) and lift it from the unit base. Remove the lid before pouring.

BLENDING TIPS AND TECHNIQUES

- Cut food into small pieces about ¾" (2 cm) before adding to the blender.
- When ingredients stick or spatter along the sides of the jar, stop the blending action and remove the lid. Use a rubber spatula to push food toward the blades. Replace the lid, then continue blending.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meats, mixing dough, and extracting juices from fruits and vegetables.
- The following items should never be placed in the unit as they may cause damage: dried spices and herbs (ground alone), bones, large pieces of solidly frozen foods, tough foods such as turnips.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applicia's liability will not exceed the purchase price of product.

For how long?

- Two year(s) from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applicia, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

Póliza de Garantía

(Válida sólo para México)

Duración

Aplicia Manufacturing, S. de R. L. de C.V. garantiza este producto por 2 años a partir de la fecha original de compra.

¿Qué cubre esta garantía?

Esta Garantía cubre cualquier defecto que presenten las piezas, componentes y la mano de obra contenidas en este producto.

Requisitos para hacer válida la garantía

Para reclamar su Garantía deberá presentar al Centro de Servicio Autorizado la póliza sellada por el establecimiento en donde adquirió el producto. Si no la tiene, podrá presentar el comprobante de compra original.

¿Donde hago válida la garantía?

Llame sin costo al teléfono 01 800 714 2503, para ubicar el Centro de Servicio Autorizado más cercano a su domicilio en donde usted podrá encontrar partes, componentes, consumibles y accesorios.

Procedimiento para hacer válida la garantía

Acuda al Centro de Servicio Autorizado con el producto con la póliza de Garantía sellada o el comprobante de compra original, ahí se reemplazará cualquier pieza o componente defectuoso sin cargo alguno para el usuario final. Esta Garantía incluye los gastos de transportación que se deriven de su cumplimiento.

Excepciones

Esta Garantía no será válida cuando el producto:

- A) Se hubiese utilizado en condiciones distintas a las normales.
- B) No hubiese sido operado de acuerdo con el instructivo de uso que le acompaña.
- C) Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por Aplicia Manufacturing, S. de R. L. de C.V.

Nota: Usted podrá encontrar partes, componentes, consumibles y accesorios en los centros de servicios autorizados. Esta garantía incluye los gastos de transportación que se deriven de su cumplimiento dentro de su red de servicio.

Por favor llame al número correspondiente que aparece en la lista a continua para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fue comprado. También puede consultarnos en el e-mail servicio@appliciamail.com.mx

Argentina SERVICIO TECNICO CENTRAL ATTENDANCE Avda. Monroe N° 3351 Buenos Aires - Argentina Fonos: 0810 - 889 - 8898 011 - 4545 - 4700 011 - 4545 - 5574 supervision@attendance.com.ar	México Atención 123 # 95 Local 109 y 112 Col. Centro, Cuauhtemoc, México, D.F. Tel. 01 800 714 2503
Chile MASTER SERVICE SERVICENTER Nueva Los Leones N° 0252 Providencia Santiago - Chile Fono Servicio: (562) - 232 77 22 servicente@servicenter.cl	Nicaragua ServTotal De semáforo de portezuelo 500 metros al sur. Managua, Nicaragua, Tel. (505) 248-7001
Colombia PLINARES Avenida Quilo # 88A-09 Bogotá, Colombia Tel. sin costo 01 800 7001870	Panamá Servicios Técnicos CAPRI Tumbamuerto Boulevard El Dorado Panamá 500 metros al sur. Tel. 3020-480-800 sin costo (507) 2360-236 / 159
Costa Rica Aplicaciones Electromecánicas, S.A. Calle 28 Bis y Ave. 3 San Jose, Costa Rica Tel.: (506) 257-5716 / 223-0136	Perú Servicio Central Fast Service Av. Angamos Este 2431 San Borja, Lima Perú Tel. (511) 2251 388
Ecuador Servicio Master de Ecuador Av. 5 de Diciembre 9276 y los Alamos Tel. (593) 2281-3882	Puerto Rico Buckeye Service Jesús P. Piñero #1013 Puerto Nuevo, SJ PR 00920 Tel.: (787) 782-6175
El Salvador Calle San Antonio Abad 2936 San Salvador, El Salvador Tel. (503) 2284-6374	República Dominicana Plaza Llama, S.A. Av. Duarte #94 Santo Domingo, República Dominicana Tel.: (809) 687-9171
Guatemala MacPartes SA 3ª Calle 414 Zona 9 Frente a Tecun Tel. (502) 2331-5020 / 2332-2101	Venezuela Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Melia, Caracas. Tel. (582) 324-0969 www.appliciaservice.com servicio@appliciamail.com
Honduras ServiTotal Contigua a Telecont Tegucigalpa, Honduras, Tel. (504) 235-6271	

®BLACK&DECKER is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

®BLACK&DECKER es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.