

Use and Care Manual

Installation: First, unfold the tent and lay it flat on the ground. Then, insert the two fiberglass support poles and fix them according to the markings on the tent to shape the tent. Use the glow-in-the-dark ground stakes to secure the four corners of the tent to the ground, ensuring that the stakes are fully inserted into the ground. Tie the wind ropes to the corresponding positions of the tent, fix the other ends with ground stakes, and adjust the tightness of the wind ropes.

Usage: Use the double-sided zippers to enter and exit the tent. When zipping up, make sure the zippers slide smoothly to avoid jamming. When entering or exiting, be careful not to pull the tent fabric vigorously to prevent damage.

Cleaning: If there are stains on the surface of the tent, you can gently wipe it with a damp cloth to remove the dust and stains on the surface. Avoid using cleaning agents containing corrosive chemicals to prevent damage to the PVC plastic material of the tent.

Storage: Clean out the items inside the tent, and then disassemble the tent, support poles and other components according to the steps opposite to the installation process. Store the properly packed tent in a dry and ventilated place, and avoid direct sunlight and humid environments to prevent the tent material from aging or getting moldy.