



Original	Replacement
 On/Standby	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Back/Repeat	 Back
 Memory	 Smart
 Clear	 Exit
 Clock/Timer	 AV

Original	Replacement
 Sleep	 Sleep
 Bass/Treble	 Options
 X-Bass	 Dual
 Random	 Subt
 <</I<</Tuning	 <<
 >>/>>/Tuning	 >>
 Folder	 Text
 Demo/Dimmer	 Info
 Preset Up	 Up
 Preset Down	 Down
 Enter	 Ok
 Vol+	 Vol +
 Vol+	 Right
 Vol-	 Vol -
 Vol-	 Left
 Mute	 Mute
 CD	 Yellow





Original	Replacement
USB	Green
Tuner	Blue
Input/Audio/Line	Red
iPod	3D
(Tv Out)/Display	TV/R
Menu	Menu
Play/Pause iPod	Play
Display CD/USB	Ch +
Stop CD/USB	Stop
Play/Pause	Pause
ASPM RDS	D. Menu
PTY RDS	Format
Display RDS	Ch -

Original	Replacement

