



Microsoft Surface Go 4





Microphone
Micrófono



Front-facing camera
Caméra à l'avant
Cámara frontal



USB-C® port
Port USB-C®
Puerto USB-C®



Volume
Volumen



Windows Hello camera
Caméra Windows Hello
Cámara Windows Hello



Surface Connect port
Port Surface Connect
Puerto Surface Connect




Power button
Bouton d'alimentation
Botón de encendido



Headphone jack
Prise de casque
Conexión de auriculares



MicroSD™ card reader
Lecteur de carte microSD™
Lector de tarjeta microSD™

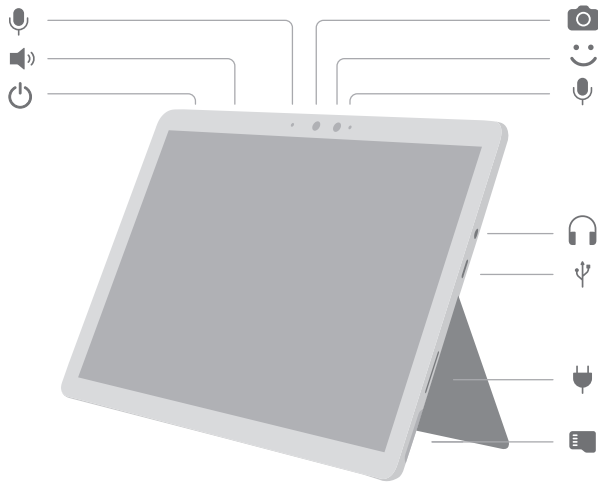

support.microsoft.com

©/TM/®2023 Microsoft
Model 2066, 2067

