



神牛微信公众号
Follow Wechat Official Account



深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋
电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street,
Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320(8062)
Fax: +86-755-25723423 E-mail: godox@godox.com

705-WMPK10-00

godox.com

Made In China



Godox

 
UHF 全金属双通道无线麦克风系统
UHF Full Metal Dual-Channel Wireless Microphone System

WMicS1 Pro TX

WMicS1 Pro RX

WMicS1 Pro Kit1

WMicS1 Pro Kit2

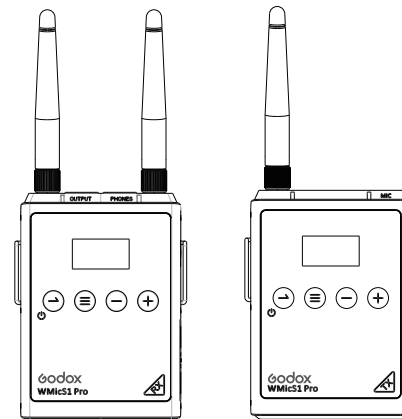

说明书
Instruction Manual

前言

欢迎购买神牛产品!

WMicS1 Pro是一款利用UHF波段传输的全金属双通道无线麦克风系统,适用于专业室内采访、网络直播、拍短视频、户外采访等场景。

请仔细阅读说明书,以便能正确的操作,发挥本产品的优越性能。

说明书包含产品质保卡,请妥善保存。

产品特点

- 全金属打造,专业影视录音麦克风系统
- 功能齐全,尽享品质录音
- UHF频率范围:514MHz-596MHz
- 96个无线频道可选,有效减少热频干扰
- 无线距离最大可达100m
- OLED显示屏提供各项参数设置
- 3.5mm耳机实时监听
- 输出音量控制,提供静音功能
- 发射功率可调节
- 一个接收器可同时连接两个发射器
- 两种供电方式(Type-C直连供电或两节AA电池供电)

(注:最大支持频率为514MHz-596MHz,96个无线频道在此频率范围中选择,会存在部分频率没有利用的情况。)

警告

⚠ 请勿私自拆卸产品,如产品出现故障须由本公司或授权的维修人员进行检查维修。

⚠ 请保持干燥:请勿用湿手接触产品,亦不可将产品浸入水中或暴露于雨中。

⚠ 请勿让儿童接触本产品。

⚠ 请勿在易燃易爆环境中使用。在这些场合下,请注意相关警告标识。

⚠ 请勿放置在超过40度的高温环境中。

 
⚠ 若发生任何故障,请立即关闭电源。

⚠ 使用电池的注意事项:


- 只能使用本手册中列出的电池。请勿混用新旧电池或不同类型的电池。
- 请仔细阅读并遵守由厂商提供的警告或指示。
- 切勿使电池短路或拆卸电池。
- 切勿将电池投入火中或加热升温。
- 切勿试图以反方向安装电池。
- 当电量用尽时,电池容易漏液。所以为了避免产品受损,请在长期不使用本产品或电量用尽时取出电池。
- 如果受损电池中的液体接触到皮肤或衣服,请立即用大量清水冲洗。

部件名称


腰包发射器(TX)

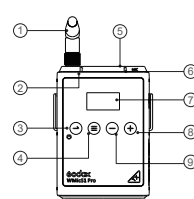

 1. 天线
2. Power 指示灯
- 绿灯: 电量充足
- 红灯: 电量低,需更换电池
3. 电源 / 静音键
长按电源开关
短按静音开关
4. 菜单键

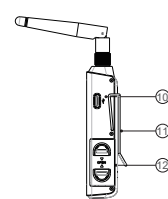


 5. 麦克风输入接口
6. Audio 指示灯
- 绿灯: 拾音模式
- 红灯: 静音模式
7. OLED 显示屏
8. 菜单 + 键
9. 菜单 - 键



10. USB Type-C
11. 金属背夹接口
12. 电池盒 - 两节 5号电池
13. 1/4 冷靴接口

 
OLED显示屏:

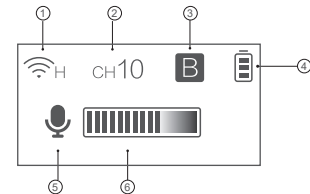

1. 发射器功率
2. 发射器通道
3. 发射器无线组别
4. 电量显示
5. 拾音 / 静音图标
6. 输入音量显示
7. 发射器组别 A/B
8. 发射器通道 01-48
9. 发射器功率 L/H



 便携接收器 (RX1)

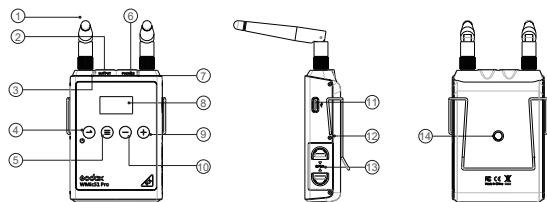


- | | | |
|------------------|------------------|--------------------|
| 1. 天线 | 6. 3.5mm 耳机监听接口 | 11. USB Type-C |
| 2. 3.5mm 音频线输出接口 | 7. RF 指示灯 | 12. 金属背夹接口 |
| 3. Power 指示灯 | - 绿灯: RF 信号强 | 13. 电池盒 - 两节 5 号电池 |
| - 绿灯: 电量充足 | - 红灯: RF 信号弱或已断开 | 14. 1/4 冷靴接口 |
| - 红灯: 电量低, 需换电池 | | |
| 4. 电源 / 返回键 | 8. OLED 显示屏 | |
| 5. 菜单键 | 9. 菜单+ 键 | |
| | 10. 菜单- 键 | |

OLED显示屏:

- A/B 组射频信号 (表示未成功连接)
- Mono 单通道 / Stereo 立体声
- A/B 发射器电量
- A/B 发射器输入音量
- 接收器电量显示
- A/B 组射频信号 开 / 关
- 接收器通道 01-48
- 输出音量 00-15



 标配物品

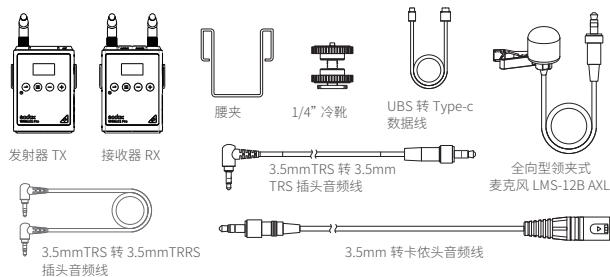

名称	型号	标配物品
金属发射器	WMicS1 Pro TX	WMicS1 Pro TX ×1 腰夹 ×1 全向型领夹式麦克风LMS-12B AXL ×1 USB转 Type-C 数据线 ×1
金属接收器	WMicS1 Pro RX	WMicS1 Pro RX ×1 腰夹 ×1 3.5mm TRS转3.5mm TRS插头音频线 ×1 3.5mm卡依头音频线 ×1 1/4" 冷靴 ×1 3.5mm TRS转3.5mm TRRS插头音频线 ×1 USB转 Type-C 数据线 ×1
UHF金属无线 麦克风系统 组合一	WMicS1 Pro Kit 1	WMicS1 Pro TX ×1 WMicS1 Pro RX ×1 全向型领夹式麦克风LMS-12B AXL ×1 3.5mm TRS转3.5mm TRS插头音频线 ×1 3.5mm卡依头音频线 ×1 1/4" 冷靴 ×1 3.5mm TRS转3.5mm TRRS插头音频线 ×1 USB转 Type-C 数据线 ×2 腰夹 ×2
UHF金属无线 麦克风系统 组合一	WMicS1 Pro Kit 2	WMicS1 Pro TX ×2 WMicS1 Pro RX ×1 全向型领夹式麦克风LMS-12B AXL ×2 3.5mm TRS转3.5mm TRS插头音频线 ×1 3.5mm卡依头音频线 ×1 1/4" 冷靴 ×1 3.5mm TRS转3.5mm TRRS插头音频线 ×1 USB转 Type-C 数据线 ×2 腰夹 ×3

注: 所有型号包装清单均包含产品说明书 (含保修卡)

可搭配产品

无线手持麦克风发射器
WH-M1

 


卡依口插接发射器
TX3-XLR



供电方式

两种供电方式

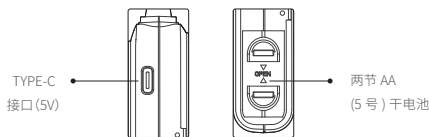

使用说明

一、发射器设置

⊖ 电源/静音键

- 开关机：长按电源/静音键2秒可开/关机
- 开启关闭静音：短按电源/静音键可开启/关闭静音模式。

第一次开机显示语言选择，English/中文，按+或-键进行选择，再按菜单键(⊖)确认并退出。语言选择中文后，操作如下：

注：选择语言之后，如需切换语言，可同时长按+键进行重置，重置之后可重新选择语言。

语言选择中文后，操作如下：

- ⊖ 菜单键：组别，通道，功率设置：长按菜单键进入设置界面，再短按菜单键切换下一个设置。

注意：当组别、通道及功率设置成功后，短按菜单键无变动，需要长按再次进入设置界面。



组别设置：选中组别（组别下字母跳动），按+/-键可选A/B组别，选定后，按菜单键退出并切换下一个设置。



通道设置：选中通道（通道下数字跳动），按+/-键可设置通道，通道可在01-48之间选择，选定后，按菜单键退出并切换下一个设置。



功率设置：选中功率（功率下字母跳动），按+/-键可切换H/L功率，选定后，按菜单键退出并切换下一个设置。



注意：当组别、通道及功率设置成功后，短按菜单键，数字及字母不变动，需要长按再次进入设置界面。

显示屏 短按+/-键至显示屏显示屏幕亮度，再长亮度设置：按菜单键至屏幕亮度下数字跳动，然后短按+/-键选择亮度级别，级别：1-8级。



软件版本：短按+/-键显示屏显示版本时，表示软件版本。



背光时间：短按+/-键至显示屏显示屏幕休眠，再长按菜单键至屏幕休眠下时间跳动，短按+/-键选择背光时间：（开）常亮，（关）常闭，延时10秒/30秒/60秒。



重置设置：同时按住+键和-键3秒自动跳转到重置界面，重置成功后原先数据清除，显示屏显示English与中文，此时短按+/-键可以进行选择，选择完毕，短按菜单键返回设置界面。



二、接收器设置

① 电源/返回键

- 开关机：长按2秒即可开/关机，短按返回主界面。
- 开启关闭静音：短按电源/静音键可开启/关闭静音模式。

第一次开机显示语言选择，English/中文，按+或-键择，再按菜单键(⊖)确认并退出。语言选择中文后，操作如下：

注：选择语言之后，如需切换语言，可同时长按+ -键进行重置，重置之后可重新选择语言。

语言选择中文后，操作如下：

- ### ⊖ 菜单键：
- 组别，通道，功率设置：长按菜单键进入设置界面，再短按菜单键切换下一个设置。

注意：当组别、通道及功率设置成功后，短按菜单键无变动，需要长按再次进入设置界面。

A/B组 长按菜单键，显示A组，设置参数设置。
参数设置：

设置B组参数，先短按电源/返回键返回主界面，再短按+/-键直至显示屏显示B组时，此时，长按菜单键进入B组参数设置。

注意：使用时，将接收器与发射器设置成相同的频道，即可录音和实时监听。

A/B组 选中组别（组别下字母跳动），按+/-键可选/开关，选定后，按菜单键退出并切换下一个设置。

通道设置：选中通道（通道下数字跳动），按+/-键可设置通道，通道可在01-48之间选择，选定后，按菜单键退出并切换下一个设置。

音量设置：选中音量（音量下数字跳动），按+/-键可选择音量，音量可在00-15之间选择，选定后，按菜单键退出并切换下一个设置。



立体声/单声道 短按+/-键显示屏显示声音通道，再长按菜单键至声音通道下字母跳动，短按+/-键切换立体声/单声道。

显示屏亮度设置：短按+/-键至显示屏显示屏幕亮度，再长按菜单键至屏幕亮度下数字跳动，然后短按+/-键选择亮度级别，级别：1-8级。

软件版本：短按+/-键显示屏显示版本时，表示软件的版本。

背光时间：短按+/-键显示屏显示屏幕休眠，再长按菜单键至屏幕休眠下时间跳动，短按+/-键选择背光时间：（开）常亮，（关）常闭，延时10秒/30秒/60秒

重置设置：同时按住+键和-键3秒自动跳转到重置界面，重置成功后原先数据清除，显示屏显示English与中文，此时短按+/-键可以进行选择，选择完毕，短按菜单键返回设置界面。

声音通道
单声道


屏幕亮度
1

版本 V.1.15

屏幕休眠
30s


重置...

 三、发射器接口：




MIC：连接领夹麦克风。

 四、接收器接口：



OUTPUT：连接外界音频信号输出。
PHONES：连接耳机线。

 使用操作

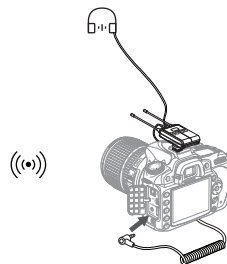

发射器

- ① 将全向型领夹式麦克风插入发射器的“MIC”接口；
- ② 打开发射器，设置相应参数；
- ③ 用腰夹将发射器夹在腰带上或直接将发射器直接放进口袋里。

接收器

- ① 将 1/4” 冷靴连接到接收器，并将其安装在相机 / 摄影设备上；
- ② 将 3.5mm 插头音频线的一端插入接收器的“OUTPUT”接口，另一端插入相机的“MIC”接口；
- ③ 打开接收器，设置相应参数。

注意：设置参数时，需将发射器与接收器设置相同的组别和频道；
一个接收器连接两个发射器使用时，必须A发射器设置在A组别使用，B发射器设置在B组别使用。

规格参数

名称	发射器 TX	接收器 RX
型号	WMicS1 Pro TX	WMicS1 Pro RX
频道组	A/B	A/B
频道数	96(A组48; B组48)	96(A组48; B组48)
RF频率范围	514MHz - 596MHz	514MHz - 596MHz
振荡器类型	晶体控制锁相环合成器	晶体控制锁相环合成器
音频频率范围	50Hz - 20KHz	50Hz - 20KHz
声音延迟	12ms	12ms
天线 (可折叠90°, 旋转360°)	1/4λ	1/4λ
音频输入接口	3.5mm接口	3.5mm接口
供电	USB Type-C	5V=0.2A
	电池	两节AA(5号)电池
工作温度范围	0°C-50°C	0°C-50°C
信噪比	≈70dB	≈70dB
接收灵敏度	\	-47dBV
失真	\	0.5%以下
材质	金属壳	金属壳
尺寸	63*21*198 mm	63*24*198 mm
净重	212 g	226 g

故障排除

- 如不能接收到音频信号，请检查电池是否正确安装以及是否打开发射器电源；发射器和接收器是否设置在同一组别和频道；麦克风及耳机是否已正确牢固连接到位；功能模式是否设置正确。
- 检查发射器是否设置的静音。
- 如您的发射器受到他人干扰，改变发射器和接收器的频道设置即可。
- 如您发现发射音频距离有限或者有漏发现象，请检查是否电池耗尽，请尝试更换电池。

维护保养

避免跌落：如果受到强烈碰撞或振动，发射器和接收器可能会发生故障。

保持干燥：本产品是非防水产品，如果将其浸入水中或放置于高湿度的环境中将可能发生故障。内部构造生锈可能会导致无法修理的损害。

避免温度骤变：温度的突变，诸如在寒冷天进出温暖的大楼将可能会使发射器和接收器内部结露。为避免结露，请将发射器和接收器事先装入手提袋或塑料包内，以防温度突变。

远离强磁场：无线电广播发射机等设备产生的强静电或强磁场可能会干扰本产品正常工作。1年保修，消耗品如领夹麦克风等，不在1年保修范围。

经发现擅自检修此设备，将取消一年保修期，维修需要收取相关费用。

如果本品出现故障或者被水淋湿，在专业人员维修后方可继续使用。

如有技术更改，恕不另行通知。

Forward

Thank you for purchasing!

WMicS1 Pro is the metal UHF wireless microphone system, which is suitable for video recording, journalistic shooting, audio recording, etc.

Please read this manual carefully before using to make sure the correct operation and exert the optimum function. And well keep it for future reference.

Features:

- All-metal construction, professional recording microphone system
- High and stable sound quality like broadcast
- UHF Frequency Range: 514MHz-596MHz
- There are 96 wireless channels which can be freely switched without interference
- The maximum wireless distance up to 100m
- With OLED display to show the parameters setting
- Achieve real-time monitoring with 3.5mm earphone
- With output volume control and silence function
- The power of transmitter is adjustable
- Support two transmitters and one receiver to work simultaneously
- Two power supply modes: Type-C power supply or 2 pieces AA size batteries (not included).

 
(Note: as the max. support frequency is 514MHz-596MHz which includes the 96 wireless channel's frequency, there are parts of frequency may not be utilized.)

Warning


- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Keep out of reach of children.
- ⚠ Do not use the flash unit in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.
- ⚠ Do not leave or store the product if the ambient temperature reads over 40°C.
- ⚠ Turn off the flash trigger immediately in the event of malfunction.
- ⚠ Observe precautions when handling batteries.
 - Use only batteries listed in this manual. Do not use old and new batteries or batteries of different types at the same time.
 - Read and follow all warnings and instructions provided by the manufacturer.
 - Batteries cannot be short-circuited or disassembled.
 - Do not put batteries into a fire or apply direct heat to them.
 - Do not attempt to insert batteries upside down or backwards.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
 - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

Names of Parts

Transmitter (TX)

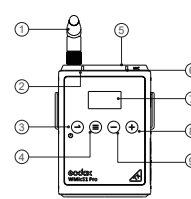


 1. Antenna
2. Power Indicator
 - Green light: full battery level
 - Red light: Low battery level, replace the batteries
3. Power Source/Mute Button
 - Long press to power on/off
 - Short press to turn Mute mode on or off

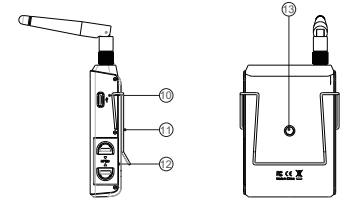

4. Menu Button
5. Microphone Input Port
 - Green light: Pick-up Sound mode
 - Red light: Silent mode
7. OLED Display
8. Menu +
9. Menu -
10. USB Type-C Port
11. Metal Clip Port
12. Battery Holder
 - 2×AA Battery
13. 1/4"Shoe Mount Port

 
OLED Display:

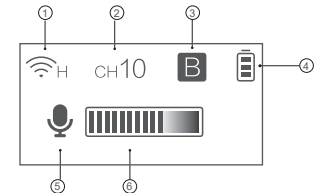

1. Transmitter Power
2. Transmitter Channel
3. Wireless Group
4. Battery Level Indicator
5. Pick-up Sound/Mute Icon
6. Input Volume Indicator
7. Transmitter Group A/B
8. Transmitter Channel 01-48
9. Transmitter Power LH



 
Receiver (RX1)

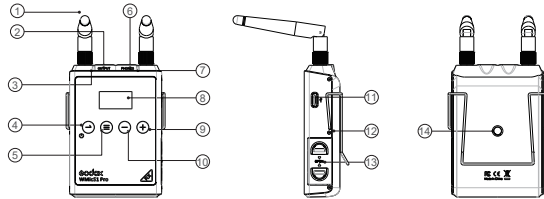


1. Antenna
2. 3.5mm Audio Output Port
3. Power Indicator
-Green light: full battery level
-Red light: Low battery level, replace the batteries
4. Power Source/Return Button
5. Menu Button
6. 3.5mm Earphone Monitoring Port
7. RF Indicator
-Green light: Strong RF signal
-Red light: Weak or disconnected RF signal
8. OLED Display
9. Menu + button
10. Menu - button
11. USB Type-C Port
12. Metal Clip Port
13. Battery Holder
-2×AA Battery
14. 1/4" Shoe Mount Port

OLED Display :

 1. A/B Group Frequency Signal (indicate Disconnection)
2. Mono/Stereo Mode
3. A/B Transmitter Battery Level Indicator
4. A/B Transmitter Input Volume
5. Receiver Battery Indicator
6. A/B Group Frequency Signal On/Off
7. Receive Channel 01-48
8. Output Volume 00-15

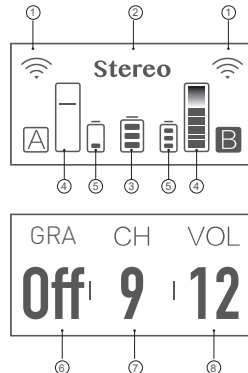

Included Item

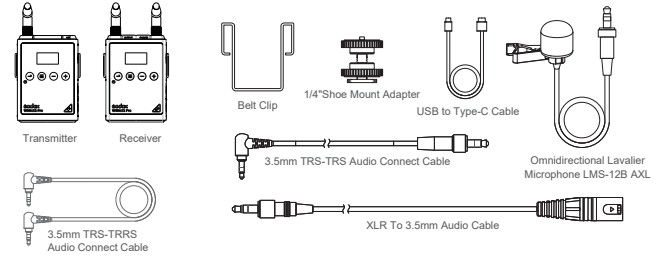 

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Name	Model	Included Items	
Transmitter	WMicS1 Pro TX	WMicS1 Pro TX x1	Belt Clip x1
Receiver	WMicS1 Pro RX	WMicS1 Pro RX x1	Belt Clip x1
Metal UHF Wireless Microphone System Kit 1	WMicS1 Pro Kit 1	WMicS1 Pro TX x1	WMicS1 Pro RX x1
Metal UHF Wireless Microphone System Kit 2	WMicS1 Pro Kit 2	WMicS1 Pro TX x2	WMicS1 Pro RX x1

Note: Packing lists of all models also include the instruction manual(with warranty).

Optional Items (Sold Separately)

Wireless Handheld Microphone
Transmitter WH-M1

 


Plug-On XLR Transmitter
TX3-XLR



Power Supply

There are two modes of power supply

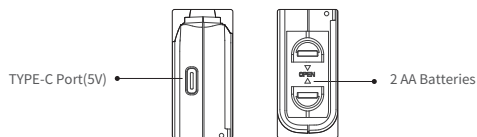

Operation Instruction

Transmitter Setting

Power/Mute Button

Power ON/OFF: Long press this button for 2 seconds to power on/off.

Mute Mode: Short press this button to turn on/off mute mode.



Language Setting: After the first power-on, the language selection is displayed, English/Chinese, press +/- to select, and then press the Menu (≡) button to confirm and exit.

Note: After selecting the language, if you need to switch the language, you can reset it and select again. Long press the + and - buttons at same time, this operation will reset the device.

Select English language, the operation is following:



Menu Button: Group/Channel/Power settings: long press the menu button to enter the setting interface. Then short press the menu button to switch the next setting.



Note: When the group, channel and power are successfully set, short press the menu button won't change, please long press to enter the setting interface again.

 
Group Setting: Select the GR (the letters under the GR blinking), press +/- button to select the A/B group, after selecting, short press the menu button to exit and switch to the next setting.



Channel Setting: Select the CH (the number under CH blinking) press the +/- button to set the channel from 01 to 48, then press the menu button to exit and switch to the next setting.



RF Power Setting: Select the Signal (the letter under Signal blinking), press +/- to switch H (high) and L (low), then short press the menu button to exit.



Note: When the group, channel and power are successfully set, short press the menu button and there is figure blinking, please long press to enter the setting interface again.

Display Brightness Setting: short press +/- button until OLED Light is displayed. Then, long press the menu button until the figure under OLED Light is blinking, and then short press +/- button to choose brightness from 1 to 8 levels.



 
Firmware Version: short press +/- button until Version is displayed, and this is the version of firmware.



Backlighting Time: Short press +/- button until Screen Dormancy is displayed. Then, long press the menu button until the figures under th Screen Dormancy is blinking. Short press the +/- button to choose backlighting time: ON means with backlighting on, OFF means backlighting off, 10S/30S/60S means delay 10S/30S/60S.




Reset: short press the + and - button at same time for 3 seconds, then Reset... is displayed which means the device is in the progress of reset. After reset, the device back to language selection page and short press +/- button to select, then press MENU button to return to the main interface.



Receiver Setting

Power/Return Button

 Power ON/OFF: Long press this button for 2 seconds to power on/off. Short press this button to back to main page.



Language Setting: After the first power-on, the language selection is displayed, English/Chinese, press +/- to select, and then press the Menu button to confirm and exit.

Note: After selecting the language, if you need to switch the language, you can reset it and select again. Long press the + and - buttons at same time, this operation will reset the device.

Select English language, the operation is following:



Menu Button: Group/Channel/Volume settings: long press the menu button to enter the setting interface. Then short press the menu button to switch the next setting.

Note: When the group, channel and power are successfully set, short press the menu button and there is figure blinking, please long press to enter the setting interface again.

Group A/B Settings: Long press menu button, GRA displayed, it is settings of group A.



When setting the Group B Settings: first short press the menu button to return main page and short press +/- button until the GRB displayed, then long press menu button to enter the settings of group B.



Note: Please set the receiver and transmitter to the same channel during usage, thus achieving recording and real-time monitoring.

Group A/B ON/OFF: Select the GRA/GRB (the letters under the GRA/B blinking), press +/- button to select the ON/OFF, after selecting, short press the menu button to exit and switch to the next setting.



Channel Setting: Select the CH (the number under CH blinking) press the +/- button to set the channel from 01 to 48, then press the menu button to exit and switch to the next setting.



Volume Setting: Select the VOL (the number under VOL blinking) press the +/- button to set the channel from 00 to 15, then press the menu button to exit and switch to the next setting.



Mono/Stereo Output Selection: short press +/- button until Output Mode is displayed. Then, long press the menu button until the Mono/Stereo under Output Mode Light is blinking, and then short press +/- button to switch Mono and Stereo.



Display Brightness Setting: short press +/- button until OLED Light is displayed. Then, long press the menu button until the figure under OLED Light is blinking, and then short press +/- button to choose brightness from 1 to 8 levels.



Firmware Version: short press +/- button until Version is displayed, and this is the version of firmware.



 
Backlighting Time: Short press +/- button until Screen Dormancy is displayed. Then, long press the menu button until the figures under the Screen Dormancy is blinking. Short press the +/- button to choose backlighting time: ON means with backlighting on, OFF means backlighting off, 10S/30S/60S means delay 10S/30S/60S.



Reset: short press the + and - button at same time for 3 seconds, then Reset... is displayed which means the device is in the progress of reset. After reset, the device back to language selection page and short press +/- button to select, then press MENU button to return to the main interface.




Transmitter Port




MIC: to connect with lavalier microphone.

 Receiver Port



OUTPUT: to connect with external audio signal output.
PHONES: to connect with earphone cable.

 Operation

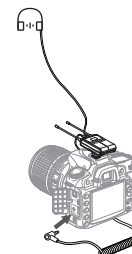

Transmitter

- ① Insert the omnidirectional lavalier microphone into the transmitter's MIC port.
- ② Turn on the transmitter to set the relevant parameters.
- ③ Clip the transmitter onto the belt or put it into your pocket.

Receiver

- ① Connect the 1/4" cold shoe onto the receiver, and install them on the camera or shooting equipment.
- ② Insert one end of the 3.5mm cable into the receiver's OUTPUT port and the other end into camera's MIC port.
- ③ Turn on the receiver to set relevant parameters.

Note: Please set the group and channels of transmitter and receiver to the same when setting parameters. When a receiver is connecting to two transmitters, A transmitter must be set and used in A group while B transmitter must be set and used in B group.

Technical Data

Name	Body-pack Transmitter TX1	Portable Receiver RX1
Model	WMicS1 Pro TX	WMicS1 Pro RX
Channel Group	A/B	A/B
Selectable Channel	96(Group A: 48; Group B: 48)	96(Group A: 48; Group B: 48)
RF Frequency Range	514MHz - 596MHz	514MHz - 596MHz
Oscillator Type	Crystal Controlled PLL Synthesizer	Crystal Controlled PLL Synthesizer
Audio Frequency Range	50Hz-20KHz	50Hz-20KHz
Sound Delay	12ms	12ms
Antenna (Fold 90°, rotate 360 °)	1/4λ	1/4λ
Audio Input Port	3.5mm Port	3.5mm Port
Power Supply	USB Type-C	5V \pm 0.2A
	Battery	Two AA batteries
Working Temperature Range	0°C-50°C	0°C-50°C
Signal Noise Ratio	\approx 70dB	\approx 70dB
Receive Sensitivity	\	-47dBV
Distortion	\	Below 0.5%
Material	Metal	Metal
Size	63*21*198 mm	63*24*198 mm
Net Weight	212 g	226 g

Declaration of Conformity:

GODOX Photo Equipment Co.,Ltd. hereby declares that the This equipment are in compliance with the essential requirements and other relevant provisions of EU Directive 2014/53/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link:http://www.godox.com/DOC/Godox_WMicS1Pro_DOC.pdf

Troubleshooting

- Unable to receive audio signal. Make sure batteries are installed correctly and Power Switch is turned on. Check if the transmitter and the receiver are set to the same channel, if the microphone or earphone is well connected, or if the devices are set to the correct mode.
- Check if the transmitter is set to silent mode or not.
- Signal disturbance or shooting interference. Change a different channel of the transmitter and receiver.
- Operating audio distance limited or signal missing. Check if batteries are exhausted. If so, replace them.

Maintenance

Avoid sudden drops. The device may fail to work after strong shocks, impacts, or excess stress.

Keep dry. The product isn't water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.

Avoid sudden temperature changes. Condensation happens if sudden temperature changes such as the circumstance when taking the transmitter and receiver out of a building with higher temperature to outside in winter. Please put the transmitter and receiver in a handbag or plastic bag beforehand.

Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.

This product, except consumables e.g. lapel microphone, is supported with a one-year warranty.

Unauthorized service will void the warranty.

If the product had failures or was wetted, do not use it until it is repaired by professionals.

Changes made to the specifications or designs may not be reflected in this manual.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement.

产品保修

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配合销售商填写并妥善保管,谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注:此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算,购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

要保修服务,您可直接与产品销售商或授权服务机构联系,也可拨打神牛产品售后服务电话,与我们联系,由我们的服务人员为您安排服务。申请保修时,您应提供有效的保修卡作为保修凭证,方可获得保修。如您不能提供有效的保修卡,则在我们可确认产品或部件属于保修范围的情况下,也可以为您提供保修,但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况,本文件项下的保证和服务将不适用 ① 产品或部件超过相应保修期; ② 错误或不适当使用、维护或保管导致的故障或损坏,如:不当搬运;非按产品合理预期用途使用;不当插拔外接设备;跌落或外力挤压;接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境; ③ 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④ 产品或部件原有识别信息被修改变更或删除; ⑤ 无有效保修卡; ⑥ 使用非合法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦ 因不可抗力或意外事件造成的故障或损坏; ⑧ 其他非因产品本身质量问题导致的故障或损坏。遇上述情况,您应向相关责任方寻求解决。神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的,不是保修范围内的故障。产品使用过程中正常的脱色,磨损和消耗,不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选项名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线,同步线等带电性能的部件	12	客户送修
其他	如电池盒、防风棉、防风毛罩、锁紧装置、手提绳、扎带、魔术贴、领夹、便携袋、包装等	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. **The product or accessory has expired its warranty period;** ②. **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③. **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④. **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤. **No valid warranty card;** ⑥. **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦. **Breakage or damage caused by force majeure or accident;** ⑧. **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information:**

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Product Main Body	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Charger, Power Cable, Sync Cable, Electrical Parts etc.	12	Customer sends the product to designated site
Other Items	Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062