 


LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

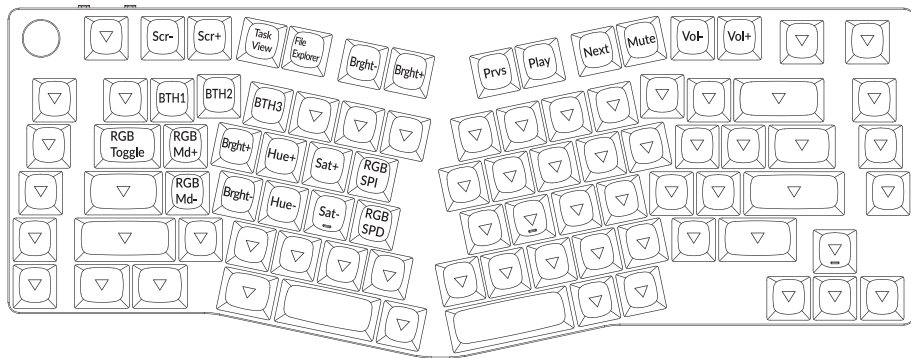

KEY DESCRIPTION

Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGBMd-	RGB Mode Previous
Scr+	Screen Brightness Increase	Hue+	Hue Increase
Bright-	Backlight Decrease	Hue-	Hue Decrease
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase
Prvs	Previous	RGB SPD	RGB Speed Decrease
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key
Next	Next	MO(2)	Layer 2 will be activated when holding this key
Mute	Mute	MO(3)	Layer 3 will be activated when holding this key
Vol-	Volume Decrease	MO(4)	Layer 4 will be activated when holding this key
Vol+	Volume Increase	BTH1	Bluetooth Host 1
RGB Toggle	Turn Backlight on/off	BTH2	Bluetooth Host 2
RGBMd+	RGB Mode Next	BTH3	Bluetooth Host 3

LED STATUS OVERVIEW

LED Location	Function	Status
Battery indicator	Charging	Low battery - Blinking Red Charging - Static Red Fully charged - Static Green
Bluetooth indicator	Bluetooth	Pairing - Slow Blinking Paired - Light Off Switching - Fast Blinking

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Charging Indicator: When battery is below 15%, a red battery blinking indicator will be triggered. A red light will stay on while charging; Fully charged in around 3 hours, a green battery indicator will appear.

*The Keychron keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The Keychron K15 Pro can be charged in Bluetooth/OFF/Cable mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

BLUETOOTH / WIRED MODE (MODE TOGGLE SWITCH)

WIRED MODE

1. Switch the toggle switch to the Cable option (it only works when a USB cable is plugged in).
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

BLUETOOTH MODE

1. Switch the toggle switch to the Bluetooth option.
2. Backlighting will be turned on.
3. Hold "fn+1" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device "Keychron K15 Pro" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination "fn" + "1" / "fn" + "2" / "fn" + "3".

**The Bluetooth indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination "fn" + "1" / "fn" + "2" / "fn" + "3" to switch to other device.

RECONNECT:

1. Switch the keyboard to the Bluetooth option to activate the keyboard.
 2. The Bluetooth indicator flashes for 4 seconds and automatically pairs with the last paired device.
 3. If the Bluetooth indicator is off, press any button to enter the connection again.
- * The keyboard must have been paired with the device to perform this function.

TURN OFF THE KEYBOARD

Switch the keyboard to the OFF option.

BACKLIGHT SETTING

- Short press key combination “fn” + “tab” to turn the backlight on/off.
- Short press key combination “fn” + “Q” / “fn” + “A” to switch between different types of lighting effects.

OS TOGGLE SWITCH

1 – MAC/iOS

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

2 – WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

**When using the Windows/Android mode,   keys are used for “Windows” and “Alt” functions.*

3 – INPUT METHOD SWITCH

For iOS:

Input method switch: Ctrl + Space

Caps Lock: Caps (Enable General>Keyboards>Hardware Keyboard>Caps Lock Language Switch)

For Android:

Input method switch: Shift + Space

NOTE: Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My keyboard isn't working.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.

Then restart your device.

For the keyboard:

Turn the keyboard off and back on. Then reconnect it to your device.

Bluetooth connection is interrupted even within 10 meters.

 
Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(5°F) or above 50°C(131°F) to preserve the lifespan of the keyboard.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.



K15 Pro 蓝牙机械键盘

旋钮版本

内容清单

Keychron K15 Pro 蓝牙机械键盘 x 1

USB线 x 1

拔键器 x 1

赠送键帽套装 x 1

 
说明书 x 1

快速上手指南 x 1

快速上手指南


如果你是Windows用户，请在包装盒里找到如下的键帽，用拔键器拔下键盘上的对应键帽并且更换。

Mac / Windows

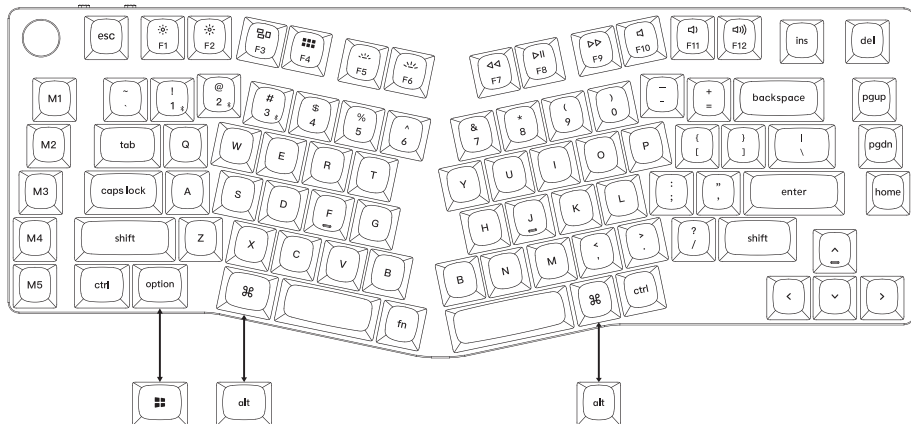

1 系统切换

 
请确保键盘左上角的系统拨片切换到对应系统，如果没有选择正确，部分功能将无法使用。




2 连接蓝牙




 
把开关拨到蓝牙模式



 长按fn+1四秒使键盘进入配对模式，
键盘的配对名为: Keychron K15 Pro。

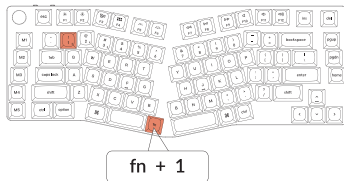

3 连接有线

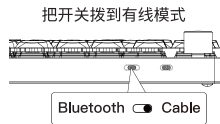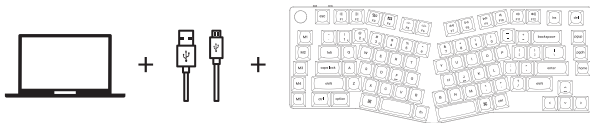  

4 关于VIA映射软件

可以访问 usevia.app 使用在线VIA软件，
VIA是可以映射按键的软件。
如果VIA软件不能识别你的键盘，
请联系我们以获得技术支持。



* 在线VIA只能在最新版本的Chrome, Edge和Opera浏览器中运行。

 
 
* VIA仅在键盘通过线连接到计算机时有效。

5 关于键盘键层说明

键盘有四层按键设置。
层0和层1是用于Mac系统。
层2和层3是用于Windows系统。


如果您的系统拨片切换到Mac档位，
层0将被激活。

如果您的系统拨片切换到Windows，
那么层2将被激活。
如果您在Windows系统模式下使用，
请对层2进行更改，而不是层0。
否则无法进行按键映射操作。




6 更改键盘背光模式以及快速关闭/开启键盘背光

 组合fn+Q键，更改键盘背光模式。

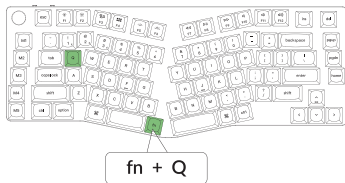


组合fn+tab键，可快速关闭/开启键盘背光。

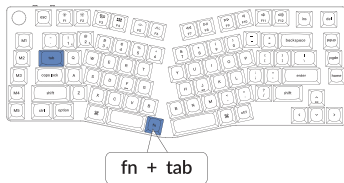 


7 调整键盘背光亮度

 组合fn+W键,提高键盘背光亮度。

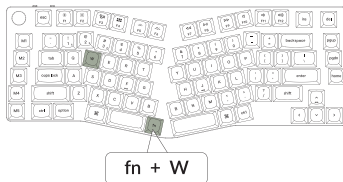


组合fn+S键,减少键盘背光亮度。

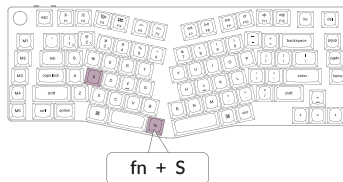 


8 调整背光速度

 组合fn+T键,增加光效速度。

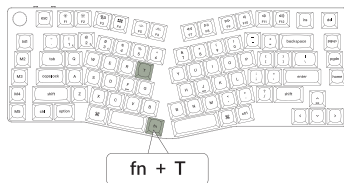

组合fn+G键,降低光效速度。

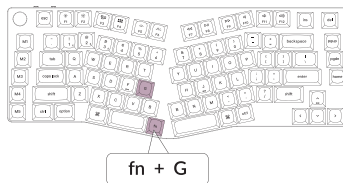 


9 键盘组装教程

如果您没有安装过类似产品的经验，我们建议您观看我们网站上的键盘组装教程视频，然后再开始进行键盘组装。



 10 恢复出厂模式

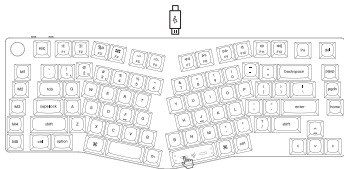

如果键盘出现了故障，不知道怎么办？

1. 将数据线插入键盘，并将键盘拨动到Cable模式。
2. 依照顺序长按fn+J+Z (等待四秒)；
3. 从我们的网站为您的键盘下载正确的固件和QMK工具箱；
4. 将键盘拨动到OFF模式，拔掉空格键键帽，然后找到位于PCB上面的复位按钮；
5. 首先长按住复位键，然后将键盘拨动到Cable模式。放开这个复位键，此时键盘会进入DFU模式；
6. 然后您可以使用QMK工具箱进行刷新固件的操作；
7. 再次将键盘恢复出厂设置长按fn+J+Z (等待四秒)。

* 步骤指南可以在我们的网站上找到。