




USER MANUAL

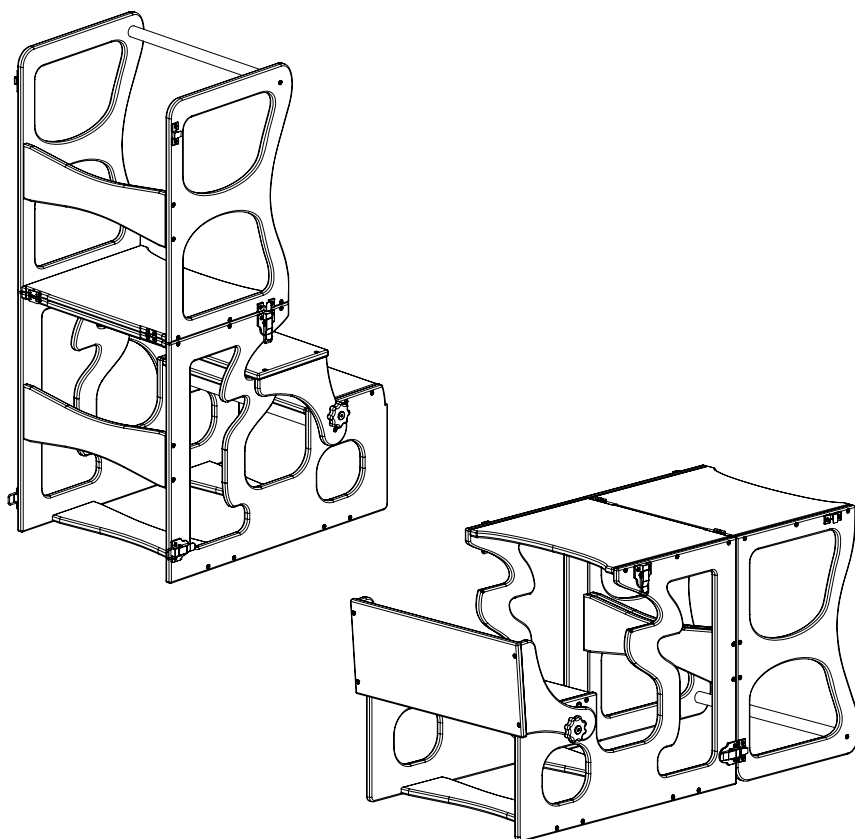

Chair with a back, simple shapes cutouts

SCOPE OF APPLICATION

This multifunctional furniture piece is thoughtfully designed to support a child's development by promoting independence, creativity, and active learning. Crafted with Montessori principles in mind, it functions both as a learning tower and a table with a chair, offering flexibility for various daily routines and activities.

Recommended age: For children from 8 months to 6 years old.

Maximum Load Capacity: 60 kg / 132 lbs.

TERMS OF USE

- Only for indoor use.
- Tighten the bolts every 2 months.
- Before assembly, check the completeness of the set and notify the manufacturer of any missing parts at the specified email address.
- For optimal safety and stability, this chair must be used on a level, flat, clean floor. Avoid placing it on uneven surfaces to prevent tipping or instability.
- The product has no expiration term but change the product or the details of the product immediately if any damage occur.
- To be used under the direct supervision of an adult only.
- 2 years warranty.







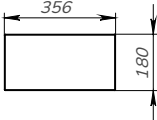
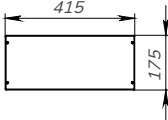
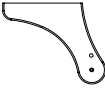
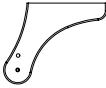
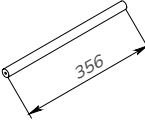
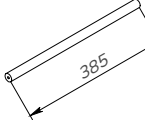

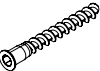


Note: Warranty does not apply if the product is being damaged due to the weather conditions, as it is for indoor use only.


SAFETY MEASURES

- The product must be assembled by an adult. Do not try to assemble the product without following the manufacturer's instructions. Improperly installed chair can be unstable and unsafe.
- In disassembled state the product contains small parts constituting a choking hazard for the kid. After the assembly, ensure all screws and fastenings are securely tightened.
- To be used under the direct supervision of an adult only. Do not leave the kid alone with the product.
- Do not exceed the maximum weight limit.
- Do not use at uneven and hard floor.
- Do not use the product if it has any visible damage or positioned abnormally.
- Do not use the product on the wet or contaminated floor.
- Do not place near hazards: ensure the chair is located at least 2m away from windows, sharp corners, hard furniture or any other hazards. The area around the product should be clear and safe.
- Do not place the product close to the sources of radiant heat or under the direct sun rays.
- Responsibility for any damage incurred by children during play on the furniture rests with the supervising adults. If a child is injured while playing with the product, please treat the wound and consult a doctor.

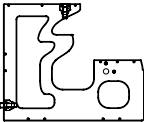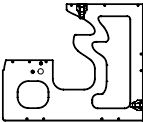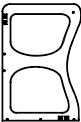- Avoid modifying the chair adding homemade extensions unless you are sure they are safe and compatible. Modifications can affect the stability and safety of a product.
- In case of any inappropriate use or failure to comply with the instructions, the Manufacturer and Seller shall bear no responsibility and the warranty will not apply.
- To prevent overcrowding and ensure stability, limit the number of children using the climber at one time based on the size and design of the climber.
- Proper Footwear: Ensure that children wear appropriate footwear to prevent slips and falls. Shoes should have a good grip and be suitable for physical activity.
- Do not let the children climb onto the upper rail of the product. It is meant for holding, not for climbing.


ASSEMBLY INSTRUCTIONS

<p>1 - Lower left sidewall</p>  <p>1 pc.</p>	<p>2 - Lower right sidewall</p>  <p>1 pc.</p>	<p>3 - Upper left sidewall</p>  <p>1 pc.</p>	<p>4 - Upper right sidewall</p>  <p>1 pc.</p>
<p>5 - Tabletop</p>  <p>1 pc.</p>	<p>6 - Lintel</p>  <p>4 pcs.</p>	<p>7 - Seat</p>  <p>1 pc.</p>	<p>8 - Backrest</p>  <p>1 pc.</p>
<p>9 - Left bracket</p>  <p>1 pc.</p>	<p>10 - Right bracket</p>  <p>1 pc.</p>	<p>11 - Upper rod</p>  <p>1 pc.</p>	<p>12 - Lower rod</p>  <p>1 pc.</p>
<p>13 - Fixator</p>  <p>2 pcs.</p>	<p>a - Conformat screw 5x40</p>  <p>40 pcs.</p>	<p>b - Shim M22</p>  <p>3 pcs.</p>	<p>b - 3 mm hex key</p>  <p>1 pc.</p>

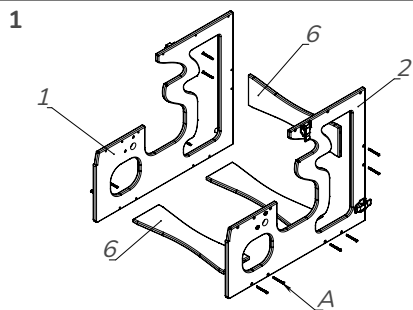


Take the lower sidewalls (1, 2), locks face outwards, and lintels. Join them using confirmat screws (a) and hex key (c). See Pic. 1.

Take the tabletop (5) and a seat (7). Attach them to the lower sidewalls (1, 2) using confirmat screws (a) and hex key (c). See Pic. 2.

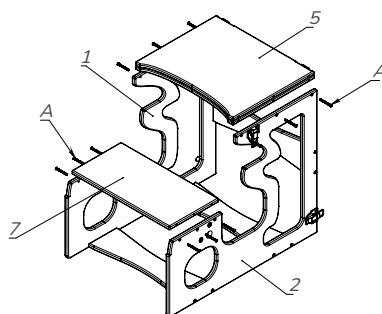


3

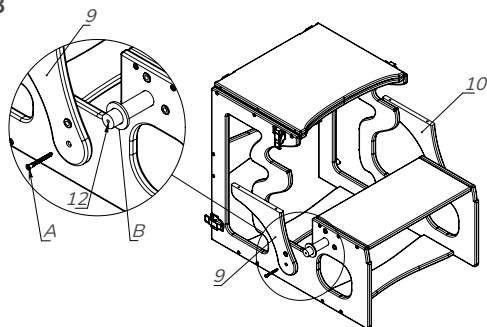


Take the lower rod (12) and insert it into the holes in the lower sidewalls (1, 2). Put shims (b) on the protruding edges of the rod from both sides. Attach the brackets (9, 10) to the rod (12) using confirmat screws (a) and hex key (c). See Pic. 3.

4

Take the backrest (8) and attach it to the brackets (9, 10) with confirmat screws (a) and hex key (c). Screw the fixators (13) into the lower sidewalls (1, 2) through brackets (9, 10). See Pic. 4.

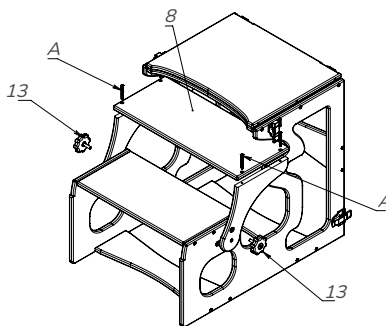


5

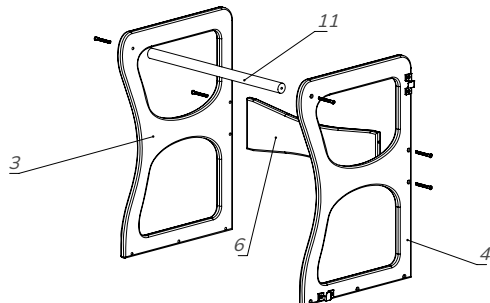


Take a lintel (6) and upper rod (11) and attach them to the upper sidewalls (3, 4) with confirmat screws (a) and hex key (c). See Pic. 5.

Joint the assembled constructions as shown in the Pic. 6. Use confirmat screws (a) and hex key (c).

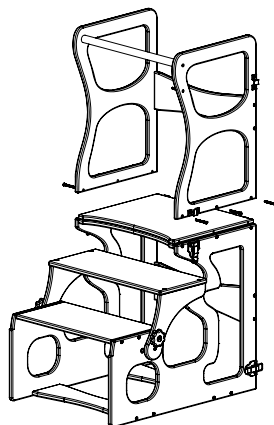


Position of a tower

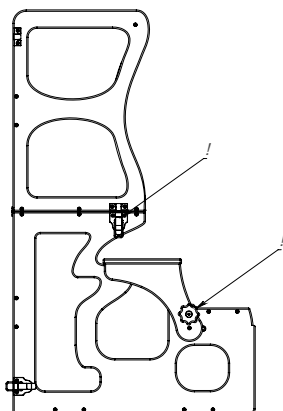

Fix the upper lock and change the position of a backrest to "step".

Position of a table

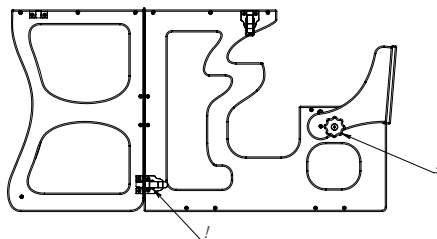

Fix the lower lock and change the position of a backrest.

DISPOSAL AND ENVIRONMENTAL INFORMATION

Dispose of the product in accordance with local waste regulations. Components can be recycled where applicable.

CONTACT INFORMATION

☎ +38 050 067 71 15

✉ support.official@woodandhearts.com

🌐 woodandhearts.com