

WIRELESS SMOKE DETECTOR



INSTRUCTIONS

Please read this instruction manual carefully before installation to use and maintain the product properly

INDEX

- . Box Contains
- 2. Product Overview
- Applicable Places
- 4. Product Featrues
- 5. Technical Specifications
- 6. Pre-Installation
- 7. App Setup and Configuration
- 8. Installation Position
- 9. Installation of Device
- 10. Delete Device from APP
- 11. Edit Device
- 12. Delete Device
- 13. Smoke Alarm Limitation
- 14. FAQ
- 15. Warranty

INSTALLATION AND MAINTENANCE INSTRUCTIONS

BOX CONTAINS

1.	Wireless Smoke Detector	1 No.
2.	Mounting Screws	2 Nos.
3.	Screw Plugs	2 Nos.
4.	User Manual	1 No.
5.	Template for Screw Mounting	1 No.

This battery-operated smoke detector is a smart plug-and-

PRODUCT OVERVIEW/DESCRIPTION

play product with photoelectric sensing technology, that detects smoke at an early stage. If the smoke concentration level reaches the alarm threshold in the detector smoke chamber, it sets-off an alarm by flashing the LED. The inbuilt buzzer gets activated, providing an audio and visual indication to all the occupants. The detector raises a local alarm and it quickly uses the unified IMPACT Honeywell mobile app to send you incoming call alerts on your mobile in case of smoke, wherever you are. Now, keep your premises safe from fire hazards with real time proactive alerts from the wireless smoke detector

APPLICABLE PLACES

Suitable for residential areas, shopping malls, warehouses restaurants, parking lots, libraries, schools and hospitals.

PRODUCT FEATURES

00110171011		TEST	DUTTON DDTOO	252.52	005511150		APP	FEA		
CONDITION	CONDITION	PROCEDURE- If applicable	BUTTON PRESS	RED LED	GREEN LED	BUZZER	NOTIFICATION		Size	
		Press the test					0		Weigh	
Test Alarm-Self Test	button once and wait for 3 seconds	1 press	ON	OFF	ON	Get a TESTED Notification	Temp			
_									Humi	
Wi-Fi - Provisioning	Press the test button 3 times to activate the WiFi hotspot of the device	3 press	RED LED blinks every 3 seconds	OFF	Beep for 1 sec on successful configuration	Device name & location is updated	W	Worki		
								Batte		
	Smoke Detection / Fire	-	-	Blink every 1 second	OFF	ON till smoke is present in the device	Notification of alert (app notification and direct call on mobile)		Batte	
Ī		Every 20 mins to							- Au	Audio
Heartbeat indication	check the device -	-	OFF	Blink once every 20 minutes	OFF	No app notification		Netw		
		status							Indica	
	Battery Low	In case of low	_	Blink every 15	OFF	OFF	LOW BATTERY		Max.	
,	battery	sec	seconds					Max.		
	Device Offline						Device Offline		Certif	
(Device is not connected to		-		-	-	-	alert on APP			

- 1. To get a notification on both mobile and the device, you must have an active internet connection along with an active subscription.
- 2. Do not use an open flame to test the alarm. You could damage the alarm or ignite combustible materials and start a fire.

TECHNICAL/ ELECTRICAL SPECIFICATION

ATURE	SPECIFICATION			
е	102mm×44mm			
ight	96g			
mperature Range	0°C to 49°C			
midity Range	5% to 85% relative humidity (RH), non-condensing			
orking Voltage	3.0 VDC			
ttery	4 x AA batteries Recommended Brands: Energizer, Duracell, Panasonic, BP			
ttery Service Life	1 year under normal operating conditions (The life may reduce depending on the operating condition)			
dio Alarm	≥75dB(A) at 3mtr			
twork Function	2.4GHz Single Band Wi-Fi			
lication Type	LED (Red & Green) and Buzzer			
x. Standby Current	12µA			
x. Alarm Current	150mA			
rtification	WPC, CE			

PRE-INSTALLATION

1. Insert four AA batteries into the battery compartment, - The battery polarity needs to be installed correctly

- Do not use rechargeable batteries

- 2. You will see a RED LED blinking 5 times on the device
- Make sure all the four batteries are new. Do not mix a combination of old and new batteries

APP SETUP AND CONFIGURATION 40 % 425 4 295 8

IMPACT

Login

Create Account

III O (

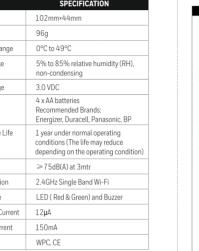


Image 1



Image 2

Download the

IMPACT by Honeywell

store or the app store. 2. Open the app and tap

app from the Play

on Create Account

details, tick mark the

checkbox of agree to

on Create Account, as

T&C and Legal. Tap

shown below in

image-2 below.

Customer Sign Up


B. Fill the required

4. After tapping on Create Account, you will receive an email confirmation from Honeywell on the email address you entered while creating the account. Check your inbox, open the email and click on confirm link. If you have not received the email in 2 minutes, tap on the link of Resend Confirmation e-mail, as shown in image-3 below)



Image 3



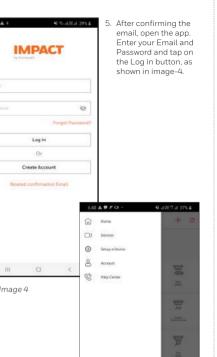

Make sure to complete the installation process within 4 minutes of time.

III O

Press the Test button or

Detector 3 times to set-

up configuration mode.

Smoke Detector will start

blinking every 3 seconds

in configuration mode.

Note: The device will

enable the configuration

mode for 4 min at max.

the Wireless Smoke

The RED LED on the

Image 6

Setup a Device

10/21 4 # 4 4 % 4/36 4/ 29% # Tap on the Wireless

121 A # 1 41 % a(20.4) 295.

Setup Device

Wireless smoke detector is battery operated

Check # battery is inserted in "Wi FI Smoke

 
Please use impact App only on one mobile phone

I'm ready

Please follow the below steps:

Setup a Device

Smoke Detector, as shown in image-6.



- shown in the image-8 below.
- 11.Tap on the Connect button to continue the setup, as shown in image-8.



- Image 7
- 8. Once you tap on the Wireless Smoke Detector, it will display an instruction popup, please read the instruction and tap on the I'm ready button, as shown in image-7 above.

device name will automatically appear if the device is in active configuration mode, as shown in the image-8 below. In case WSD Honeywell does not appear on the screen, on the refresh button, or try switching off the device and switching it on again. Follow the same process with your mobile Wi-Fi as well. 10. The available Wi-Fi network name will be shown in the

9. You will be redirected to Setup a Device screen. The

- Choose Wi-Fi selection area. Select the desired network to connect the device to the internet. In case available Wi-Fi network doesn't show-up, tap on the refresh icon. Enter the Wi-Fi password in the Wi-Fi Password section Select location from the drop down menu (1st time users need to click on Add Location to add a location name Lobby, Reception, etc). Enter the device name, as
- Setup a Device



Image 8

 On tapping the Connect button, it will start the device. configuration process, as shown in image-9 below. 13. Once the device configuration process is completed

1:38 4 5 0 4 8 4 1% 4/15/4 51% 4

Device doesn't have active subscription

Buy New Subscription

111 (2)

Image 11

16. Tap on the newly

as shown in

image 12.

added device and

further tap on Buy

New Subscription

The red dot shows

offline Wait for up

to 3 minutes to get

the device online

When the device

comes online, the

red dot will turn

green, as shown in

lmage-11.

1:18 4 9 0 0 4 4 1 7 4 35 4 51 %

Device doesn't have active subscription


Buy New Subscription

III (7) (

Image 12

that the device is

successfully, it will display a screen, as shown in image-10 below. You will also hear a beep sound from the device. (sometimes it redirects to the WiFi setting if the WiFi does not detect it. Tap on the Setting button to continue)

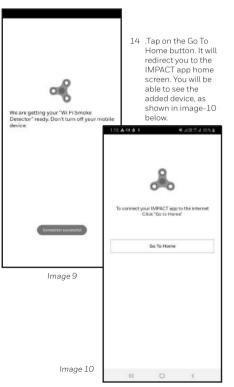

17. You will be redirected to the subscription page. Select the subscription as per your requirement from the available options and click on the purchase button, as shown in image-13 below.

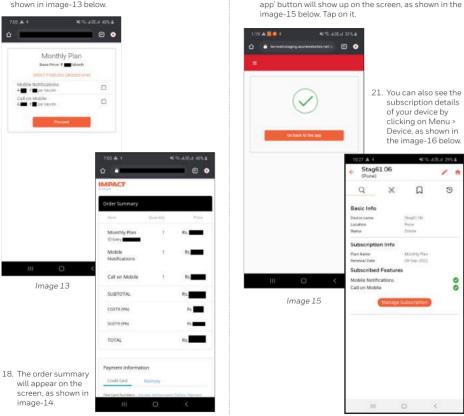


Image 14

INSTALLATION POSITION

1. For indoor use only

19. Fill in the payment details, check on the terms and

20. Once the purchase is complete, the 'Go back to the

condition checkbox and tap the Purchase button.

21 You can also see the

of your device by

Strap51-06

Online

Monthly Plan

09-Sep-2021.

III D (

Image 16

Stag61 06

Basic Info

levice name

Plan Name

Receival Date

Image 15

Subscription Info

Subscribed Features

clicking on Menu >

Device, as shown in

the image-16 below.

41 % 425 4 293 1

subscription details

- 2. The device should be kept at a horizontal distance of at least 0.5 meters away from lighting equipment
- 3. The device should be kept at a horizontal distance of at least 0.5 meters away from the wall and the edge of a
- 4. The device should be kept at a horizontal distance of at least 1.5 meters away from the ventilation fan, air conditioner, or vent
- 5. Do not install it in the bathroom, or a place where it gets water splashed on it or water droplets that fall on it easily
- 6. Do not install it in the kitchen or a place where it is prone to produce ponfire smoke or steam

INSTALLATION OF DEVICE

- . Test the device before installing it. To test the device. please press the test button once. Wait for 3 seconds to confirm that the red LED Flashes quickly and the buzzer sounds. It should generate an alert on your mobile if the device is online.
- Make two holes with help of the template received with
- Install the expansion plugs into the holes on the ceiling. 4. Insert the screw in the ceiling by leaving a gap of 3mm
- and mount the device on it. Rotate clockwise for mounting and anti-clockwise for removing the device as shown in Fig-1.

 


Fig-1 Where to install the smoke detector

MAINTENANCE

When the battery is low, it should be replaced as follows:

41 S. 470 A 500 B

Add Manua

Add Manu

Edit Device

hoose Device

NSS Planswedt 1

Choose WiFi

Wifi Password

NeoTest123

Cancel Update

2 3 4 5 6 7 8 9

wertyulo

asd fahik

III O

to factory default.

z x c v b n m 🖾

Image 19

our device is been updated, please hang on

and wait while we take you back to the home

page

Image 20

DELETE DEVICE FUNCTION

In case you want to delete any device, you need to delete it

times and wait till you hear the beep sound 3 times. The

beep sound (3 times) indicates that the device is reset

Setting> Tap on delete device. It will appear below the

a. To Factory Reset the device, press the test button 5

b To delete from APP Go to Menu > Device > Device

screen, Click on YES to delete the device

from the APP and Factory Reset the device

- 1. Turn the device anti-clockwise to remove it from the base
- Remove the used batteries.
- Install the new batteries properly according to the installation instructions

- 1. After the replacement of new batteries, it will take 5 minutes to reset - to recover to a normal state. After the recovery, there should be no low-battery alarm or indication
- The end-life product or scrapped parts and replaced. parts from the product should be disposed by following the national or local disposal method for waste electronic products. Please do not discard.

You can view/update account related info from Menu > Account, as shown in the image-18 below.



EDIT DEVICE

To update / change the Wi-Fi setting of the device: a. Press the test button 3 time to enable the configurations mode of the device.

- b. In the APP, go to device > Edit Device and select the device which you want to edit, Select the Wi-Fi (SSID), Add Wi-Fi password and click on update, as shown in image-19 below
- c. Please wait till you receive the confirmation, as shown in Image-20



SMOKE ALARM LIMITATIONS

Image 21

- This manual describes the method of use and technica parameters of the products as detailed as possible. The company reserves the right for amendment of the manual
- 2. If the smoke concentration does not reach the threshold, the smoke alarm will not detect the fire. In order for the alarm to sense the smoke, install the device according to the instructions. If the smoke comes from the chimney walls, corners of the roof, other rooms or other floors, the smoke alarm will not reach the alarm concentration quick enough to sound an alarm. It is recommended that the alarm be installed in each room.
- fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas. improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. 4. Like all electronic devices, smoke alarms have limitations

In general, smoke alarms may not always warn you about

- One type of smoke alarm cannot sense every kind of fire. 5. This smoke alarm is designed as a power Consuming
- product and it cannot work without batteries. This alarm is also subject to detection limitation and has a limited service life.



How many smoke alarms should I have?

The number of smoke alarms you need, depends on the architecture and size of your premises.

Where should they be installed?

Smoke alarms should be installed in every bedroom, outside every sleeping area, and on every level on the home (including the basement and attic). To reduce the risk of nuisance alarms, place smoke alarms at least 20 feet away from combustion appliances like

furnaces and stove-tops, and at least 10 feet away from humidity-prone areas like bathrooms and laundry rooms. Remember most deaths due to fire at home occur when inhabitants are asleep. Working smoke alarms are crucial in and around sleeping areas.

When should I test my smoke detectors?

Test your smoke alarms at least once every 2 to 3 months by pressing the test button. Please refer to the user manual for specific instructions.

How do I test my smoke alarm?

Usually, you can test your smoke alarm by pressing the test button once. Allow several seconds to pass. You should hear a loud piercing sound and get a notification on your mobile if the device is online. If the sound is weak or muted. try changing the batteries. Replace the unit if that does not

When should I replace the batteries?

On receipt of a low battery notification on the device or APP (please refer to the manual for the same). If the device is not responding, (try by performing the test method, refer to the user manual for the same).

Why is my smoke alarm beeping even if there is no fire or smoke, and how to stop it?

- 1. In case of recent smoke which is still trapped inside the
- In case of dust particles or fiber accumulated in the chamber
- 3. If the smoke chamber is removed or loose
- smoke chamber.

No, this is the standalone smoke detector and it works

WARRANTY

product to be free from manufacturing defects for a period of 12 (twelve) months from the date of purchase by the customer. This non transferrable warranty is only for the first owners on the purchase made from Honeywell's authorized dealers and channel partners. Honeywell will repair or replace this product as per the terms and conditions stated below

Can I interconnect my smoke detector?

.. Warranty will be valid only against a valid purchase invoice and valid product serial/ID number. Honeywell reserves the right to decline warranty service if the above documents are not presente or if the information contained is incomplete or found tampered

Honeywell International India Pvt Ltd (Honeywell) warranties this

- improper installation or tampering by customer or using it with wrong batteries, etc.
 - Warranty does not apply to damages caused to the product by accident lightening ingress of water fire or Acts of God voltage fluctuations, excessive physical shock/impact/drop or any external cause beyond normal operations.

. Warranty does not cover damage caused to the product due to

- 4 In no event will Honeywell be liable for any incidental. consequential, special, punitive, statutory or indirect damages including without limitation, loss of profits, revenues or use, or loss or corruption of data resulting from use of this product. Honeywell's aggregate liability shall be limited to purchase price of the product to the extent permitted by applicable law
- 5. Warranty is not valid outside of India.

For more information.

www.honevwellbuildings.in Call : 1800-103-4761 Email: hbt.mms@honevwell.com

Honeywell HBT India Buildings

Unitech Trade Center, 5th Floor, Sector-43, Block C. Sushant Lok, Phase - I, Gurgaon - 122 002.

> Wireless Smoke Detector Installation And Maintenance Instructions

To stop alerts in case of point 1 and 2, please clean the

©2021 Honeywell International Inc.

| 01 | 08/21

