

WEEBILL 3S Camera Compatibility List (Camera Control)



Update on May 22, 2025 (Firmware version V1.75)

V2.70

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α1	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.31	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected.
Sony α9 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V2.00	4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α9	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Multi USB LN-UCUS-A03	V6.00	1. Please select "PC Remote" for your camera's "USB Connection". 2. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. 3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review. 4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".
Sony α7R5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Multi USB LN-UCUS-A03	V1.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected.
Sony α7R5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7R4	√	√	√	√	-	√	√	√	√	√	√	-	-	-	-	√	Type-C to Multi USB LN-UCUS-A03	V1.20	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7R4	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.20	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony α7M4	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V3.00	1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". 3. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7M4	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony α7R3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V3.01	1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". 3. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7R3	-	-	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.01	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony α7M3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V3.10	1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". 3. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7M3	-	-	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.10	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony α7S3	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Multi USB LN-UCUS-A03	V1.01	1. Please select "PC Remote" for your camera's "USB Connection". (To open a7s3 PC remote control, go to "Menu" and do the following selection : "Network" - "Transfer / Remote" - "PC remote control" - "Open") 2. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. 3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review. 4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7S3	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.01	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony α7R2	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V4.01	1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG".
Sony α7M2	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V4.01	3. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.
Sony α7S2	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V3.01	

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α7C	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected.
Sony α7C R	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony α7C II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	



WEEBILL 3S Camera Compatibility List (Camera Control)

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α6700	√	√	√	√	-	√	√	√	√	√	-	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Sony α6600	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V1.10	1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". 3. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α6500	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V1.06	1. Please select "PC Remote" for your camera's "USB Connection". 2. If using electronic focusing, set the "zoom setting" into "on: Digital zoom" in the menu and set the photo format into "JPEG". 3. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review.
Sony α6400	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V2.00	
Sony α6300	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V2.01	
Sony α6100	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03	V1.00	
Sony ZV-1	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Multi USB LN-UCUS-A03	V1.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony ZV-E10	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Sony ZV-E10 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Sony ZV-E1	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony ZV-1 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.
Sony FX30	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Sony FX30	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	-	Type-C to Multi USB LN-UCUS-A03	V1.00	



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony ILME-FX3	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Multi USB LN-UCUS-A03	V3.00	1. Please select "PC Remote" for your camera's "USB Connection". 2. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. 3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review. 4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".
Sony ILME-FX3	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony α9 III	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	-	Type-C to Multi USB LN-UCUS-A03 (optional)	V3.00	1. Please select "PC Remote" for your camera's "USB Connection". 2. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. 3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review. 4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".
Sony α9 III	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.00	1. Please enable the "PC Remote" function of the camera first. The specific settings are as follows: Network->Transfer/Remote->PC Remote Function->On; or Network->PC Remote Function->On. 2. When using the electronic focusing function, please set the lens to AF (auto-focusing) mode and the camera body to MF (manual focusing) mode, otherwise the electronic focusing function cannot be used. 3. In video mode, the camera body's 5-axis anti-shake function will be automatically turned off. To turn it back on, go to Menu->Image Stabilization->SteadyShot->Enhanced/Standard. When used with a lens that has anti-shake function, the lens anti-shake function is not affected. 4. To use the camera playback function normally, please set the destination for saving static images in the PC remote function to "Computer+Shooting device" or "Only Shooting device". 5. When using the photo function, to avoid discrepancies in the number of photos taken, please set it as follows: Network->Transfer/Remote->PC Remote Function->Static Image Save Destination->Only Shooting Device. 6. When using HDMI (such as connecting to a monitor), the camera screen display settings are as follows: Go to the camera settings menu->External Output->HDMI Info Display->Off.



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Sony Rx100 VI	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Multi USB LN-UCUS-A03	V1.0.0	1. Please select "PC Remote" for your camera's "USB Connection". 2. For Sony cameras, after connecting stabilizer and camera with control cable, power on the stabilizer and then the camera. Make sure the camera is fully charged. 3. When shooting Panorama or Timelapse, it is recommended to turn off the Sony camera's auto review. 4. To trigger electronic focus, please set "Manual Focus (MF)" under "focus mode".

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Panasonic G9	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V2.1	1. Please select "PC (Tether)" for your camera's "USB Connection". 2. When using electronic focusing, the camera lens should be in "MF" mode. 3. Before connecting with a control cable, please first turn off the USB Power Supply in camera settings. 4. When shooting Panorama or Timelapse, it is recommended to turn off auto review and duration time(photo) in the Panasonic camera.
Panasonic GH5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V2.6	
Panasonic GH5S	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.3	
Panasonic GH6	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V2.6	
Panasonic S5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0	
Panasonic S5 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0	
Panasonic S9	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0	
Panasonic DC-BGH1	-	-	√	√	-	-	√	-	-	-	√	-	-	-	-	√	Type-C to Type-C USB LN-UCUC-A02	V1.0	1. In the camera IN/OUT setting, please choose PC (Tether) for the USB mode.
Panasonic GH4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		V2.60	

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Canon 5D Mark III	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Mini USB LN-NBUC-A01	V1.3.5	1. Please apply electronic follow focus function in AF mode of the lens and live view mode of the camera. 2. If using electronic focusing when recording a video, please "Disable" the " Movie Servo AF ". 3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off. 4. When shooting Panorama or Timelapse, it is recommended to turn off image confirmation in the Canon camera.
Canon 5D Mark IV	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.0.4	
Canon 5DS	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.1.1	
Canon 5DS R	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.1.2R	
Canon 6D Mark II	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Mini USB LN-NBUC-A01	V1.0.4	
Canon 80D	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Mini USB LN-NBUC-A01	V1.0.2	
Canon 90D	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.1.1	
Canon EOS 800D	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Mini USB LN-NBUC-A01	V1.0.1	
Canon EOS 850D	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.0.1	
Canon EOS 200D II	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.0.0	
Canon M50	√	√	√	√	-	√	√	√	√	√	√	-	-	-	-	-	Type-C to Micro USB LN-MBUC-A02	V1.0.3	1. Please apply electronic follow focus function in AF mode. 2. If using electronic focusing when recording a video, please "Disable" the " Movie Servo AF ". 3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.
Canon EOS M6 Mark II	√	√	√	√	√	√	√	√	√	√	√	-	-	-	-	√	Type-C to Type-C USB LN-UCUC-A02	V1.1.1	
Canon EOS R50	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0.0	
Canon EOS R5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.10	
Canon EOS R5 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0.0	
Canon EOS R6	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.1.1	

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Canon EOS R6 Mark II	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0.0	1. Please apply electronic follow focus function in AF mode. 2. If using electronic focusing when recording a video, please "Disable" the " Movie Servo AF ". 3. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.
Canon EOS R7	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.1.1	
Canon EOS R8	√	√	√	√	√	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.0.0	
Canon EOS R10	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.1.1	
Canon EOS R	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.3.0	
Canon EOS RP	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.3.0	
Canon PowerShot G7 X Mark III	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.3.0	
Canon EOS M50	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.0.3	
Canon EOS M50 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.0.0	
Nikon D850	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.11	1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode. 2. Nikon cameras don't support electronic focusing when recording. 3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency.
Nikon D780	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.01	
Nikon Z5	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode. 2. Nikon cameras don't support electronic focusing when recording. 3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency. 4. USB Connection Method: Setup Menu-USB-MTP-PTP.
Nikon Z6	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.00	
Nikon Z6 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.50	
Nikon Z7	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V2.01	

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/ Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Nikon Z7 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.50	1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode. 2. Nikon cameras don't support electronic focusing when recording. 3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency. 4. USB Connection Method: Setup Menu-USB-MTP-PTP.
Nikon Z30	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Nikon Z50	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Micro USB LN-MBUC-A02	V1.00	
Nikon Z fc	√	√	√	√	-	-	-	√	√	-	-	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Nikon Z8	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	1. When using electronic focusing, the camera lens should be in A(AF) mode and select AF-S or AF-C in focusing mode. 2. Nikon cameras don't support electronic focusing when recording. 3. When shooting Panorama or Timelapse, it is recommended to turn off image review in the Nikon camera to reduce system latency. 4. USB Connection Method: Setup Menu-USB-MTP-PTP.
Nikon Zf	√	√	√	√	-	-	-	√	√	-	-	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Nikon Z6 III	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√ (Photo mode only)	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Nikon Z50 II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√ (Photo mode only)	√	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Olympus OM-D E-M1 Mark II	√	√	√	√	-	√	√	√	√	√	√	-	-	-	√	√	Type-C to Type-C USB LN-UCUC-A02	V3.1	1. After connecting cameras to the stabilizer, there will be a prompt on camera screen for you to choose USB mode. Please choose [] (PC control) and turn camera mode dial to P, A, S, or M mode.
Fujifilm X-T3	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V3.10	1. Please set the "connection mode" into "USB TETHER shooting auto" for camera connection settings. 2. In Photo mode of Fujifilm, when the camera is connected to the gimbal, the camera parameter control from camera is disabled and you can only adjust camera parameters via gimbal. Restart the camera to resume parameter control from camera. Plug in and out the camera control cable to return to gimbal control; Fujifilm doesn't support saving photos in RAW format.
Fujifilm X-T4	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.01	
Fujifilm X-T5	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.01	
Fujifilm X-S20	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.10	
Fujifilm X-S10	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A07	V1.01	
Fujifilm X-100 VI	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A02	V1.01	

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Control Cable Type	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode						
Fujifilm X-H2	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.01	1. Camera Connection Setting: Network/USB Setting Menus-SELECT CONNECTION SETTING-USB TETHER SHOOTING AUTO 2. In Photo mode of Fujifilm, when the camera is connected to the gimbal, the camera parameter control from camera is disabled and you can only adjust camera parameters via gimbal. Restart the camera to resume parameter control from camera. Plug in and out the camera control cable to return to gimbal control; Fujifilm doesn't support saving photos in RAW format.
Fujifilm X-H2s	√	√	√	√	-	√	-	-	-	√	√	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V1.01	
Fujifilm X-100 V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A02	V3.0.0	
Fujifilm X-T30 II	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A02	V2.04	
Fujifilm X-E3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A02	V1.00	
Fujifilm X-T50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A02	V1.02	
ZCAM E2	-	-	√	√	-	-	-	-	-	√	√	-	-	-	-	-	Type-C to Type-C USB LN-UCUC-A02	V0.93	1.Set the camera's "USB Connect" into "serial".
SIGMA fp	√	-	√	-	-	-	-	-	-	-	-	-	-	-	√	-	Type-C to Type-C USB LN-UCUC-A02	V2.00	

Notes:

1. This table will be updated in line with firmware update and is subject to change without prior notice;
2. For Sony cameras, after connecting stabilizer and camera with control cable, Please first power on the stabilizer and then the camera. Make sure the camera has sufficient power to operate. Optical zoom control is available on the stabilizer when used with motorized lens. Digital zoom control is available on the stabilizer when used with non-motorized lens. Please select zoom option in your camera's settings; Sony A7R3 needs to have the auto power-off start time set to 30 minutes.
3. When shooting Panorama or Timelapse, it is recommended to turn off the camera's auto review (Sony), image confirmation (Canon), auto review (Panasonic), image review (Nikon) to reduce system latency.
4. The Canon DSLR cannot realize the halfway press shutter button to autofocus in Live Preview. If the feature is used, the camera Live Preview mode should be turned off.
5. Before connecting Panasonic G9 with a control cable, please first turn off the USB Power Supply in camera settings.
6. When connecting an Olympus camera to the stabilizer, USB Mode will automatically pops up on the camera. Please select [] (PC (Tether)) and dial the mode to P, A, S, or M mode.
7. "√" means the camera can realize the function after connecting to the stabilizer; "×" means the camera currently cannot realize the function after connecting to the stabilizer, but there're possibilities that the function may open by a firmware update or other ways. "-" means the uncontrollable functions after connecting to the stabilizer is because the camera control protocol is not opened.

WEEBILL 3S Bluetooth Shutter Control Compatibility List



V1.70

Update on May 22, 2025 (Firmware version V1.75)

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode					
Sony α1	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.31	1. Bluetooth shutter control and pairing methods: ①Turn on the camera's Bluetooth: go to the camera settings menu, select Network → Bluetooth Settings → Bluetooth Function → On; ②Bluetooth pairing/connection: Network → Bluetooth Settings → Pairing; ③Click the menu button, Bluetooth Shutter → Select the corresponding camera Bluetooth name and click Connect; ④Turn on Bluetooth remote control: Network → Bluetooth Remote Control → On. 2. Due to the limitation of the camera system, the camera control is not available if the Bluetooth is only connected but not for remote control. Therefore the remote control should also be enabled. 3. When the camera and WEEBILL 3S are both in Bluetooth shutter and wired control mode at the same time, wired control takes priority and there is no need to actively disconnect Bluetooth.
Sony α9 II	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V2.00	
Sony α9	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V6.00	
Sony α7R5	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	
Sony α7R4	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.20	
Sony α7R3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V3.10	
Sony α7M4	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.00	
Sony α7M3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V4.01	
Sony α7S3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.01	
Sony α7C	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V2.00	
Sony α7C R	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.00	
Sony α7C II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.00	
Sony FX3	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V3.00	
Sony FX30	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.31	
Sony α6700	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.00	
Sony α6600	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.10	
Sony α6400	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V2.00	
Sony α6100	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	
Sony ZV-1	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.00	
Sony ZV-1 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	
Sony ZV-E 10	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	
Sony ZV-E10 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	
Sony ZV-E1	√	√	√	√	-	-	-	-	-	-	-	-	-	√	√	√	V1.00	
Sony Rx100 VII	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode					
Sony α9 III	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.00	1. Bluetooth shutter control and pairing methods: ① Turn on the camera's Bluetooth: go to the camera settings menu, select Network → Bluetooth Settings → Bluetooth Function → On; ② Bluetooth pairing/connection: Network → Bluetooth Settings → Pairing; ③ In the gimbal settings, select Bluetooth shutter, choose the corresponding camera Bluetooth name, and connect. ④ Turn on Bluetooth remote control: Network → Bluetooth Remote Control → On. 2. Due to the limitation of the camera system, the camera control is not available if Bluetooth is only connected but not for remote control. Therefore the remote control should also be enabled. 3. When the camera and the gimbal are both in Bluetooth shutter and wired control mode at the same time, wired control takes priority and there is no need to actively disconnect Bluetooth. 4. Bluetooth Shutter Control for Focus and Zoom via Gimbal Rear Wheel (1) Camera Settings: a. Electronic Focus Setting: MF b. Electronic Zoom Setting: Electronic Zoom - Select "Variable" for the remote zoom speed type (If not set, the zoom speed will be fixed) (2) Gimbal Settings: a. Electronic Focus: Settings - Control Wheel - EFocus b. Electronic Zoom: Settings - Control Wheel - EZOOM (3) Sensitivity Settings for Focus and Zoom: Settings - Wheel Set - wheel sensi

Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode					
Canon EOS R5	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.5.0	1. Bluetooth shutter setting and pairing method ①Wireless function → Bluetooth settings → Bluetooth → Enable ②Wireless function → Wi-Fi/Bluetooth connection → Connect to wireless remote control (If the camera prompts that the device is not found during the first-time connection, perform pairing again to complete Bluetooth pairing) ③Photo shooting setting: Drive mode → Self-timer: Remote control (10s, 2s are both acceptable, but it must be remote control) ④Power off setting: Settings → Power saving → Auto power off → Off ⑤Video recording setting: Switch the camera to video recording mode → Shooting and recording → Remote control → Enable 2. When the camera and WEEBILL 3S are both in Bluetooth shutter and wired control mode at the same time, wired control takes priority and there is no need to actively disconnect Bluetooth.
Canon EOS R5 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.0	
Canon EOS R6	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.5.0	
Canon EOS R6 Mark II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon EOS R7	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.7	
Canon EOS R8	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.0	
Canon EOS R10	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon EOS R	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.0	
Canon EOS RP	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.0	
Canon EOS R50	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.0	
Canon EOS M50	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.2	
Canon EOS M50 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon EOS M6 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon EOS 90D	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.1.1	
Canon EOS 800D	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon EOS 850D	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon EOS 200D II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.0	
Canon EOS R6 Mark II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.0.1	
Canon PowerShot G7 X Mark III	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.3.0	



Camera Model	Photo		Video		Live Preview	Shutter Speed Adjustment		Aperture Adjustment		ISO Adjustment		EV Adjustment		Zoom (Digital/Optical)	Halfway Press Shutter Button to Autofocus	Electronic Follow Focus (Focus Wheel)	Camera Firmware Version	Note
	Save	Playback	Save	Playback		Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode	Photo Mode	Video Mode					
Nikon Z6 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.50	
Nikon Z7 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.50	
Nikon Z50	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.0	
Nikon Z30	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.0	
Nikon Z fc	√	√	√	√	-	-	-	-	-	-	-	-	-	-	√	-	V1.10	
Nikon Zf	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.00	
Nikon Z6 III	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.00	
Nikon Z50 II	√	√	√	√	-	-	-	-	-	-	-	-	-	-	-	-	V1.00	

1. Bluetooth shutter setting and pairing method:
① Enter the camera settings menu → Wireless remote control (ML-L7) option → Save wireless remote control
② Press the menu button on the stabilizer, select Bluetooth shutter → choose the corresponding camera Bluetooth name, and press to connect;
2. When the camera and WEEBILL-3S are both in Bluetooth shutter and wired control state at the same time, the wired control function takes priority, and there is no need to actively disconnect Bluetooth.;
3. Due to Bluetooth protocol issues, Bluetooth reconnection is currently not supported.