


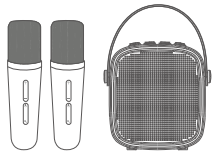

User Manual

Wireless karaoke microphone & speaker

MODEL D26-T




MANUAL

English.....	1-4
日本語.....	5-8
Deutsch.....	9-12
Français.....	13-16
Italiano.....	17-20
Español.....	21-24
Português.....	25-28
한국어.....	29-32
العربية.....	33-36

Packing List

Karaoke Machine.....	1PC
Manual Book.....	1PC
Charging Cord.....	2PCS
Microphone.....	2PCS

 Buttons and Functions




1. Short press to decrease the volume, and long press to switch to the previous song.
2. Long press to turn the device on/off, and short press to play/pause the music.
3. Short press to increase the volume, and short press to switch the next song.
4. Short press to switch modes, double-click it to change the lighting effect, and long press to turn the light on/off.

Power off: Please Long press to turn off the speaker when you are not using it to prevent low battery power loss. Low battery alert and automatic shutdown feature: When the battery level falls below 10%, the speaker will emit a warning sound, at which point you should charge the speaker promptly. If the battery level drops below 2%, the device will automatically power off.

-1-

 Back Jack Instruction



1. Headphone Jack: You can listen to music through headphones by plugging them into this button.
2. TF card interface: Once you insert the TF card, the speaker will automatically play music. It supports TF card playback, with a maximum support of 256GB (supports MP3, WAV music formats).
3. DC5V Type-C charging port

Microphone Operating Instruction

- Microphone volume +: By default, short press to increase the volume. When switching to reverb mode, pressing the plus button to increase the reverb.
- Microphone volume -: By default, short press to decrease the volume. When switching to reverb mode, pressing the minus button to decrease the reverb.

- Long press this button to control the power on and off, short press this button to switch between reverb or acoustic mode.
- Sound effect switching, acoustic noise cancellation on/off. Short press this button to switch sound modes with voice prompts: acoustic mode, magic mode, goddess mode, baby voice mode, KTV mode.

-2-

Instructions for use

Bluetooth mode

1. Bluetooth connection: The default setting is Bluetooth mode when the speaker is turned on. And you also can press "M" to switch to Bluetooth mode. Turn on your phone's Bluetooth and search for "D26-T" to pair. When Bluetooth pairing is successful, it will indicate "Bluetooth connected".
2. Play music: Turn on your phone or other devices, download and play your favorite songs downloaded on your phone or devices.
3. After connecting the machine to the phone once, Bluetooth has a memory function, which can be automatically or manually connected after turning on. If you need to disconnect, you can disconnect it through the Bluetooth device of the phone.

TF card mode

Insert the TF card port, and the machine will automatically perform a priority playback with a prompt sound. When TF card is inserted, you can switch other modes by briefly pressing the "MODE" button.

Indicator status

Charging indication: The charging indicator light is always on red when charging, and off when fully charged.

Microphone charging indication: The charging indicator light is always on red when charging, and off when fully charged.

Music Lamp Description

Our product has six kinds of music light modes, respectively, colorful circling light effects, gradient breathing effects (red, blue and green alternating gradient breathing), red breathing effects, blue breathing effects, green breathing effects, turn off the light effect: long press the "M" button to switch a light effect.

Wireless microphone

Turn on the speaker and microphone simultaneously, and the 2.4G wireless signal is automatically paired. At this time, you can start singing, and also adjust your preferred style according to your preferences.

-3-

Common Problems and Solutions

Fault	Solution
Cannot pairing	Turn off the speaker and restart it, or turn off the Bluetooth on the mobile phone, and then turn it on again.
Music is stuck when playing	Check if the connection distance is out of range, or if there is any obstacle between the speaker and the phone.
No sound come out	Check if the speaker volume is set to minimum.
Unable to turn on the machine	Check if the built-in battery of the speaker is charged.
The power light is not on	Check if the charging interface is properly plugged in.

Product specification

Bluetooth Speaker Product Specification	
Product name.....	D26-T
Bluetooth version.....	Bluetooth 5.3
Transmission distance.....	<10m
Output power.....	5W
Rated input.....	5V=0.5A
Signal-to-noise ratio.....	80db
Distortion rate.....	<1%
Frequency response.....	120Hz~18KHz
File format.....	support mp3, WAV music format
Headphone output.....	3.5mm headphone signal output
Microphone Product Specification	
Control protocol.....	2.4G private protocol
Transmission method.....	2.4G wireless connection
Microphone type.....	condenser microphone
Microphone Characteristic.....	Unidirectional
Charging voltage.....	5V=0.5A
Working Current.....	10mA
Frequency range.....	60Hz~20KHz
Bluetooth distance.....	<10 meters
Connecting body.....	speaker
Loudspeaker.....	Speaker Output

-4-