



KMC4 | *Media Center*

KMC4

Owner's Manual | English

Manual del Propietario | Español
KMC4 Receptor Multi-Media

Benutzerhandbuch | Deutsch
KMC4 Multi-Media-Receiver

Manuel d'utilisation | Française
KMC4 Multi-Media Receiver



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Notice - CAN ICES-3 (B) - This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Avis d'Industrie Canada - Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. mauvais fonctionnement de l'appareil.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. CAN NMB-3 (B)

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

 
Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

mounting hole cutout template:
3 inches, 76.2 mm

gabarit de montage trou découpé:
3 pouces, 76,2 mm

plantilla de recorte del agujero de montaje:
3 pulgadas, 76.2 mm

montageloch ausschnittschablone :
3 Zoll, 76,2 mm

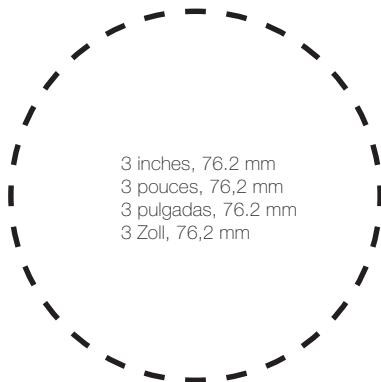


mounting hole cutout template:
3 inches, 76.2 mm

gabarit de montage trou découpé:
3 pouces, 76,2 mm

plantilla de recorte del agujero de montaje:
3 pulgadas, 76.2 mm

 montageloch ausschnittschablone :
3 Zoll, 76,2 mm

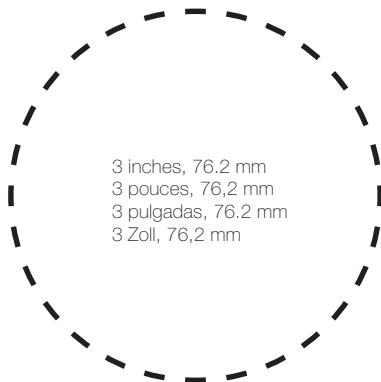

Contents

Specs	5
Overview	6
Installation	7
Operation	10
Troubleshooting	11
Warranty	33

Contentu

Spécifications	19
Généralités	20
Installation	21
Utilisation	24
Dépannage	25
Garantie	33

Contentido

Especificaciones	12
Descripción general	13
Instalación	14
Funcionamiento	17
Resolución de problemas	18
Garantía	33

Inhalt

Technische Daten	26
Übersicht	27
Installation	28
Betrieb	31
Fehlersuche	32
Garantie	33

SPECIFICATIONS

Model	KMC4
Power Output @ 14.4V, 2 Ω stereo, <10% THD+N	38W x 4
Power Output @ 14.4V, 4 Ω stereo, <10% THD+N	25W x 4
Frequency Response [Hz]	20 – 20k
Signal-to-Noise Ratio [dB]	100
Pre-Amp Outputs	Front, Rear, Sub, Zone2
Input Sensitivity	500mV
USB Playback	MP3/WMA/FLAC/AAC/WAV
USB Charging	DC 5V, 1A
USB Compatible File System	FAT32
IP Rating	IP66
Line-Out Level [V]	4
Outer Trim Dimensions[in, cm]	3.5 x 5.5, 8.89 x 13.97
Protrusion From Mounting Surface [in, cm]	1-1/8, 2.86
Total Mounting Depth [in, cm]	4-3/4, 12.07
Mounting Hole Diameter [in, cm]	3, 7.62

Authorized KICKER Dealer: _____

Purchase Date: _____

Serial Number: _____

Be careful not to drill into wiring or vehicle mechanisms. You are solely responsible for securely mounting the KMC4 Media Center. See page 2–3 for mounting hole cutout template.

Before installation, you may wish to plan your placement of the USB and Auxiliary inputs, and the optional KRC12 remote (sold separately), for both convenience and looks!

 
With a KICKER KXM amplifier, a pair of KICKER KM speakers, and a few KICKER cables, you're looking at a full system upgrade that will dominate! KICKER amplifiers and accessories make upgrading a snap. Ask your dealer about KICKER amplifiers and speaker upgrades to complete your system!

All specifications and performance figures are subject to change. Please visit **www.kicker.com** for the most current information.

WARNING: KICKER products are capable of producing sound levels that can permanently damage your hearing! Turning up a system to a level that has audible distortion is more damaging to your ears than listening to an undistorted system at the same volume level. The threshold of pain is always an indicator that the sound level is too loud and may permanently damage your hearing. Please use common sense when controlling volume.


OVERVIEW

*If the battery voltage is low (<+10.5V), an on-screen warning will appear.
Recharge battery and avoid becoming stuck or marooned.*

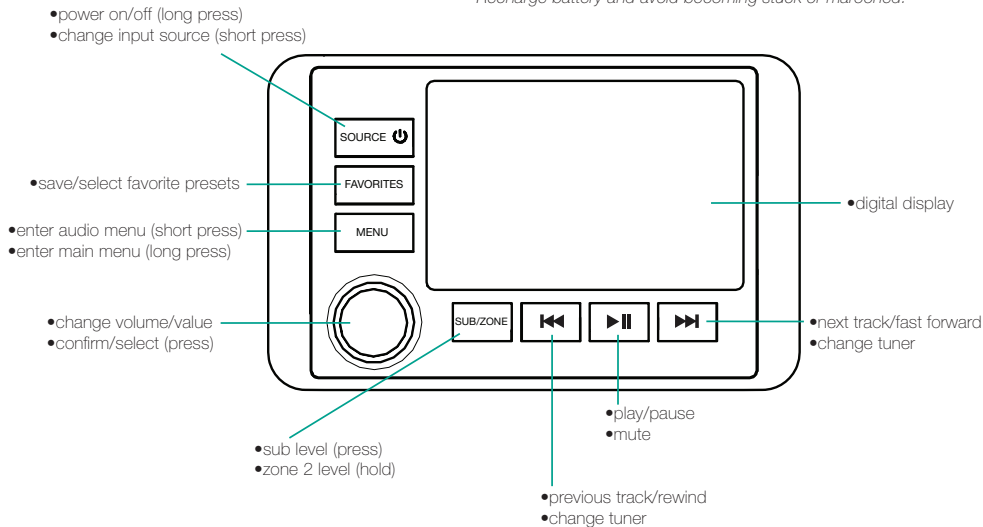

*NOTE: Use short and long presses to operate.
Some input sources do not support all functions.*

 
INSTALLATION

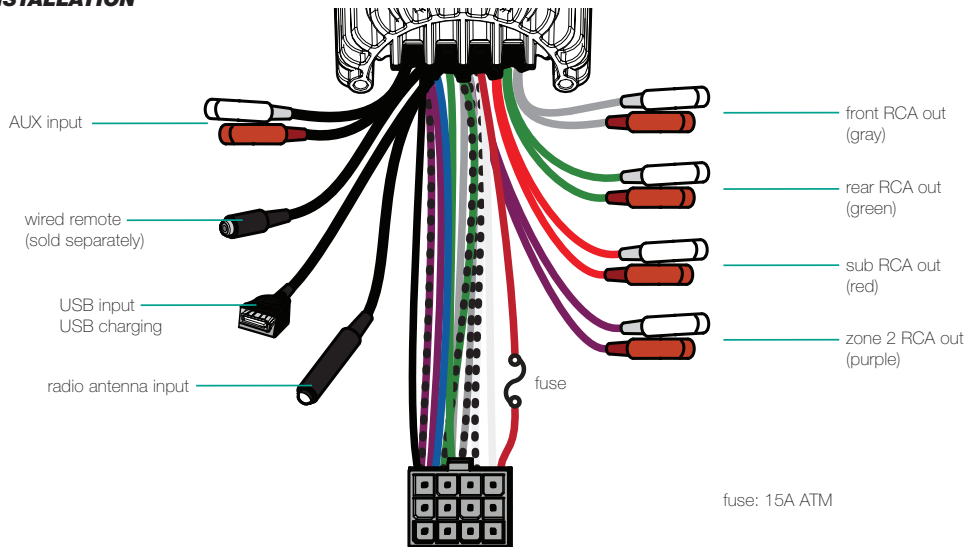




*Remember to cap unused wires
and avoid electrical shorts!*

 positive
negative

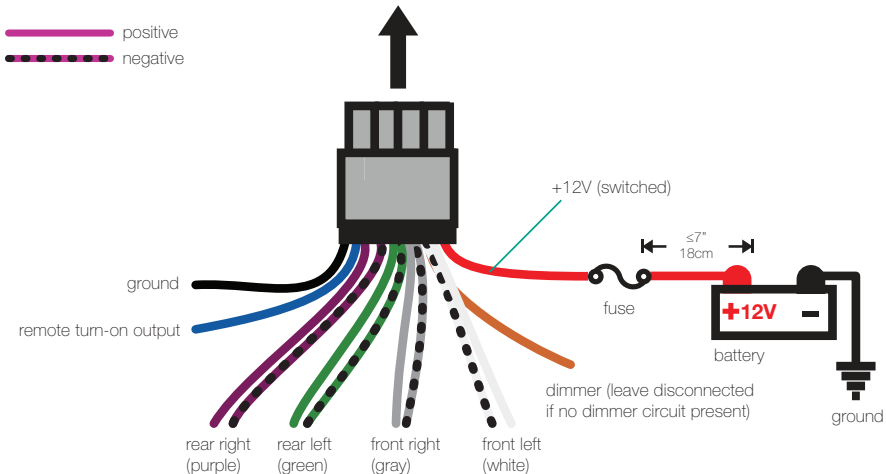

 1. Remove adhesive from rear gasket and apply to the back of the KMC4.
2. Securely fasten the KMC4 to the mounting surface using the including screws.
3. Attach the snap-on trim ring to the front of the KMC4.

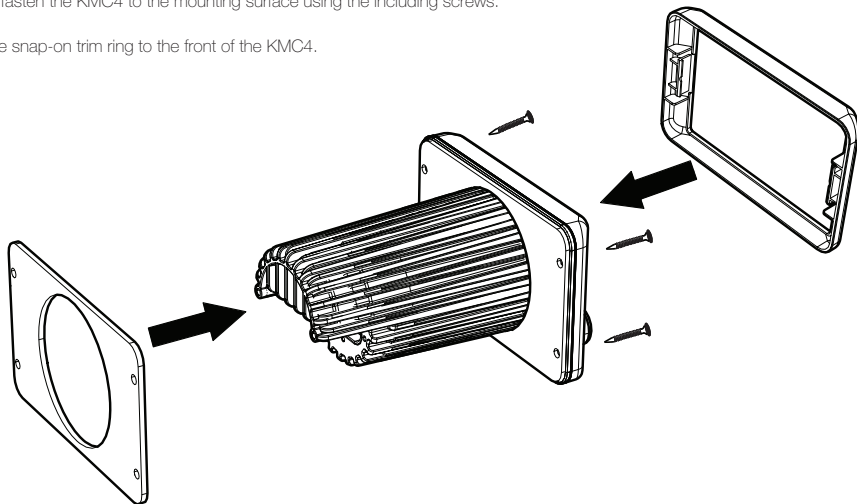

OPERATION

Playback

Use the **SOURCE** button to choose the input source for the KMC4: Bluetooth, USB, AUX, AM, FM, and WX. Press the **SUB/ZONE** button to change Subwoofer output volume; Hold the **SUB/ZONE** button to change the Zone2 output volume.

The KMC4 will automatically enter Bluetooth pairing mode when there is no Bluetooth connection, with the display message "In Pairing Mode". Hold the **FAVORITES** button to manually disconnect from a paired device and re-enter pairing mode. When you begin scanning for devices on your audio device, the KMC4 will identify as "Media Center".

Set favorite presets for your favorite AM, FM, and WX stations by selecting the station, pressing the **FAVORITES** button, selecting the favorite number (1–10) you wish to set, and pressing and holding the **VOLUME KNOB** for 2 seconds.

The USB input source is only available when there is a USB device connected. The KMC4 will automatically switch to USB input when a USB device is connected and detected. KICKER recommends SANDISK drives for the best performance. Drives must be formatted in FAT32 file system. USB hubs are not compatible. High-bit rate files (320kbps) may experience errors. In testing, the KMC4 has been shown to work with some HDD's and other file systems, however, this is *not supported by KICKER!*

Device Settings

Hold the **MENU** button to enter the device settings menu. Press the MENU button to enter the audio settings. The available settings are: Loud, Area, Beep, Zone2, Z2VOL, HPF, and Dimmer. Use the **VOLUME KNOB** to change the available values for each setting.

LOUD - select On or Off for a low frequency boost

AREA - select North America or Europe

BEEP - select whether the KMC4 responds with beeps

Zone 2 - toggles Zone 2 volume control on/off

*Z2VOL - change behavior of Zone 2 volume control:
Relative: Zone 2 volume is locked to main volume.*

Absolute: Zone 2 volume is adjusted independently of main volume

HPF - hi-pass crossover: OFF, 50Hz, 80Hz, 120Hz

Dimmer - adjusts screen and button brightness: 1–10

Audio Settings

Press the **MENU** button to begin cycling through the audio settings menu. Press the **MENU** button to enter the audio settings. The available audio settings are: Bass, Treble, Balance, Fader, and EQ. Use the **VOLUME KNOB** to change the available values for each setting.

EQ - select between EQ presets: Flat, Classical, Pop, Rock, Off, and Custom

When Custom EQ is selected, press the **MENU** button to enter custom frequency adjustments for 60Hz, 250Hz, 500Hz, 1kHz, 3kHz, and 8kHz.

TROUBLESHOOTING

If your KMC4 does not appear to be working, check the obvious things first such as blown fuses, poor or incorrect wiring connections etc. If you're using an amplifier, check for incorrect setting of crossover switches and gain controls etc.

No Power? ❶ Press the SOURCE/POWER button and make sure the KMC4 is turned on. ❷ Check the +12V power wire, ground wire, and fuse(s) for power and proper connection.

No or low output? ❶ Check the balance control on the KMC4. ❷ Check the speaker output connections. ❸ Power cycle the KMC4. ❹ Check the volume of the audio source.

Reduced volume? Reverse a speaker connection from positive to negative on the stereo channel(s); if the volume improves, the speaker was out of phase.

Buttons/Device Unresponsive? Perform Factory reset.

Factory reset: Reset the KMC4 to factory default settings by pressing and holding the **PLAY/PAUSE** button for ten seconds.

Radio stations not being received? ❶ Check volume of audio source. ❷ Check the antenna for proper connection and ensure the **AREA** setting in the menu is set to the correct region.

If you have more questions about the installation or operation of your new KICKER product, see the Authorized KICKER Dealer where you made your purchase. Please E-mail support@kicker.com or call Technical Services (405) 624-8583 for unanswered or specific questions.

KICKER® KMC4 MEDIA CENTER USER INFORMATION | INFORMACION DEL USUARIO INFORMATIONS DE L'UTILISATEUR | NUTZERINFORMATION



Selecting a Source & Pairing | Selección de una fuente y emparejamiento Sélection d'une source et appairage | Auswählen einer Quelle und eines Pairings

Use the SOURCE button to choose the input source for the KMC4: Bluetooth, USB, AUX, AM, FM, and WX. Press the SUB/ZONE button to change Subwoofer output volume; Hold the SUB/ZONE button to change the Zone2 output volume.

The KMC4 will automatically enter Bluetooth pairing mode when there is no Bluetooth connection, with the display message "In Pairing Mode". Hold the FAVORITES button to manually disconnect from a paired device and re-enter pairing mode. When you begin scanning for devices on your audio device, the KMC4 will identify as "Media Center".

Utilice el botón SOURCE (Fuente) para seleccionar la fuente de entrada para el KMC4: Bluetooth, USB, AUX, AM, FM y WX. Presione el botón SUB/ZONE (Subwoofer/Zone) para cambiar el volumen de salida del subwoofer; mantenga presionado el botón SUB/ZONE (Subwoofer/Zone) para cambiar el volumen de salida de la Zona 2.

El KMC4 pasará automáticamente a modo de sincronización de Bluetooth cuando no haya conexión de Bluetooth, con el mensaje en pantalla "En modo sincronización". Mantenga presionado el botón FAVORITES (Favoritos) para desconectar manualmente de un dispositivo sincronizado y volver al modo de sincronización. Cuando comience a buscar dispositivos en su dispositivo de audio, el KMC4 se identificará como "Centro multimedia". Para configurar sus estaciones de AM, FM y WX favoritas, seleccione la estación, presione el botón FAVORITES (Favoritos), seleccione el número favorito (1-10) que desea asignar y presione y mantenga presionada la perilla VOLUME (Volumen) durante dos segundos.

Utilisez la touche SOURCE pour choisir la source d'entrée pour le KMC4 : Bluetooth, USB, AUX, AM, FM et WX. Appuyez sur la touche SUB/ZONE pour modifier le volume de sortie du Subwoofer ; Maintenez enfoncée la touche SUB/ZONE pour modifier le volume de sortie de la Zone2.

Le KMC4 entre automatiquement en mode d'appariement Bluetooth lorsqu'il n'y a pas de connexion Bluetooth, et affiche le message « In Pairing Mode ». Maintenez enfoncée la touche FAVORITES pour déconnecter manuellement un dispositif relié et revenir en mode d'appariement. Lorsque vous commencez à scanner avec votre appareil audio pour trouver des périphériques, le KMC4 s'affiche sous la forme « Media Center ».

Nutzen Sie die Taste SOURCE, um die Eingangsquelle für den KMC4 zu wählen: Bluetooth, USB, AUX, AM, FM und WX. Drücken Sie die Taste SUB/ZONE, um die Lautstärke des Subwoofers zu ändern; halten Sie die Taste SUB/ZONE gedrückt, um die Lautstärke für Zone 2 zu ändern.

Sollte keine Bluetooth-Verbindung verfügbar sein, so schaltet der KMC4 automatisch in den Bluetooth-Pairing-Modus und das Display meldet „In Pairing Mode“. Halten Sie die Taste FAVORITES gedrückt, um die Verbindung zu einem gekoppelten Gerät zu unterbrechen und zum Pairing-Modus zurückzukehren. Sollten Sie auf Ihrem Audiogerät nach anderen Geräten suchen, so erscheint der KMC4 dort als „Media Center“.

Scan here for
owner's manual
Escanee aquí para
manual del Propietario



 
Scannen Sie hier nach
benutzerhandbuch
Scannez ici pour
manuel d'utilisation

IMPORTANT: KICKER recommends a professional installation performed by licensed providers. You are solely responsible for safely mounting and wiring your products.

IMPORTANT: KICKER recomienda que se realice una instalación profesional con proveedores con licencia. Usted es el único responsable por la instalación segura y el cableado de sus productos.

IMPORTANT: KICKER recommande une installation professionnelle effectuée par des fournisseurs agréés. Vous êtes l'unique responsable du montage et du câblage de vos produits en toute sécurité.

WICHTIG: KICKER empfiehlt eine professionelle Montage durch lizenzierte Anbieter. Sie haben die alleinige Verantwortung für die sichere Montage und Verkabelung Ihrer Geräte.

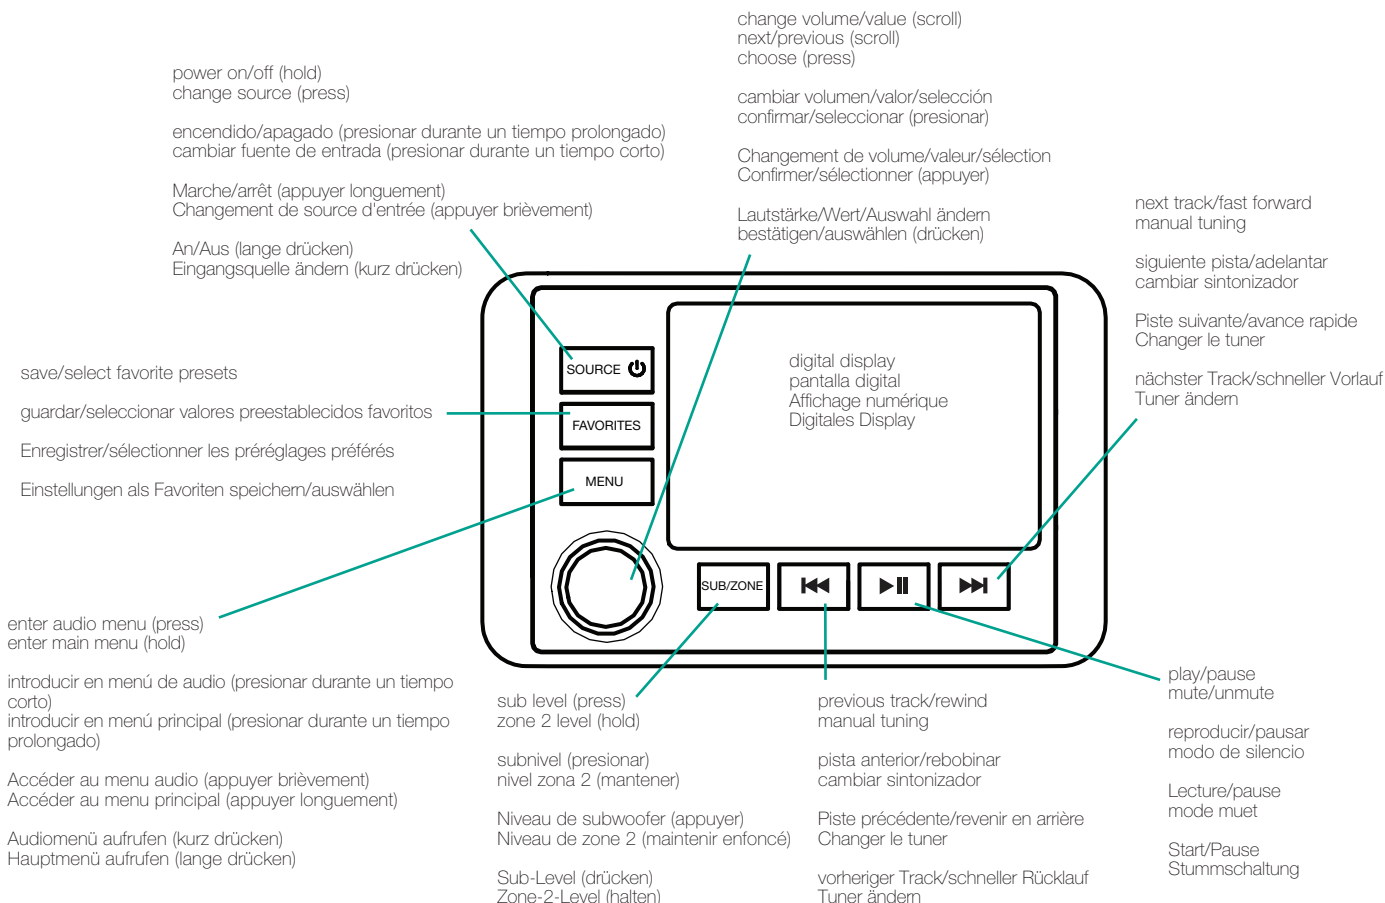

NOTE: Use short and long presses to operate. Some input sources do not support all functions.

NOTA: Para operar, presione durante tiempos cortos y prolongados. Algunas fuentes de entrada no admiten todas las funciones.

REMARQUE : appuyer de façon rapide ou prolongée pour utiliser. Certaines sources d'entrée ne prennent pas en charge toutes les fonctions.

HINWEIS: Betrieb mit kurzem und längerem Tastendruck. Bestimmte Eingangsquellen unterstützen nicht alle Funktionen.

AUX IN
entrada de AUX
Entrée AUX
AUX-Eingang

KRC12 wired remote (sold separately)
control remoto cableado KRC12 (se vende por separado)
Télécommande KRC12 (vendue séparément)
KRC12 Kabelfernbedienung (separat erhältlich)

USB input
USB charging

entrada USB
carga por USB

Entrée USB
Recharge via USB

USB-Eingang
USB-Ladekabel

radio antenna
antena de radio
Antenne radio
Radioantenne

fuse (15A ATM)
fusible (15 A ATM)
Sicherung (15 A ATM)

front RCA out (gray)
Salida de RCA frontal (gris)
Sortie RCA avant (gris)
Cinch-Ausgang vorne (grau)

rear RCA out (green)
Salida de RCA trasera (verde)
Sortie RCA arrière
Cinch-Ausgang hinten (grün)

sub RCA out (red)
Salida de RCA del subwoofer (rojo)
Sortie sub RCA (rouge)
Sub-RCA-Ausgang (rot)

zone 2 RCA out (purple)
Salida de RCA de Zona 2 (púrpura)
Sortie zone 2 RCA (violet)
RCA-Ausgang Zone 2 (violett)

mounting hole cutout template:
3 inches, 76.2 mm

gabarit de montage trou découpé:
3 pouces, 76,2 mm

plantilla de recorte del agujero de montaje:
3 pulgadas, 76.2 mm

montageloch ausschnittschablone :
3 Zoll, 76,2 mm

Remember to cap unused wires and avoid
electrical shorts!

¡Recuerde tapar los cables que no se
usen para evitar cortocircuitos eléctricos!

N'oubliez pas de protéger les fils inutilisés
et évitez les courts-circuits électriques !

Denken Sie daran, ungenutzte Kabel zu
verschließen und so Kurzschlüsse zu
verhindern!

ground
conexión a tierra
Masse
Erdung

remote auto-turn on output
encendido automático remoto en la salida
Sortie mise en marche à distance
Ausgang für ferngesteuerte automatische Inbetriebnahme

+12V (switched)
+12 V (interruptor)
+12 V (interrupteur)
+12 V (schalter)

positive
positivo
positif
plus

negative
negativo
négatif
minus

≤7"
18cm

fuse
fusible
Sicherung

illumination
iluminación
éclairage
Erleuchtung

ground
conexión a tierra
Masse
Erdung

rear right (purple)
posterior derecho (morado)
Arrière droit (violet)
hinten rechts (lila)

rear left (green)
posterior izquierdo (verde)
Arrière gauche (vert)
hinten links (grün)

front right (grey)
frontal derecho
Avant droit
vorn rechts

front left (white)
frontal izquierdo (blanco)
Avant gauche (blanc)
vorn links (weiß)

If you have a problem,

STOP

Please do not return
product to the store.

**KICKER Tech Support
can assist you.**

Call us at 800-256-KICK (5425),
or contact us at support@kicker.com
with any questions or problems.

Thank you for your
KICKER purchase!

U.S. Customers Only