


## SUPERFIRE PRO QUICKFIRE PRO





**REGISTER YOUR WARRANTY**  
rothenberger.com/gb-en/warranty

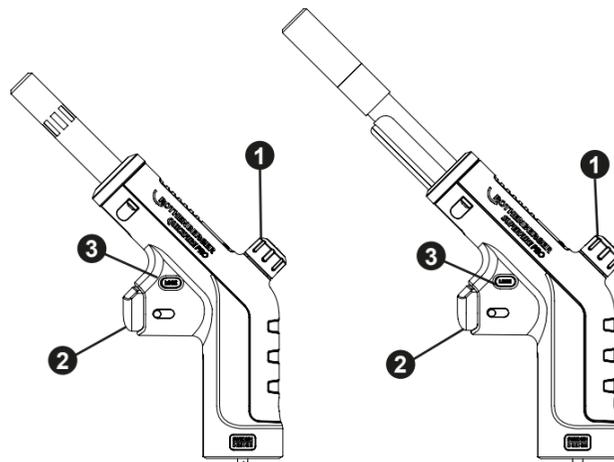

**QUICKFIRE PRO**  
Blow torch with a fixed cool tip burner.  
1500004975

**SUPERFIRE PRO**  
Blow torch with a interchangeable burner tips.  
1500004973 - Torch + Standard Cyclone & Cool Tip Burners  
1500004974 - Bare Torch (no Burners)

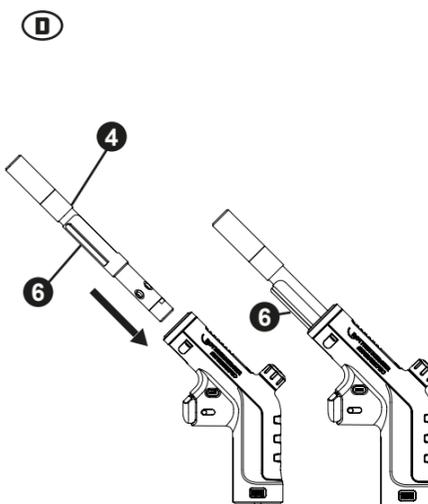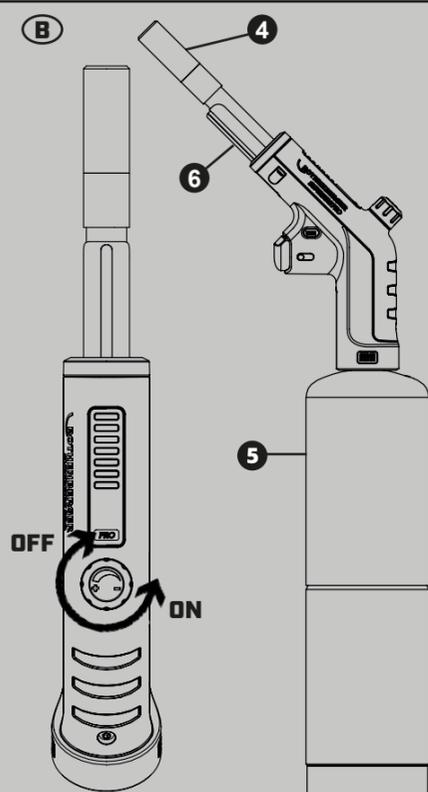

### C Interchangeable Burners for SUPERFIRE PRO

1500004981 - Cool Tip Burner



1500004977 - Pin Point Burner Tip




1500004982 - Flat Flame Burner Tip



1500004983 - Regular Flame Burner Tip



1500004978 - Standard Cyclone Burner Tip

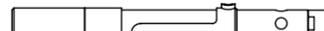

1500004979 - Hot Air Burner Tip



1500004984 - High Output Cyclone Burner Tip



1500004980 - Soft Flame Burner Tip



**E**

35536R - ROTHENBERGER MAPP® GAS

Connection	CGA 600/1" - 20 UNEF
Gas Content	400g

35535 - ROTHENBERGER PROPANE GAS

Connection	CGA 600/1" - 20 UNEF
Gas Content	400g

EN

**IMPORTANT:** Read these instructions carefully and familiarise yourself with the product before fitting the appliance to the gas cylinder. Review the instructions periodically to maintain awareness. Retain these instructions for future reference.

**This appliance shall be used exclusively with ROTHENBERGER gas cylinders. It may be hazardous to attempt to fit other types of gas cylinders.**

### WARNING

**This torch is used with a flammable product. Failure to comply with these warnings and instructions may result in a fire or explosion that may cause damage on property, serious personal damage or even death.**

**1. SAFETY INFORMATION** 1.1 Ensure that the seals are in place and in good condition before fitting the gas cylinder. 1.2 Never use an appliance with damaged or worn seals and never use a leaking, damaged or malfunctioning appliance. 1.3 Always change or fit the gas cylinder in a safe place, ONLY OUTSIDE, away from any source of ignition such as naked flames, pilot lights, electric fires and away from other people. 1.4 If you have to check the gas soundness of the appliance, do this outside. Use soapy water only. NEVER USE A FLAME TO CHECK FOR LEAKS. 1.5 If there has been a leakage, be extra careful and evacuate the gas by ventilation. Note that LP Gas is heavier than air. It can easily accumulate in trenches or below ground level. 1.6 Never leave the torch unattended when lit. 1.7 This appliance consumes oxygen and must only be used in well ventilated areas - minimum 177 ft<sup>3</sup>/h. Avoid the fumes from fluxes, lead-based paint, and all metal heating operations. 1.8 Use the appliance a safe distance from walls and other combustible materials. Always check to make sure that no unintended surfaces or materials are being heated. Heating a surface may cause heat to be conducted to adjoining surfaces that may be combustible or become pressurised when heated. 1.9 Be careful when using the appliance outdoors on sunny or windy days. Bright light makes it hard to see the torch's flame. Wind may carry the torch's heat back at you or at other surfaces or materials not intended for heating. 1.10 Never use the appliance while under the influence of alcohol, drugs or other intoxicating substances. 1.11 Keep the appliance out of reach for children. 1.12 Failure to apply these instructions may cause property damage, personal injuries or death.

**2. HANDLING THE APPLIANCE** 2.1 Be aware that the burner tip of the torch can get exceptionally hot during use. Be careful not to touch the burner tip or other hot parts of the appliance during and after use. 2.2 Do not misuse the appliance, or use it for anything for which it has not been designed. 2.3 Handle the appliance with care. Do not drop, throw, or otherwise abuse the appliance. 2.4 Never attempt to modify the torch's construction and never use unapproved accessories or fuels. 2.5 Always wear protective gloves and safety glasses while handling hot work. 2.6 Make sure the torch is placed on a level surface when connected to the gas cylinder to reduce the risk of accidental tip over. Be careful not to point the torch in a direction which could cause nearby objects to ignite when the torch is set down. 2.7 Be careful not to overheat nearby materials. 2.8 Always have a fire extinguisher close by when using the appliance. 2.9 Using the torch with a low flame can cause damage to the burner tube. Only use low flame during limited time. 2.10 Storage: Always disconnect the gas cylinder from the appliance when not in use. Store the gas cylinder in a safe, dry and cool place away from heat, direct sunlight and out of reach for children or anyone who has not read the instructions. Never store gas cylinders in basements or other places underground.

**3. ASSEMBLING THE APPLIANCE** 3.1 Make sure the appliance is cool when connecting or disconnecting the cylinder and other accessories (Fig. B). 3.2 Ensure that the control knob (1) is turned off (turned fully clockwise). 3.3 Keep the gas cylinder (5) upright when fitting it to the appliance valve. 3.4 Place the valve adequately on top of the gas cylinder valve (as shown in Fig. B). 3.5 Gently screw the gas cylinder into the valve. Be careful not to fit the gas cylinder cross threaded. NOTE! Screw hand tight only. Do not over tighten or you will damage the gas cylinder valve. 3.6 Ensure that a complete gas seal has been made. If you have to check the gas soundness of the appliance, do this outdoors. Do not check for leaks with a naked flame. Use warm soapy water only, applied to the joints and connections of the appliance. Any leakage will show up as bubbles around the leakage area. If you are in doubt or if you can hear or smell gas, do not attempt to light the appliance. Unscrew the gas cylinder and contact your local dealer.

**4. INTERCHANGEABLE BURNER TIPS FOR SUPERFIRE PRO™** 4.1 NOTE! Be aware that the burner tip (4) may be very hot after use. Take caution and wear protective gloves and safety glasses to prevent injuries. 4.2 Assembly of burner tip (as shown in Fig. D). The burner tip (4) for the SUPERFIRE PRO™ torch has a interchangeable quick fitting connection. Push the burner tip into the holder and turn 45° clockwise so that the ignition electrode (6) is pointing downwards. 4.3 To remove the burner, follow the instructions in reverse order.

**5.1 OPERATING APPLIANCE SUPERFIRE PRO™** 5.1.1 Point the appliance away from body and flammable objects. Never look into the burner tube. 5.1.2 Turn the control knob (1) counter-clockwise to open the valve, press the trigger (2) to ignite the burner. 5.1.3 Keep the trigger compressed and adjust flame size by turning the control knob (1). When trigger is released, the flame is automatically extinguished - safe and convenient. 5.1.4 Gas control knob (1) should be shut when the torch is not in use, so that the torch cannot be accidentally ignited during transit.

**5.2 OPERATING APPLIANCE QUICKFIRE PRO™** 5.2.1 Point the appliance away from body and flammable objects. Never look into the burner tube. 5.2.2 Turn the control knob (1) counter-clockwise to open the valve, press the trigger (2) to ignite the burner. 5.2.3 Keep the trigger compressed. To maintain optimal (low) burner tip temperature on the QUICKFIRE PRO™'s cool tip the torch must only be used at full or near full adjustment. CAUTION: Using the torch on low gas flow will result in the burner tip becoming extremely hot. 5.2.4 Gas control knob (1) should be shut when the torch is not in use, so that the torch cannot be accidentally ignited during transit.

**5.3** The ROTHENBERGER SUPERFIRE PRO™ and QUICKFIRE PRO™ are equipped with a trigger lock (3). 5.3.1 The locking button is pushed inwards after the trigger (2) is pressed (Fig. A). To release trigger lock (3), press the trigger (2). 5.3.2 As an additional safety feature the SUPERFIRE PRO™ is equipped with non-return valve that opens only when a burner tip is fitted, thus avoiding unintended gas release. No burner tip, no gas. 5.3.3 The appliance has a built-in regulator that controls pressure and reduces the risk of pulsating or yellow flames to occur when used other than upright. Pulsating or yellow flame might occur under any of the following special circumstances; (a.) When the temperature of the gas cylinder is low. (b.) When gas cylinder is almost empty. (c.) When higher gas consuming burner tips are used. d. When the burner is used other than upright for a longer period. Therefore, we recommend to start working with a gas cylinder at room temperature and to keep the appliance upright as much as possible.

**6. CHANGING THE GAS CYLINDER** 6.1 Shut the valve with the control knob (1). Be sure the flame is extinguished, the burner tip has cooled down and no other flame is nearby. Take the appliance outdoors, away from other people. Unscrew the gas cylinder from the valve and do not use the appliance if the seals are cracked or worn down. Avoid cross threading by putting the valve onto the gas cylinder screw thread straight and screw on hand tight only, as described in section 3.

**7. AFTER USE** 7.1 Make sure that the valve is completely shut by turning the control knob (1) fully clockwise until it stops. Do not use excessive force. 7.2 Unscrew the torch from the gas cylinder. Always remove gas cylinder from torch when not in use. 7.3 Point the torch in a safe direction and press the trigger (2) to release gas in the torch.

**8. ROUTINE SERVICE AND MAINTENANCE** 8.1 Always ensure that the seals are in place and in good condition. Inspect them every time you assemble the appliance. If seals are damaged or worn, do not use the torch. For service and repair see section 9, under warranty see section 11.

**9. SERVICE AND REPAIR** 9.1 For warranty repairs please visit <https://rothenberger.com/gb-en/SERVICE> 9.2 Repair kit available to purchase separately. 9.3 Periodically check joints and couplings to ensure against loose connections and leakage.

**10. ACCESSORIES** 10.1 Use only ROTHENBERGER branded accessories. Accessories not branded ROTHENBERGER may cause property damage, personal injuries or death. 10.2 Be careful when fitting accessories. Avoid touching hot parts. 10.3 Only use ROTHENBERGER cylinders for this appliance (Fig. E). 10.4 Any difficulties in obtaining replacement gas cylinders or accessories, apply directly to: ROTHENBERGER UK.

**11. WARRANTY** 11.0 Register your warranty by going to <https://rothenberger.com/gb-en/warranty> 11.1 ROTHENBERGER warrants to the original purchaser that this product is free from defects for 1 year after purchasing SUPERFIRE PRO™ and QUICKFIRE PRO™. 11.2 This warranty is valid for all purchases of the SUPERFIRE PRO™ and QUICKFIRE PRO™ on or after 1st November 2024. This warranty does not apply to products that have been damaged as a result of improper maintenance, accident or other misuse. 11.3 To make a claim under this warranty, contact the ROTHENBERGER retailer you purchased the torch from or contact ROTHENBERGER directly at by visiting <https://rothenberger.com/gb-en/SERVICE>. Please provide proof of date of purchase when making a claim. 11.4 ROTHENBERGER makes no other warranties concerning the products. In no event shall ROTHENBERGER be liable for incidental or consequential damages.

EN Instructions for use  
DE Bedienungsanleitung  
ES Instrucciones de uso  
FR Mode d'emploi  
IT Istruzioni d'uso



55373

