



DJ Speaker  
ZEB **PARTY** *Fyre* **510**



## User Manual

[www.zebronics.com](http://www.zebronics.com)



## **Dear Customer,**

Thank you for purchasing **ZEB-PARTY FYRE 510** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

### **Features:**

160W RMS Output

Up to 5h\* Backup

Dual 25.4cm Full range Drivers

TWS Function

4 EQ Modes

Karaoke Function

Dual Wireless MIC

Dual 6.3mm Microphone Input

6.3mm Guitar Input

BT v5.3 | USB | mSD | AUX

Mic Volume & Echo controls

RGB Lights

Remote control

LED Display

Type-C Charging

Built-in Rechargeable Battery

**Specifications :**

Output Power (RMS) : 160W

Driver Size

Full Range : 25.4cm x 2

Tweeter : 3.8cm

Impedance

Full Range : 3Ω

Tweeter : 10Ω

Frequency Response : 100Hz-20kHz

S/N Ratio : ≥80dB

Supported Audio

File format support

(USB/mSD) : Mp3

Line input : 3.5mm

Max Supported

Memory Size : 32GB (USB/mSD)

Charging Time : 6h

Playback Time : 5h\*

BT Name : ZEB-PARTY FYRE 510

BT Version : v5.3

Product Dimension : 36.1 x 34 x 84.5 cm  
(W x D x H)


Net. Weight : 11.43kg

*\* at 50% volume (LED off)*

**Package Contents:**


Speaker	: 1 U
Wireless Mic	: 2 U
Charging Cable	: 1 U
Input cable	: 1 U
Remote	: 1 U
QR Code Guide	: 1 U

**Buttons Description**

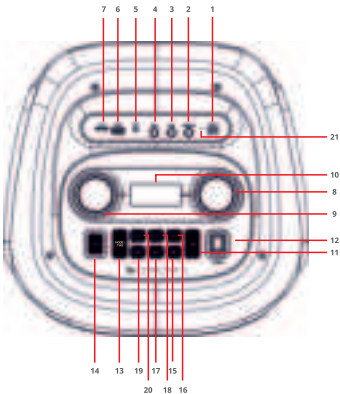

- |                            |                       |
|----------------------------|-----------------------|
| 1. DC 5V/3A Charging Port. | 14. RGB Light Control |
| 2. 6.3 mm GUITAR JACK.     | 15. Next Track        |
| 3. 6.3 mm MIC JACK 2       | 16. BT Reset          |
| 4. 6.3 mm MIC JACK 1       | 17. Play/Pause Button |
| 5. AUX port                | 18. ECHO +            |
| 6. USB port                | 19. Previous Track    |
| 7. mSD slot                | 20. ECHO -            |
| 8. Mic Volume Control      | 21. LED Indicator     |
| 9. Volume Control          |                       |
| 10.LED Display             |                       |
| 11.Mute Button             |                       |
| 12.Power ON/OFF            |                       |
| 13.Mode/ TWS Button        |                       |

## Remote Control

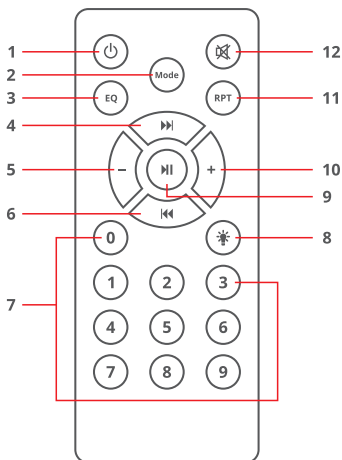

1. POWER ON/OFF
2. Input Mode
3. EQ Button
4. Next Track
5. Volume decrease.
6. Previous Track
7. Numeric Pad
8. RGB Light Control
9. Play/Pause
10. Volume increase.
11. Repeat
12. Mute

## Instruction for Use:

### Button Function:

1. Turn the speaker ON/OFF using the power switch.
2. Press MODE / TWS button to change it to BT mode.
3. Use Master volume control knob to increase / decrease the volume.
4. Use MIC volume control buttons to increase / decrease the MIC volume.
5. Press Prev/Next button to control the media.

6. Press Play-Pause button to play track or pause track being played.

### **Pairing with the Bluetooth speaker:**

1. Power ON the Speaker and you will hear the indication tone for the BT mode.
2. Turn ON BT on your phone or tablet and search for the nearby BT compatible devices.
3. Search for the BT name **"ZEB-PARTY FYRE 510"** and tap to connect it.

### **Micro SD / USB Mode:**

Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the **"ZEB-PARTY FYRE 510"** and the speaker will automatically detect the track from the USB drive/Micro SD card and play.

Press Prev/Next button to control the media.

Use the Master volume knob to control the volume of the speaker.

### **AUX-In :**

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX - In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

### **TWS Function:**

- Switch ON two **"ZEB-PARTY FYRE 510"** speakers you want to pair.
- Press & hold the MODE / TWS button for 5-10 seconds in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **"ZEB-PARTY FYRE 510"** to connect.
- To exit TWS mode, Press & hold mode button for 5-10 seconds in any one speaker to exit from TWS mode.

### **Charging the Speaker:**

1. Use a DC 5V/3A adapter for charging the speaker.
2. RED LED will be ON while charging.
3. Once the speaker is fully charged, the RED LED goes OFF.

