





Product Introduction

Front View:

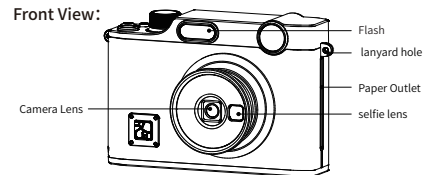

Rear View:

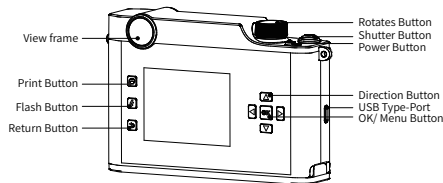


Accessories




* Note: The items in the package are actually based on the order .

Product Introduction

Bottom view:

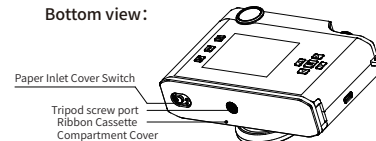

Inner:

 


Product parameters

Product Name	Portable Photo Printer
Printer model	HCP-2TS24E
Dimensions	151*97*63mm
Weight	Bare machine 410g
Print Method	Thermal Dye Sublimation
Print size	54*86mm
Print resolution	300dpi
Battery capacity	1150mA
Charging interface	5V / 2A, type-C Interface
Operating Tempera	5°C~35°C

Consumable Installation Instructions


01

Open the Paper Inlet Cover
As shown, dial the Paper Inlet
Cover switch and open the Paper
Inlet Cover.

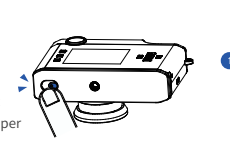


02

 Take out a consumable, put it into
the compartment according to
the direction shown below,place
your finger in the "push"position
and press it into place until it makes
a "click" sound;




03

 Close the consumable compartment.



- 1. The photo paper is susceptible to moisture, please use it as soon as possible after opening.
- 2. This device only supports official photo paper that comes with the ribbon, please do not replace it by yourself.
- 3. Avoid excessive direct sunlight and low temperature.
- 4. If the consumable is damaged or deformed by external force, please do not insert it into the device by force.

 Printing Instructions



1 Push the Power Button until the screen lights up,
then release and the printer turns on.

Can take a picture or select a picture,
according to personal preferences,
select edit and click the print button to print.

APP Download



Scan the QR code to download the "HeyPhoto" APP
1. Open APP, click "Add device", and "Connect"
with "Z3-XXXX" (XXXX are last four digits of
Bluetooth address);
2. Click "Connect to printer directly", follow the
prompts on the APP to join and connect to the
Wi-Fi released by the printer.

1. Click "Picture" on "Home", choose the photos
you want to print and adjust it in preview;
2. Click "print" to print it.



- 1. After the first connection, you just need to click the print icon for subsequent use, the printer will be automatically connected and print.
- 2. Do not exit the APP during the printing process, this may cause printing failure.
- 3. App Page may change with the version, please refer to the actual interface.

Function button operation instructions

Icon	Function Button	State
	Power Button	Turn on/off the printer
	Shutter Button	Short Press Shutter Button to shoot
	Rotates Button	Rotate the selection of the corresponding filters, a total of 8 files
	Print Button	Short press the Print Button to start printing the photo
	Up And Down Buttons	Up, down/for toggle screen proportions
	left And Right Buttons	Left, right/during a photo shoot, you can use this to switch between jigsaw puzzles.
	OK/ Menu Button	OK/View Mode, short press Menu Button to enter the native Menu/photo view mode, short press Menu Button to enter the photo settings Menu.
	Return Button	Return to previous menu/switch to viewfinder or album mode.
	Flash Button	Short Press Flash Button to turn Flash on/off

Tip: 1. press any key to open the screen while resting.

2.When the printer can not be shut down under unusual circumstances, you can use the paper clip to press the “Reset” button to force the device to shut down.

Precautions


- 1.The best working temperature of the printer is 5°C~35°C, If the ambient temperature is too high, the printing quality may be affected;
2. Please use official ribbon and photo paper to ensure print quality;
3. Avoid disassembling the ribbon and photo paper by yourself. If the glossy surface of the photo paper is polluted, the printing quality will be affected;
4. Do not pull out the consumable forcibly during printing, this may damage the printer;
5. When not in use for a long time, close the consumable compartment to keep things like dust out;
6. After printing multiple photos in a row, the device may activate overtemperature protection, which is normal, and the current task will continue to be printed after cooling;
- 7.Do not perform any operations while the device is turning on.

Operating Environment

1. Place the printer on a desktop or other flat, stable surface;
- 2.Please make sure that there is more than 10 cm space in the paper outlet of the printer.

Battery Charging

1. When the battery power is low, please charge it by the equipped USB cable in time.if you continue printing,it may power off automatically.
2. Plug one end of the USB cable into the printer’ s port,and connect the other end to the power adapter.after connecting, the printer enters a charging state, at which point printing will interrupt the charging state.
3. The charging time is about 90-120 minutes, the screen can be lit up to see the charging status.

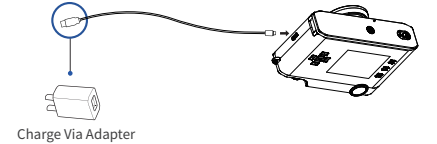

 1. The printer can be charged via computer or adapter with USB cable. Please note that the adapter is not equipped with the printer. Users who use power adapters for charging should purchase and use power adapters that are certified for safety and meet the requirements of the standard.

2. Users are prohibited from disassembling the machine by themselves,if replacing the wrong model of battery will be at risk of explosion. Please be sure to dispose of the used battery according to the instructions.

3. When the printer is low power, please charge it for a period of time before using it, so as to avoid interrupting printing due to insufficient power during use.

WARNING: Operating this device may cause radio interference in a residential environment.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonableprotection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC’ s RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2AUTE-2TS24E



Xiamen Hanin Co.,Ltd.
www.hprr.com
support@hprr.com