



USER'S MANUAL

Washing Machine

EP24898

TABLES OF CONTENTS

APPLIANCE SAFETY.....	1
IMPORTANT SAFETY GUIDES.....	2
IMPORTANT SAFETY INSTRUCTIONS.....	3
PARTS & FEATURES.....	4
CONTROL PANEL.....	5
OPERATING YOUR PORTABLE WASHER.....	6
INSTALLATION INSTRUCTIONS.....	7
OPERATING INSTRUCTIONS.....	12
AUTOMATIC WASH PROGRAMS.....	12
CARE AND MAINTENANCE.....	14

APPLIANCE SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. This symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the words “DANGER”, “WARNING” or “CAUTION”.



Danger means that failure to heed this safety statement may result in severe personal injury or death.



Warning means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.



Caution means that failure to heed this safety statement may result in minor or moderate personal injury, or property or equipment damage.

All safety messages will alert you do what the potential hazard is, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

IMPORTANT SAFEGUIDES



Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precaution, including the following:

DANGER

- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- Replace all panels before operating.
- It is recommended that a separate circuit, serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this material. All other servicing should be referred to a qualified technician.

WARNING

FOLLOW WARNING CALL OUTS BELOW ONLY WHEN APPLICABLE TO YOUR MODEL

- Use two or more people to move and install appliance. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 90°F (32°C). This unit must be installed in an area protected from the element, such as wind, rain, water spray or drips.
- The appliance should not be located next to ovens, grills or other sources of high heat.
- The appliance must be installed with all electrical, water and drain connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances is required.
- Do not kink or pinch the power supply cord of appliance.
- The fuse (or circuit breaker) size should be 15 amperes.
- It is important for the appliance to be leveled in order to work properly. You may need to make several adjustments to level it.
- Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this apparatus for other than its intended purpose.

IMPORTANT SAFETY INSTRUCTIONS

⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your portable washer, follow these basic precautions:
<ul style="list-style-type: none"> • WARNING: Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized, unplug this machine. • Read all instructions before using the portable washer. • Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode. • Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode. • Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for 2 weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time. • DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous . . . even if they will “just sit in the garage a few days.” • Before you throw away your old portable washer: Take off the lid. • Never allow children to operate, play with, or crawl inside the portable washer. Close supervision of children is necessary when the washer is used near children. • Do not reach into the washer if the agitator or inner tub is moving. • Do not tamper with controls. • Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions. • Never clean portable washer parts with flammable fluids. The fumes can create a fire hazard or explosion. • Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard. • Do not store, use gasoline, or any other flammable vapors and liquids in the vicinity of this or any other portable washer. The fumes can create a fire hazard or explosion. • If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard. <p style="text-align: center;">-Save these instructions-</p>	




This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities.






This appliance should not be operated by those with a lack of experience or knowledge of its use or operation, unless they have been given instructions concerning and/or are supervised during the use of the appliance by a person responsible for their safety.

This appliance is not intended for use by children. To avoid any possible type of injury or damage to the unit and or personal property all children should be supervised to ensure they do not play with the appliance.

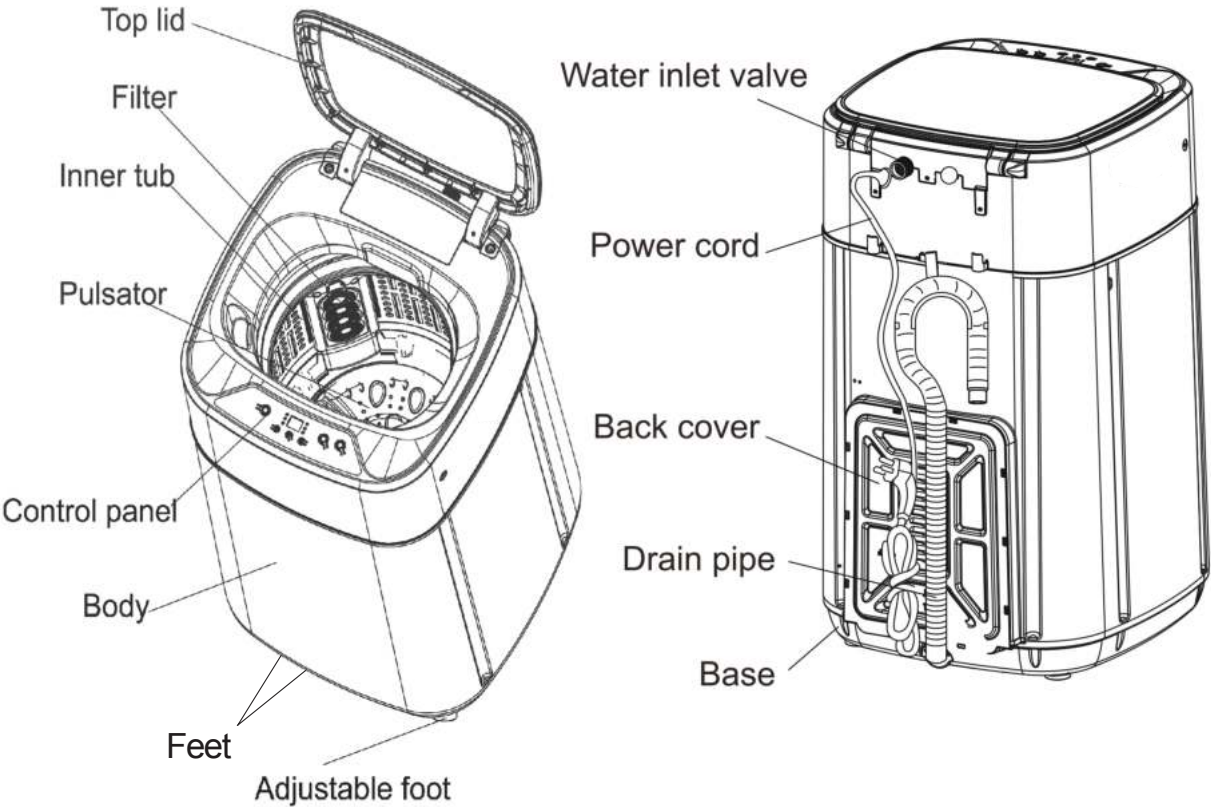
PARTS&FEATURES

 

INCLUDED

 Drain-pipe	Inlet hose with faucet adapter	Self screw	Noise and mice-proof plate	Instruction manual
				
1Pc	1Pc	2Pcs	1Pc	1Pc






CONTROL PANEL

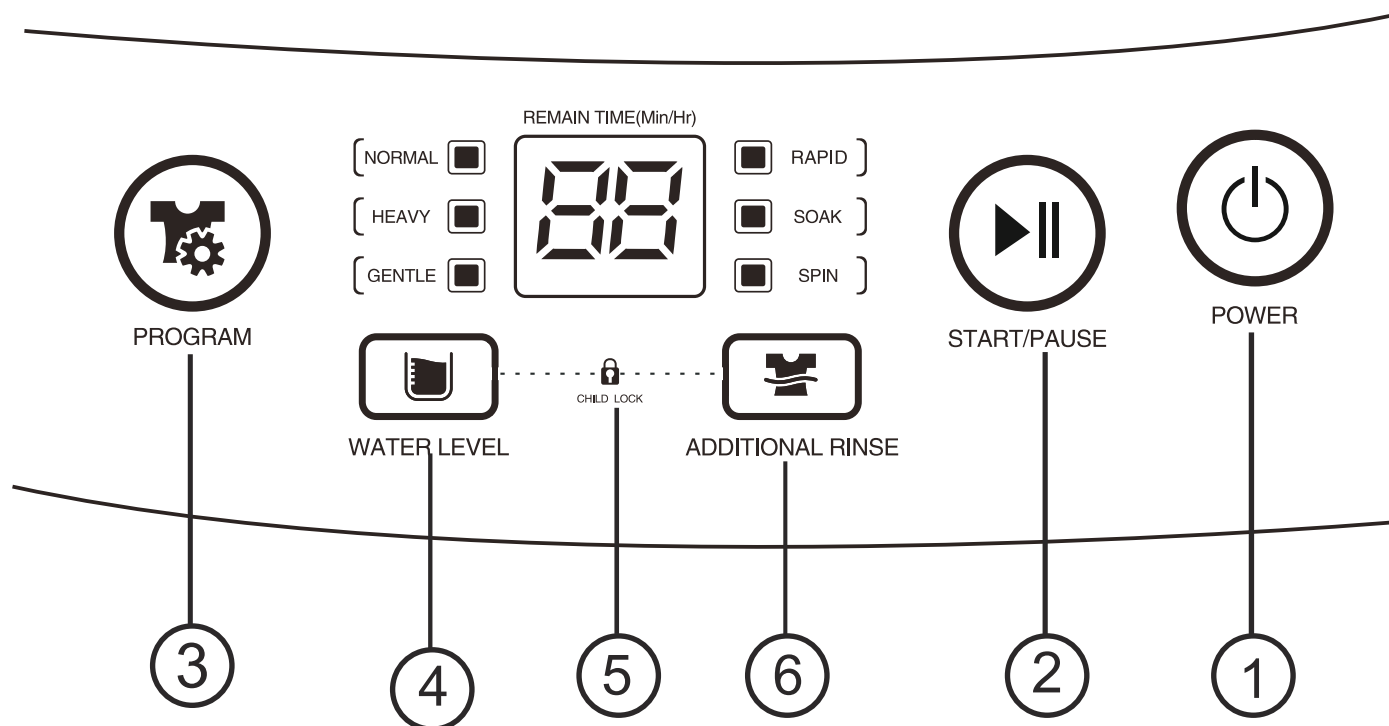

1	POWER ON / OFF BUTTON
2	START / PAUSE BUTTON
3	PROGRAM SELECTOR BUTTON
4	WATER LEVEL SELECTOR BUTTON
5	CHILD LOCK FUNCTION <i>TO ACTIVATE: PRESS AND HOLD THE TWO BUTTONS FOR APPROXIMATELY 2 SECONDS</i> <i>TO DEACTIVATE: PRESS AND HOLD THE TWO BUTTONS FOR APPROXIMATELY 2 SECONDS</i>
6	ADDITIONAL RINSE SELECTOR BUTTON

OPERATING YOUR PORTABLE WASHER


PREPARATION
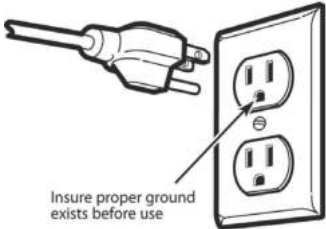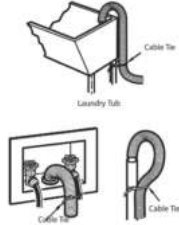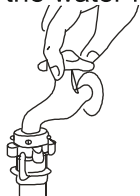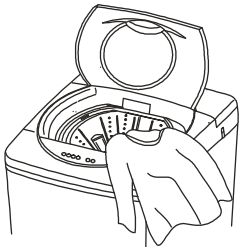
<p>1. Check that the feet of the washing machine are flat. If it's not flat, please adjust the adjustable foot to make it flat. Connect the water inlet hose to the water faucet.</p> <p>2. Ensure the drain hose has been installed properly.</p>	<p>3. Insert the plug into the socket. For safety the plug should have ground connection.</p> 	<p>4. Insert the end of drain hose into the hook shelf, and hang the drain hose over a drain outlet.</p>  <p>5. Open the water faucet.</p> 
<p>6. Put the wash load into the tub evenly.</p> 	<p>7. Add the suitable quantity detergent into the detergent case.</p>	<p>8. Close the lid. Otherwise the washer will not wash or spin, and alarm will sound.</p> 

BEFORE WASHING

Prepare the wash load. Mix large and small articles in a load to get the best washing results. Drop articles loosely into the inner tub. Do not pack articles in or wrap them. Articles should move freely through the wash water for best cleaning results. Articles should rollover, sink and then reappear.


When washing very large articles, do not fill inner tub as full as with other loads. The water level in your washer should fit the size of your wash load. Small load will use lower water levels. There must be enough water in the inner tub to allow articles to move and turn over freely. Overloading the inner tub can result in poor washing and rinsing. Overloading may also cause wrinkling and tearing of articles.

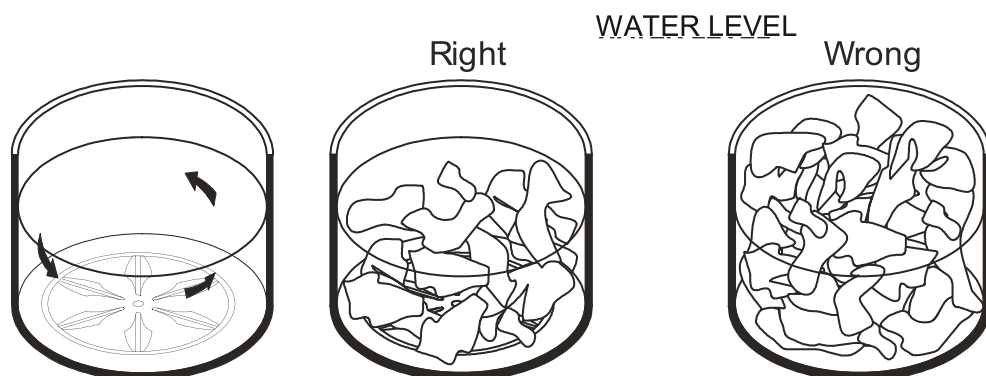

INSTALLATION INSTRUCTIONS

BEFORE USING YOUR PORTABLE WASHER

- Remove the exterior and interior packing.
- You will need the following tools:
 - Wrench
 - Pliers
 - Screwdriver
- Check to be sure you have all of the following parts:
 - 1 Inlet Hose
 - 1 Faucet Adapter
 - 1 Noise Proof Plate With 2 Screws
 - 1 Drain Hose Assembly

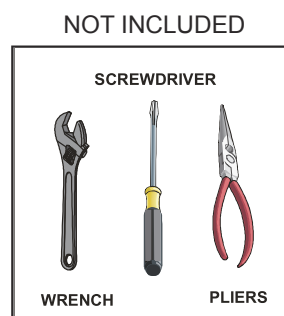




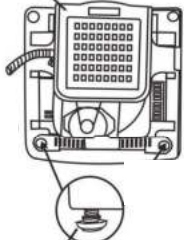
- Remove shipping brace. Note - It should be saved and used (to prevent damage to washer components) whenever washer is moved or transported to a new location.
- Clean the interior surface with lukewarm water using a soft cloth.
- Allow 2 inches of space between the back and sides of the appliance.
- Put your laundry into the washer evenly. Uneven laundry may cause noise or vibration.
- DO NOT use excessively hot water (122°F / 50°C or more). Plastic parts may be deformed or damaged. Also, clothing may be deformed or bleached.
- Before washing, check all pockets. If nails or pins remain in pockets, they may damage the washer or clothes.
- Never splash water on the control panel.
- Plug the washer into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an Authorized Avanti Products service center.

SELECTING A LOCATION

Before you install the portable washer, select a location with the following characteristics:

- A hard level surface (if the surface is uneven, see Adjusting The Adjustable Foot section on the next page).
- Away from direct sunlight. Direct sunlight may affect the acrylic coating, plastic and electrical components.
- Adequate ventilation.
- Away from sources of heat such as coal or gas. Make sure that the washing machine does not stand on its power cord.
- Ventilation openings must not be obstructed by carpeting when the portable washer is installed on a carpeted floor. It is recommended that you place your portable washer on a hard material floor such as tile, concrete, linoleum and to avoid if at all possible placement on wooden floors or carpeted areas.

INSTALLING THE NOISE DAMPER PLATE
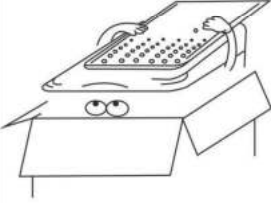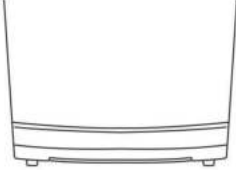
<p>Take the noise proof plate out of the package</p> 	<p>The opening of the noise proof plate is at the bottom of the machine</p> 	<p>Lay down the machine and insert the noise proof plate into the washing machine base</p> 	<p>Noise proof plate</p>  <p>Adjustable foot</p>
--	---	---	---



Affix the noise proof plate by using the two screws provided.

CONNECTING THE COLD WATER SUPPLY HOSE

The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short and you do not wish to move the water faucet, replace the hose with a longer, high-pressure hose.

Select appropriate faucet as shown in the figures below. If none of these faucets are available, use the faucet adapter provided.

The end of faucet spout should be longer than 10mm (0.4"), or the connector cannot be fixed properly. Water leakage could develop.
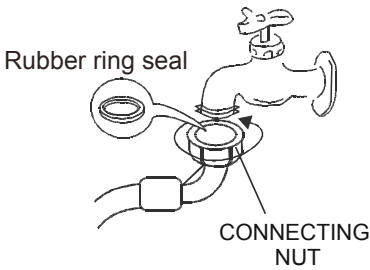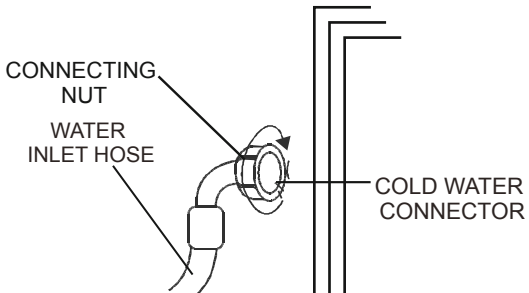
<p>1. Connect the water inlet hose to the faucet by turning the connecting nut.</p>  <p>Rubber ring seal</p> <p>CONNECTING NUT</p> <p>Be sure a rubber ring is inside the connecting nut.</p>	<p>2. Then connect the other end of water inlet hose to the cold connector in water mixing valve by turning the connecting nut.</p>  <p>CONNECTING NUT</p> <p>WATER INLET HOSE</p> <p>COLD WATER CONNECTOR</p>
--	--

SINK FAUCET CONNECTION

For normal kitchen-sink tap only use the inlet hose with cold water inlet.

Connect the inlet hose to the male hose thread adapter by turning it clockwise to be fixed tightly.

Make sure to insert the rubber ring enclosed. Then connect tightly to your sink.

Note: Some faucets may require you to also use the female hose thread adapter between the male adapter and your sink faucet as shown below. Make sure the rubber ring is inserted and connect to your sink.




If water leaks from faucet connection or washer connection, turn off water and tighten fully using a wrench. Be careful not to over tighten and damage water connection. Turn on water supply and make sure no leaks are present.

DISCONNECTING THE WATER SUPPLY HOSE

Dismantling the hose directly may cause water to splash due to the possible high water pressure in the hose, even after the faucet has been turned off. Please take off the hose as per following steps, even if the faucet is closed:

- Turn off the faucet.
- Turn on the power and let the machine run for about 5 seconds then turn it off.
- Remove the connecting nuts from the faucet and washing machine.

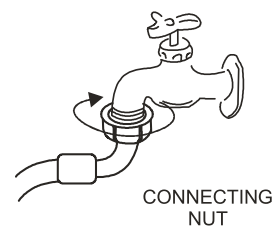


Note: If the washing machine is frequently used, it is not necessary to dismantle the inlet hose to avoid possible damage to the screws.

POSITIONING THE DRAIN HOSE

Since only up drainage is available, drain hose can be hung in the basin or bathtub.

NOTE: The highest point of the drain hose must be in the height of 2.25 – 4 feet above floor level, otherwise, the washer cannot work normally.

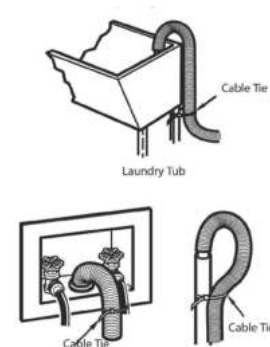

Electrical Connection

WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. If the power cord is damaged, have it replaced by an authorized Avanti Products service center.

Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance should be properly grounded for your safety. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

The power cord of this appliance is equipped with a three prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.


Do not under any circumstances cut or remove the third ground prong from the power cord supplied. For personal safety, this appliance must be properly grounded.

The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This appliance requires a standard 115/120 Volt AC ~/60Hz electrical ground outlet with three-prong. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevent overloading house wiring circuits that could cause a fire hazard from overheated. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

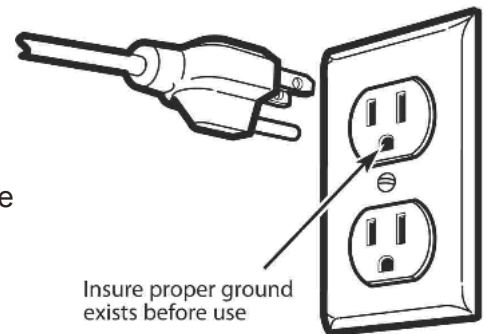

Extension Cord

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.

Surge Protector

Most electrical appliances use a series of electric control boards to operate. These boards are very susceptible to power surges and could be damaged or destroyed.




























 

















If the appliance is going to be used in an area or if your city / country is prone to power surges / outages; it is suggested that you use a power surge protector for all electrical devices / appliances you use. The surge protector that you select must have a surge block high enough to protect the appliance it is connected to. If you have any questions regarding the type and size of surge protector needed contact a licensed electrician in your area.

Damages due to power surges are not considered a manufacturer covered defect and will void your product warranty.

BEFORE WASHING

Make sure that you follow all manufacturer instructions for washing:

GUIDE TO APPAREL/TEXTILE CARE SYMBOLS

<div></div> <div>Wash</div>	<div>Machine Wash Cycles</div> <div><div>Normal</div><div>Permanent Press</div><div>Delicate/ Gentle</div><div>Hand Wash</div></div> <div>Water Temperatures</div> <table><tr><td>(Maximum)</td><td>(200F)</td><td>(160F)</td><td>(140F)</td><td>(120F)</td><td>(105F)</td><td>(65F-85F)</td></tr><tr><td></td><td>95C</td><td>70C</td><td>60C</td><td>50C</td><td>40C</td><td>30C</td></tr><tr><td>Symbol(s)</td><td>•••</td><td>•••</td><td>••</td><td>••</td><td>••</td><td>•</td></tr></table>	(Maximum)	(200F)	(160F)	(140F)	(120F)	(105F)	(65F-85F)		95C	70C	60C	50C	40C	30C	Symbol(s)	•••	•••	••	••	••	•	<div>Warning Symbols for Laundering</div> <div><div>Do Not Wash</div><div>Do Not Bleach</div><div>Do Not Dry (used with Do Not Wash)</div><div>Do Not Iron</div></div>
(Maximum)	(200F)	(160F)	(140F)	(120F)	(105F)	(65F-85F)																	
	95C	70C	60C	50C	40C	30C																	
Symbol(s)	•••	•••	••	••	••	•																	
<div></div> <div>Bleach</div>	<div><div>Any Bleach When Needed</div><div>Only Non-Chlorine Bleach When Needed</div></div>	<div><div>Do Not Dry (used with Do Not Wash)</div><div>Do Not Iron</div></div>																					
<div></div> <div>Dry</div>	<div>Tumble Dry Cycles</div> <div><div>Normal</div><div>Permanent Press</div><div>Delicate/ Gentle</div><div>Line Dry / Hang to Dry</div></div> <div>Tumble Heat Settings</div> <div><div>Any Heat</div><div>High</div><div>Medium</div><div>Low</div><div>No Heat/Air</div><div>Drip Dry</div><div>Dry Flat</div></div>	<div>Additional Instructions (in Symbols or Words)</div> <div><div>Do Not Wring</div><div>Do Not Tumble Dry</div><div>In the shade (added to line dry, drip dry, or dry flat)</div><div>No Steam (added to iron)</div></div>																					
<div></div> <div>Iron</div>	<div>Iron-Dry or Steam</div> <div><div>200C (390F) High</div><div>150C (300F) Medium</div><div>110C (230F) Low</div></div> <div>Maximum Temperatures</div>	<div>In the shade (added to line dry, drip dry, or dry flat)</div> <div>No Steam (added to iron)</div>																					
<div></div> <div>Dryclean</div>	<div>Dryclean - Normal Cycle</div> <div><div>Any Solvent</div><div>Any Solvent Except Trichloroethylene</div><div>Petroleum Solvent Only</div><div>Do Not Dryclean</div></div>	<div>Dryclean - Additional Instructions</div> <div><div>Short Cycle</div><div>Reduced Moisture</div><div>Low Heat</div><div>No Steam Finishing</div></div>																					

OPERATING INSTRUCTIONS

PRESS THE POWER BUTTON.

PRESS THE FUNCTIONS SELECTION BUTTON.

Choose the desired function and then the corresponding indicator blink.

PRESS THE WATER LEVEL BUTTON.

Choose appropriate water level according to wash load quantity.

(In RAPID program, the water level cannot be selected) .

NOTE: The washer will provide a cold rinse in all settings.

IMPORTANT: A single cold hose system does not allow the washing machine to automatically (select) regulate incoming water temperatures.

PRESS DOWN START/PAUSE BUTTON ONCE AND THE MACHINE WILL BEGIN OPERATION.

Please press this button to stop the normal operation, if it continues to work, press it again.

Water level can be reset during the normal operation. If the higher water level is selected, the machine will operate after refilling the water level selected.

AUTOMATIC WASH PROGRAMS

Wash Program	Wash Type	Water Level		Wash Time (Min / Sec)	Rinse Time (Minutes)	Spin Time (Minutes)	Total Time (Full Cycle) (Minutes)
		Selection Range	Default				
NORMAL	Normal Use	1-6	3	18 Minutes	6	4	37
RAPID	Lightly Dirty		1	3 Minutes	4	2	13
GENTLE	Cottons	1-6	3	3 Minutes	8	3	26
HEAVY	JEANS	1-6	3	18 Minutes	9	5	47
SOAK	Delicates	1-6	3	Soak 30 Minutes Wash 20 Minutes	24	5	95

To select one of the pre-programmed automatic wash cycles follow the instructions as shown below:

- Close the lid.
- Press the power button.
- Press the program button to select the appropriate program until the indicator light is ON. (HEAVY is the default program)
- Press the water level button to select the appropriate water level setting. (The default water level is 3 water level)
- Press the START/PAUSE to start the course. And the LED display will show the remaining time of the entire course.

In the event the clothing loaded becomes unbalanced, the safety switch will be triggered causing the washing machine to automatically refill with water to adjust the imbalance.

For routine / normal washing it is recommended to use the **NORMAL** program and only use the **HEAVY** setting for large loads or when washing items that are excessively soiled.

Note:

- **WARNING:** Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized, unplug this machine.
- Clothes easily discolored should be washed separately so as to prevent inter-dyeing.
- If you want to change a selected program, press the POWER button first to turn the unit off, then press the POWER button again to turn the unit back on, then press the Program button to select the new cycle before pushing START/PAUSE button.
- When the Rinse and Spin functions are ON, do not use detergent.
- If you want to drain the water during washing, press the POWER button first to turn the unit off, then press the POWER button again to turn the unit back on, then select the SPIN function. Press START/PAUSE button again to restart.

ADDING / REMOVING CLOTHING AFTER THE CYCLE HAS STARTED

Your washing machine is equipped with a safety system that will stop the machine when the lid is opened during a wash cycle.

To add or remove clothing to/from a wash cycle follow the steps below:


- Open the lid, the machine will stop (all indicators on the control panel will turn off).
- Add or remove the clothing as needed.
- Close the lid.
- Press the Start / Pause button to continue the previous wash cycle.

CARE AND MAINTENANCE


CLEANING YOUR PORTABLE WASHER

- Clean the surface of your portable washer regularly with soft fabric.
- Clean the inner tub regularly, especially immediately after starch or bleach operation.
- Clean the filter in the inlet valve or inlet hose regularly in order to prevent it from clogging.

1. Unplug the power cord.

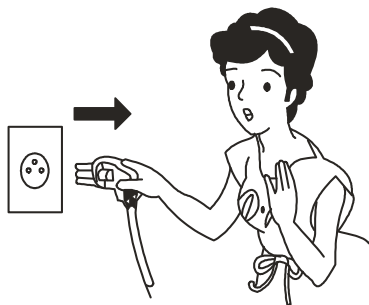

2. Remove the inlet hose and clean the filter with a brush.

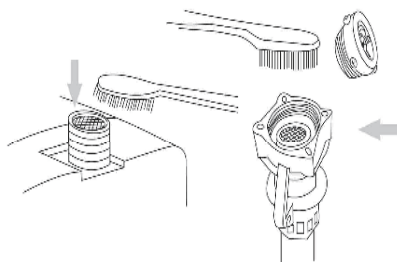


- Clean the surface of the washing machine with a soft cloth regularly.

- Clean the inner tub regularly, especially after washing starched or bleached laundry.

- Clean the lint filter.


1 Gently push the tab down and outward to remove the lint filter

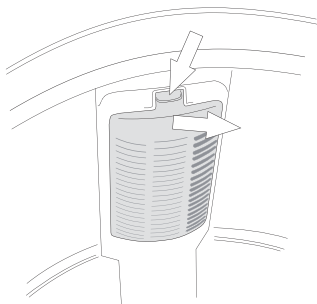

2. Clean and rinse it thoroughly.




3. Reinstall.

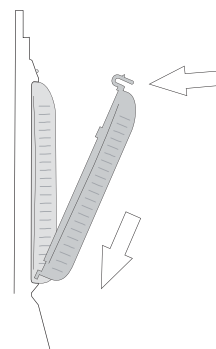


Vacation time


1. Turn off the tap, remove water inlet hose, and let water drain out from the hose.

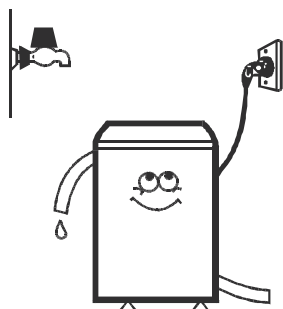

2. Set spin cycle for 1 minute.

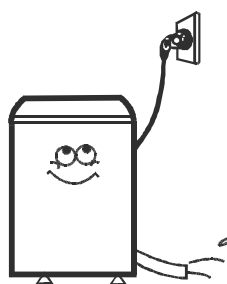

3. Unplug the power cord.

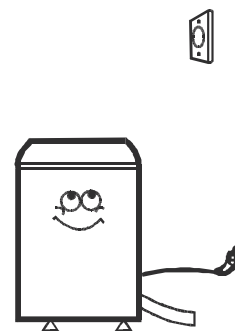



With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

UK office: Ipswich

DE office: FDS GmbH, Neuer Höltingbaum 36, 22143 Hamburg, Deutschland

FR office : 26 RUE DU VERTUQUET, 59960 NEUVILLE EN FERRAIN, FRANCE

