



Grandstream Networks, Inc.

UCM63xx Series

Wave Desktop User Guide



Table of Contents

CHANGE LOG	8
Firmware 1.5.4.....	8
INTRODUCTION.....	9
Overview.....	9
Feature Highlights	9
Specifications	10
BASIC OPERATION	12
System Requirements	12
Download and Install the Client.....	12
Upgraded Version.....	12
LOGGING INTO WAVE DESKTOP	13
Wave Password Recovery	14
MAKING CALLS.....	17
Initiating a Call from Keypad	17
Call History	18
Contacts	18
ANSWERING CALLS.....	20
DURING A CALL	21
Hold/unhold	22
Mute/unmute.....	23
DTMF.....	24
MISSED CALLS	25
CALL TRANSFER	26
Blind Transfer	26
Attended Transfer	27
CHAT	29



Start a single chat.....	29
Start a group chat.....	30
Send messages.....	30
Copy message.....	31
Forward message.....	32
Unread message	33
Group management.....	34
<i>Change group name</i>	34
<i>View group members</i>	35
<i>Add group members</i>	37
<i>Delete Group Members</i>	38
<i>Exit Group</i>	39
MEETING ROOM.....	40
Meet Now	41
Audio Conference.....	43
Video Conference.....	46
Screen Sharing.....	48
Invite Participants	50
Managing Participants.....	52
Chat during Meeting	54
End Meeting	55
Join Meeting via Link	56
SCHEDULE MEETING	57
VOICEMAIL	61
CONTACTS.....	62
Search Contacts	62
CALL HISTORY	63
SETTINGS	64
Audio Settings	64
Webcam Settings	65
Entrance Guard	65
Monitor.....	69



Export Log	70
Language Settings.....	70
Account Settings.....	71
LOGO CUSTOMIZATION	73



Table of figures

Figure 1: Wave About Interface.....	12
Figure 2: Wave Desktop Portal	13
Figure 3: Wave Desktop Default Page after Login.....	14
Figure 4: Reset Password – Username	15
Figure 5: Reset Password - Verification Password.....	15
Figure 6: Reset Password – Email.....	16
Figure 7: Reset Password.....	16
Figure 8: Initiating a Call from Keypad.....	17
Figure 9: Call history	18
Figure 10: Contact search.....	19
Figure 11: Favorite Contacts	19
Figure 12: Incoming Call Notification on the Desktop.....	20
Figure 13: Incoming call prompt on Wave desktop page.....	20
Figure 14: Audio Call Screen	21
Figure 15: Video Call Screen	21
Figure 16: Call On Hold.....	23
Figure 17: Mute during a Call.....	23
Figure 18: Open the DTMF Keyboard Interface during a Call	24
Figure 19: Missed Call Notification on Browser	25
Figure 20: Recent Calls.....	25
Figure 21: Blind Transfer.....	26
Figure 22: Attended Transfer - I	27
Figure 23: Attended Transfer - II	28
Figure 24: Adding Chat Interface	29
Figure 25: Chat Interface	30
Figure 26: Copy Message	31
Figure 27: Forward message	32
Figure 28: Leave a Message.....	33
Figure 29: Unread Messages.....	34
Figure 30: Change Group Name.....	35
Figure 31: View Group Members	36
Figure 32: Group Member Business Card Interface	37
Figure 33: Add Group Member Interface	38
Figure 34: Delete Group Members Interface	39



Figure 35: Wave Meetings Desktop Page	40
Figure 36: Search Meeting.....	41
Figure 37: Meet Now.....	41
Figure 38: Select Role.....	42
Figure 39: Enter Moderator Code	43
Figure 40: Audio Conference Room.....	44
Figure 41: Invite participants to audio conference room.....	45
Figure 42: Managing Meeting Participants in Audio Meeting Room	46
Figure 43: Video Conference Screen.....	47
Figure 44: Managing Participants in Video Conference	48
Figure 45: Screen Sharing	49
Figure 46: Screen Sharing with Video on	50
Figure 47: Invite Participants.....	51
Figure 48: Create invitation link	52
Figure 49: Participant list.....	53
Figure 50: Chat during Meeting	54
Figure 51: End Meeting as Moderator	55
Figure 52: End Meeting as Moderator – Transfer Moderator Privileges	56
Figure 53: Schedule Meeting	57
Figure 54: Scheduled Meeting	59
Figure 55: Scheduled Meeting Email Notification	60
Figure 56: Open keypad on Wave Desktop Page.....	61
Figure 57: Contacts.....	62
Figure 58: Recent calls	63
Figure 59: Wave Settings	64
Figure 60: Audio Settings	64
Figure 61: Webcam settings	65
Figure 62: Entrance Guard Setting Interface	66
Figure 63: Add Entrance Guard Interface	67
Figure 64: Entrance Guard Bell Call Interface	68
Figure 65: Entrance Guard Call Interface	68
Figure 66: Monitor Settings Interface.....	69
Figure 67: Add Entrance Guard Interface	70
Figure 68: Language Settings.....	71
Figure 69: Language Settings.....	71
Figure 70: User Information	72
Figure 71: Customized Logo Interface.....	73



Table of tables

Table 1: Model Specifications for Wave Desktop	10
Table 2: Wave Desktop Specifications	10
Table 3: Schedule Meeting Specifications	57



CHANGE LOG

Firmware 1.5.4

- This is the initial version.



INTRODUCTION

Overview

Wave desktop is a client application for the UCM63xx series IP PBX users to use a desktop application to participate in video/audio conferences and make calls via WebRTC. With Wave desktop client, users can easily create, schedule, manage, and join video conference calls, share presentation, chat during conference calls, register UCM extension and make point-to-point calls. Wave desktop helps enterprise users to join meetings and communicate efficiently. It is an ideal product for enterprises looking for tools for users to communicate and work productively.

Feature Highlights

- Supported on Windows 10+ / Mac OS 10+ operating system.
- Native integration with UCM including contacts and ability to display SIP users' online status
- Supports LDAP to access contacts in the UCM LDAP server.
- Supports call display, voicemail and call encryption.
- Supports call history.
- High quality point-to-point audio and video calling.
- Full integration with Grandstream UCM6300 IP PBX, including creation of QR code for automatic login, call transfer, call recording from server etc.
- Supports Opus and G.722 for HD audio. Jitter resilience up to 50% audio packet loss and 20% video packet loss.
- Supports H.264.
- Supports joining meeting via link without logging in.
- Supports schedule meeting and meeting now at anywhere anytime
- Built-in NAT traversal including automatic NAT discovery and TURN/ICE.
- Support basic chat functions, including single chat and group chat, sending files and emoticons, starting audio conferences in a group chat, simultaneous group chats and meeting chats.
- Integrated UCM user portal entry to access personal data, follow me settings, SCA, wakeup calls etc.



Specifications

Specifications and limitations of WebRTC change from one model to another, please find below a table showing the specifications for the features on each model.

Table 1: Model Specifications for Wave Desktop

UCM630x series	Video feeds	Screen Share Feed	Concurrent user registration	Participant limit (Audio Conference)	Participant limit (Video Conference)
UCM6301	4 or 9	1	500	75	20
UCM6302	4 or 9	1	1000	150	30
UCM6304	4 or 9	1	2000	200	60
UCM6308	4 or 9	1	3000	300	80

Below are the rest of technical specifications for all the models:

Table 2: Wave Desktop Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, DNS (A record, SRV), STUN/TURN/ICE, LDAP, TLS, SRTP, IPv6
Voice Codecs and Capabilities	Opus, G.711 A-law/U-law, G.722 Adaptive JIB
DTMF	RFC2833, SIP INFO
Video Codecs and Capabilities	H.264 1080P HD video, supports displaying multiple videos, screen sharing, camera on/off, GS-FEC
Telephony Features	Call hold/unhold, mute/unmute, call transfer, audio meeting room, video meeting room, call history, scheduling meeting, voicemail, call recording and etc.



	User portal entries allows access for personal data, wakeup call settings, SCA, follow me settings, call queue, CDR, CRM user settings and etc.
UCM Applications	Supports UCM feature codes (transfer, call park, recording, meeting control options etc.)
QoS	Layer 3 QoS (ToS, DiffServ, MPLS)
Security	SIP over TLS, SRTP (128-bit and 256-bit), HTTPS
Multi-language Support	English and Simplified Chinese.
Login	<p>Supports login with Wave account and account password.</p> <p>Supports joining meeting via link without logging in.</p>

Please visit our website for more Wave desktop information and product documentations:
<http://www.grandstream.com>



BASIC OPERATION

System Requirements

- Operating system: Windows 10+ / Mac OS 10+.
- Supporting device: Support almost all operating systems in Windows 10+ / Mac OS 10+ desktop computers and laptops.
- Web environment: stand by Network connection above 3 Mbps (recommended), UCM needs to be connected to the network.
- Audio and video equipment: to make a call, you need a speaker and microphone, webcam, or high-definition webcam.

Download and Install the Client

The Wave client can be downloaded on the Grandstream official website:

<https://fw.gdms.cloud/wave/download/>

After the download is complete, you can install it according to the instructions on the interface.

Upgraded Version

On the main page before or after login, click the upper right corner, and then click the menu item "About". If there is a newer firmware version, you can click the "Upgrade Firmware" button to upgrade.

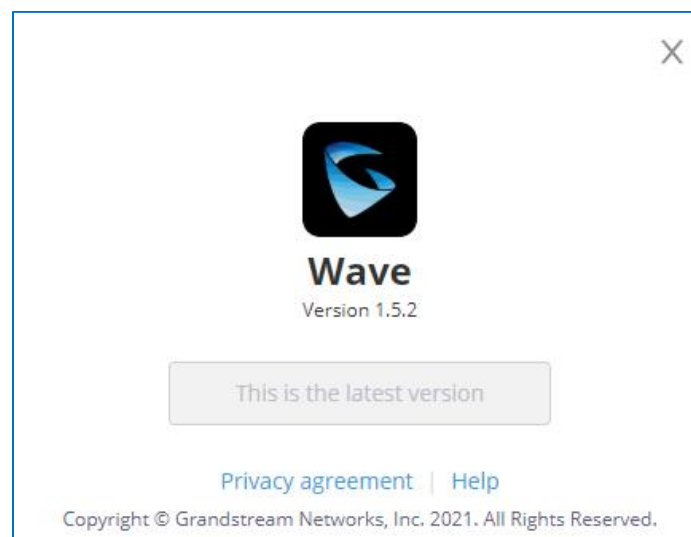 


Figure 1: Wave About Interface



LOGGING INTO WAVE DESKTOP

With UCM SIP extension number and user portal password, users could log in the Wave desktop portal. After logging in successfully, users can host meeting, schedule meeting, manage contacts, make calls, transfer calls, chat during meeting and etc.

To start using Wave Desktop Application:

1. Click on to  open Wave Desktop application. The following login page will be displayed.

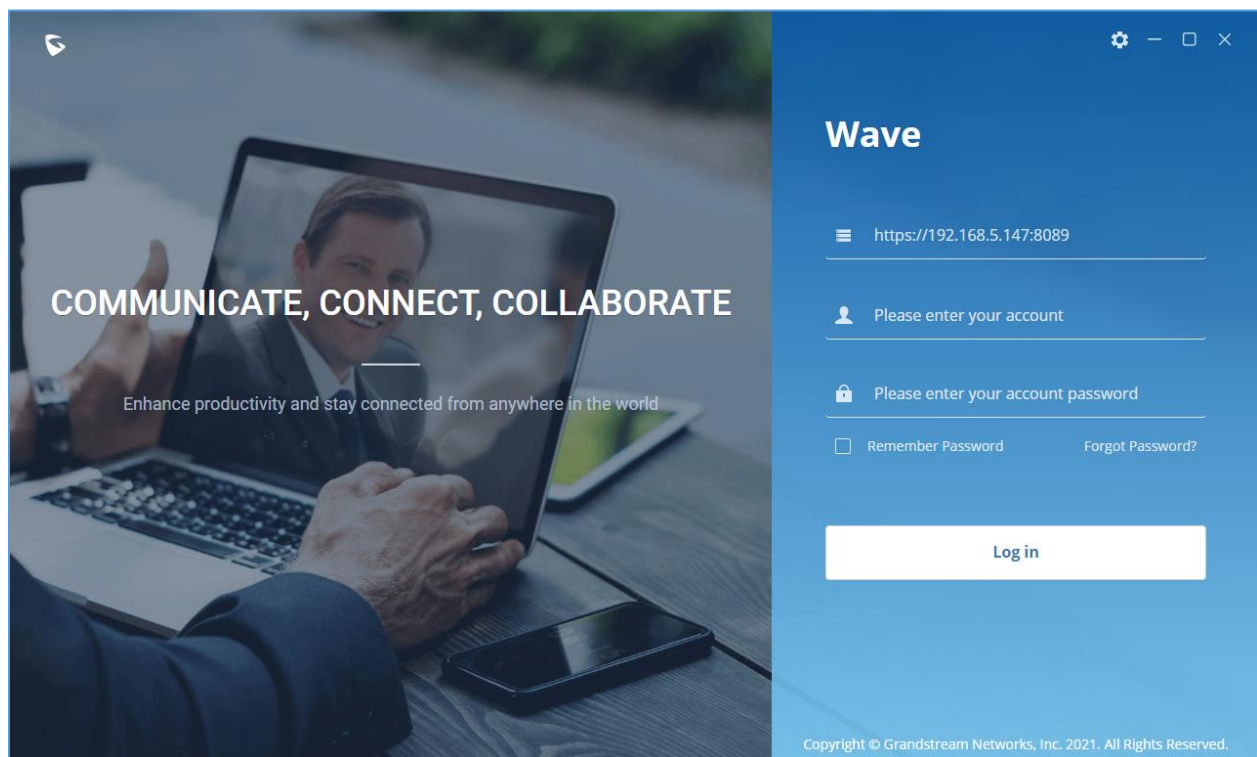 


Figure 2: Wave Desktop Portal

2. Enter an extension number and its user portal password in the Wave desktop login page. Once logged in successfully, the following page will appear:

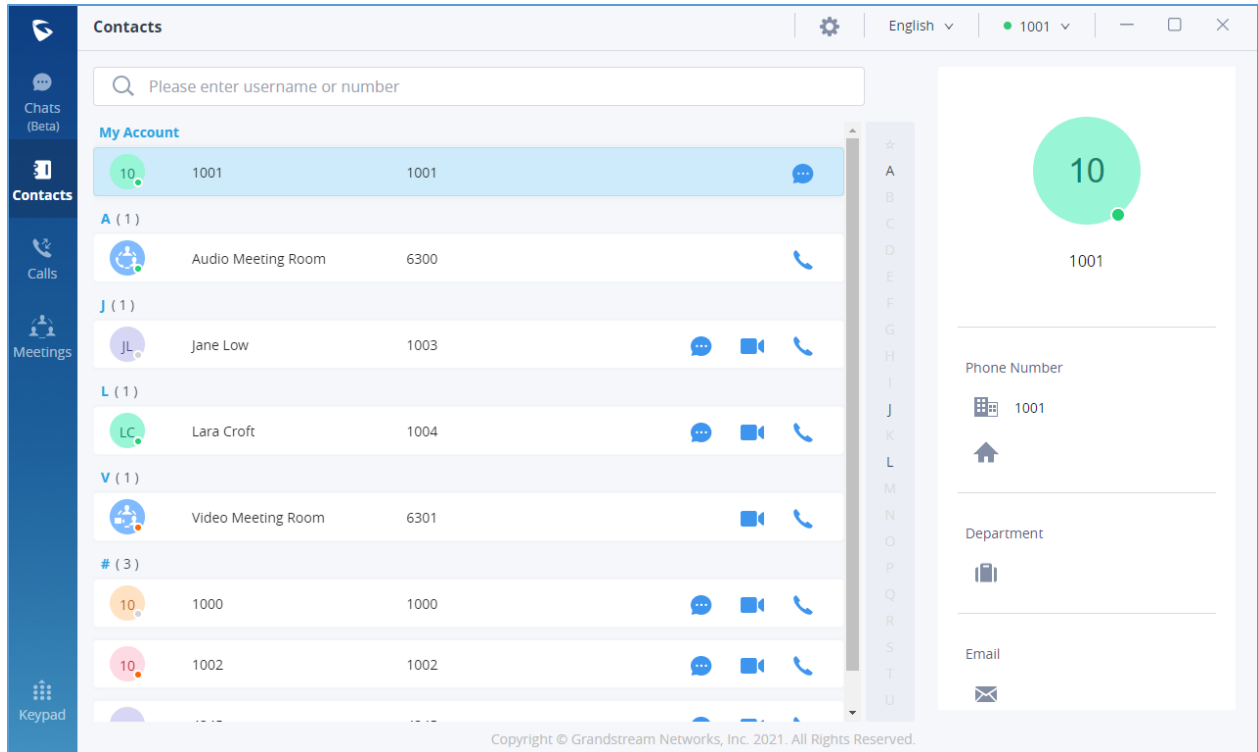 


Figure 3: Wave Desktop Default Page after Login

Wave Password Recovery

Users can reset wave login password by following the below steps:

1. Click on Forgot Password and the below window will displayed, then enter the username



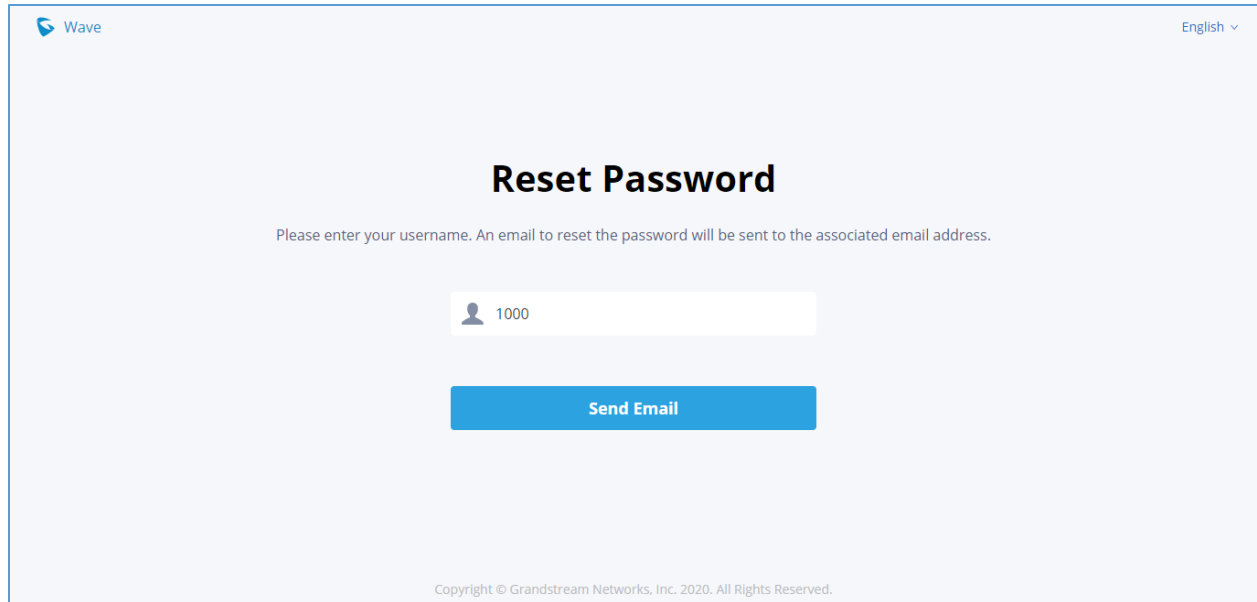


Figure 4: Reset Password – Username

2. After clicking on Send Email a verification code will be given

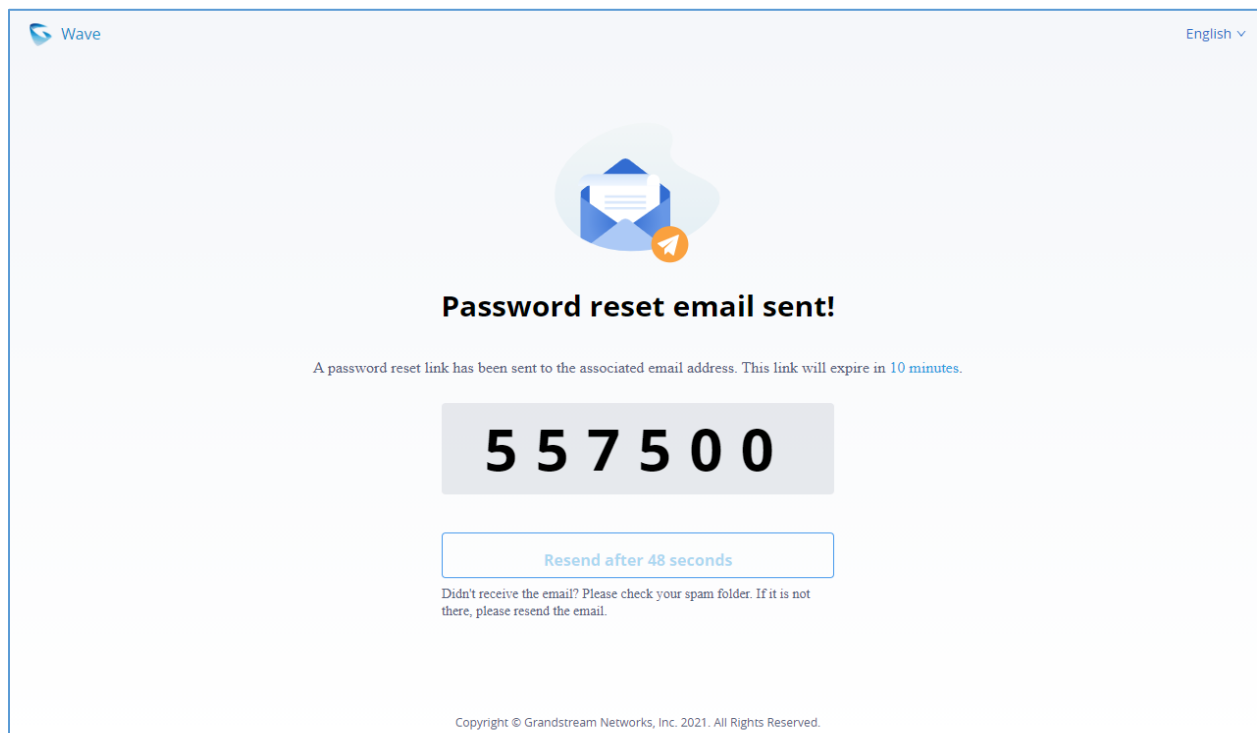


Figure 5: Reset Password - Verification Password

3. And an email will be sent to the email address configured under the extension



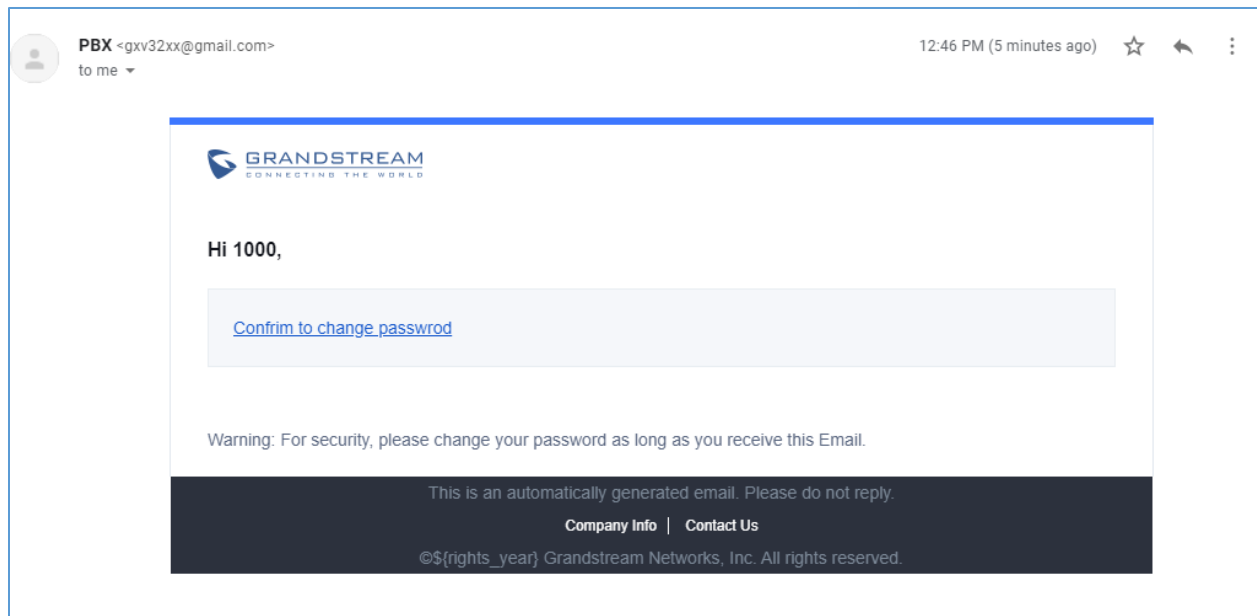


Figure 6: Reset Password – Email

4. On the received email, click on the link to confirm to change password and you will be redirected to the below page, where you will need to enter a new password, re-enter it and the provided verification code, as shown below:

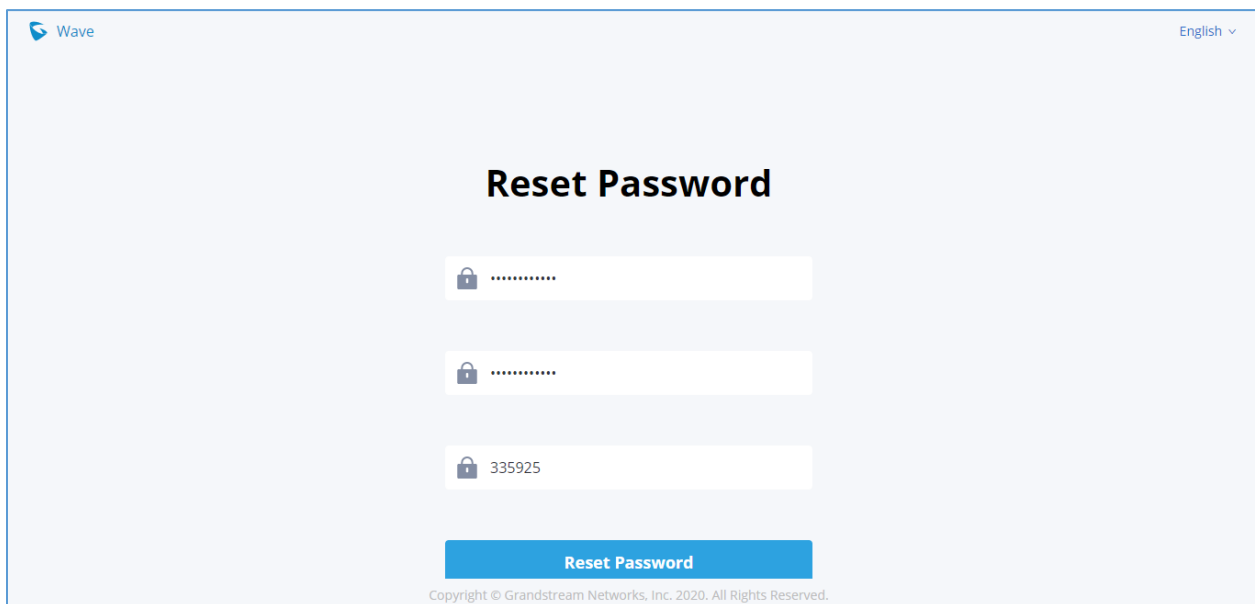

 The image shows a web page titled 'Reset Password'. It has a 'Wave' logo in the top left and 'English' in the top right. The form contains three input fields: two for passwords (indicated by lock icons and dots) and one for a verification code (containing '335925'). A blue 'Reset Password' button is at the bottom. The footer reads 'Copyright © Grandstream Networks, Inc. 2020. All Rights Reserved.'

Figure 7: Reset Password

5. And you will be jumped to the login page after the password is reset correctly.


Note: Users can reset wave login password not the extension SIP password, which means when you reset the Wave's password, the Endpoint phone's SIP account's password will not be reset.



MAKING CALLS

Users can use Wave desktop for point-to-point audio and video calls.

Initiating a Call from Keypad

1. After logging in Wave desktop, click on the Keypad icon  on the bottom left of the page to bring up keypad.

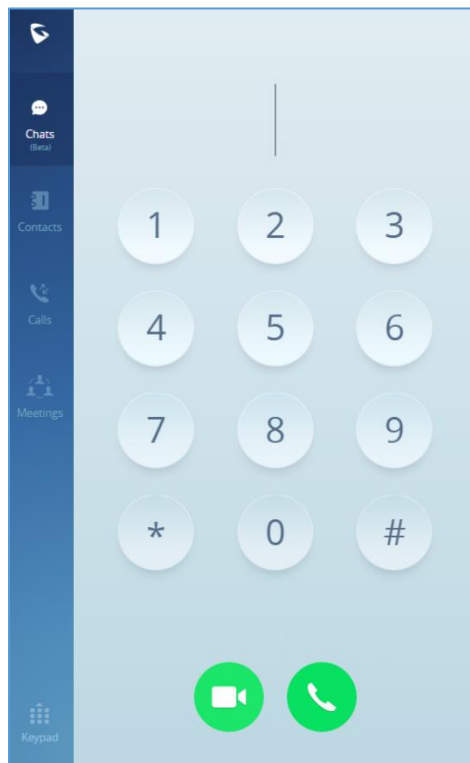





Figure 8: Initiating a Call from Keypad

2. Enter the number to dial.
3. Click on  for video call or click on  for audio call.

Note: All calls are routed via UCM. Users can dial internal extensions, PSTN number and mobile phone numbers as needed.



Call History

After logging in Wave desktop, click on the “Calls” icon  on the left panel to view recent call history.

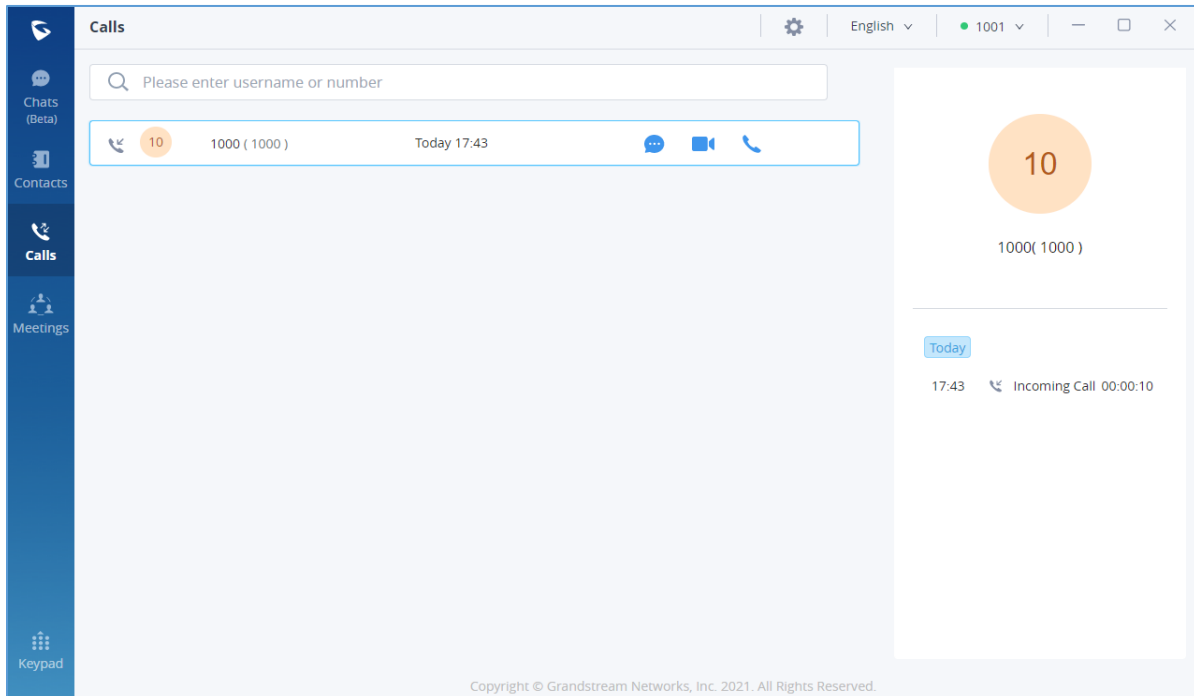 





Figure 9: Call history

1. The user can enter the number or username to search in call history.
2. Scroll up and down to view more call history if existed.
3. For the call history entry, clicking on  to make video call and clicking on  to make audio call or  for chat.
4. When a call history entry is selected, the details of this entry are displayed on the right side.

Contacts

Users can search for a specific contact or a specific number to dial under Contact Tab and Recent Calls Tab.



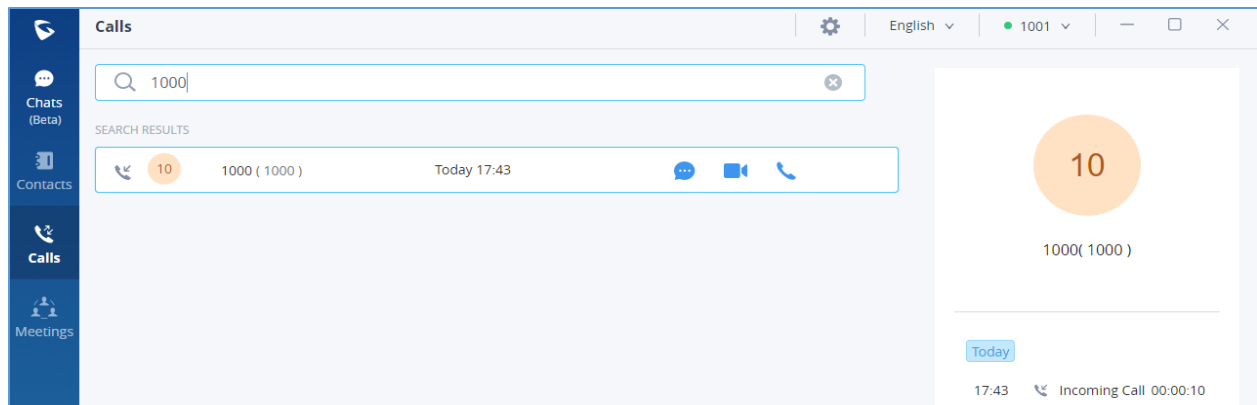 




Figure 10: Contact search

1. In the search bar, enter the number or username to search.
2. Click on the search result. The details of this contact will show on the right.
3. For the search result, clicking on  to make video call and clicking on  to make audio call.
4. Also, by clicking on the contact, you can add it to your favorite contact tab as shown below

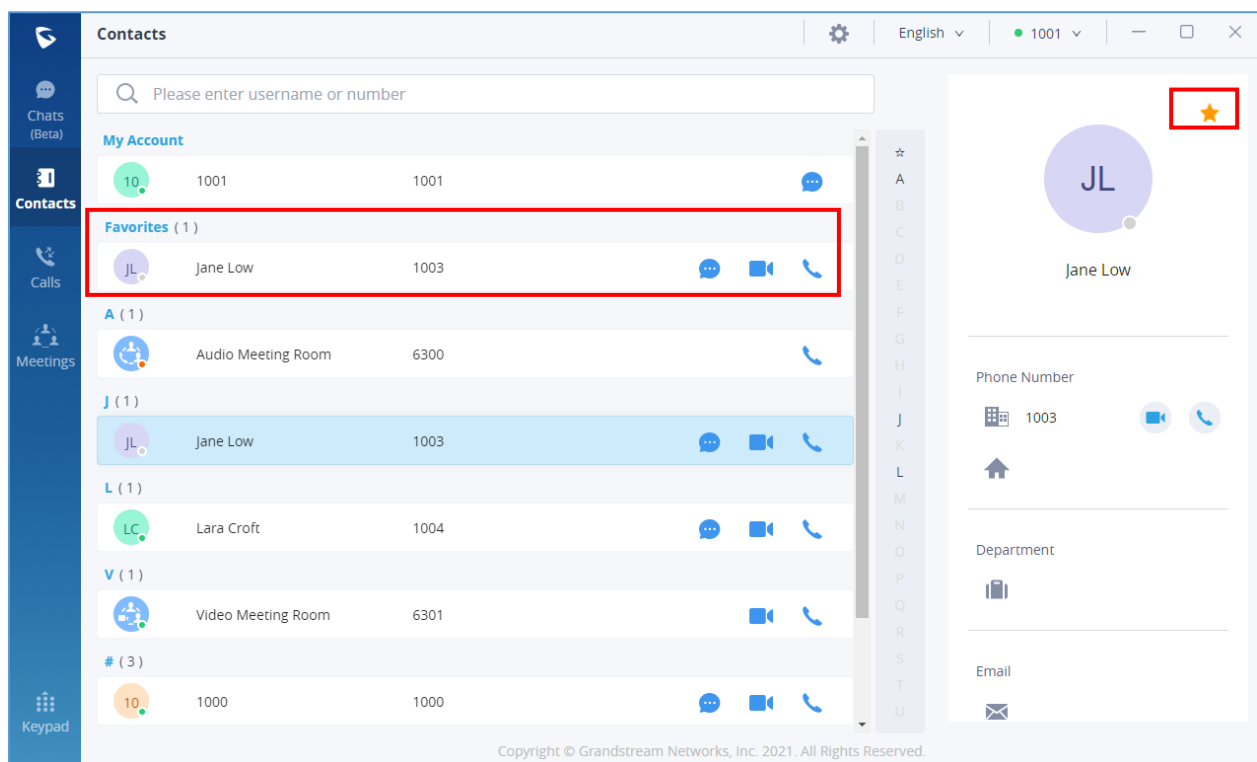 


Figure 11: Favorite Contacts

Note: The contacts displayed in Wave desktop portal contains all UCM extensions, meeting room extensions and LDAP contacts.



ANSWERING CALLS

If the user has logged in Wave desktop, when there is an incoming call, the desktop will prompt an incoming call notification on the right bottom corner. Clicking on the notification will bring up Wave desktop page.

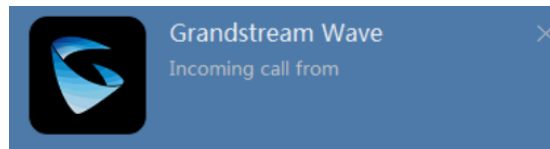







Figure 12: Incoming Call Notification on the Desktop

- If it is an audio call, the user can select  to answer the call, or select  to hang up.
- If it is a video call, the user can select  to answer with video, select  to answer with audio only, or select  to hang up.

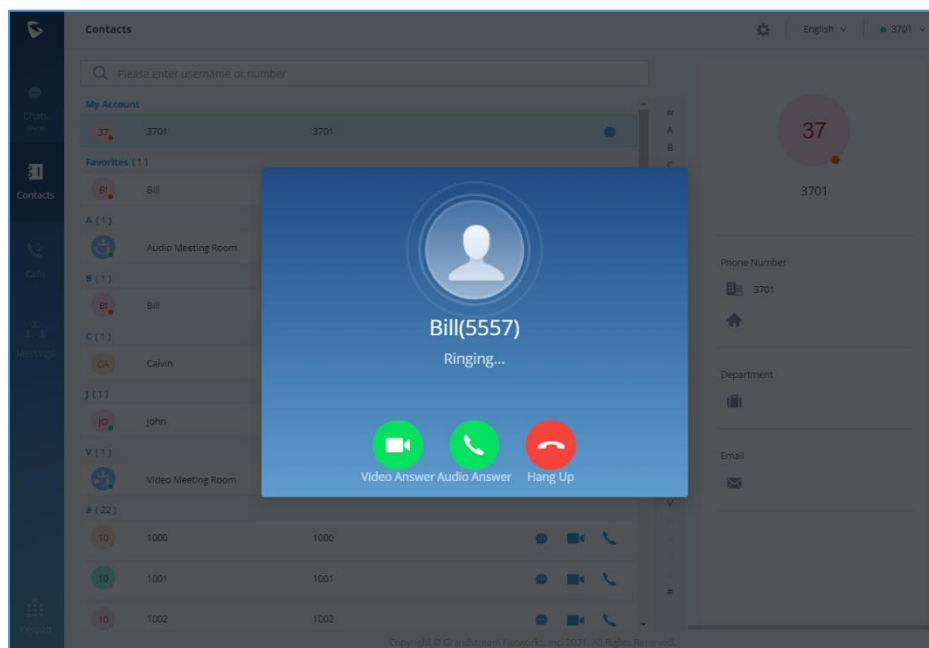


Figure 13: Incoming call prompt on Wave desktop page



DURING A CALL

Once the call is established, users can mute/unmute themselves, enable and disable their video feed, screen share (video calls only), hold/unhold the call, and transfer the current call.

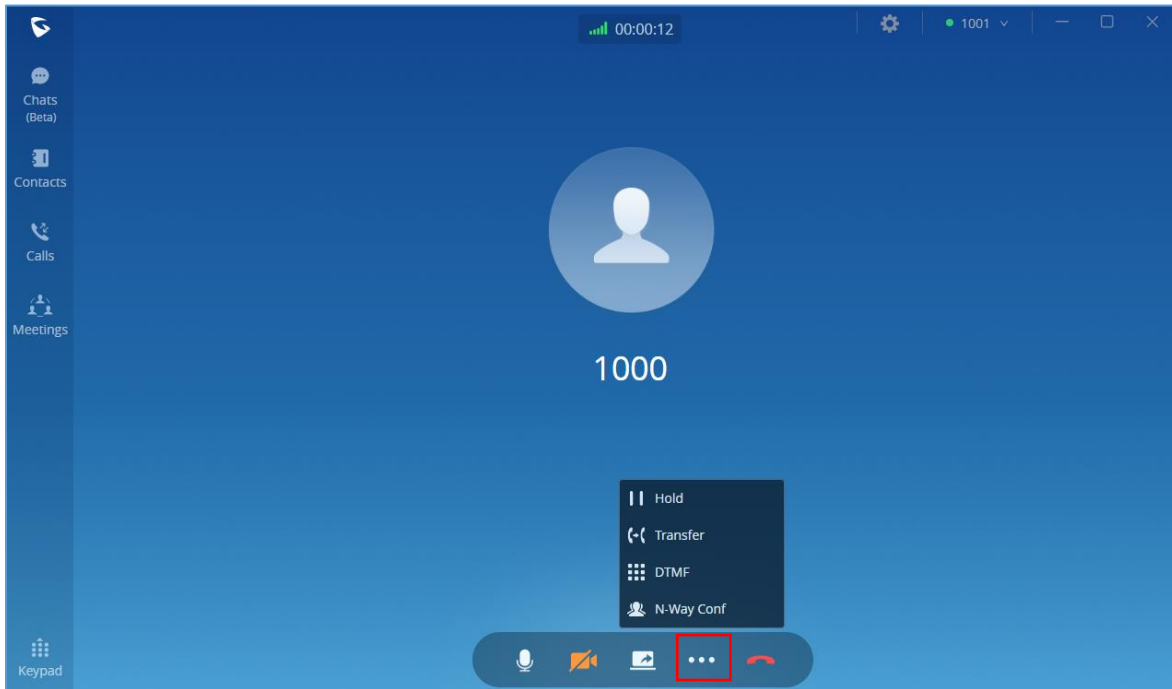


Figure 14: Audio Call Screen

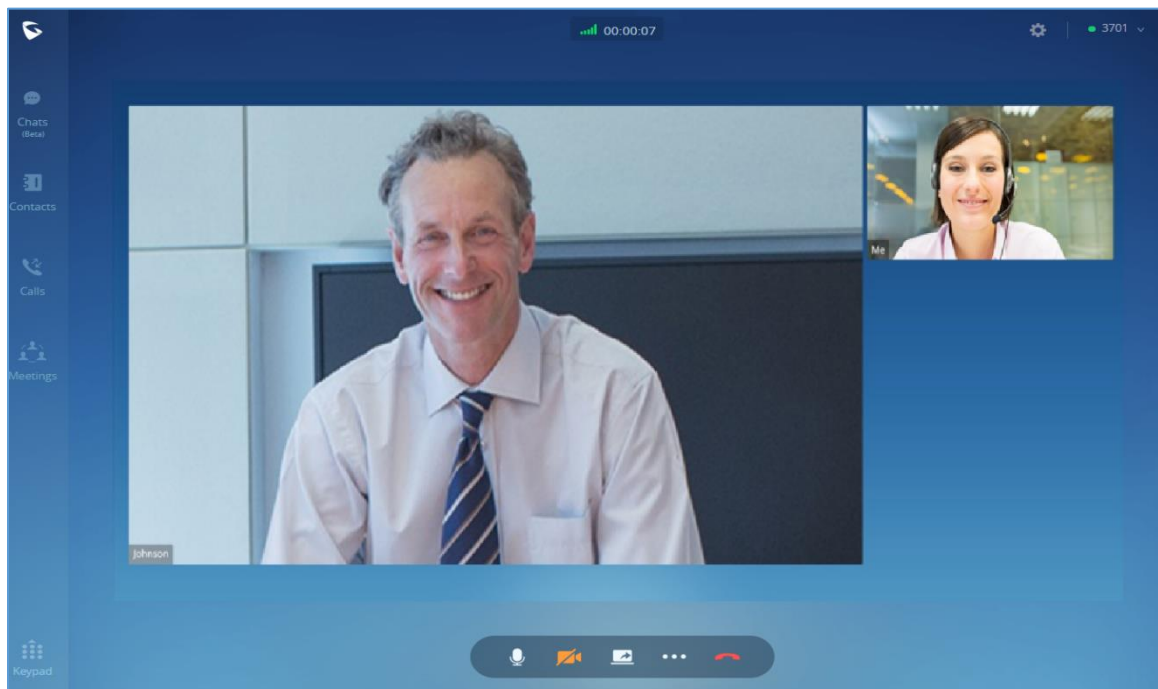



















Figure 15: Video Call Screen



- : View current network connection status including audio and video packet loss.
- : End call.
- : Mute/unmute.
- : Video on/off.
- : Share screen.
- : Click to open more functions such as transfer and hold.
- : After clicking on  for more functions, click on this icon to hold the call.
- : After clicking on  for more functions, click on this icon to transfer the call.
- : After clicking on  for more functions, click on this icon to enter DTMF.
- : After clicking on  for more functions, click the button to transfer both parties' calls to the conference room for the call, so that more people can be added to the conference.

Hold/unhold

1. During call, click on  icon and select  to put the current call on hold.
2. To resume the call, click on .



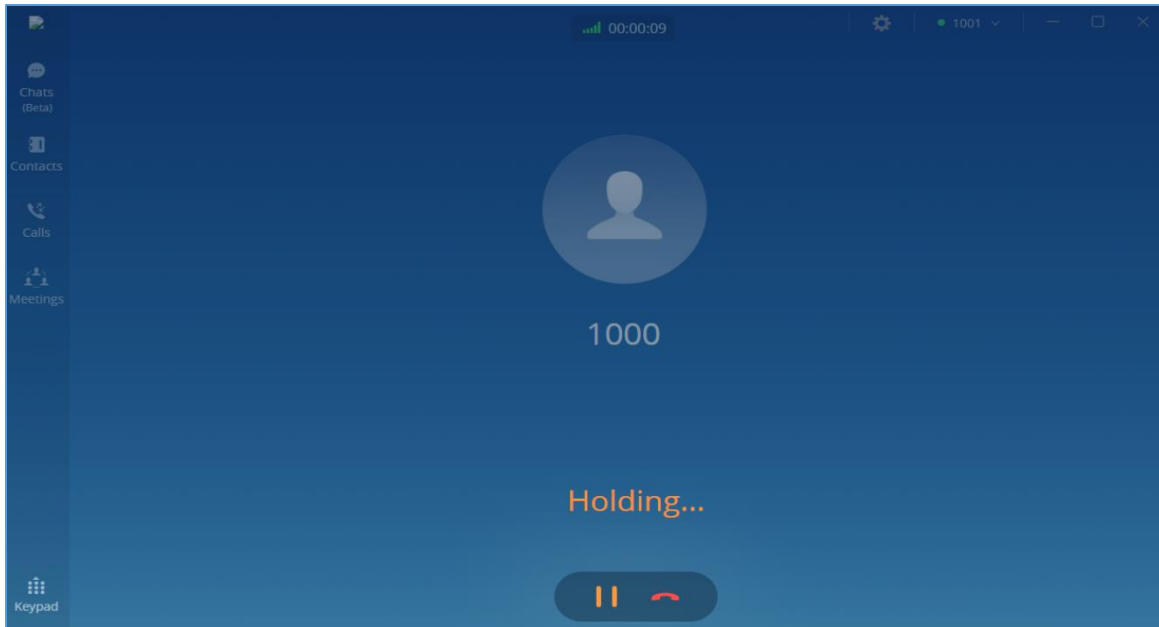




Figure 16: Call On Hold

Mute/unmute

1. During call, click on  to mute the call. The user will not be heard by other parties anymore.
2. To unmute the call, click on . The user can now be heard by the other parties.

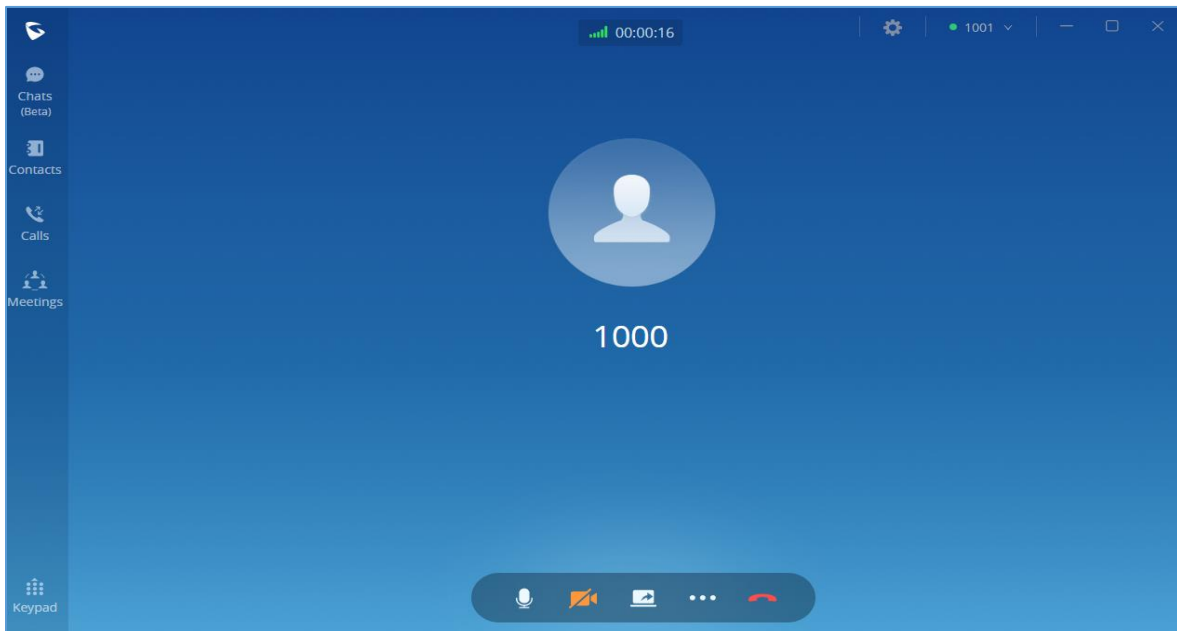



Figure 17: Mute during a Call



DTMF

1. During the call, press the more button to open the menu page, and click the DTMF  button and a soft keyboard will be opened, as shown in the figure below.

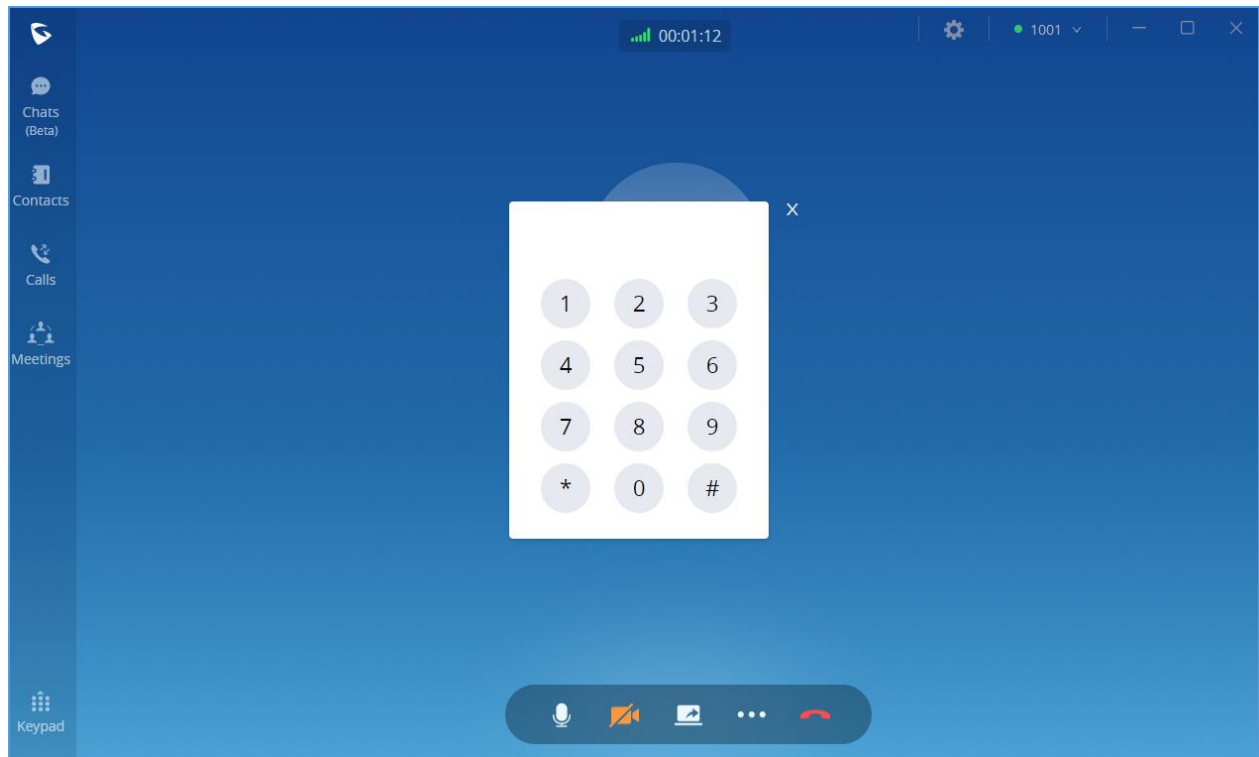 


Figure 18: Open the DTMF Keyboard Interface during a Call

2. Click on the numbers that needs to be entered.



MISSED CALLS

If the user has logged in Wave desktop, when there is a missed call, the desktop will prompt a missed call notification on the right bottom corner. The user can also check missed calls in “Recent Calls” tab.

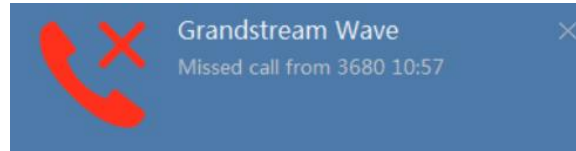


Figure 19: Missed Call Notification on Browser

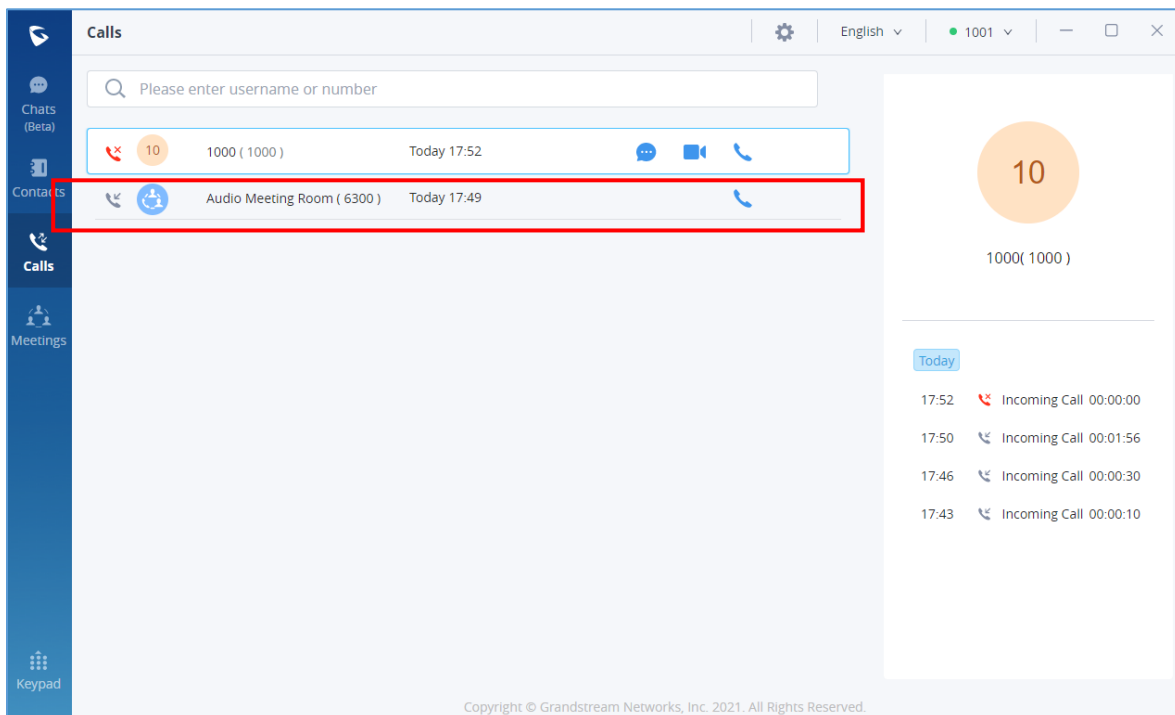 


Figure 20: Recent Calls



Note: If the user is not logged in on Wave desktop, the user will not receive notification on browser.



CALL TRANSFER

Wave desktop users can transfer current call to another party via blind transfer or attended transfer.

Blind Transfer

1. User A is using Wave desktop. Establish call between User A and User B.
2. On User A Wave desktop call screen, click on  icon and select transfer .
3. Enter User C's number as the number to transfer the call to. The number will be listed in the search result.
4. Click on "Blind" to perform blind transfer.
5. User C rings. User A hangs up automatically. When User C answers, the call between User B and User C will be established.

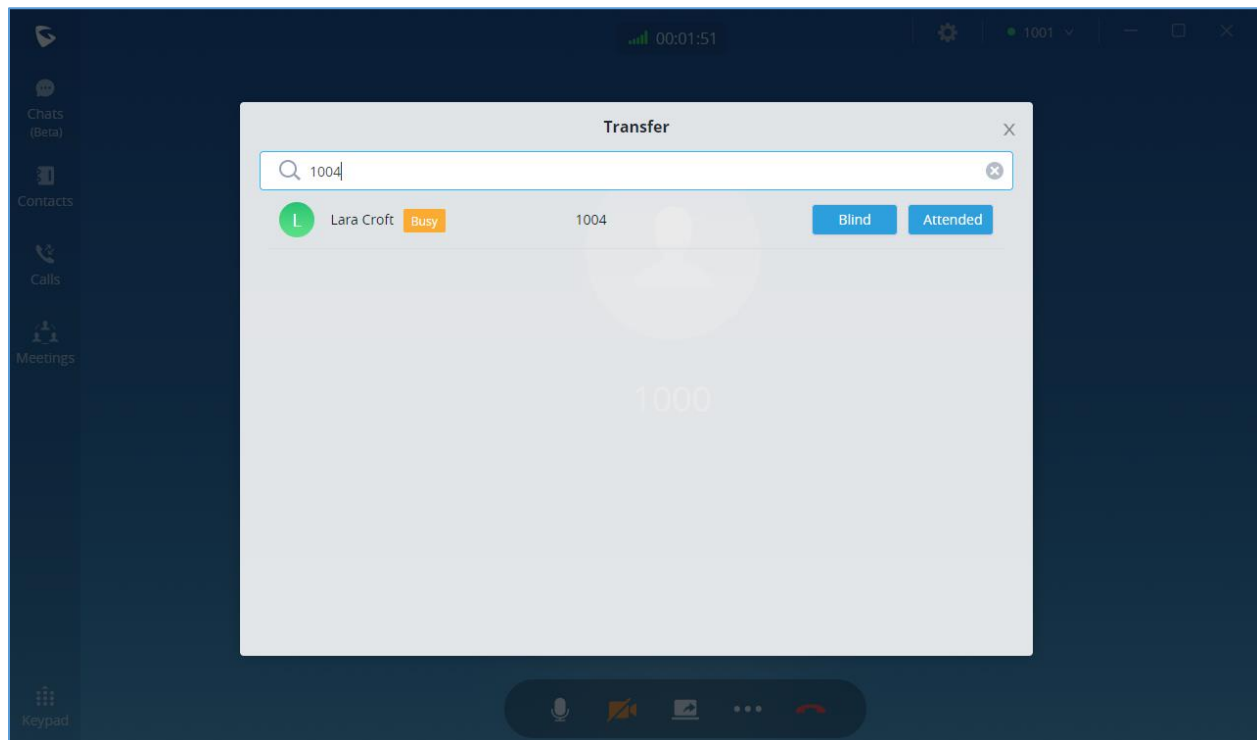 




Figure 21: Blind Transfer



Attended Transfer

1. User A is using Wave desktop. Establish call between User A and User B.
2. On User A Wave desktop call screen, click on  icon and select transfer .
3. Enter User C's number as the number to transfer the call to. The number will be listed in the search result.
4. Click on "Attended" to perform attended transfer.
5. User C rings.
6. If User C answers, User A and User C will establish the call. User A can end the call to complete transfer. If User C does not answer the call, User A can end the call now to complete transfer. When User C answers, the call between User B and User C will be established.

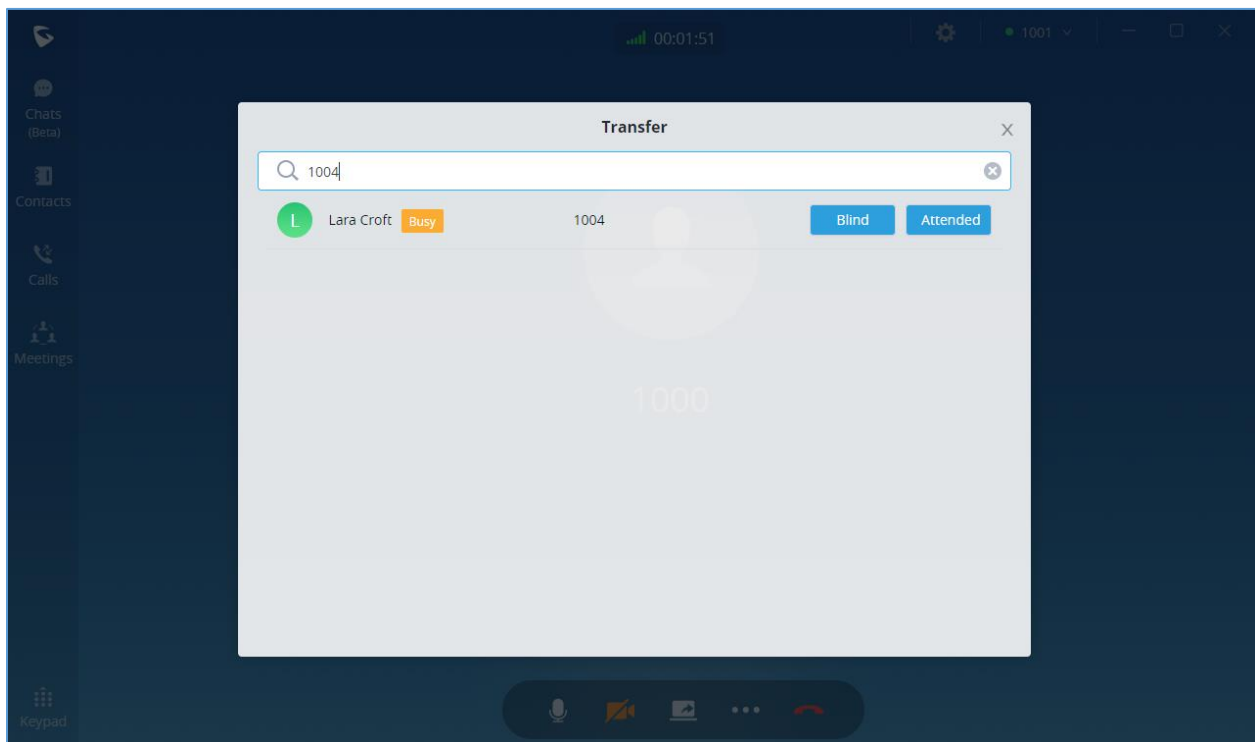 


Figure 22: Attended Transfer - I



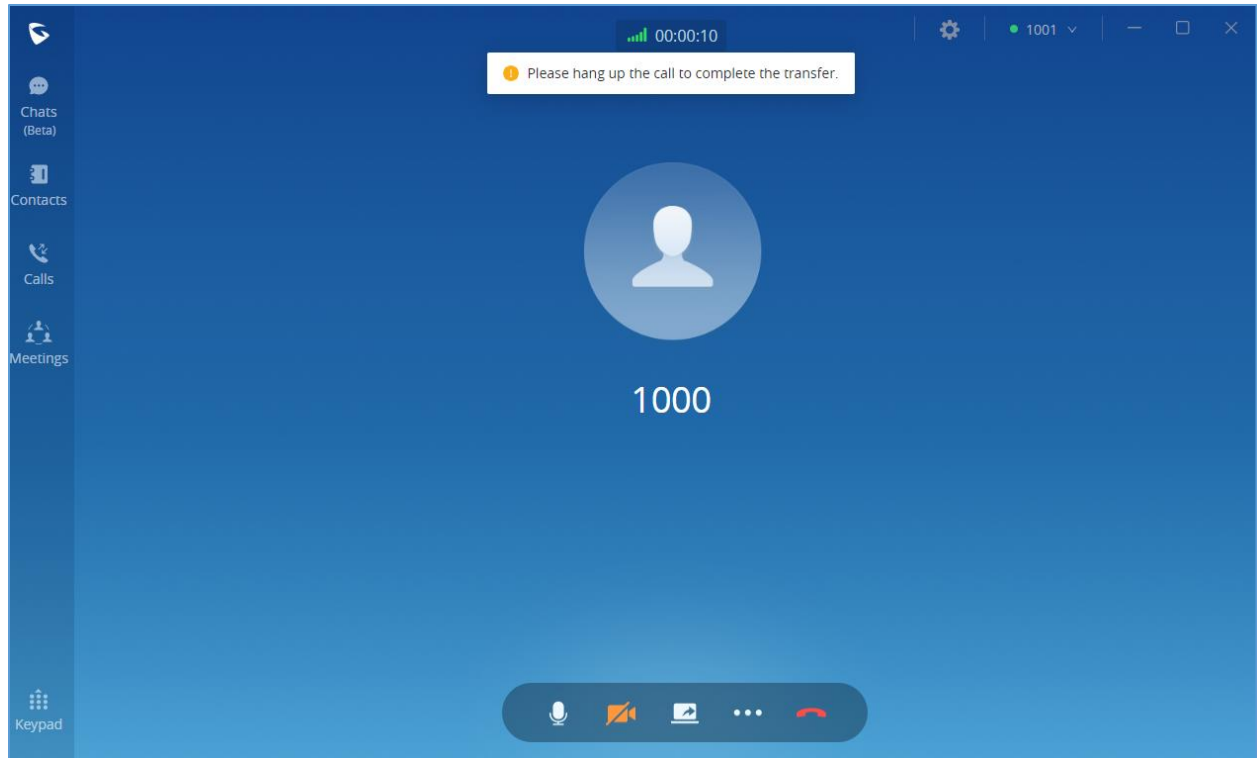



Figure 23: Attended Transfer - II



CHAT

Wave desktop allows users to conduct a peer-to-peer chat or a group chat. After logging in Wave desktop, click on "Chat" on the left panel to open the chat page.

Start a single chat

Method 1: After clicking on the "Chat", user need to click on  button, then select the other party he/she wants to chat with and click OK to enter the single chat interface.

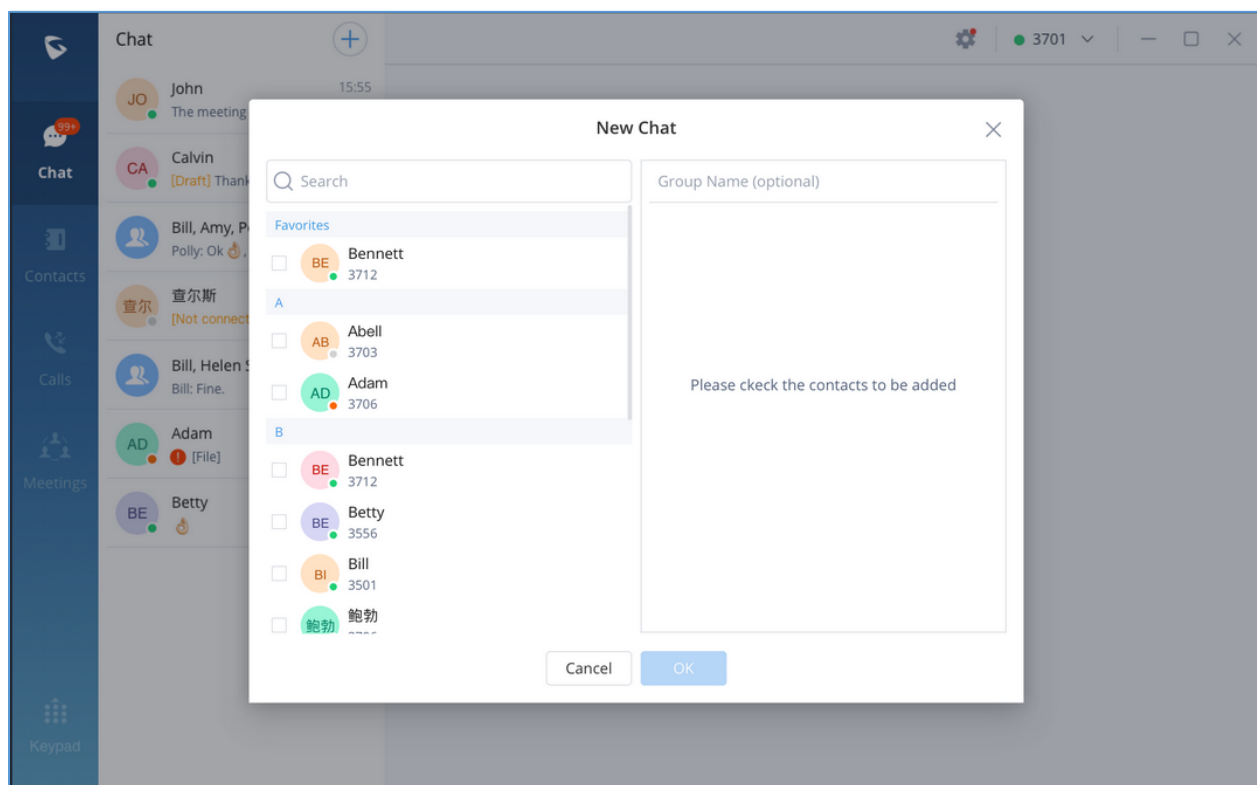 





Figure 24: Adding Chat Interface


Method 2: User can click on "Contact" tab, find the contact he/she wants to chat with, and click  button, the user will be redirected to the chat section.



Method 3: User can click on "Calls" tab, find the contact he/she wants to chat with, and click  button to initiate the chat.

Method 4: User can click on "Keypad" tab, find the contact he/she wants to chat with among the calls log, and click  button to initiate the chat.



Start a group chat

Method 1: After clicking on the "Chat", user need to click on  Button, then select multiple contacts he/she wants to chat with, enter the group name, and click OK to enter the group chat interface.

Method 2: In the single chat window, user need to click on , then on  to invite more contacts to form a group chat.

Send messages

In the chat interface, sending text, emoticons, files/pictures are supported.

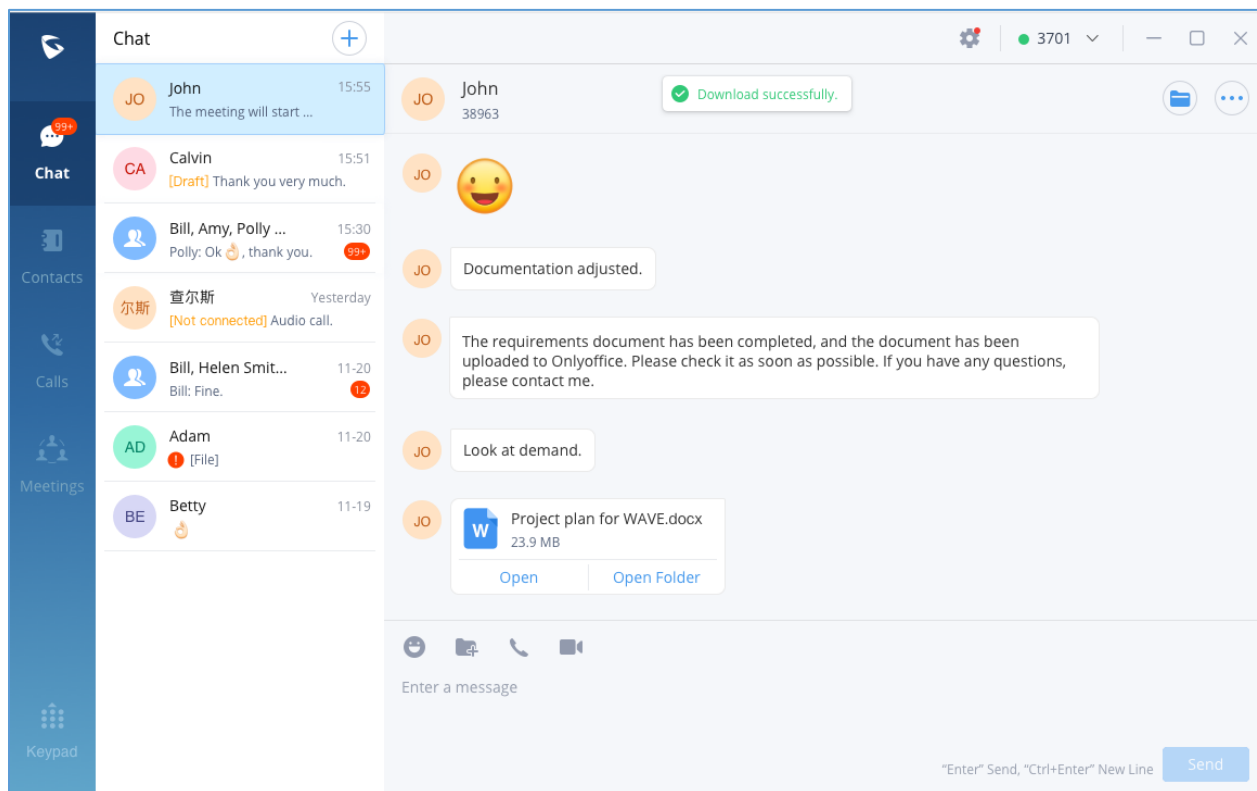 


 



Figure 25: Chat Interface

Notes:

- Text: Support sending any characters within 1000.
- For new line, press Shift+Enter to wrap.
- For emoticon, click on , it supports selecting one or more emoticons to send.



- For file/picture, click on , or drag a file to this window, you can select a file/picture to send from the local computer, and the file size is limited to 20M.
- For call, if it is a single chat interface, click on  to call the other party. If it is a group chat page, click on the same button to initiate a group conference call, all group members will be called by default, and group chat messages will be brought into the chat box in the conference call.
- For video call, only the single chat interface can initiate a video call; click on  to initiate a video call the other party.
- @Everyone/someone: Only supported in group chats. Enter @ in the input box to send messages from @all or someone, and the other party will remind you of @Message.

Copy message

In the chat interface, select a message, with right-click select "Copy" to copy the content of the message. Currently files and pictures do not support copying.

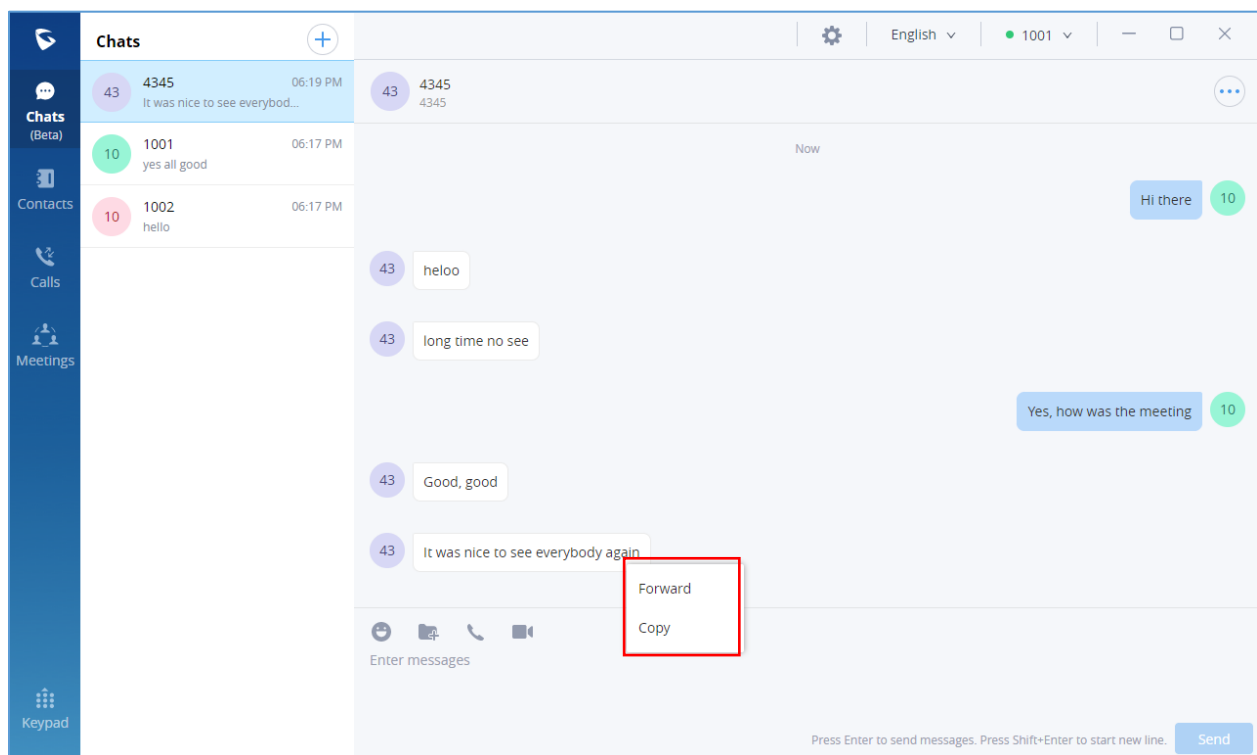 


Figure 26: Copy Message



Forward message

Step 1: In the chat interface, select a message, with right-click select "Forward".

Step 2: Check to forward to a contact or group.

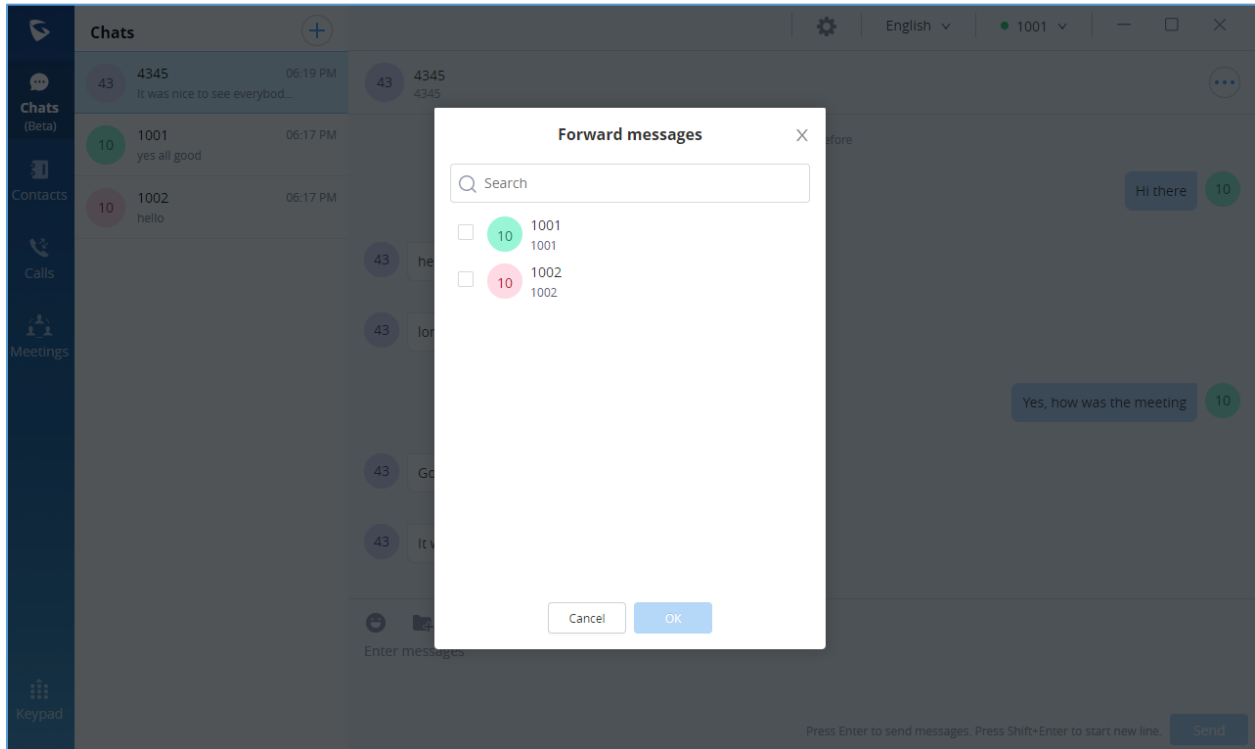 


Figure 27: Forward message

Step 3: (Optional) Write a message and click the "OK" button to forward the content of this message to the selected person or group.

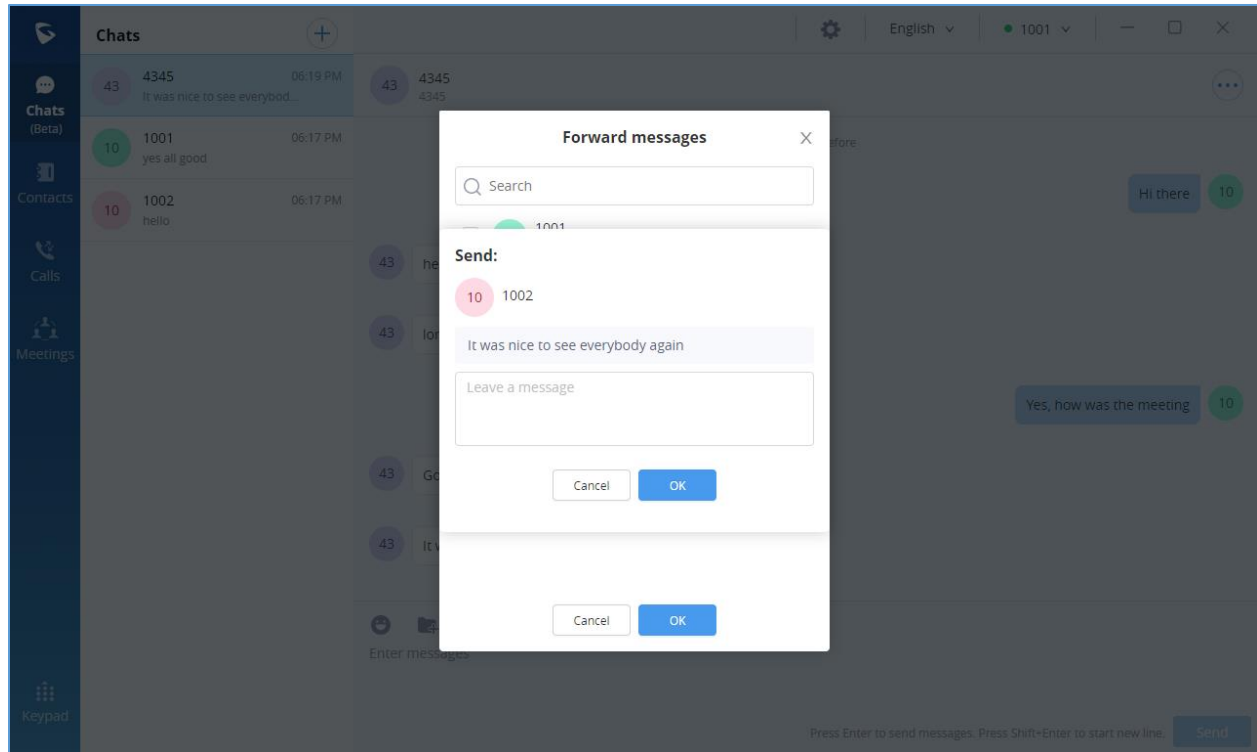 


Figure 28: Leave a Message

Unread message

In the "Chat" tab, users can view the latest unread messages. Tap to enter the chat interface to view new messages.



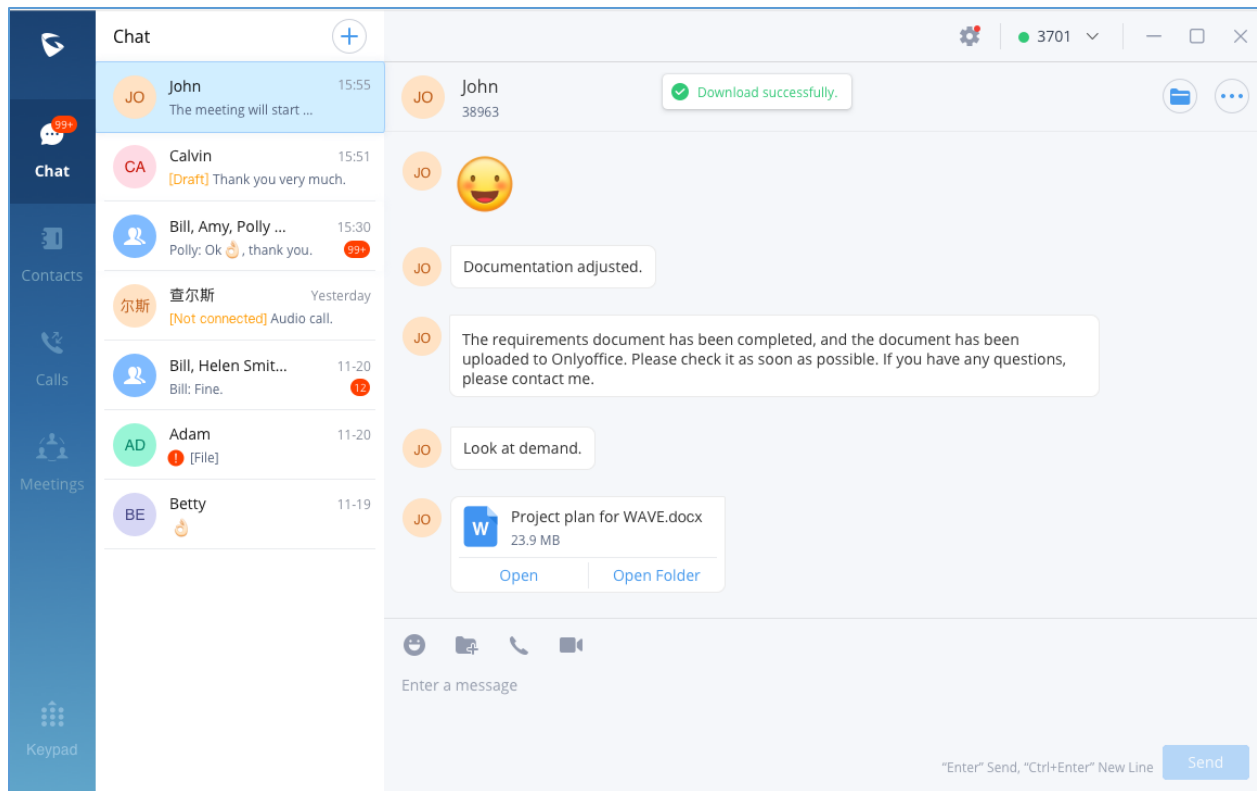


Figure 29: Unread Messages

In addition, by clicking on the chat box of a person or a group, users can view the history of chatting.

Group management

Change group name

Both the group owner and group members can change the group name and to do so, kindly follow below steps.

Step 1: On the chat page, open the group chat page and click on the upper right corner to view group information.



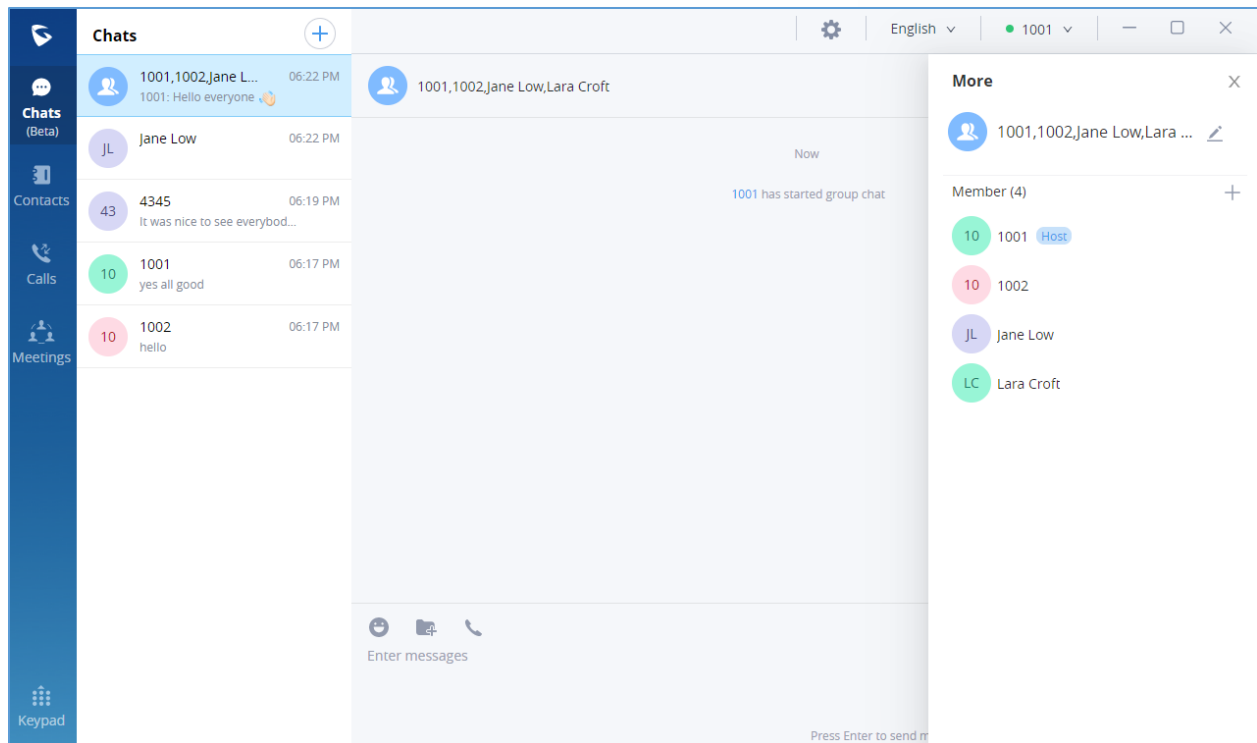 



Figure 30: Change Group Name

Step 2: By clicking on  , users can modify the group name. The group name supports a maximum of 80 characters.

Step 3: After the modification is completed, click anywhere to save successfully.

View group members

Both the group owner and group members can view the group members.

Step 1: On the chat page, open the group chat page and click on the upper right corner to view group members.



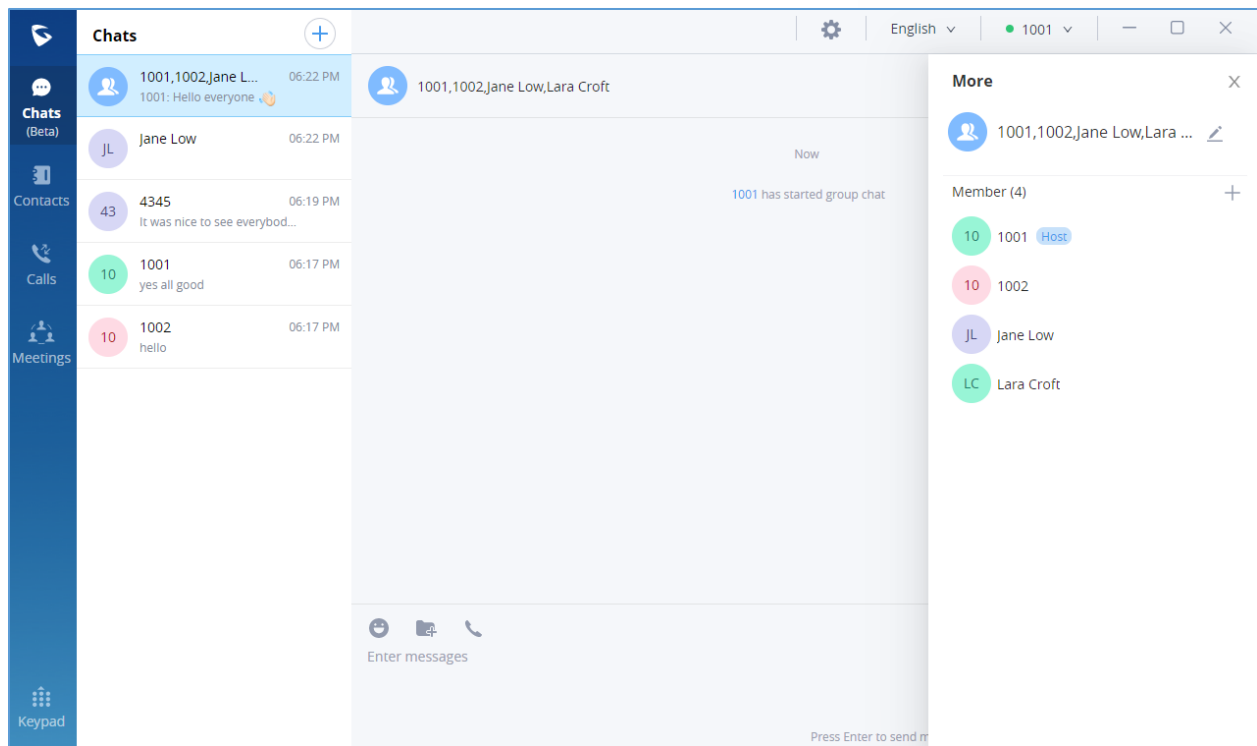 


Figure 31: View Group Members

Step 2: Click on the avatar of the group member to view the detailed information of the member, send messages, and make calls.



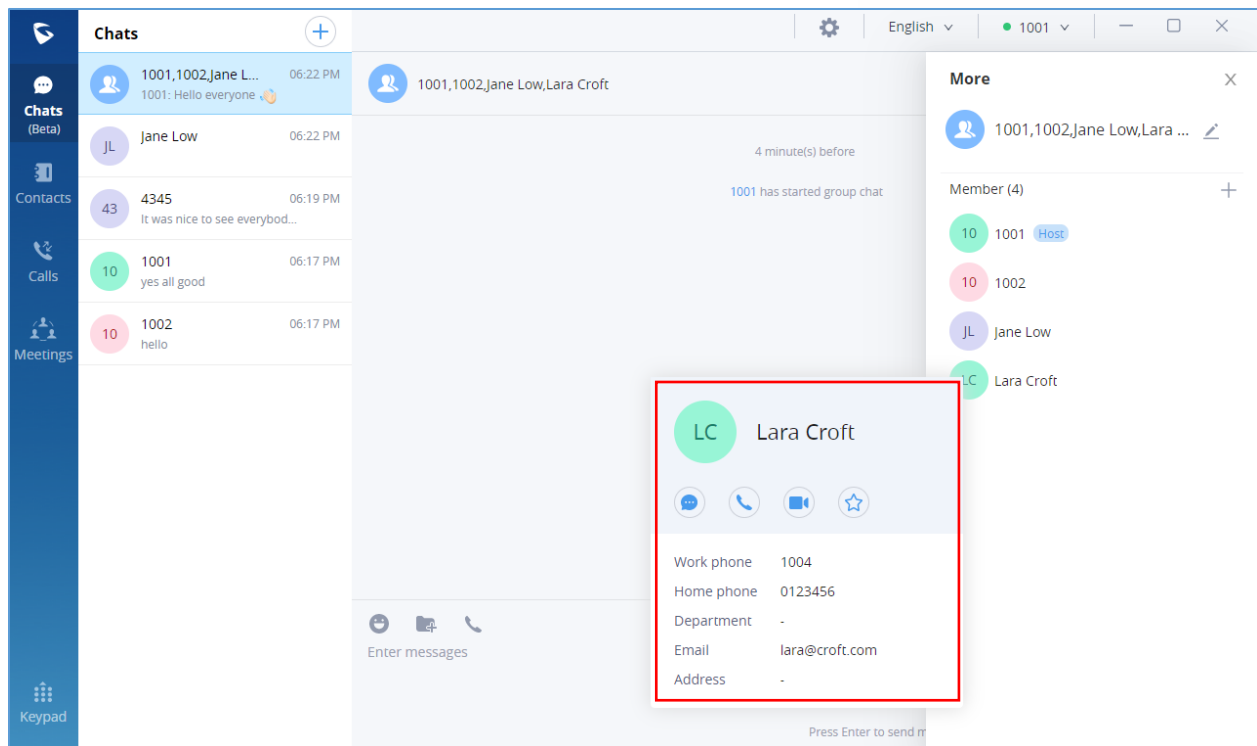 



Figure 32: Group Member Business Card Interface

Add group members

Both group owners and group members can add group members.

Step 1: On the chat page, open the group chat page and click on the upper right corner, then click on  to enter the contact selection page.



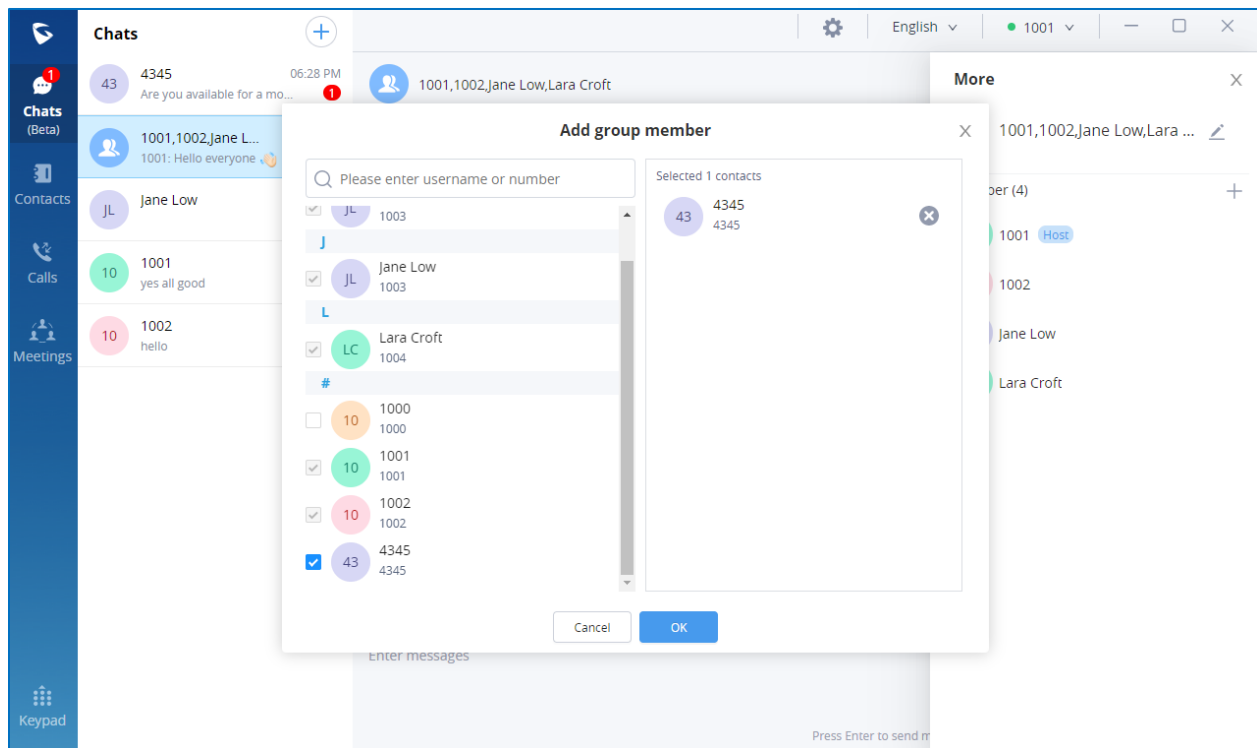 


Figure 33: Add Group Member Interface

Step 2: Select the contact you want to add or search for a contact by name and select it.

Step 3: Click the "OK" button to immediately add the selected contact to the group chat.

Notes:

1. New members who join the group chat cannot view the historical chat history of the group.
2. The maximum group membership is 200 people.

Delete Group Members

Only the owner can delete group members.

Step 1: On the chat page, open the group chat page and click on the upper right corner, and hover over the profile picture of the member you want to delete.



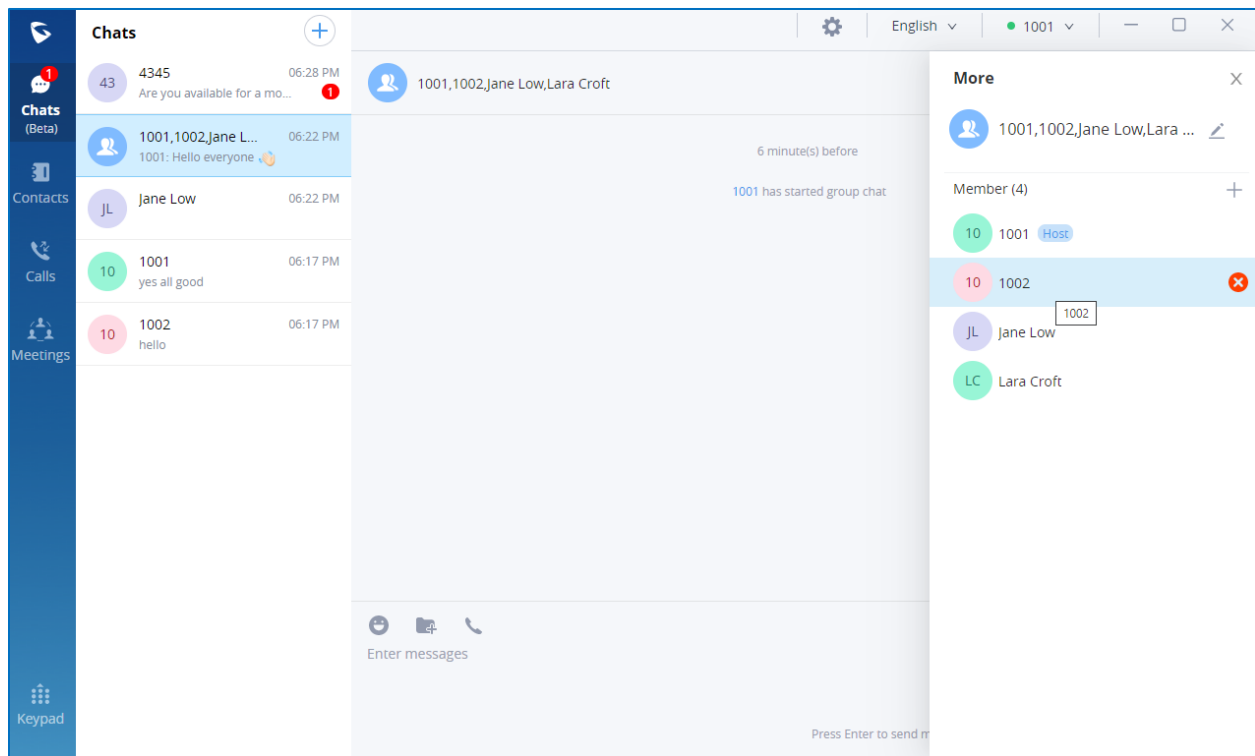 


Figure 34: Delete Group Members Interface

Step 2: Click behind the member to delete this member.

Step 3: After confirming the deletion, this group member exits the group chat and can no longer view the group chat messages.

Note: After deletion, only the deleted member will be notified, not everyone.

Exit Group

Only group members can leave the group.

Step 1: On the chat page, open the group chat page and click on the upper right corner, then click "Exit Group Chat" at the bottom.

Step 2: After confirming to log out, you will no longer accept new messages from this group and cannot view the group history messages.

Note: After logging out, only the group owner will be notified, not everyone.



MEETING ROOM

Users can join an audio or video meeting on UCM by dialing the room number. After logging in Wave desktop, click on “Meetings” on the left panel to open meeting page.

Users can create meeting to start now by selecting **Meet Now**, or schedule meeting by clicking on **Schedule Meeting** on the top of this page.

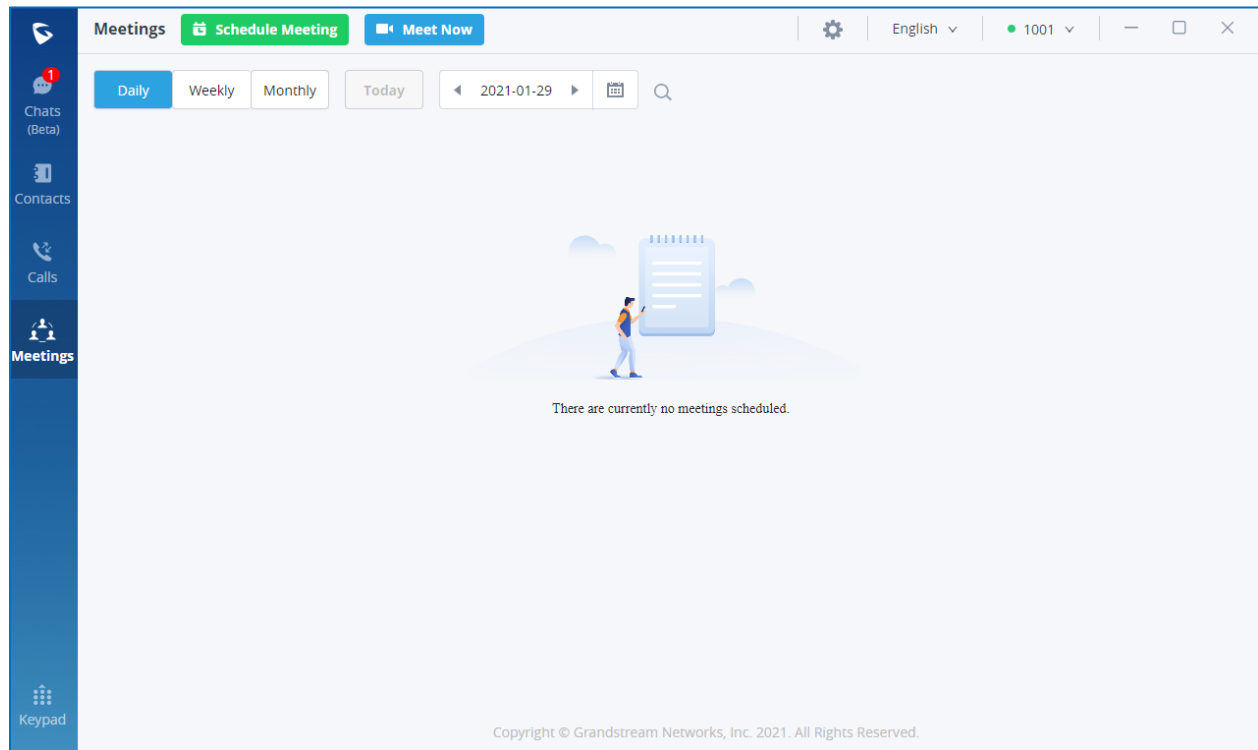 


Figure 35: Wave Meetings Desktop Page

Users can view scheduled meeting by selecting “Daily”, “Weekly”, “Monthly” and defining the date range.

Click on  to search meeting by meeting subject, creator, meeting room number.



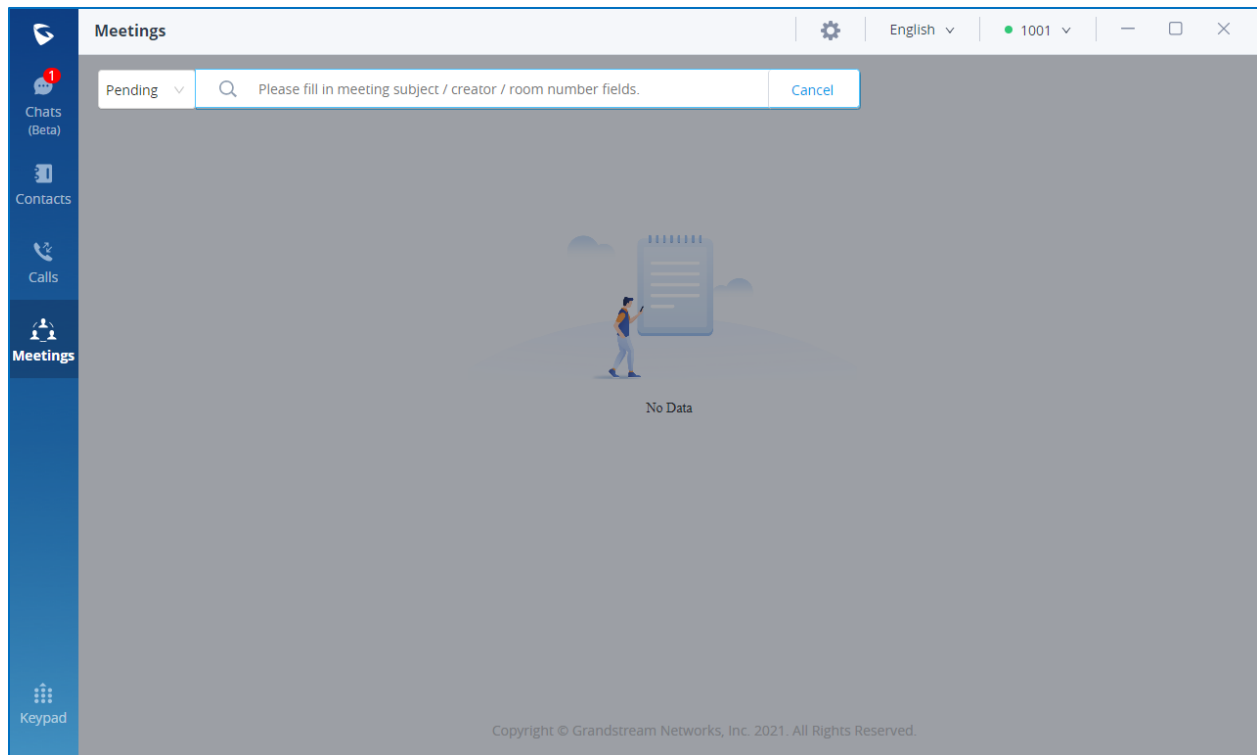 


Figure 36: Search Meeting

Meet Now

1. On the top of meeting page, click on **Meet Now**.

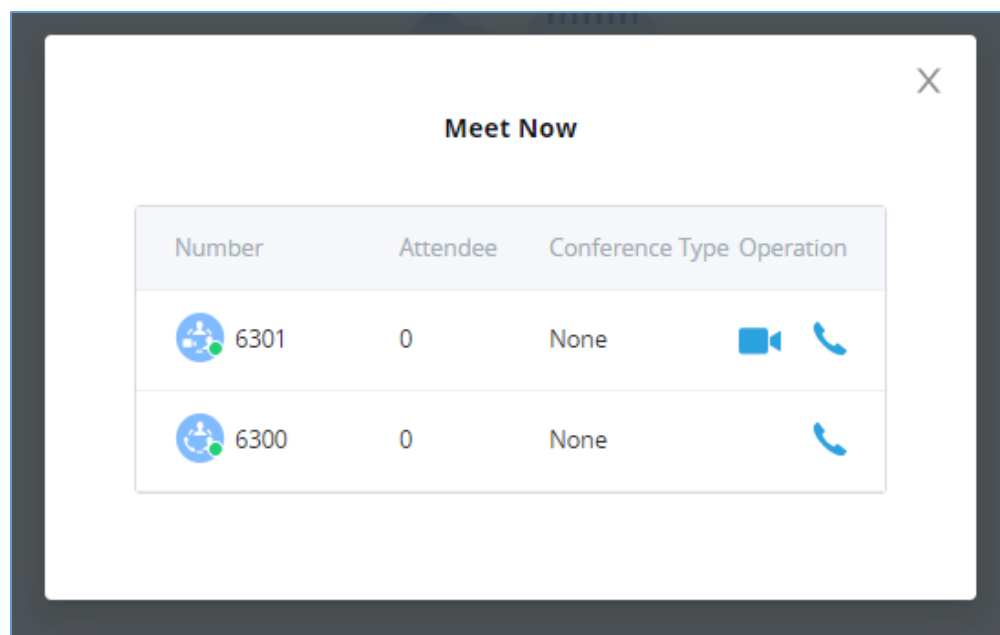 






Figure 37: Meet Now



2. Select the video conference room or the audio conference room to use. If the room number has camera

icon  and video option  available, it means this is a video conference room.

3. Click on  to join meeting with video, or click on  to join meeting with audio only.

4. Before joining meeting, select the role to be participant or moderator. If the meeting room has password and user has selected joining meeting as participant, the user must enter the meeting password. If the user selects to join as moderator, the user must enter the moderator code.

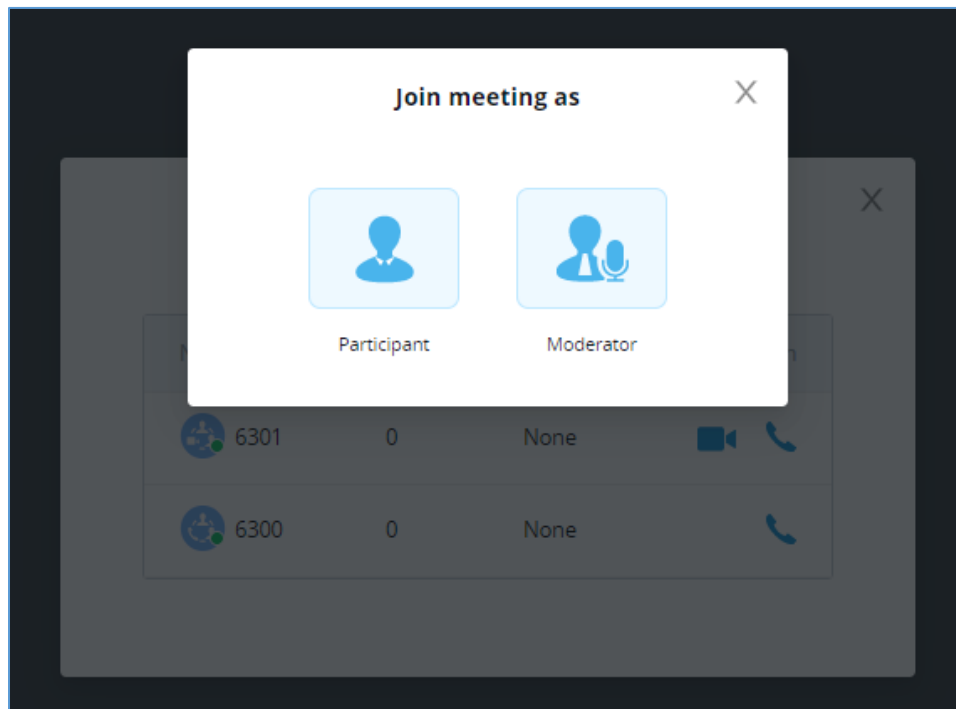 


Figure 38: Select Role

5. Click on “Join” to join the meeting now.

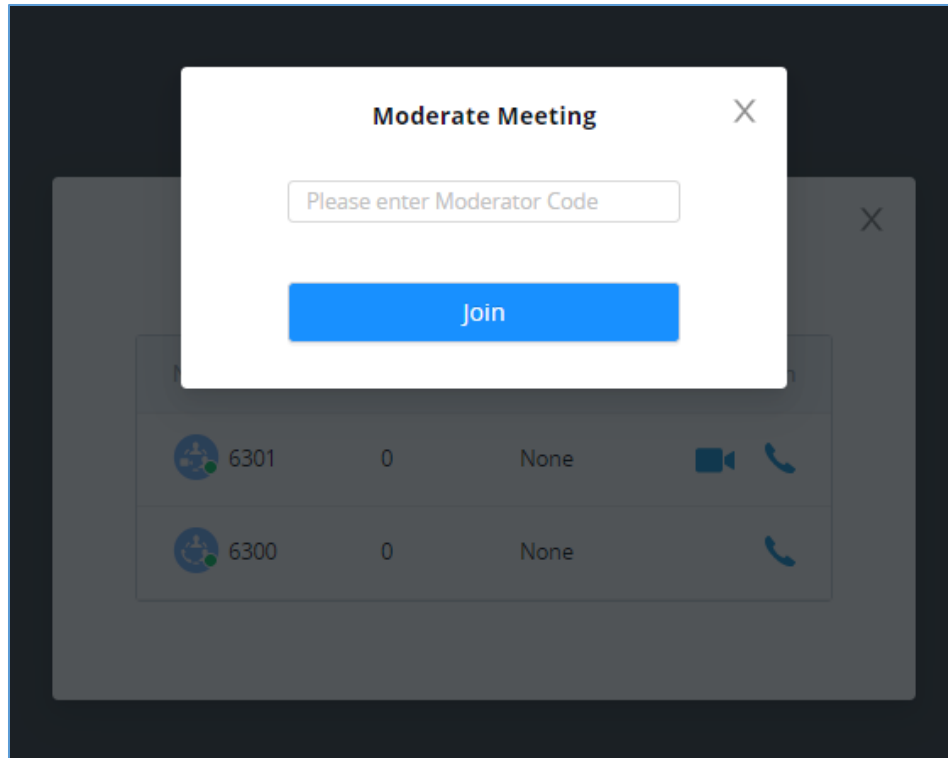 


Figure 39: Enter Moderator Code

If users know the meeting room number, they can also join meeting immediately by dialing the meeting room number or dialing from contacts which has meeting room number listed.

Note: The audio or video meeting room must be created and pre-configured by UCM admin before users can join any meetings.

Audio Conference

To join audio conference, users could select audio conference room when starting meeting using “Meet Now”, or simply by dialing the audio conference room number. Below the figure showing the call interface after joining audio conference room.

Note: If the participant / chat icons are not displayed after the user joins audio conference room, it means this conference room does not have the option “Enable CEI Notify” enabled. To enable this option, please contact UCM admin to configure it on the UCM admin portal. Please note that when “Enable CEI Notify” is enabled, it could potentially affect UCM's system performance especially if there are many conference notifications. Please check with UCM admin to evaluate whether it should be enabled or not.



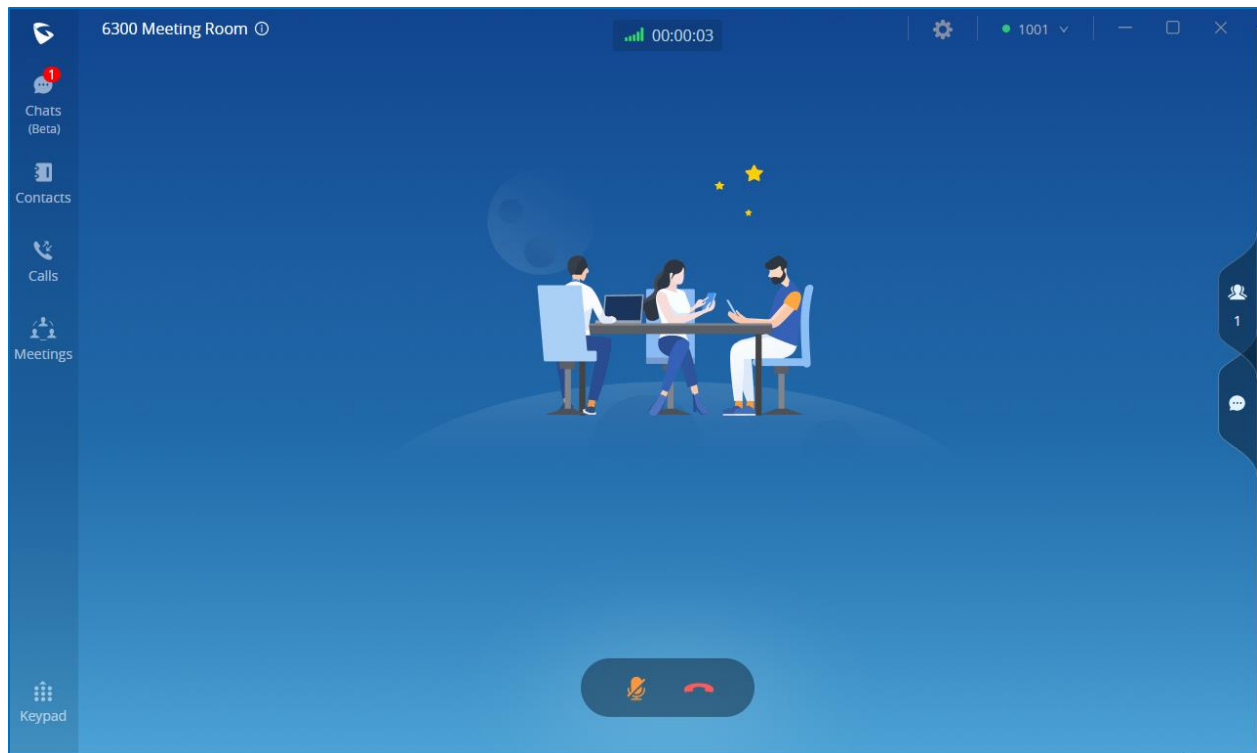








Figure 40: Audio Conference Room

Below are the available meeting control options:


- : View network condition status.
- : End call.
- : Mute/unmute.
- : View participant list. After opening participant list, the user can view participant mute/unmute status, search for participant, modify display name and chat with participants.
- : Chat. Click to open chat window and enter chat text.

To Become meeting moderator:

- Click on the icon  on the upper right of the Wave desktop page and select “**Moderate Meeting**”. The user will be required to enter the moderator code. After entering the correct moderator code, the user can become the moderator.

After becoming meeting moderator, the user has below additional meeting control options:



- : Invite participants by selecting individual participant, selecting contact groups or inviting a remote conference bridge.

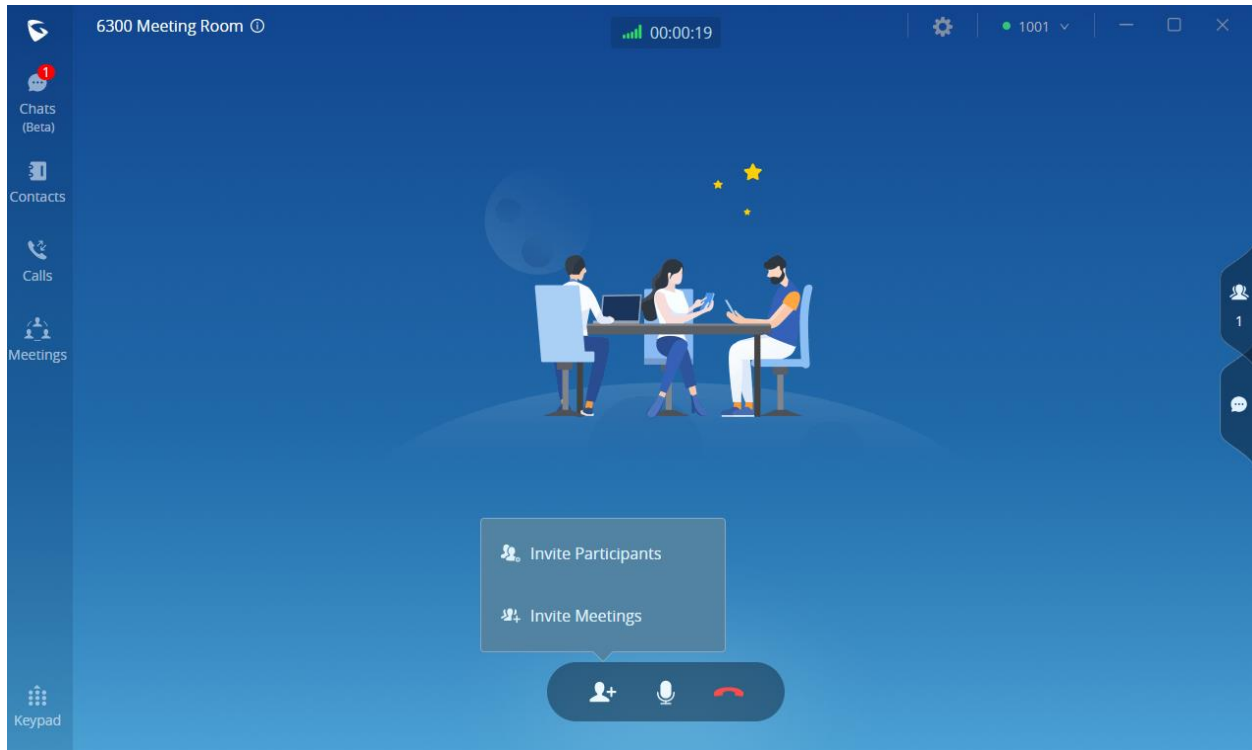



Figure 41: Invite participants to audio conference room

- Manage participants:

Click on icon  on the right-side menu to open participant list. The moderator can mute/unmute participants, turn on / off video for participants, transfer moderator to another participant, remove participant from meeting and etc. The moderator can also mute all participants and lock the meeting room (no one can join the meeting room).



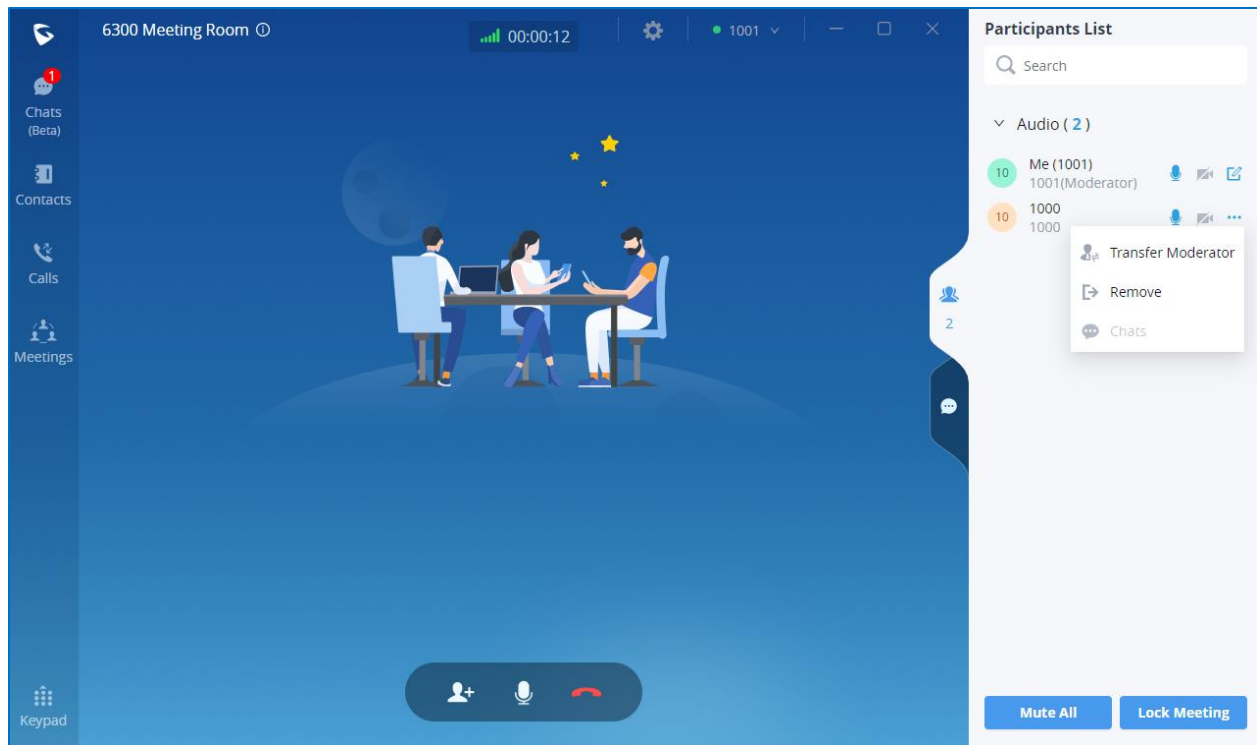 


Figure 42: Managing Meeting Participants in Audio Meeting Room

Video Conference

To join video conference, users could select video conference room when starting meeting using “Meet Now”, or simply dialing the video conference room number. Below the picture showing the call interface after joining video conference room.



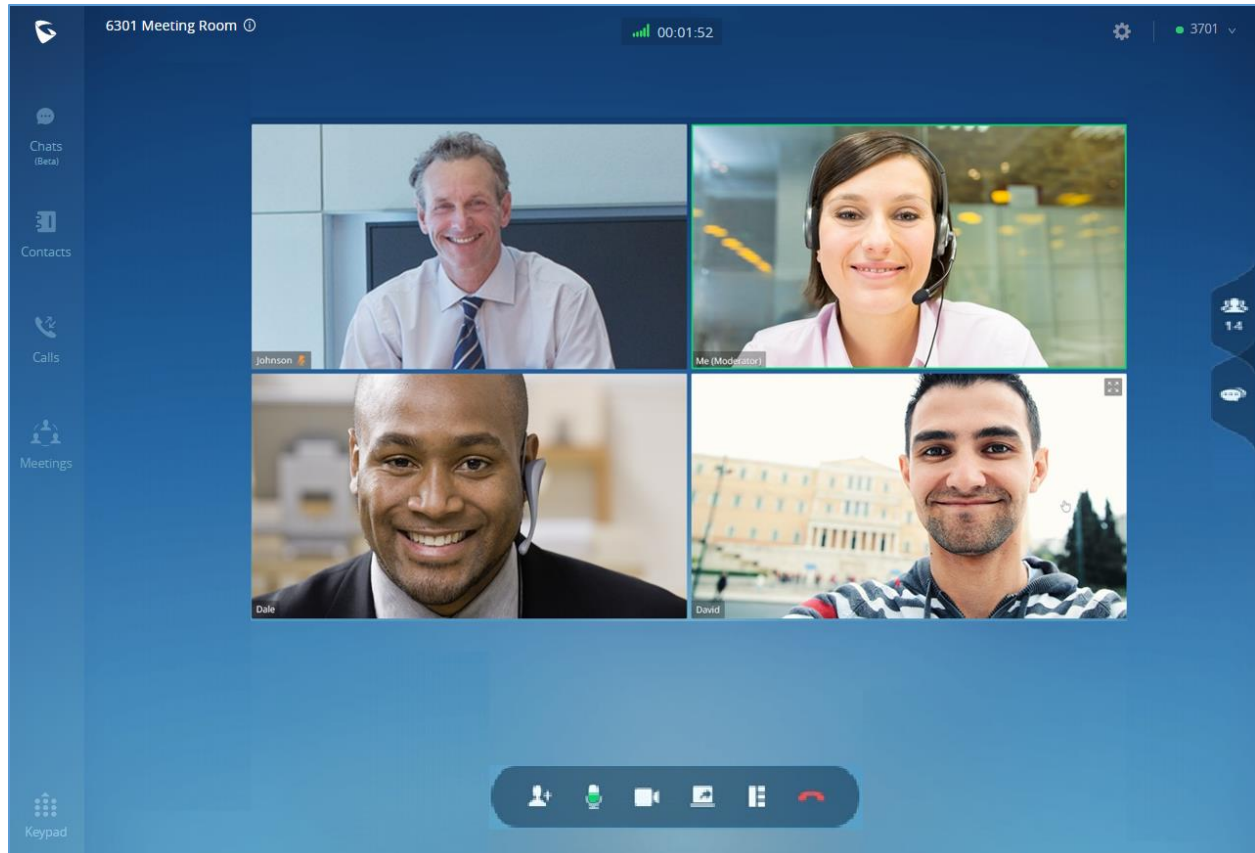 











Figure 43: Video Conference Screen


Below are the available meeting control options:


- : View network condition status such as packet loss for video and audio.
- : Invite participants. If the UCM admin has enabled “Allow User Invite” for the meeting room, any participant in the meeting can invite other participants. Otherwise, only moderator can invite other participants.
- : Mute/unmute.
- : Video on/off. Click to enable/disable local video feed.
- : Screen sharing. Click to start screen sharing. Only one participant can share screen at a time. If a participant already shares screen, this icon will be grey and other participants cannot click on this icon to share.
- : Switch video layout to be tiled or focus. Please note this only affects local video layout and does not change other participant’s video view.



- : End call.
- : View participant list. Click to open the participant list. The user can view participants' mute/unmute status, search for participant, modify display name, chat with participants and etc.
- : Chat. Click to open chat window and enter chat text.

To Become meeting moderator:

- Click on icon  on the upper right of the Wave desktop page and select “Moderate Meeting”. The user will be required to enter the moderator code. After entering the correct moderator code, the user can become the moderator.
- Manage participants:

Click on icon  on the right-side menu to open participant list. The moderator can mute/unmute participants, turn on / off video for participants, transfer moderator to another participant, remove participant from meeting and etc. The moderator can also mute all participants and lock the meeting room (no one can join the meeting room).

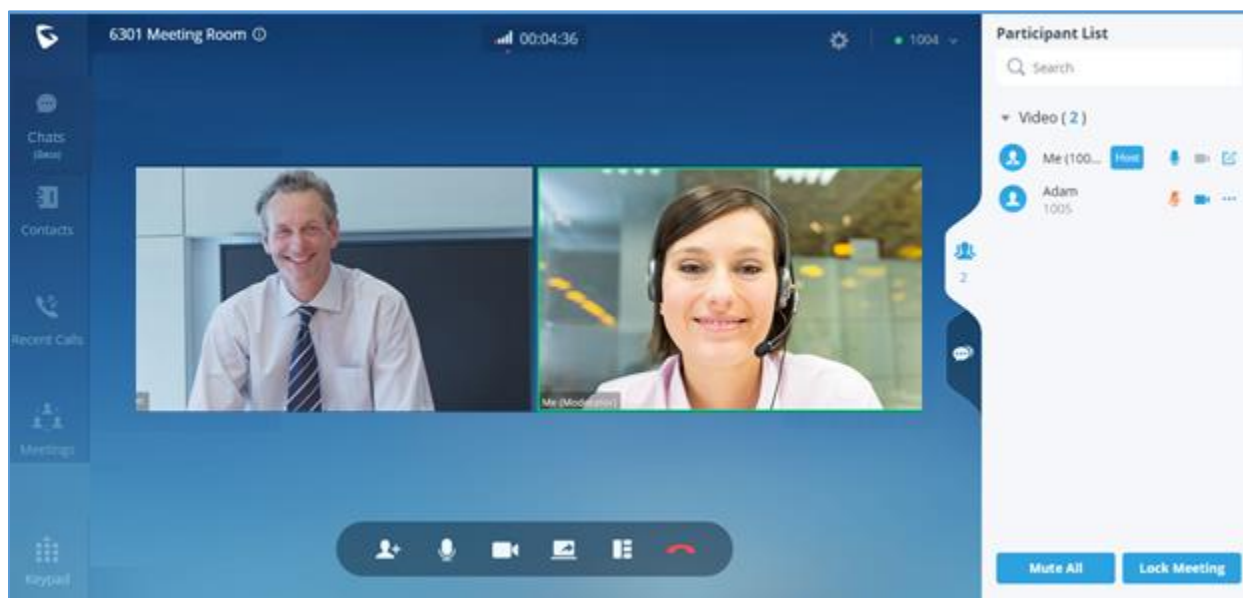 



Figure 44: Managing Participants in Video Conference

Screen Sharing

During point-to-point video call or video conference, users can share screen to present to all the other participants.

After the users click on icon , a prompt will be displayed for users to select whether to share entire



screen, application window or the desktop browser tab, then click on “Share” on the prompt to start sharing.

Note: only one user can share screen at a time.

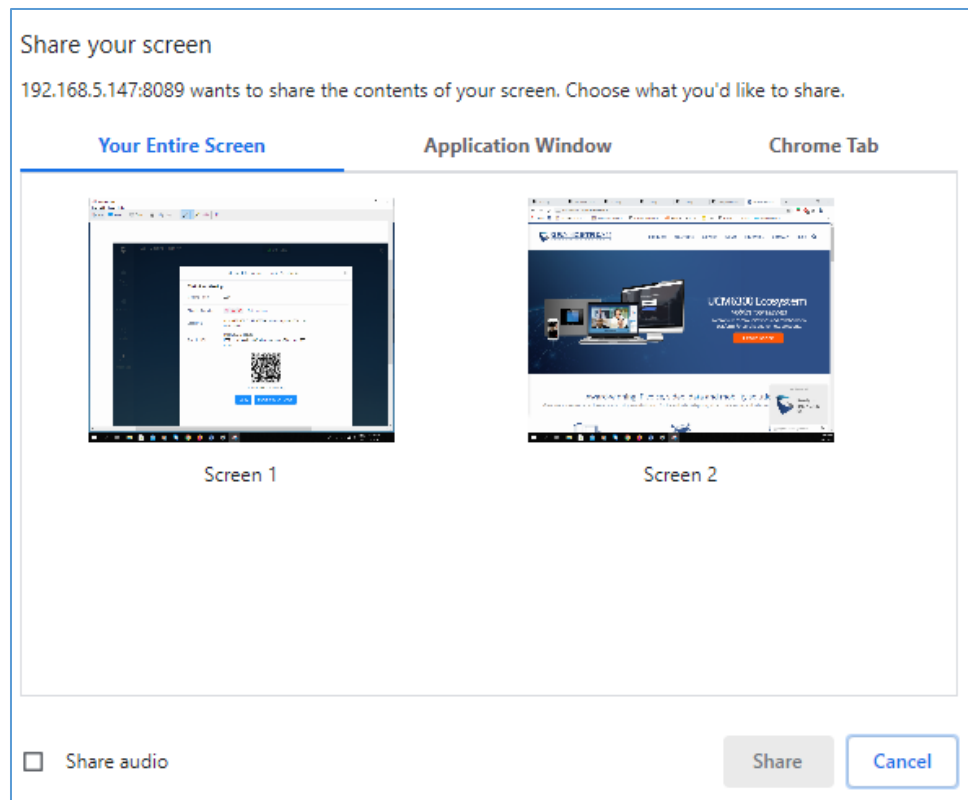 


Figure 45: Screen Sharing

During screen sharing, the users can double click on the sharing screen or video screen to enlarge the display area to full screen.

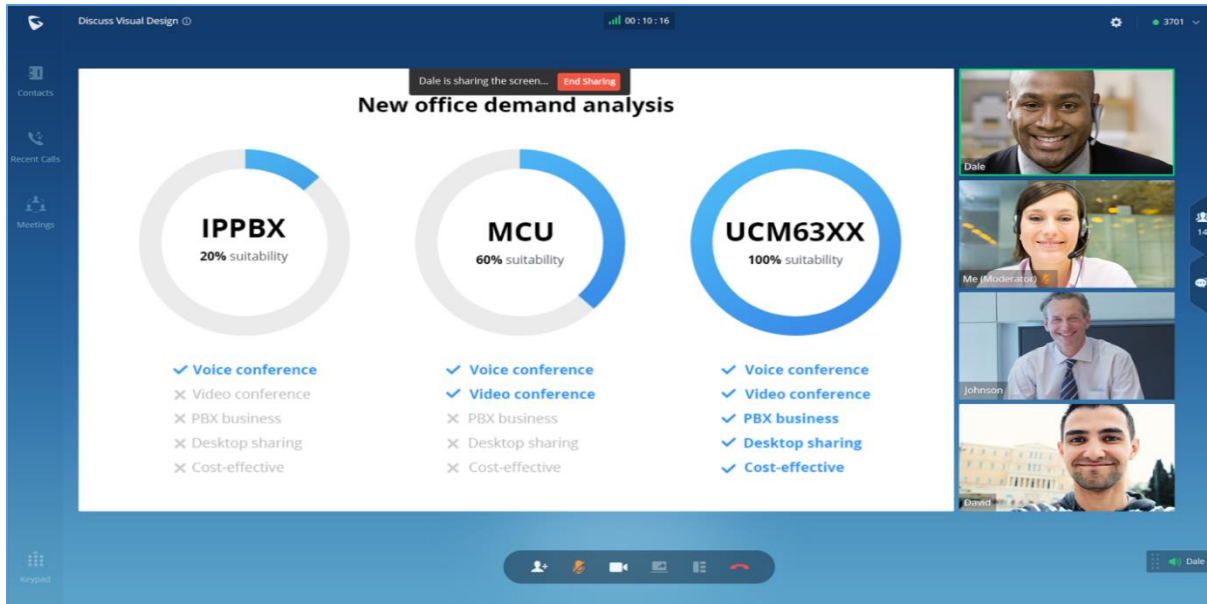 


Figure 46: Screen Sharing with Video on

Invite Participants

If the UCM admin has enabled “Allow User Invite” for the meeting room, any participant in the meeting can invite other participants. Otherwise, only moderator can invite other participants.

Users can invite other participants by generating meeting link or dialing other participants.

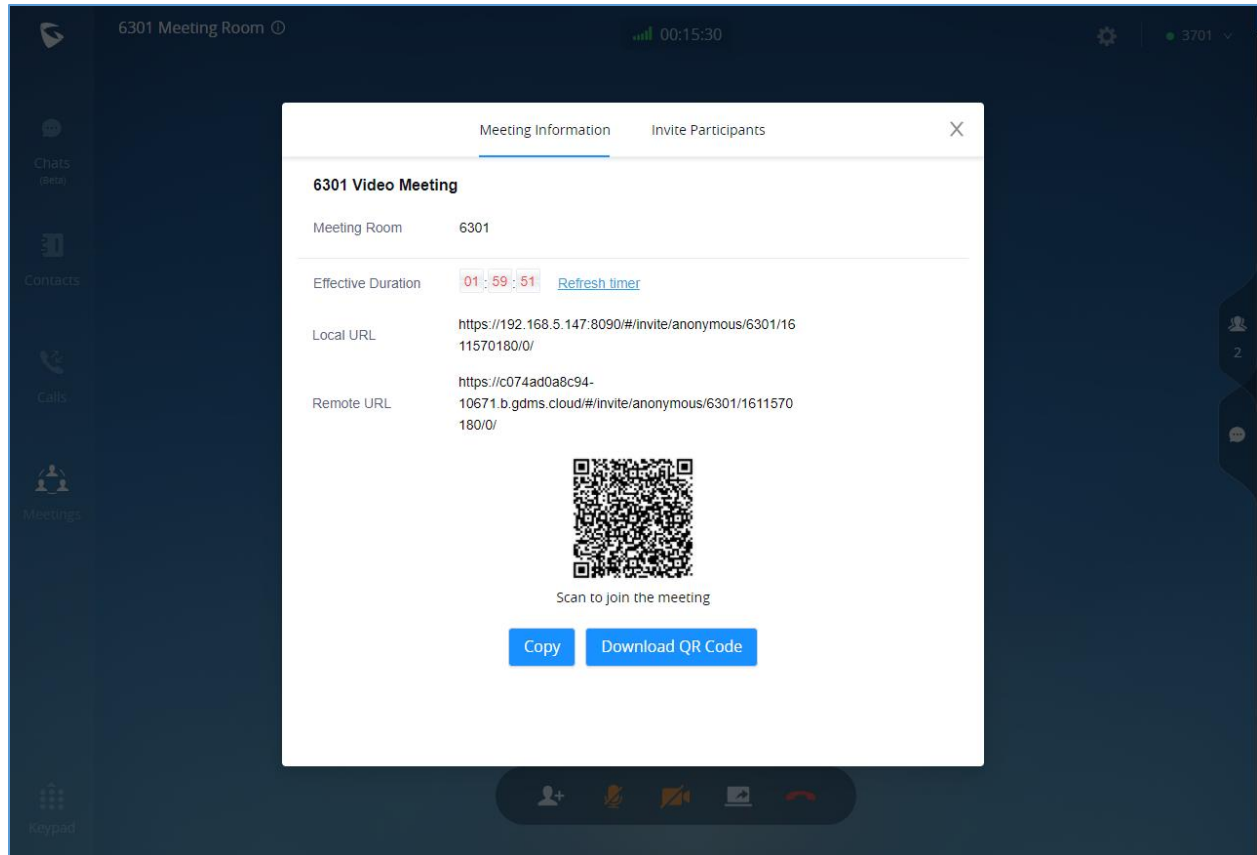 


Figure 47: Invite Participants

- **Create invitation link:**

After selecting “Create Invitation Link”, users will be prompt with link information as below. The users can send the link or QR code to other parties for them to join the meeting.



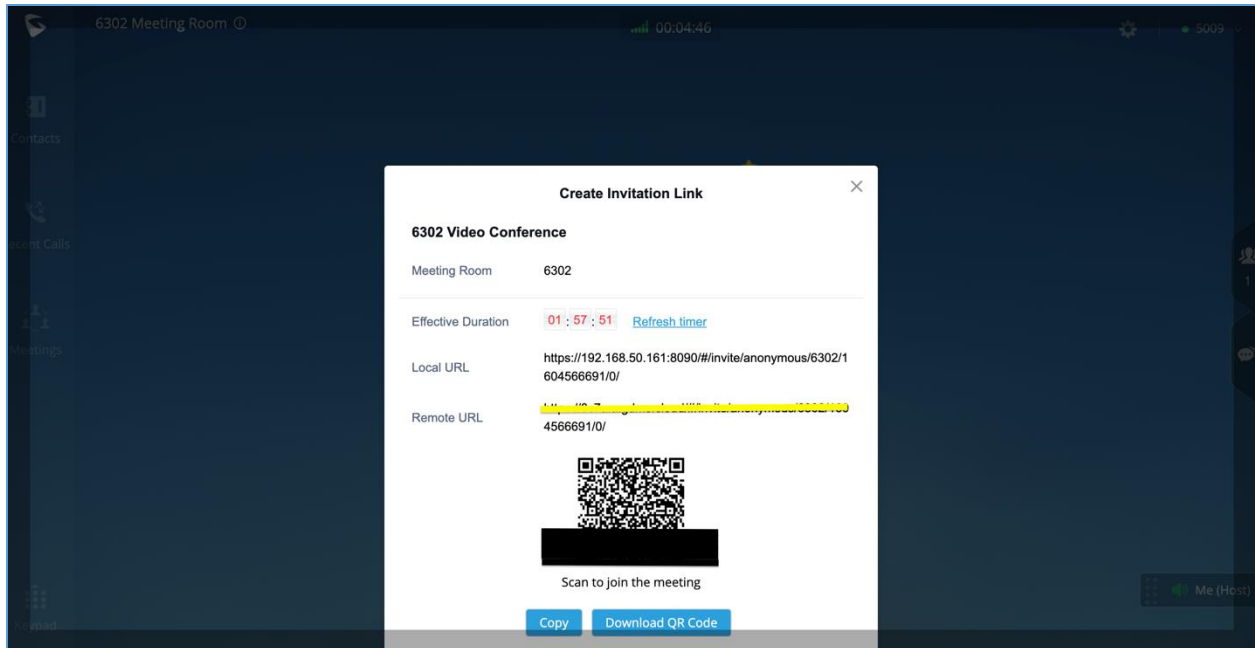 


Figure 48: Create invitation link

- **Invite participants:**

After selecting “Invite Participants”, users can select a contact to invite or enter the number to invite.

Managing Participants

During meeting, click on icon  to open participant list.

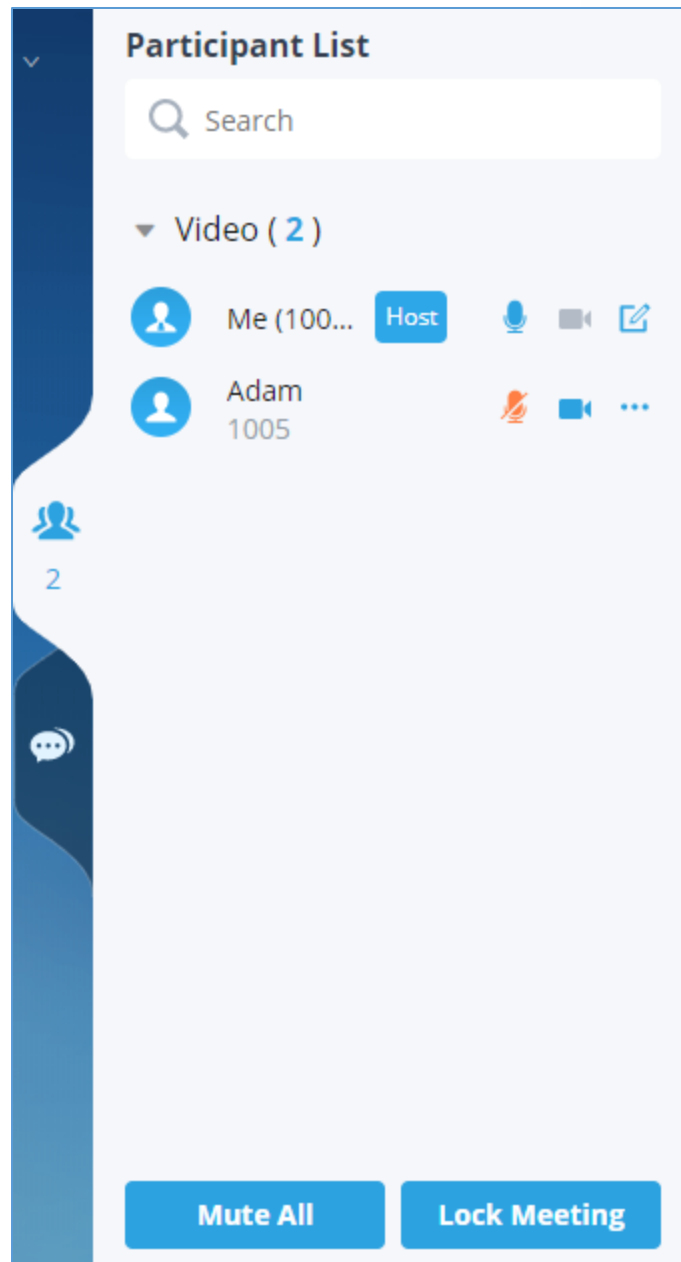 










Figure 49: Participant list


Participants can view the list only, while moderator has more options to manage the participants.

- : Modify display name.
- : This indicates the participant has video on. If moderator clicks on it, it will turn off the participant's video.



- : This indicates the participant has video off. If moderator clicks on it, it will invite the participant to turn on video.
- : Mute. This indicates the participant has mic on. If moderator clicks on it, it will mute the participant's mic.
- : This indicates the participant is talking. If moderator clicks on it, it will mute the participant's mic.
- : This indicates the participant is muted. If moderator clicks on it, it will turn the mic back on for this participant.
- : More options to operate for this participant, such as "Transfer Moderator", "Remove" and "Chat".
- : Chat. Click to open chat window.
- Lock Meeting: Click to lock meeting so that no one can join the meeting room anymore.
- Mute all: Click to mute all participants in one click.

Chat during Meeting

During meeting, users can click on  to open chat window. The chat messages can either be sent to a specific participant or to all the participants.

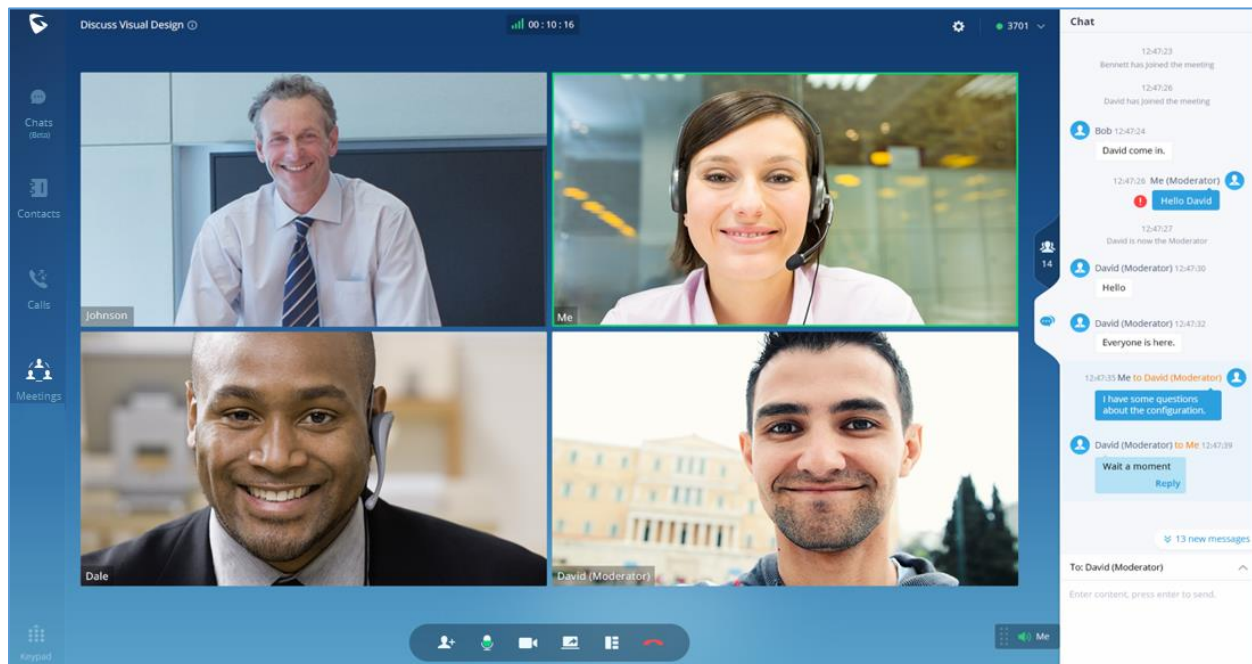





Figure 50: Chat during Meeting



- Chat window not only displays all chat messages, but it also shows real-time notification when a participant joins meeting or leaves meeting.
- Wave supports chat with members who join the conference via browser, PC client, and mobile APP.
- The user can choose to send a message to all members or select a specific member to send the message.
- Click the icon  under the participant list for a specific user chat privately with him/her. Only supported for wave users.

End Meeting

When a meeting participant clicks on  to end meeting, the participant will leave the meeting immediately.

When a moderator clicks on  to end meeting, a prompt will be displayed asking the moderator to confirm whether to leave meeting only or end the meeting. If the moderator selects leaving meeting only, Wave desktop will request the moderator to select another participant to be the moderator. After that, the user will leave the meeting while the meeting is still ongoing for the other participants. If the moderator selects ending the meeting, all participants will be disconnected from the meeting.

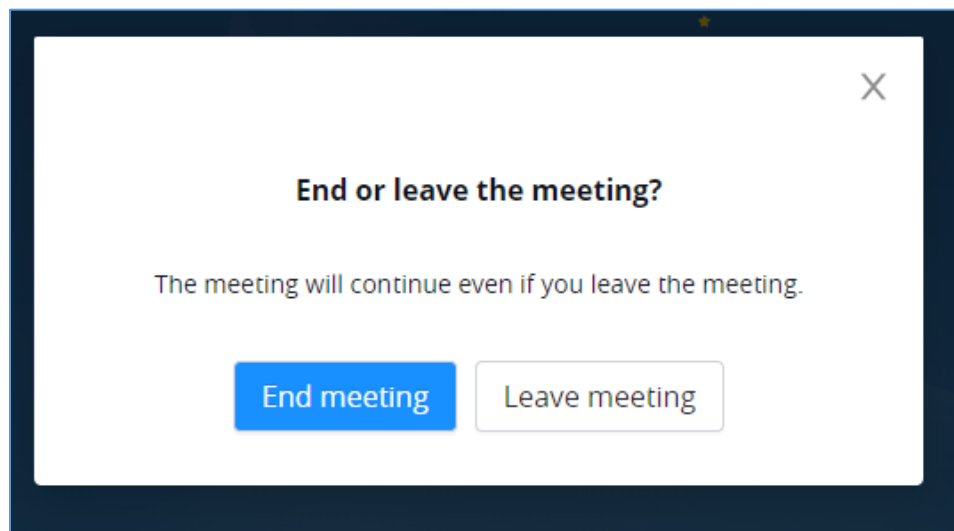 


Figure 51: End Meeting as Moderator



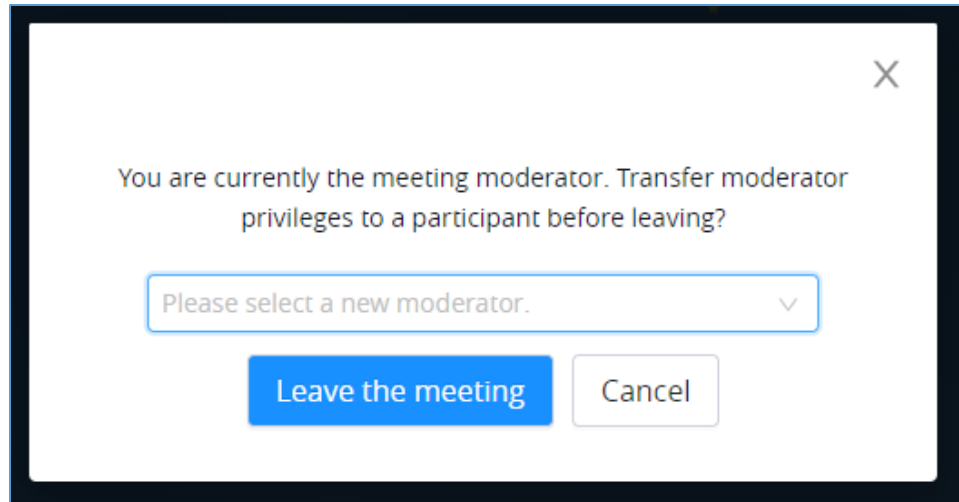 


Figure 52: End Meeting as Moderator – Transfer Moderator Privileges

Join Meeting via Link

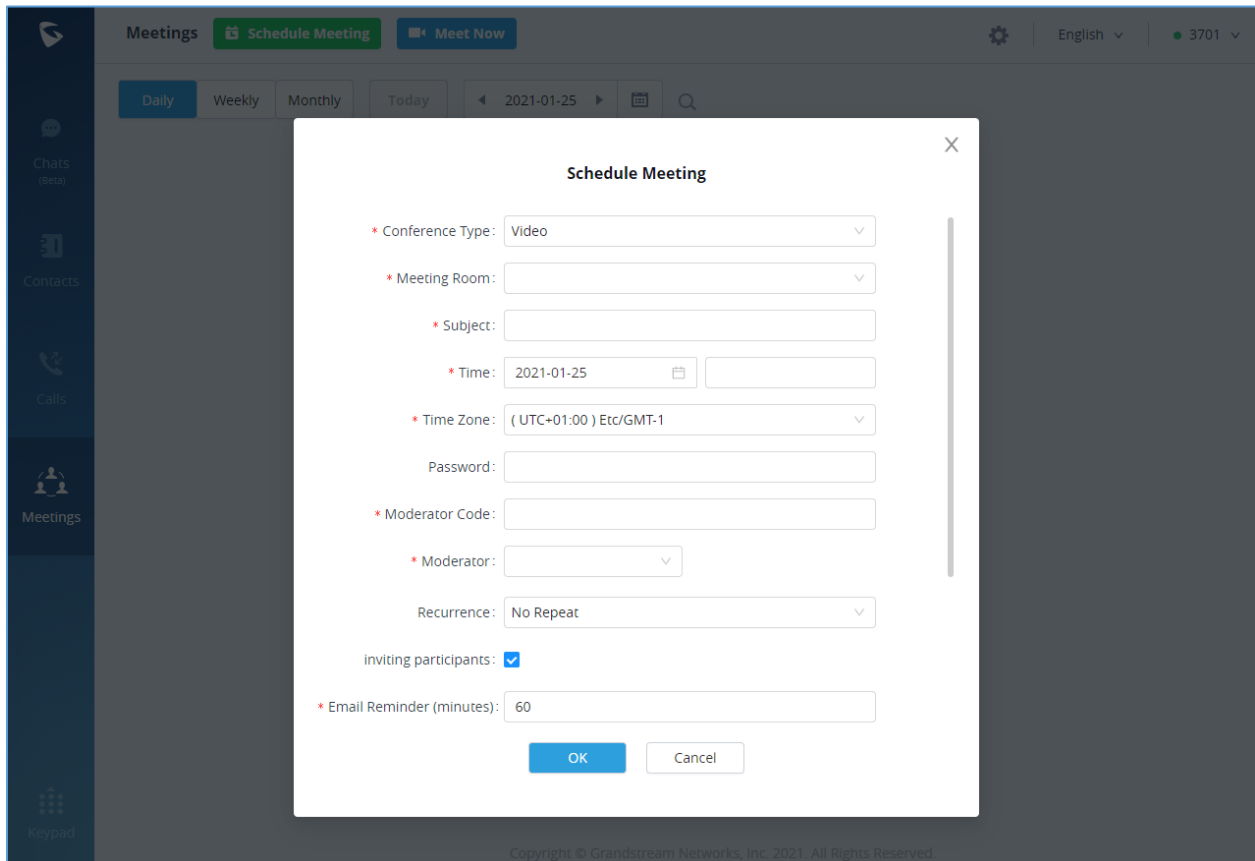
If users do not have UCM extension to log in Wave desktop, the users can join meeting via link. The link can be obtained from the meeting invitation email or from the meeting organizer/participant who shares the link directly.

After the users join meeting via link, the users can change the display name after opening participant list and selecting the current name.



SCHEDULE MEETING

Wave desktop users can schedule meeting after logging in with SIP extension number and SIP registration password. Click on Meetings on the left panel and select “Schedule Meeting” on the top. A new window to edit schedule meeting will be prompted.



The screenshot shows the 'Schedule Meeting' dialog box in the Wave Desktop application. The dialog is titled 'Schedule Meeting' and contains several fields for configuring a meeting. The fields are: Conference Type (set to Video), Meeting Room (empty), Subject (empty), Time (set to 2021-01-25), Time Zone (set to UTC+01:00), Password (empty), Moderator Code (empty), Moderator (empty), Recurrence (set to No Repeat), inviting participants (checked), and Email Reminder (minutes) (set to 60). There are OK and Cancel buttons at the bottom.

Figure 53: Schedule Meeting

Table 3: Schedule Meeting Specifications

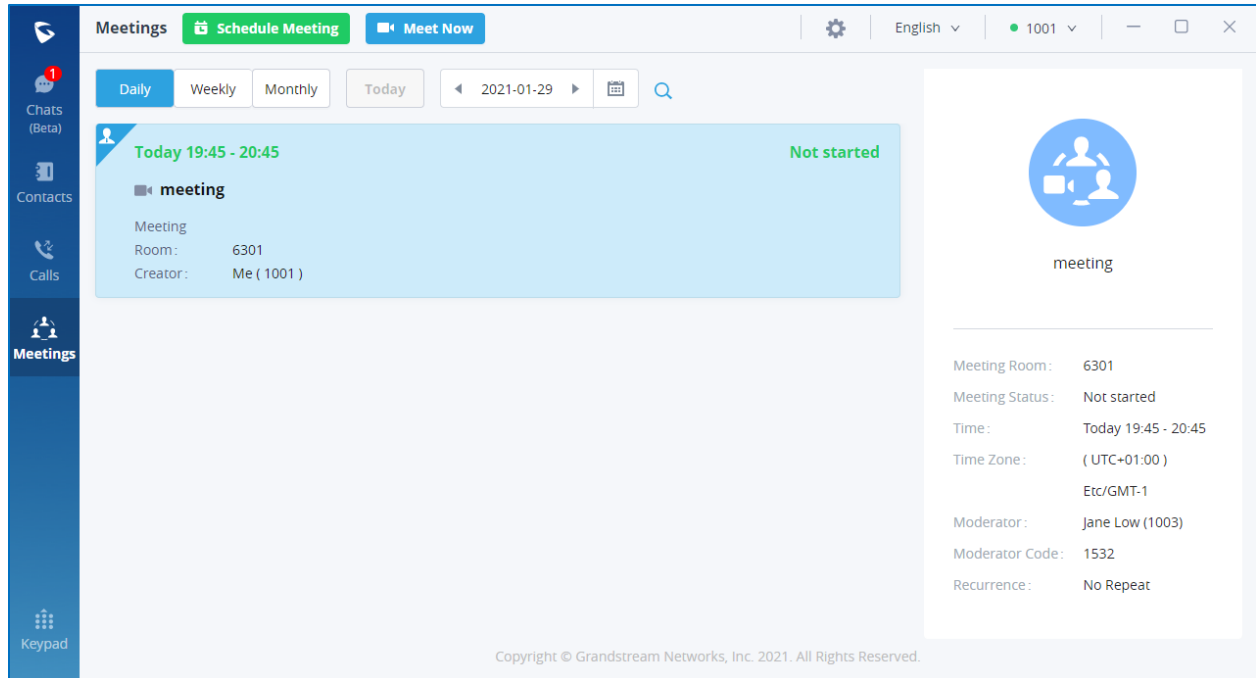
Schedule Meeting Options	
Conference Type	Select video or audio conference.
Meeting Room	Select a conference room for this scheduled conference.
Subject	Configure meeting subject.
Time	Select the date and time for the meeting. Note: Please avoid time conflict on schedules in the same meeting room.
Time Zone	Defines the time zone of the scheduled meeting.



Password	Configure the password for participants to join meeting. The password must be at least 4 digits.
Moderator code	Configure the moderator code. The password must be at least 4 digits.
Moderator	Select meeting moderator.
Recurrence	Choose when to repeat a scheduled meeting: <ul style="list-style-type: none"> • No repeat • Every Day • Weekly • Monthly
Inviting participants	If enabled, any participant in the meeting can invite other parties.
Email Reminder(minutes)	If configured, email reminders will be sent out x minutes prior to the start of the conference.
Call participants	If enabled, invited participants will be called when the meeting starts.
Invitees	Defines the extensions or emails of the members to attend scheduled conference. After adding one invitee, click on ENTER to confirm Note: -If the invitee's extension does not have email configured on UCM extension setting, the user can click on "(Add Email)"to add email for this invitee. -To remove an invitee, click on "x" for the invitee.
Description	Set a description of the scheduled meeting.

After the meeting is scheduled, it will be listed in the meetings page. Meeting participants will receive email notification for the scheduled meeting.





Meetings Schedule Meeting Meet Now

Daily Weekly Monthly Today ◀ 2021-01-29 ▶

Today 19:45 - 20:45 Not started

meeting

Meeting
 Room: 6301
 Creator: Me (1001)


meeting

Meeting Room: 6301
 Meeting Status: Not started
 Time: Today 19:45 - 20:45
 Time Zone: (UTC+01:00)
 Etc/GMT-1
 Moderator: Jane Low (1003)
 Moderator Code: 1532
 Recurrence: No Repeat

Copyright © Grandstream Networks, Inc. 2021. All Rights Reserved.

Figure 54: Scheduled Meeting





The meeting you are hosting has been successfully updated, please see below for details.


test

Time	2021-01-25 15:15 -- 2021-01-25 15:45
Time Zone	Etc/GMT-1 (GMT+1:00)
Moderator	1000
Moderator Code	1532
Room	6301

Join Meeting
(From Inside Corporate Office)

Join Meeting
(From Outside Corporate Office)

Please open the link address with [Chrome](#) or [Firefox](#) browser.



Scan to join the meeting

[Company Info](#) | [Contact Us](#)
©2021 Grandstream Networks, Inc. All rights reserved.

Figure 55: Scheduled Meeting Email Notification

If meeting schedule information is modified, participants will receive email update. An email reminder will also be sent to the participants at the configured email reminder time.

To join meeting, the Wave user can click on the link in the email notification to join meeting directly, or Wave mobile app user can scan the QR code in the email notification to join meeting as well.



VOICEMAIL

After logging in Wave desktop, users can enter voicemail access code to listen to voicemail.

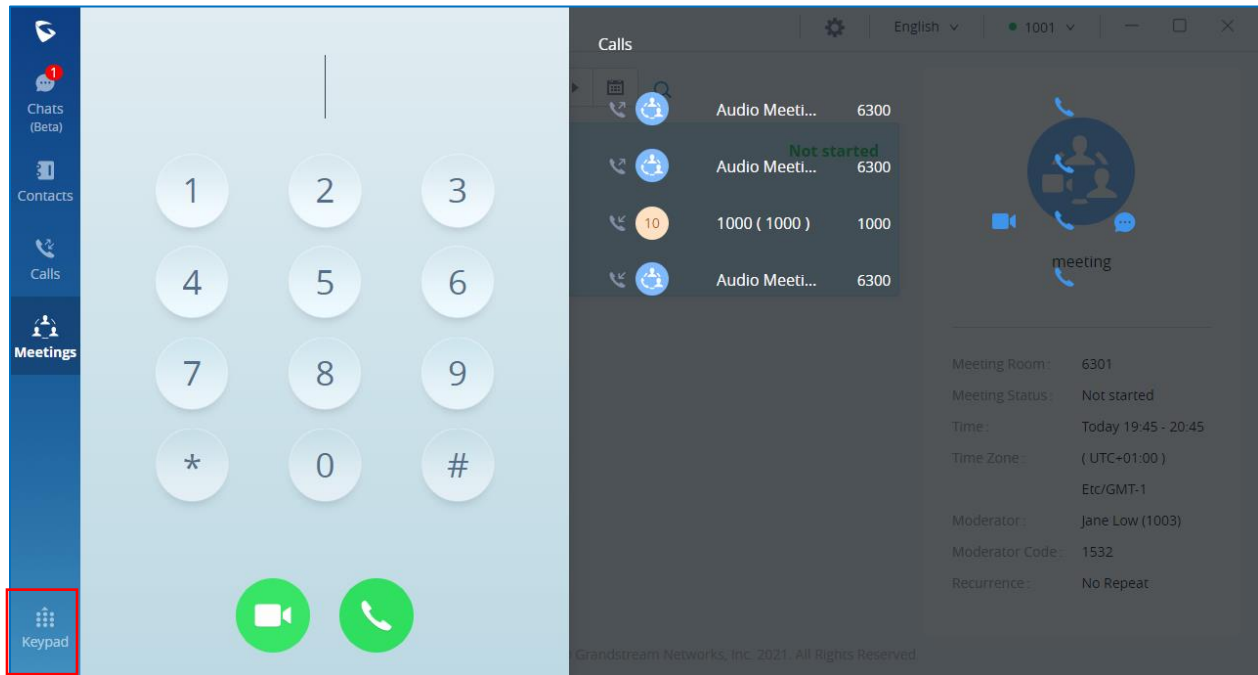 


Figure 56: Open keypad on Wave Desktop Page

1. Open keypad on Wave desktop, enter the voicemail access code. For example, *98 is the default feature code on UCM for users to access voicemail box.
2. Follow the IVR from UCM to enter the voicemail box and password.
3. If the password is correct, users will be able to hear voicemail options and listen to the voicemail.



Note: The voicemail access code and voicemail password are pre-configured in UCM. Please contact UCM admin to obtain the voicemail access code and password.



CONTACTS

In Wave desktop, users can find the company's contacts, view their presence, and call status. Users can also select the contact to view details and call the contact.

Search Contacts

Users can enter username or number to search contacts. On the search result, users can click to view contact details, click on  to initiate video call or click on  to initiate audio call.

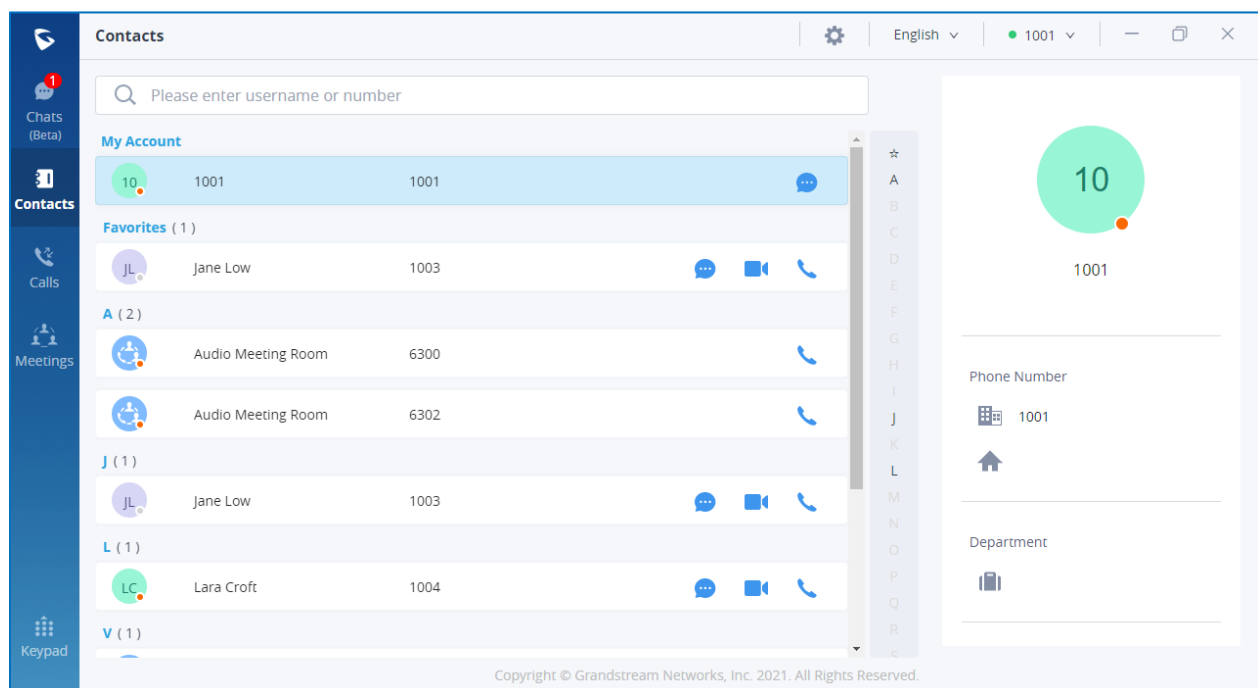 


Figure 57: Contacts



CALL HISTORY

Click on “Calls” to view call history for the logged in account. Users can view call history, search in call history, view details or initiate calls from there.

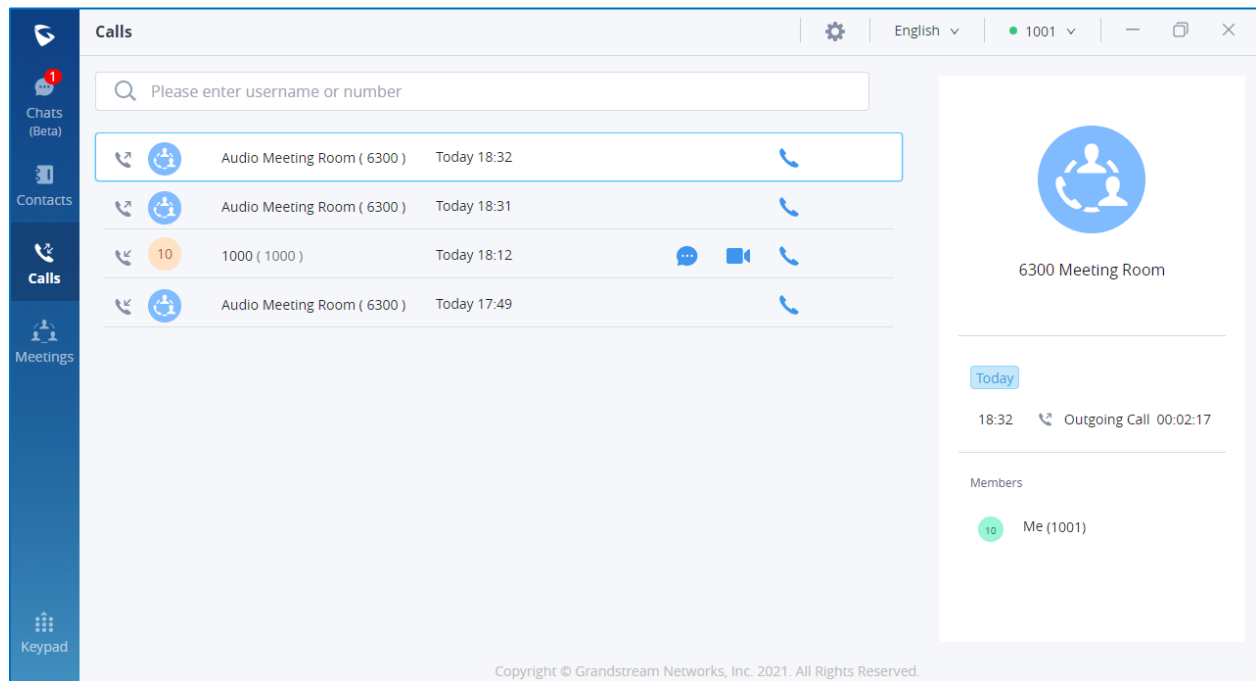 








Figure 58: Recent calls

Call history can have the following type of calls:

-  : Incoming audio calls
-  : Outgoing audio calls
-  : Missed audio calls
-  : Incoming video calls
-  : Outgoing video calls
-  : Missed video calls



SETTINGS

On the upper right of Wave desktop page, users can access basic settings such as audio settings, webcam settings, export log and Wave version information, select language, and access account settings.

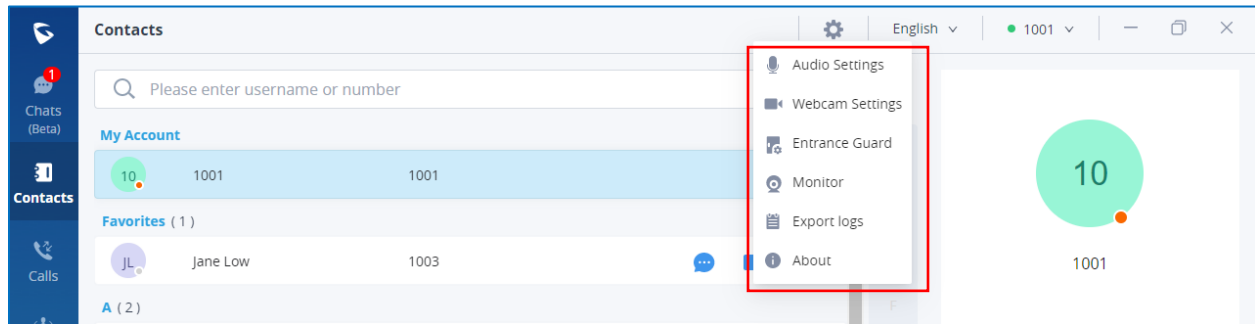 



Figure 59: Wave Settings

Audio Settings

On the upper right, click on the icon  and select “Audio Settings”. Users will be prompted to select audio devices to be used. If browser shows additional prompt requesting permission to access audio devices, please allow it. Then select the desired mic or speaker to be used.

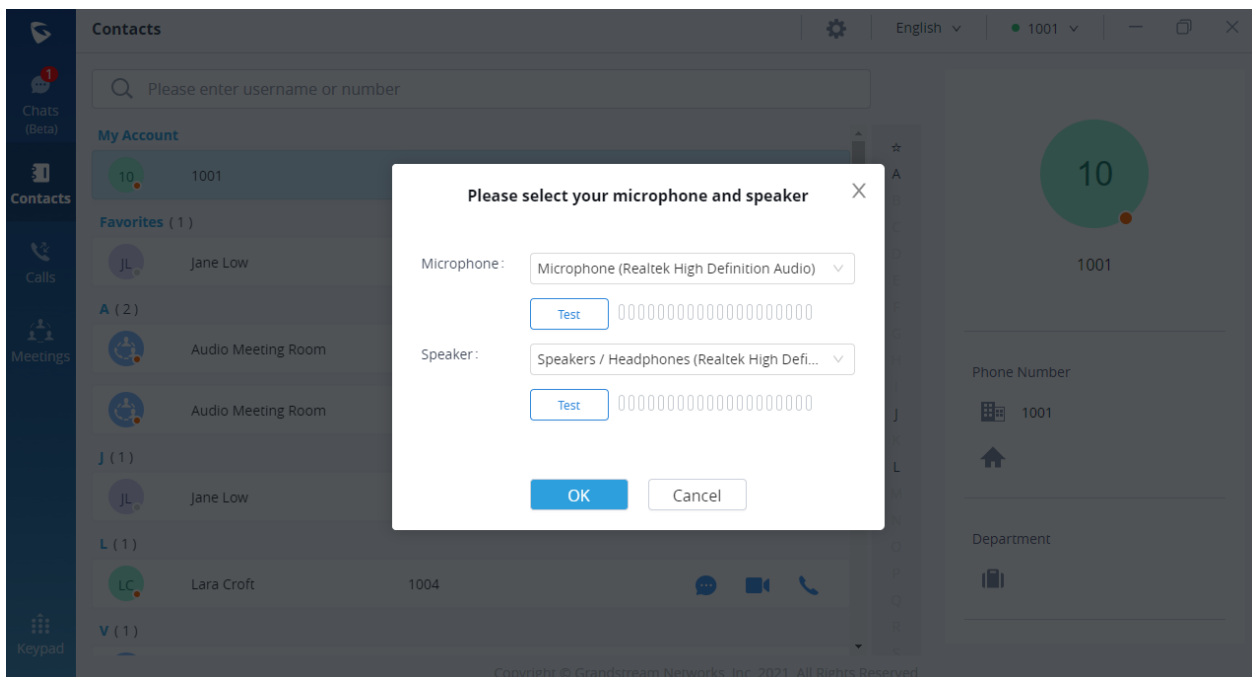 



Figure 60: Audio Settings



Webcam Settings

On the upper right, click on the icon  and select “Webcam Settings”. Users will be prompted to select Webcam device to be used. If browser shows additional prompt requesting permission to access Webcam, please allow it. Then select the desired Webcam to be used.

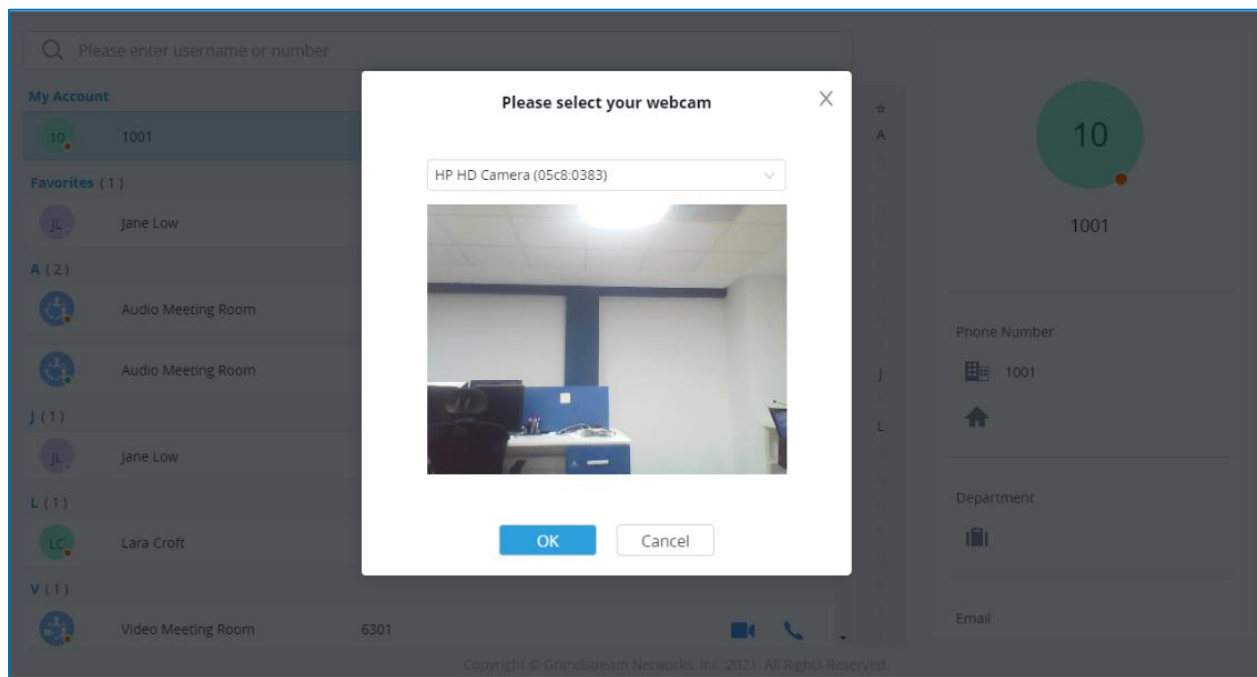 


Figure 61: Webcam settings

Usually when users log in Wave desktop for the UCM for the first time or tries to make video call for the first time, Wave desktop will require users to perform Webcam settings. Configuring Webcam properly is necessary to ensure video is working as expected for calls and meetings.

Entrance Guard

The entrance guard allows to connect up 10 GDS37xx units.

For more information about GDS37xx, please refer to:

<http://www.grandstream.com/products/facility-management/facility-access-systems>

The Entrance Guard settings are shown in the figure below:



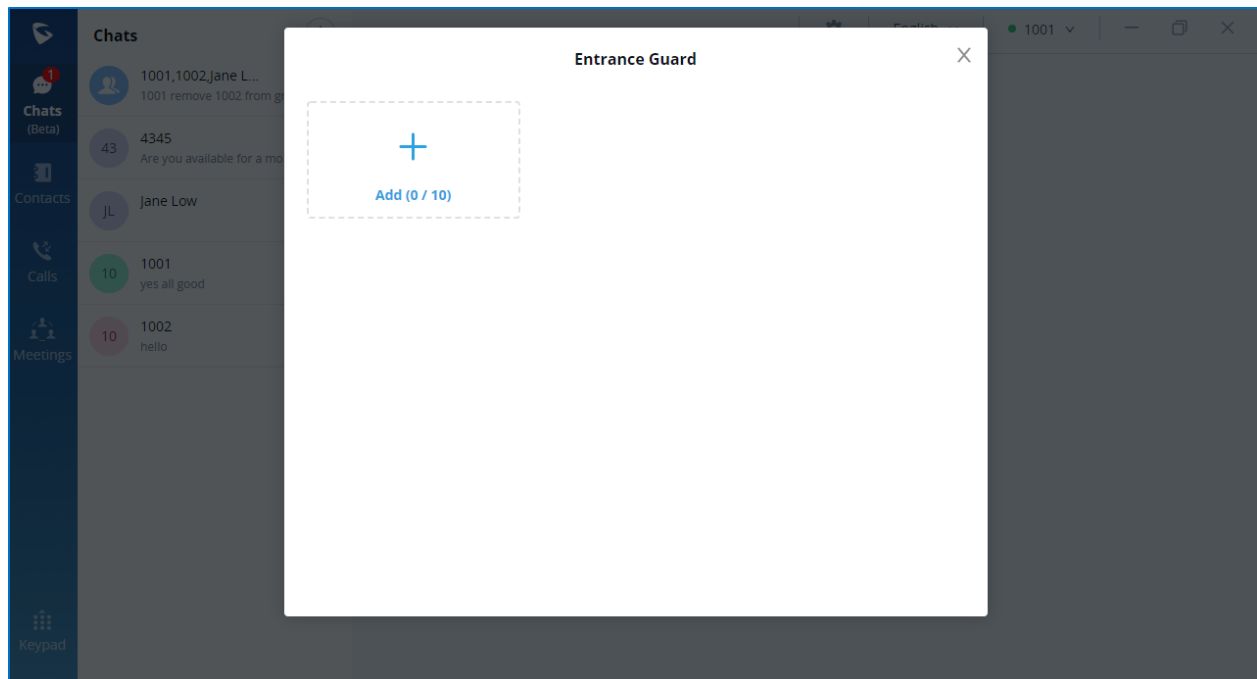 


Figure 62: Entrance Guard Setting Interface

Click the Add button to configure Entrance Guard related parameters. As shown below:



After the Entrance Guard setting is completed, the user can receive an incoming Entrance Guard call when someone rings the doorbell, and the following interface is displayed:

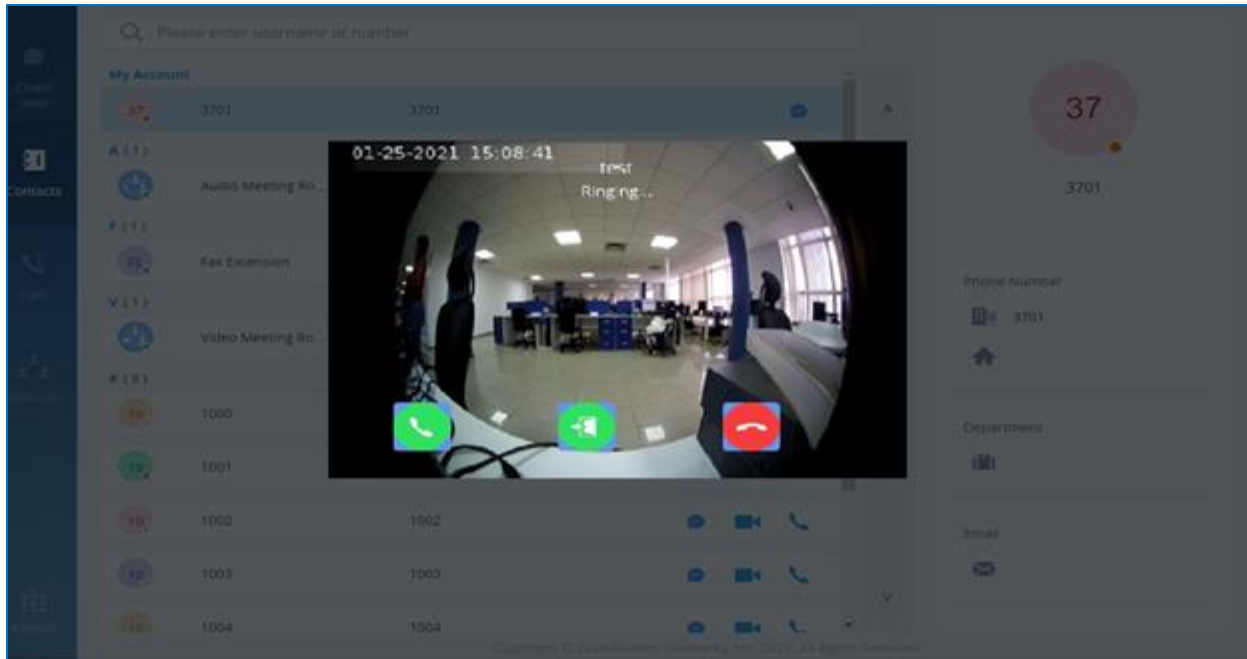 



Figure 64: Entrance Guard Bell Call Interface

Click on  The button can enter the call, view the video screen for voice conversation. As shown below:

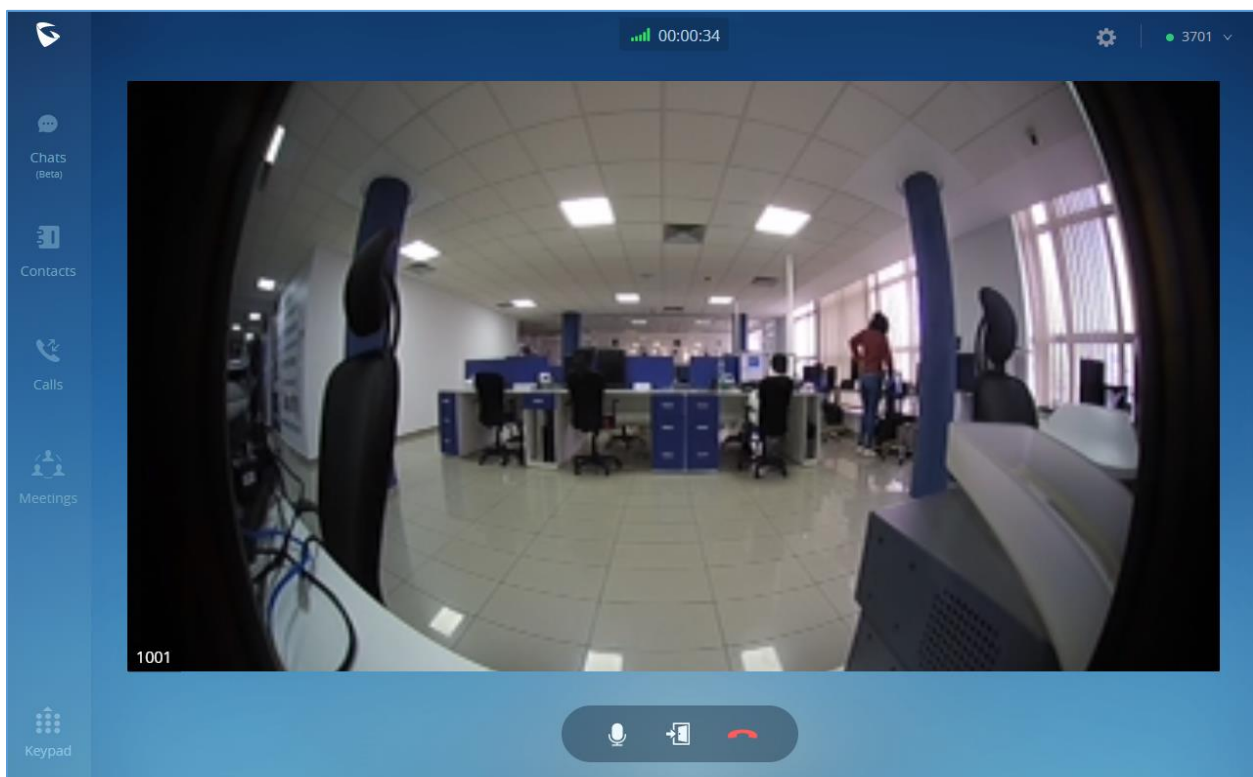


Figure 65: Entrance Guard Call Interface





Click on The button can directly open the door.

Monitor

The Monitor allows to connect up 32 Grandstream Surveillance cameras.

For more information about Grandstream Surveillance cameras, please refer to:

<http://www.grandstream.com/products/facility-management/full-hd-ip-cameras>

The Monitor settings are shown in the figure below:

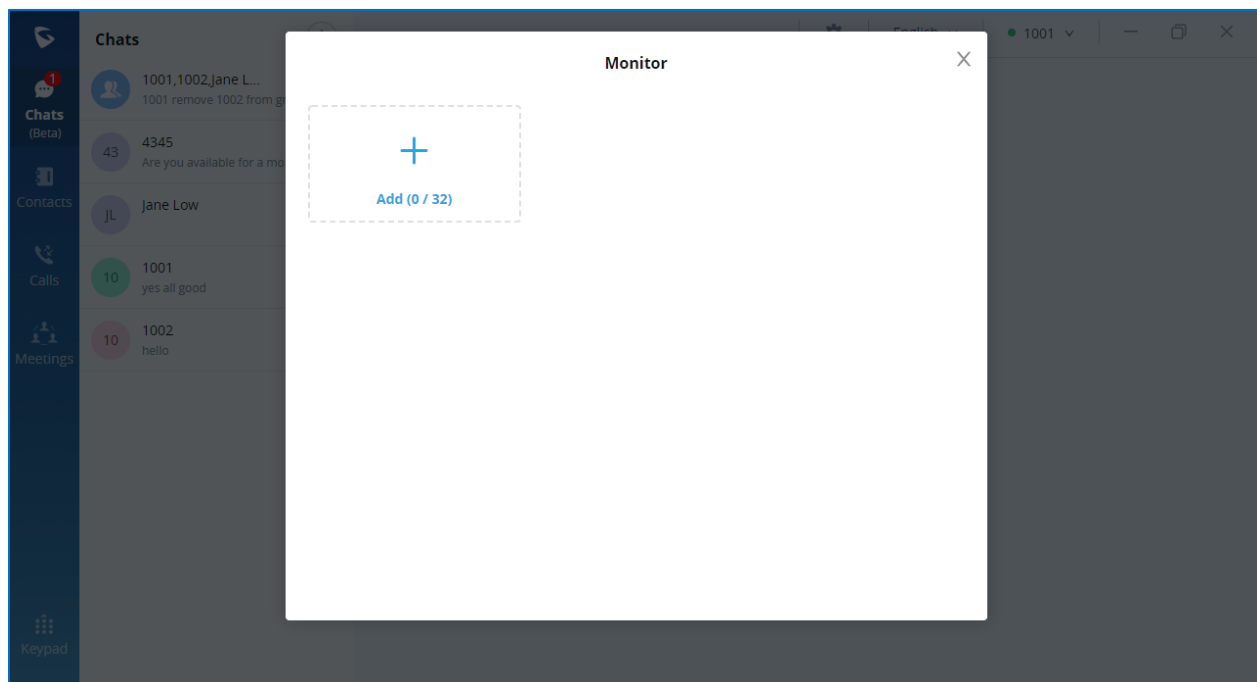 
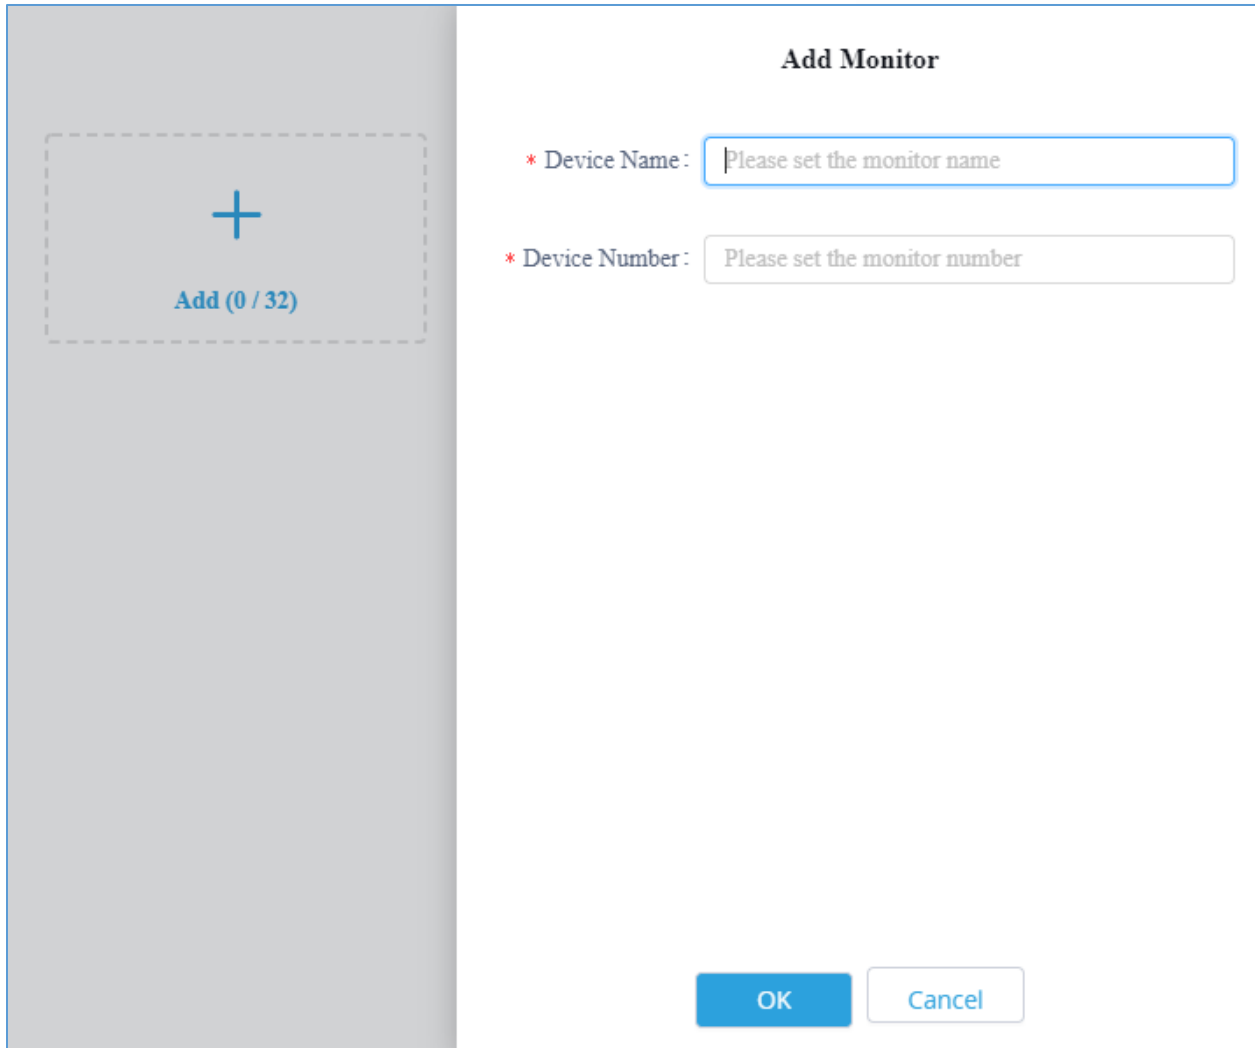


Figure 66: Monitor Settings Interface

Click the Add button to configure Monitor related parameters. As shown below:






The image shows a dialog box titled "Add Monitor". On the left side, there is a grey vertical bar containing a dashed box with a blue plus sign and the text "Add (0 / 32)". The main area of the dialog box is white and contains two input fields, each preceded by a red asterisk. The first field is labeled "Device Name:" and contains the placeholder text "Please set the monitor name". The second field is labeled "Device Number:" and contains the placeholder text "Please set the monitor number". At the bottom right of the dialog box, there are two buttons: a blue "OK" button and a white "Cancel" button with a blue border.

Figure 67: Add Entrance Guard Interface

Export Log

If users encounter issues when using Wave desktop, the users could export logs to local PC, and submit a ticket to Grandstream technical support for troubleshooting purpose. Click on  and select "Export Log" to download and save the logs to users' local PC.

Language Settings

On the upper right of Wave desktop, click on "English" to open language options. Please note that the language cannot be configured during call.



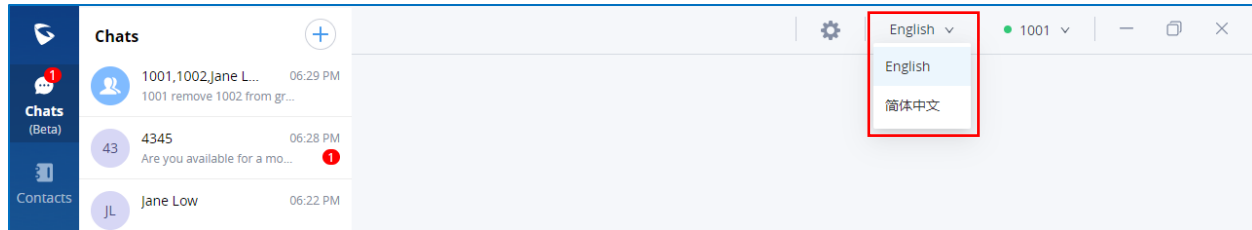


Figure 68: Language Settings

Account Settings

On the upper right of Wave desktop, click on the account number to open account settings.

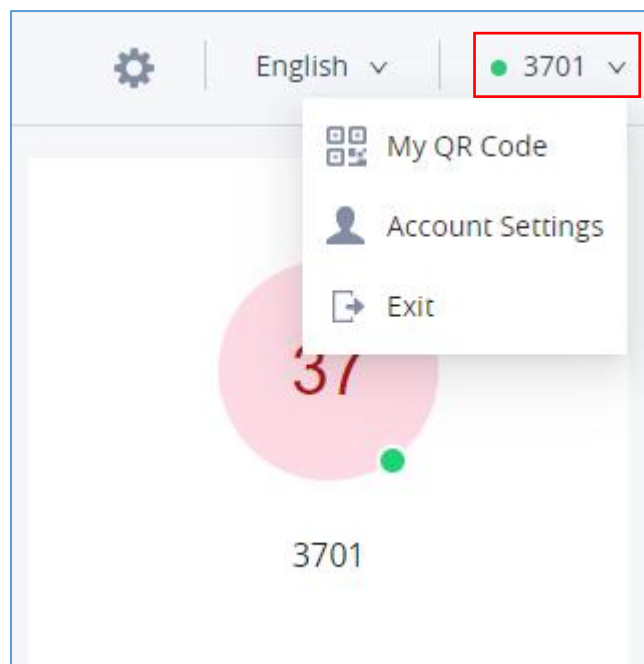


Figure 69: Language Settings

- My QR code**
 This will bring up account login QR code. Wave mobile users can scan the QR code to log in the account.
- Account settings**
 Wave desktop has integrated UCM's user portal entry for users to conveniently access account setting, personal data, and services. Click on "Account Settings" to access the user portal for this account.



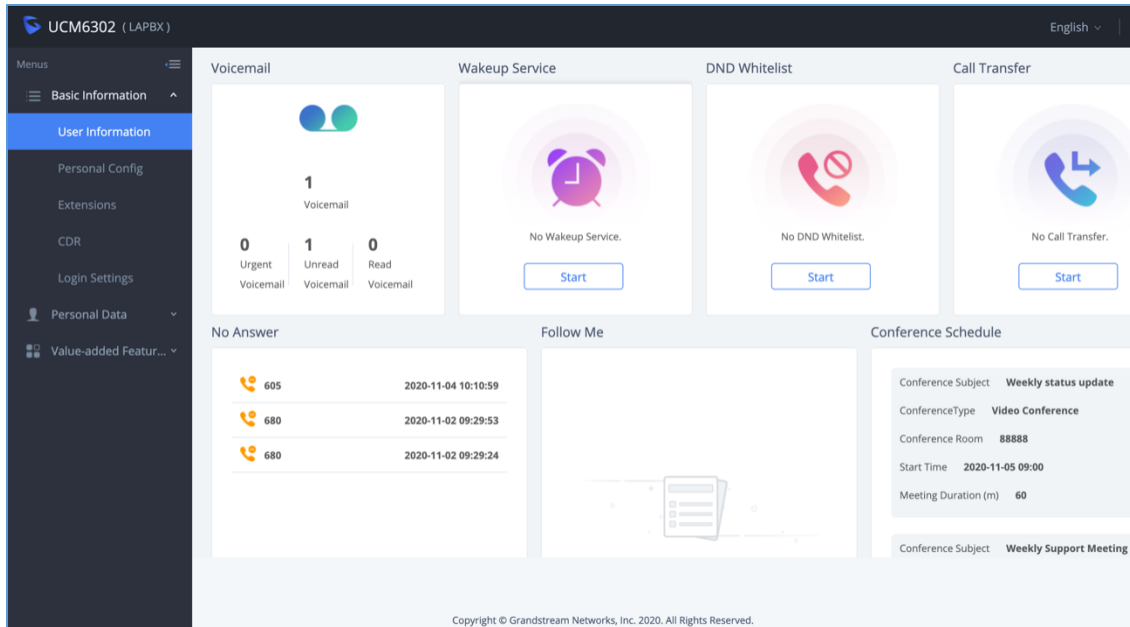 


Figure 70: User Information

In user portal, users could access personal config, CDR, login settings, Follow Me settings, voicemail, recording files, SCA, call queue, wakeup service, CRM user settings and etc.

- **Exit**

Click on Exit to log out.



LOGO CUSTOMIZATION

UCM needs to connect to GDMS, so an open beta plan package for RemoteConnect will be assigned to it to start with.

Once done, the administrator can log in to the UCM management platform and customize the Wave LOGO, please refer to the UCM RemoteConnect user guide for details:

http://www.grandstream.com/sites/default/files/Resources/UCM63xx_RemoteConnect_User_Guide.pdf

After customizing the logo, all Logos on the Wave page are displayed as customized Logos.

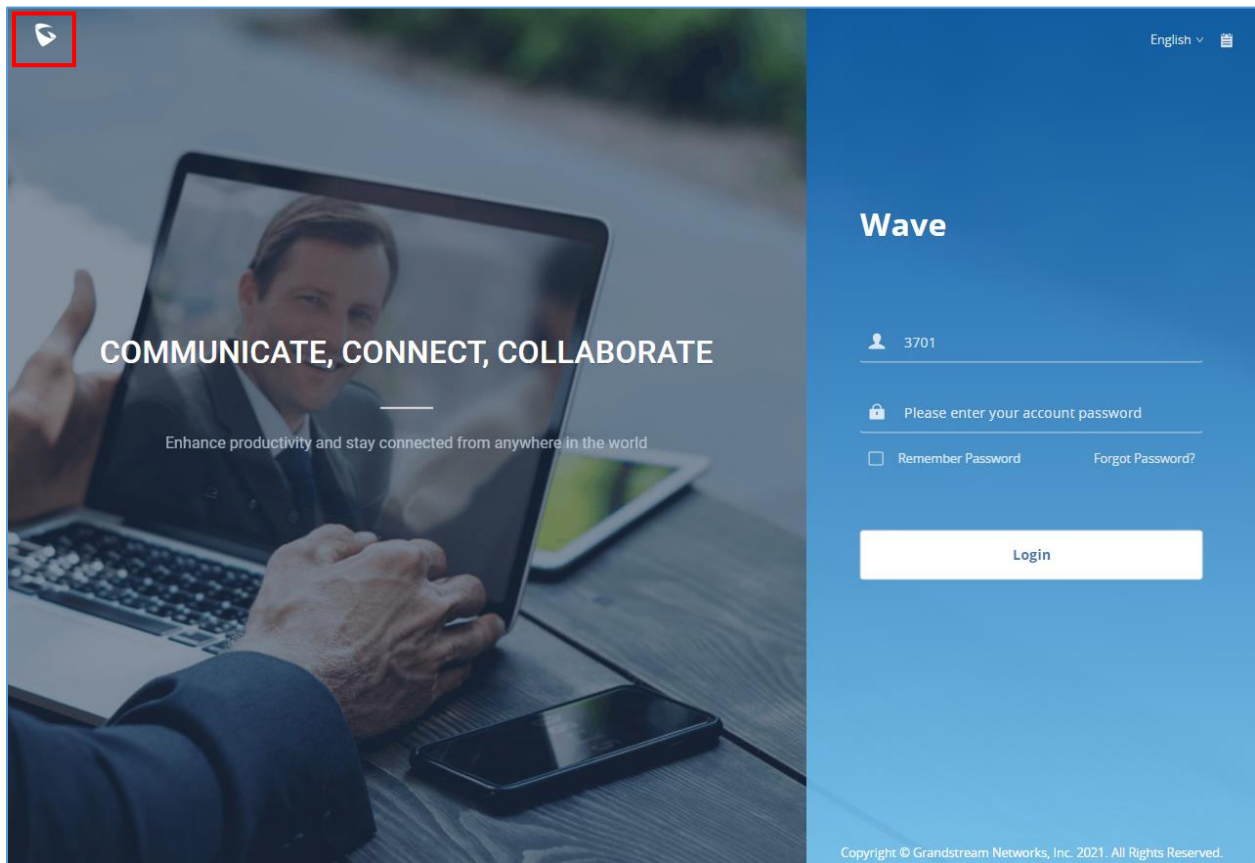 


Figure 71: Customized Logo Interface