 
 




Original	Replacement	Original	Replacement
 Power	 Power	 TAPE Deck 1/2	 Shift + 1
 Sleep	 Sleep / Timer	 AUX	 Shift + 7
 Timer Fader	 Shift + Sleep / Timer	 TAPE REW	 Zoom / Size
 Program	 Shift + TV/Radio / Program	 TAPE FF	 Audio / Lang I/II
 1	 1	 TAPE Stop	 Stop / Hold
 2	 2	 TAPE Play / Rev. Play	 Setup / OPT /
 3	 3	 TAPE Play / Rev. Play	 Shift + Play /
 4	 4	 TUNER Tune-	 CH- / Page-
 5	 5	 TUNER Tune+	 CH+ / Page+
 6	 6	 TUNER FM	 TV/Radio /
 ≥10	 Guide / EPG / -/-	 TUNER	 Shift + 6
 7	 7	 TUNER	 Shift + 9
 8	 8	 CD I<<	 Shift + I<< / Preset-
 9	 9	 CD I<<	 I<< / Preset-
 0	 0	 CD >>I	 Shift + >>I / Preset+
 TAPE Rev Mode	 Shift + 5	 CD >>I	 Shift + >>I / Preset+
 TAPE C-Reset	 Text / Goto	 CD Stop/Clear	 Pause / Step / Freeze



