

ROCKETMAN

Instruction Manual

FRONT

3.5 in

ROCKETMAN BUTTON OPERATIONS:

WARNING:
BRIGHT LIGHT – DO NOT LOOK DIRECTLY INTO THE LIGHT

NOTE:
UNIT MUST BE PLUGGED IN TO WORK

ROCKETMAN BUTTON OPERATIONS:

1. **POWER BUTTON** – Long press to turn on/off.

A. Turn speaker on – Long Press
Boot Status: Defaults to Bluetooth mode – Speaker will make jingle noise. Open settings on your device – make sure Bluetooth is turned on. Open the Bluetooth menu, connect to device listed as “ROCKETMAN”. The speaker will make jingle noise to confirm connection. If the Bluetooth device was previously connected, it will automatically reconnect.

B. Short press: Play/Pause
C. Long Press: Turn off
D. Speaker defaults to 50% Volume when turned on
E. Volume will sync with phone

2. **BT/WN** **BUTTON**

A. Short Press: Switch between Bluetooth & White Noise
B. Long Press: Disconnects from Bluetooth. Short press will reconnect.

3. **BUTTON**

A. Long Press – reduce volume (will say Volume Minimized when at lowest point)
B. Short Press – Previous Song

4. **BUTTON**

A. Long Press – increase volume (will say Volume Maximized when at the loudest point)
B. Short Press – Next song

5. **TYPE-C POWER INPUT**

6. **ROCKET LIGHT BUTTON - BUTTON IS ON THE ROCKET**

A. Long Press: turns the light on/off
B. Short Press: changes Rocket color – 9 color options

REMOTE OPERATIONS:

REMOTE OPERATIONS:

1. **POWER BUTTON:** Short press to turn the lights on or off. When turned on will default to Bluetooth mode.

2. **STAR BUTTON:** Short press turns stars on or off

3. **BT-WN:** Short press to switch between Bluetooth and White Noise

4. **R-G-B-W:** Use these buttons to change Nebula colors. Short press turns the color on or off. Short press of second color creates 2 color Nebula. Can be used with single color or two color option.

5. **+** : Press & hold to make louder – will say volume maximized at loudest level

6. **-** : Press & hold to make lower – will say volume minimized at lowest level

7. **>|** : Short press to advance to next song or white noise option

8. **|<**: Short press to go back to previous song or prior white noise option

9. **>||**: Short press to play or pause

10. **LED:** Short press turns Nebula on or off

11. **Rhythm button:** Turn on / turn off Rhythm mode

12. ***-/ Button:** Short press makes LED brighter or less bright

13. **Fade Button 1:** Short press changes the nebula to single or dual color mode

14. **Rocket Button:** Long press turns the rocket light on or off. Short press changes the color of the rocket light

15. **Fade Button 2:** Short press changes the speed of nebula light

16. **1H:** 1 hour timer – light flashes once

17. **2H:** 2 hour time – light flashes twice

18. **Timer off Button:** – light flashes 3 times

BACK

SPECS:

Bluetooth version: JL V5.3
Bluetooth distance: 10M
Speaker size and specification: 36mm4Ω 3W
Material: ABS+PP
Power supply: 100CM type C charging cable
Product estimated weight: 394g
Product estimated size: 22.4 x 16 x 14.5 cm
FCC ID: 2A4HD-WE-ROCKETMAN

SAFETY RULES:

1. WARNING: Bright Light. Avoid Exposure. Do not stare into light.
2. Do not modify, repair or dismantle the product. Doing so may result in complete breakdown of the product. All of which is not covered under warranty.

Go to Trendtechbrands.com to register your product.

Must have Proof of Purchase.
Product must not show signs of physical damage or water damage for warranty coverage.

TO EXPLORE:

Our full selection of products, visit us at: www.Trendtechbrands.com
Follow us:

@trendtechbrands
 trendtechbrands
 www.trendtechbrands.com

Distributed by:
Wireless Express Inc
53-57 North Mall
Plainview, NY 11803
United States of America
Made in China

WARRANTY:

The Rocketman comes with a one year limited warranty.
The Following Situations will void the Warranty:
*Improper use of the product in accordance of the instruction manual
* Physical Damage
* Water Damage

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

FCC STATEMENT CONTINUED:

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT:

- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

24.5 in