



# Woozoo Fan User Manual

February 28, 2022 [Leave a comment](#)

[Home](#) » [Woozoo](#) » Woozoo Fan User Manual 

## Contents [ [hide](#) ]

- [1 Woozoo Circulator Fan PCF-M18U Series](#)
- [2 User Servicing Instructions](#)
- [3 After Sale Service](#)
- [4 SAFETY PRECAUTIONS](#)
- [5 USING AND CLEANING PRODUCT](#)
- [6 KEEPING AND STORING PRODUCT](#)
- [7 Related Manuals / Resources](#)

## Woozoo Circulator Fan PCF-M18U Series

### User Manual

**Woozoo™ Circulator Fan  
IRIS Living™ by IRIS USA, Inc.  
Series PCF-M18U**



## User Servicing Instructions

- If the fuse on your fan has blown, grasp the plug and remove it from the outlet. Do not pull the cord to unplug.
- To open, slide the fuse cover towards the prongs of the plug.
- Carefully remove the old fuse and snap the replacement fuse into place. To reduce the risk of fire, only replace the fuse with another fuse of the proper rating (2.5Amp, 120Volt). Slide the fuse door back into place to close. Discard the blown fuse. The plug should now be ready for normal use.
- To reduce the risk of fire, do not replace the attachment plug if it is damaged. Only the fuse should be replaced. Discard the product if the attached plug is damaged.
- If you need further information on how or when to replace the fuse in plug, please contact IRIS USA, Inc. customer service at 1-800-320-4747.

## After Sale Service

Contact IRIS USA, Inc. customer service concerning any questions you may have.

PRODUCT NAME	PCF-M15U	PCF-M18U	PCF-HD18U
PRODUCT NUMBER	Black: 586791 White: 586794	Black: 586792 White: 586795	Black: 586790 White: 586793
AMPERE	0.5A	0.6A	0.6A
VOLTAGE	120VAC	120VAC	120VAC
FREQUENCY	60Hz	60Hz	60Hz
APPLICABLE AREA COVERAGE	157ft <sup>2</sup>	275ft <sup>2</sup>	275ft <sup>2</sup>
CORD LENGTH	55.12"	55.12"	55.12"
PRODUCT DIMENSIONS	8.67" x 7.99" x 11.93" (does not include cord)	9.84" x 8.98" x 13.19" (does not include cord)	11.42" x 7.48" x 12.20" (does not include cord)
PRODUCT WEIGHT	Approx. 4.41 lbs	Approx. 5.29 lbs	Approx. 4.41 lbs

\* The product specifications may change without notice.

\* Applicable area coverage is an estimate and will differ according to the environment, such as room temperature, etc., and building structure.

## SAFETY PRECAUTIONS

Prior to use, please read the safety precautions carefully to ensure proper use. The precautions listed here are described under classification of Warnings and Cautions and are intended to prevent harm or damages to users and other persons. All of these precautions are critical in terms of safety. Please follow them at all times.

### Graphic Symbol Indications:

Indicates content that could lead to death or injury if handled incorrectly.

 CAUTION

 PROHIBITED

 INSTRUCTIONS THAT MUST BE FOLLOWED

 **Disassembly prohibited.**

- Do not disassemble, repair, or modify. Doing so can cause fire, electric shock, or injury.
- Repair by persons other than trained repair technicians can be dangerous.
- Warning: To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.

 **Product use.**

- Use on a level, stable floor. Placing product on uneven and unstable floors can cause the product to fall over, leading to injury or damage to property in the vicinity of the product.
- Place the product in locations where it will not get entangled in curtains or hoisting strings, etc. Failing to do so can cause damage to articles near the product.
- Always grasp the power plug to unplug it, do not unplug it by pulling on the power cord. Pulling on the power cord can damage it, which can cause fire or electric shock.
- Always unplug the power plug from the electric socket when the product will be unused for extended periods of time. Failing to do so can lead to fire or electric shock caused by short-circuits due to reduced insulation.
- This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit occurred and the product should be discarded or returned to IRIS USA, Inc. for inspection and/or repair.

 **Unplug.**

- Unplug the power plug from the electric socket when performing maintenance, inspecting, or moving the product.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.

 **Use power plugs and power cords correctly.**

- Failing to do so can cause fire or electric shock due to short-circuits.
- Insert the power plug securely all the way into the electric socket.
- Regularly remove dust from the power plug.
- When dust is allowed to build up, insulation is hampered due to moisture, which can cause fire or electric shock.
- Use only 120V AC. Other current/voltage can cause fires.
- Do not use if the power cord or the power plug is damaged, or if the power plug is loose when plugged into the electric socket. Doing so can cause fire or electric shock due to short-circuit.

 **Do not damage the power cord.**

- Damaging, modifying, forcefully bending, pulling, twisting, putting heavy objects, or pinching can damage the power cord, which can cause fire or electric shock.
- Do not use if the power cord is bundled up. Doing so can cause fires. Always extend the cord out before using.

- Do not pull on the power cord when carrying or storing the product. Pulling on the power cord can cause fire or electric shock.

### **ⓘ Abnormalities and malfunctions can cause smoke, fire, or electric shock.**

Stop use immediately, cut power, and unplug from the electric socket when abnormalities or malfunctions occur.

#### Examples of Abnormalities

- Abnormal sounds or odors.
- Power plug or power cord become abnormally hot.
- Loss of power, etc. when power cord is moved.
- The product periodically stops during operation.
- Tingling sensation from electric current felt when the product is touched.
- Stop use and contact IRIS USA, Inc. customer service at 1-800-320-4747

### **⊘ Avoid fire hazards.**

- Do not spray with insecticides, hair sprays, or lubrication oils, etc.
- Do not use near flammable substances (kerosene, gasoline, paint thinner, etc.), objects that have flames (cigarettes, incense, etc.) or combustible materials. Can cause fires.
- Do not use the product with airflow pointed at a combustible appliance such as a heater. Doing so can cause incomplete combustion or scatter flames, which can cause carbon monoxide poisoning and fire.

### **⊘ Wet hands prohibited.**

- Do not unplug power plug when hands are wet.

### **⊘ Do not use the product outdoors.**

- Do not use in the vicinity of objects that obstruct the flow of air.
- Do not operate while covered or blocked with cloth, paper, or plastic bags, etc.
- Do not use in locations where there is a lot of dirt or dust. This can cause short-circuit or fire.
- Do not use in rooms with high humidity levels such as bathrooms.
- Do not get the unit wet, or put the unit in water. Getting the product wet can cause fire or electric shock.

### **⚠ If handled incorrectly, contents can lead to personal injury or physical damage.**

 
- Keep out of reach of children and infants.
- Do not climb on or tip the product over. Doing so may lead to injury or electric shock.
- Do not drag the product when moving it. Dragging product can damage carpet and floors.
- Do not point air flow directly at your body. It generates a very strong air flow.
- Be especially mindful not to allow children or elderly people near product. Being near the product can be harmful to their physical condition and to their health.
- Air blowing directly on plants may be harmful.
- Do not operate without attaching the vane or the cover. Doing so can cause injury, electric shock, or fire.
- Do not strike the unit forcefully. Doing so can cause the product to malfunction, leading to fire or electric shock.

## **USING AND CLEANING PRODUCT**

### **Placement:**


Place the product on a level floor or table free of any obstructions.

- Place the product in locations where it will not come in contact with direct sunlight, or hot air from air conditioning or heating appliances. Such contact can cause the product to deform, change color, or malfunction.
- Do not place the product near the radio or TV. The product may cause noise on radio and affect the TV signal.

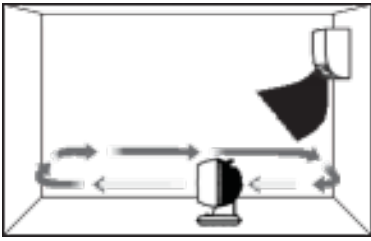


### Use with Air Conditioner

 Placing the product in front of the air conditioner to circulate cold air accumulated below creates airflow and better cooling.

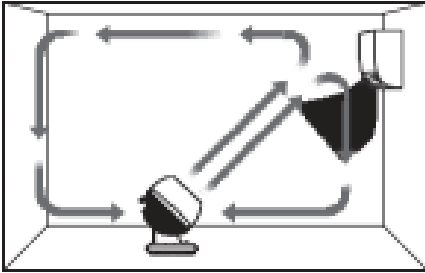


### Use with a Heater

 Sending airflow to corner of the room where the A/C source is, to circulate warm air accumulated above, warms feet.

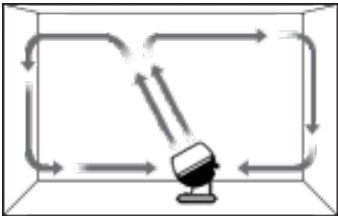


### Circulation

 Sending airflow toward the ceiling reduces room air temperature variations.

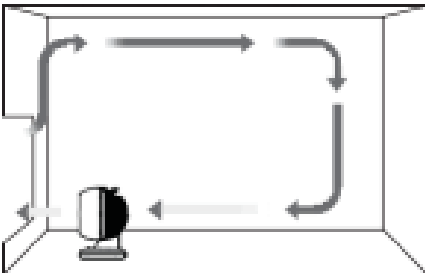


### Ventilation

 Placing the product by a window or a door draws outside air in and sends in-room air out.

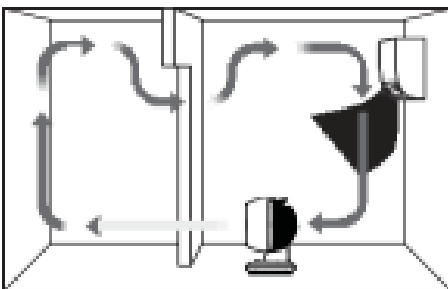

### Two-room Circulation


 
Placing the product in an open doorway circulates air between two-rooms.

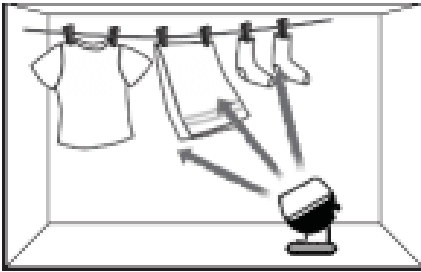


### **Drying Laundry**

Hanging laundry directly in the path of airflow helps it dry quicker.
  
### **Product Parts:**

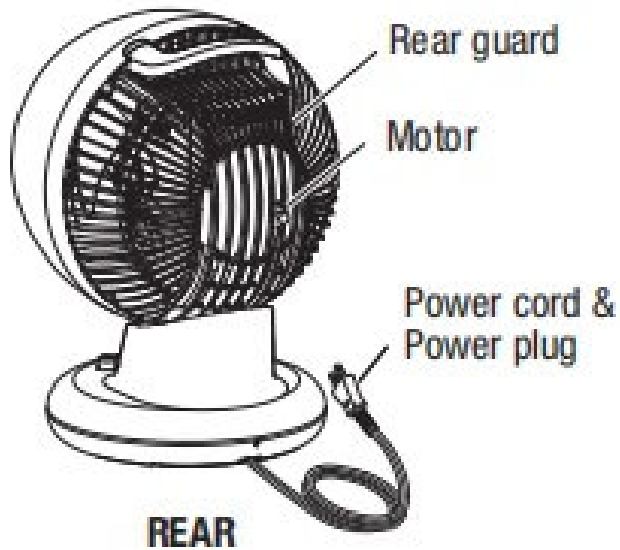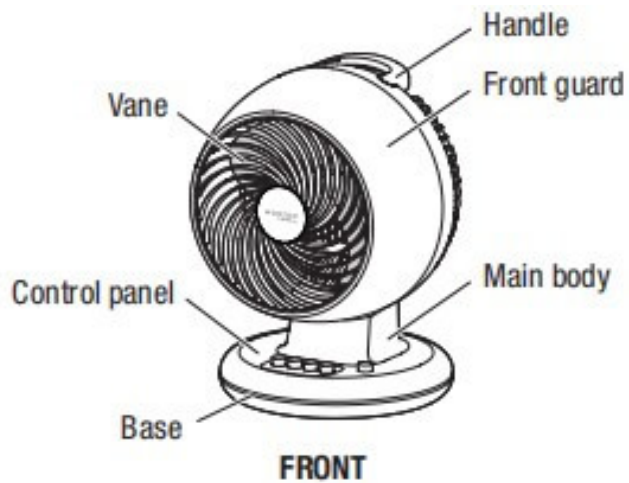


### **How to Use:**

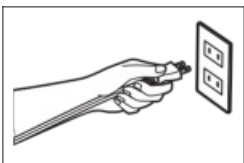 


### **Connecting the power plug**

 Insert the power plug securely all the way into the electric socket.

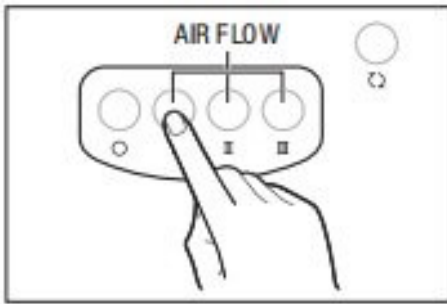


### Operation

 Press the appropriate button to select the desired air flow strength.

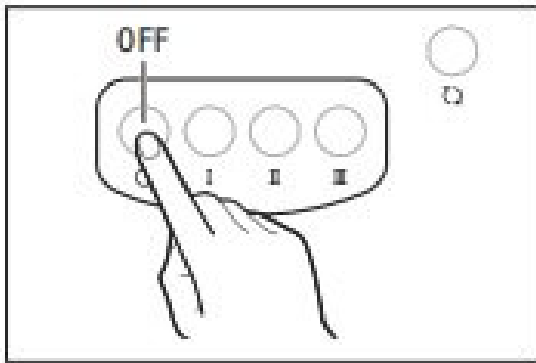

### Stop

 
Press the OFF button to stop operation.

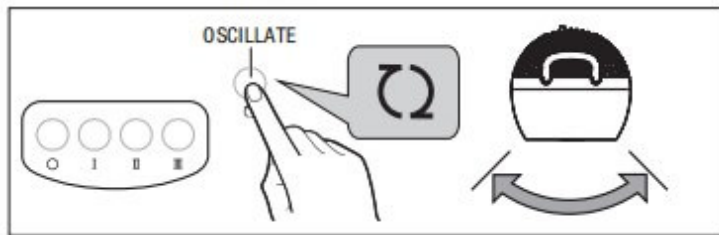

### Horizontal (oscillation)

The Oscillate button switches left and right oscillation on and off.

 **⚠ Caution:** Left and right angles cannot be changed manually. Change angles by switching [oscillate] » [stop] using the oscillate button.

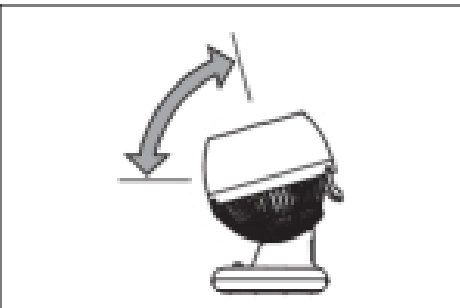

### Vertical (manual)

Vertical angle can be adjusted manually across six steps from horizontal to approximately 75 degrees.

 
### How to Clean:

Using the product in dusty condition can cause it to malfunction. Check and clean the product regularly.



## INTERNAL

1. Press in and disengage the 4 claws on the top and bottom of the front guard, and then remove the front guard by pulling it toward you.
2. Remove debris using a vacuum cleaner. Wipe off debris that cannot be removed by vacuuming using a soft cloth.
3. Align claws on the top and bottom of the front guard with the guides on the back of the guard, and press until it snaps into place.

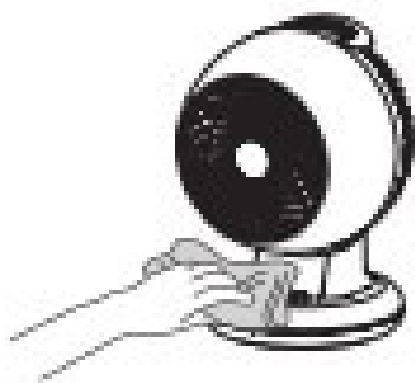

## EXTERNAL

Wipe lightly using a soft cloth.

For hard to remove dirt, wipe using a cloth containing a diluted neutral detergent.

**⚠ Caution:** Always turn off the power and unplug the power plug from the electric socket when cleaning the product. Use caution, the motor will be hot immediately after use. Confirm the motor has cooled before cleaning the product.

- Do not use paint thinner, alcohol, benzene, alkaline detergent, or bleach, etc. when cleaning the product. Using such substances can cause damage, malfunctions, or changes in color, shape, and quality.

## KEEPING AND STORING PRODUCT

### How to Store:

When the product is not used for an extended period of time, cover the unit with a plastic bag, etc., and then store it in a dry location away from direct sunlight.

### What to do if you suspect the product is malfunctioning:

If a malfunction occurs during use, please read this document carefully and check the following before requesting repairs.



STATUS	POSSIBLE CAUSE	REMEDY
WILL NOT OPERATE	The power plug may not be properly inserted in the electric socket	Insert the power plug securely into the electric socket
WEAK AIRFLOW	Dust may have accumulated.	Clean the product to remove dust.
	The product is placed on an uneven surface.	Place the product on a level, stable surface.
PRODUCT MAKES LOUD NOISE WHILE OPERATING	_____	_____
	The front guard is not securely attached.	Attach the front guard properly.
PRODUCT CLATTERS WHILE OSCILLATING	Sounds specific to the motor can become louder when the product is operating in oscillating mode.	This is not abnormal

If none of the above remedy the issue, contact the dealer of purchase or call IRIS USA, Inc. customer service at 1-800-320-4747.

 **WARNING:** DO NOT DISASSEMBLE, REPAIR, OR MODIFY THE PRODUCT YOURSELF.

### Product Used Over Long Periods of Time

If any of the following problems occur due to use over long periods of time, cut power immediately, unplug from the electric socket, and contact IRIS USA, Inc. customer service at 1-800-320-4747.

- There is no response when power switch is pressed.
- Product makes a strange noise when vane turns.
- While turning, the vane changes speed irregularly.
- Power cord is bent or damaged.
- Power turns on and off when power cord is touched.
- Product gives off a burnt smell.

### Designed Standard Period of Use

The standard period of time the product can be used safely and without malfunction under standard use conditions based on JIS standards is displayed on the main body of the product.

VOLTAGE	AC120V
FREQUENCY	60Hz
HUMIDITY	65%
PLACEMENT	Place in accordance with this manual
LOAD CONDITIONS	Operate at the product maximum rating
OPERATING TIME	8 hours a day
OPERATING FREQUENCY	5 times a day

#### **WARNING:**

Various factors can have an impact on the product degradation and malfunction.

If abnormalities like those listed above occur even when the product has not been used for the displayed standard period of use, stop use immediately and contact IRIS USA, Inc. customer service at 1-800-320-4747.

#### **THE MANUFACTURER WARRANTIES**

Your IRIS USA, Inc. products are to be free from defects in material and workmanship under normal non-commercial, household use, when operated and cared for in accordance with the Manufacturer's written instructions provided.

#### **THE LIMITED LIFETIME WARRANTY ("WARRANTY") DOES NOT COVER**

Any damage caused by accident, misuse, or abuse, including without limitation, damage caused by use in a humid area, improper cleaning, neglect, alteration, fire, theft, non-recommended temperature use and does not apply to minor imperfections, scratches, stains, discoloration, surface markings as a result of shipping or other damage to external or internal surfaces which does not impair the utility and/or functionality of the product.

#### **TO OBTAIN SERVICE**

If service should be necessary, you should contact IRIS USA, Inc. Customer Service ("Customer Service") at 1-800-320-4747. You may then return the properly packaged product(s), (using adequate packing and shipping material to prevent damage in transit), with postage prepaid along with name, address, telephone number, model number, and proof of date of purchase (a copy of the receipt) and a detailed description of the claimed defect. This warranty shall not cover any damage incurred to the products during transit to Customer Service. You shall have the obligation and responsibility to pay for all services and parts not covered by the warranty.

#### **MANUFACTURER'S OBLIGATION**

The Warranty may not be altered, expanded, extended, revised or varied except by written instrument executed by the Manufacturer.

THE MANUFACTURER'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT(S) AT THE MANUFACTURER'S SOLE AND EXCLUSIVE OPTION. THE

MANUFACTURER WILL REPLACE ANY ITEM FOUND TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITH THE MOST COMPARABLE CURRENT ITEM. IRIS USA, INC. DOES NOT ACCEPT SPECIAL REQUESTS, NOR DO WE HAVE THE ABILITY TO UPGRADE IN EXCHANGE FOR MONEY. THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER DIRECT OR INDIRECT. THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE ARE MADE WITH RESPECT TO THE PRODUCTS.

Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation exclusions may not apply. This Warranty gives specific legal rights, and there may also be other rights which vary from state to state.

### **DISCONTINUED ITEM RETURNED**

If the item returned is discontinued and is no longer available, IRIS USA, Inc. will automatically replace your item with the most comparable item currently manufactured.

Attn: Returns Department IRIS USA, Inc.  
13423 West Cactus Road Surprise, AZ 85379  
©2017 IRIS USA, Inc. All rights reserved.

### **Related Manuals / Resources**



#### [BRASQ Fan User Manual](#)

BRASQ Fan User Manual



#### [Samsung TV Product User Manual](#)

Samsung TV Product User Manual - Optimized PDF Samsung TV Product User Manual - Original PDF



#### [Neutron Ceiling Fan User Manual](#)

Neutron Ceiling Fan User Manual - Optimized PDF Neutron Ceiling Fan User Manual - Original PDF



#### [Hisense TV Product User Manual](#)

Hisense TV Product User Manual - Optimized PDF Hisense TV Product User Manual - Original PDF

**Leave a comment**

Your email address will not be published.

Comment

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

[Manuals+](#),

- [home](#)
- [privacy](#)