 




Portable BT Speaker

ZEB **CLIPPER**

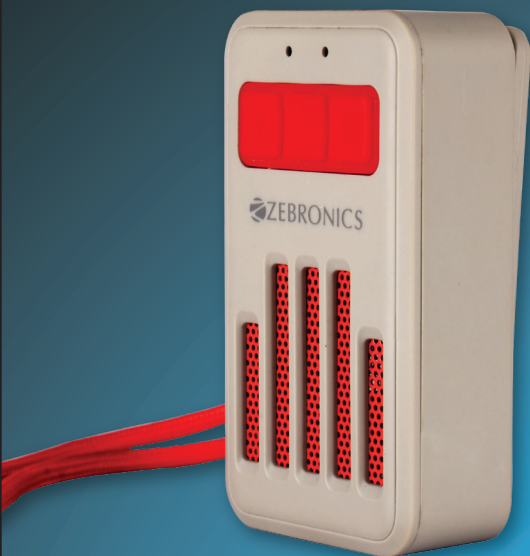

User Manual

www.zebronics.com

Thank you for purchasing the **“ZEB-CLIPPER”** Portable BT Speaker. Please read this user manual carefully and keep it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 | mSD
- Built-in Rechargeable Battery
- TWS Function
- Carry Loop
- LED Indicator
- Media/Volume Control
- Type-C Charging
- Call Function
- Compact design
- Magnetic Clip

Specifications:


Model No.	: ZEB-PSPK 58
Output Power (RMS)	: 4W
BT Version	: v5.3
Driver Size	: 3.6 cm
Speaker Impedance	: 3Ω
Frequency Response	: 80Hz-20kHz
S/N Ratio	: ≥85dB
Max Supported mSD memory size	: 32GB
Supported Audio formats: MP3	
Charging time	: 1.5 h
Playback time	: 20h*
Product Dimension	: 4.2 x 3.1 x 7.4 cm
Net. Weight	: 70g

Package Contents:

Speaker	: 1 U
QR Code Guide	: 1 U
Charging cable	: 1 U

** at 50% volume*

 Button Inscription:

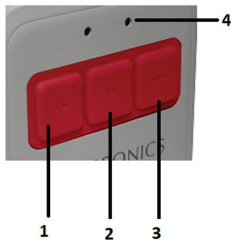

1. Volume increase/ Next Track

- Long Press to change the media (Next track)
- Short press to Increase volume level

2. Play/Pause

 
- Short Press to play/pause the music.
- Long press to On/Off the speaker
- During call short press to attend the incoming call, and press & hold 2 seconds to reject the incoming call

3. Volume decrease/ Previous

- Long Press to change the media(Previous track)
- Short press to decrease volume level

4. LED indication

Port Inscription:

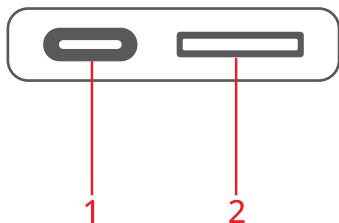

1. Type C charging Port
2. mSD Card Slot

General Instructions

BT Mode

- Power ON the speaker.
- Turn ON BT on your Source Device and search for nearby BT devices.
- Search for the BT name **ZEB-CLIPPER** and tap to connect it.

mSD Mode

Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

TWS Connectivity:

1. Turn on both **“ZEB-CLIPPER”** Speakers in BT mode.
2. Press and hold the **+ & -** Buttons for 2 Seconds in any one the speaker to initiate TWS pairing.
3. After Few seconds both speakers will get connected Successfully.
4. Now Search for nearby BT Devices in your Mobile phone or other source device and tap on BT name **“ZEB-CLIPPER”** to Connect

Note: Requires two ZEB-CLIPPER speakers for using TWS feature.

Charging the Speaker

- Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
- Red LED glows, indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

