

Brookstone®

# Tower Stereo System

For iPod® and iPhone®



Made for



iPod



iPhone

iDesign®

**TABLE OF CONTENTS**

Warnings and Cautions ..... 2

Compatible iPod/iPhone Models.....10

Location of Controls..... 11

Operation.....13

Specifications .....15

Troubleshooting .....16

Warranty..... 17

## WARNING

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

## **DANGER**

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled, splashed or dripped onto the unit.
7. Do not place objects filled with liquid, such as vases, on the unit.
8. Caution, excessive sound pressure from earphones and headphones can cause hearing loss.
9. Turning off the main switch does not completely disconnect power. Unplug unit directly from power outlet when not in use.

## **SAVE THESE INSTRUCTIONS**


# IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, heeded, adhered to and followed before the unit is operated.

## CAUTION

### CARTS AND STANDS

**IMPORTANT:** The appliance should be used only with a cart or stand that is recommended by the manufacturer.

-  1. AN APPLIANCE AND CART COMBINATION SHOULD BE MOVED WITH CARE. Quick stops, excessive force, and uneven surface may cause the appliance and cart combination to overturn.
2. VENTILATION  
The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.

3. GROUNDING OR POLARIZATION

Do not defeat the safety purpose of this polarized or grounding plug. The polarized plug has two blades, one wider than the other. The grounding plug has two blades plus a third grounding prong. These features are for your safety. DO NOT alter the plug to fit your outlet in any way. Call a qualified electrician to update your obsolete outlet.

4. CLEANING

The appliance should be cleaned only with a soft, dry cloth.

5. POWER LINES

An outdoor antenna should be located away from power lines.


6. OUTDOOR ANTENNA GROUNDING

If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure 1.

# OUTDOOR ANTENNA GROUNDING

FIGURE 1

 EXAMPLE OF ANTENNA GROUNDING PER THE NATIONAL ELECTRICAL CODE

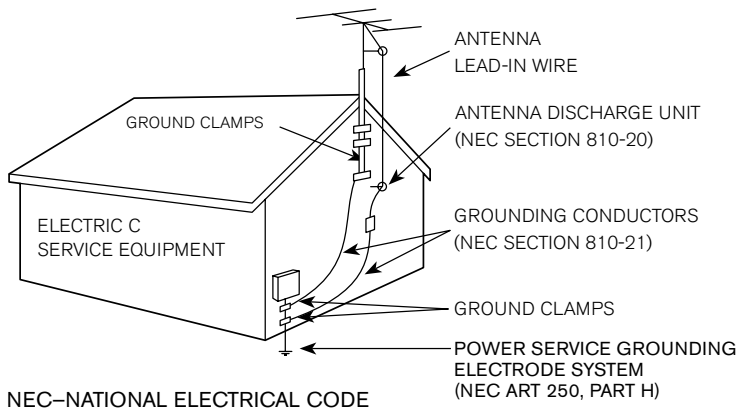

## 7. DAMAGE REQUIRING SERVICE

The appliance should be serviced by qualified service personnel when:

- a) The power-supply cord or the plug has been damaged; or
- b) Objects have fallen, or liquid has been spilled into the appliance; or
- c) The appliance has been exposed to rain; or
- d) The appliance does not appear to operate normally or exhibits a marked change in performance; or
- e) The appliance has been dropped, or the enclosure damaged.

## 8. SERVICING

The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

9. Only use attachments/accessories specified by the manufacturer.

## 10. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

## 11. SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

12. Do not use this product near water.



## BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated or incorrectly installed.
- Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.
- Do not expose batteries to excessive heat such as fire, near heating units or in direct sunlight.

## WARNING

1. Close supervision is necessary when this unit is used by or near children.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Unplug unit from electrical outlet to ensure complete disconnection from power.
5. Do not alter the grounding prong on this plug or use with a non-grounding adapter.
6. Never drop or insert an object into any opening.
7. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
8. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.

9. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
10. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
11. Do not overload electrical outlet. Use only the power source as indicated.
12. Do not carry this unit by its cord or use the cord as a handle.
13. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.  
If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
14. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
15. Do not operate in the presence of explosive and/or flammable fumes.

## **FCC INFORMATION**

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

## **COMPATIBLE iPod/iPhone MODELS**

iPod touch (2nd generation)\*

iPod touch (1st generation)

iPod classic\*

iPod nano (5th generation)\*

iPod nano (4th generation)\*

iPhone 3GS\*

iPhone 3G\*

 
iPhone

\*DOCK ADAPTER included.


## LOCATION OF CONTROLS

1. MAIN POWER SWITCH
2. AUX OUT
3. AUX IN
4. iPod/iPhone DOCK
5. POWER ON/STANDBY
6. POWER LED
7. VOLUME KNOB
8. ►|| PLAY/PAUSE
9. MUTE
10. ◀◀ SKIP BACKWARD
11. ▶▶ SKIP FORWARD
12. SCROLL ▼ AND ▲
13. MENU
14. SELECT
15. VOLUME ▼ AND ▲


Back Panel View

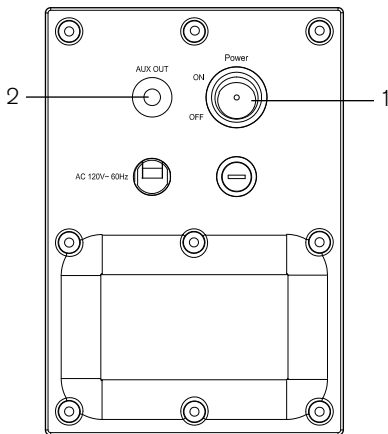


Top View

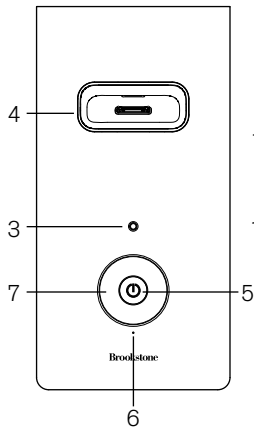 


Remote

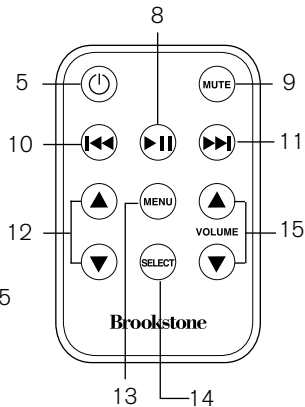 

ACCESSORIES

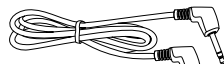 

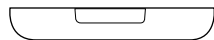 

3.5mm to  
3.5mm Cable



iPod/iPhone  
Dock Adapters  
(5 Included)

# OPERATION

## TURNING THE UNIT ON/STANDBY

1. Switch the MAIN POWER SWITCH on the back of the unit to ON.
2. Press  on top of the tower or on the remote to turn the unit on.  
The blue POWER LED will illuminate.
3. Press  again to put the unit into STANDBY mode.

**Note:** Your iPod/iPhone will charge while it is docked in the unit in Power On and in Stand-by Mode.

## TURNING OFF THE UNIT

Switch the MAIN POWER SWITCH on the back of the unit to OFF.

## CONNECTING YOUR iPod/iPhone TO THE UNIT

1. Select the correct iPod/iPhone DOCK ADAPTER for your device from the following list, or use the one that came with your iPod/iPhone, and snap it securely into the docking area on the top of the unit.

**iPod/iPhone DOCK ADAPTERS** included are as follows:

Insert A: iPod classic (160GB (2009), 120GB, 80GB)

Insert B: iPod nano (4th Gen)



Insert C: iPod nano (5th Gen)

Insert D: iPod touch (2nd Gen)

Insert E: iPhone (3G/3GS)

2. Insert your iPod/iPhone into the dock.



## PLAYING AND PAUSING YOUR MUSIC

With your iPod/iPhone docked in the unit, press  on the unit or remote to turn the unit on. iPod/iPhone playback will begin. Press  on the remote to pause playback.



## FAST-FORWARDING AND REWINDING YOUR SONGS

Press and hold  or  on the remote to rewind or fast-forward within a song.

## SKIPPING FORWARD AND BACKWARD TO A SONG

Press and release  or  on the remote incrementally to skip forward or backward to a song.


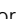 
## ADJUSTING THE VOLUME

Press VOLUME  or  on the remote control or rotate VOLUME KNOB on top of the unit to adjust sound levels.

## MUTING THE SOUND

Press MUTE on the remote to turn off the sound. Press MUTE again to turn the sound back on.

## USING THE iPod/iPhone MENU FEATURE

1. Press MENU on the remote to enter the iPod/iPhone menu.
2. Press SCROLL  or  on the remote to scroll through the functions.
3. Press SELECT on the remote to select a function.

## REMOVING THE SPEAKER GRILLE

Gently pull the speaker grille away from the unit. The speaker grille posts will pull free from the rubber grommets.

## CONNECTING OTHER STEREO COMPONENTS

Connect an MP3 Player to the AUX IN jack using a 3.5mm to 3.5mm cable (included). The unit automatically changes to auxiliary mode. Use your MP3 Player as you normally would.

Note: The Remote Control will not control an MP3 Player in auxiliary mode. Connect the Audio Out terminals of TV, VCR or DVD Player to the AUX IN jack by using audio cords with mini plugs (not included).

## OUTPUTTING SOUND TO OTHER EQUIPMENT/SPEAKERS

Connect the AUX OUT jack on the back of the unit to other equipment or speakers by using audio cords with mini jacks (not included).

## SPECIFICATIONS

Power Supply:.....AC~120V/60Hz

Speaker Units: . . . . . 2 x 2" speakers (4 ohm)  
1 x 6" speaker (4 ohm)

Power Output: . . . . . 2 x 15W + 1 x 35W

Dimensions: .....7" W x 40" H x 12" D

Weight: ..... 23 lbs



# TROUBLESHOOTING

ISSUE	SOLUTION
The remote will not operate the tower.	<p>The batteries are low. Replace the batteries.</p> <p>The IR sensor is blocked. Make sure there are no obstacles in between the remote and the tower, and ensure the speaker grille is mounted in the correct orientation.</p>
There is a "This accessory is not made to work with iPhone" warning on the iPhone when I dock in the speaker.	The speaker needs a few seconds to authenticate the iPhone. Try removing and redocking the iPhone if the warning does not disappear after a few seconds.

iPod/iPhone not included. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

# ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products “as is.” This warranty does not apply to: a) damage caused by failure to follow instructions relating to product’s use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold “as is” including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

# Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • [www.Brookstone.com](http://www.Brookstone.com)

639401