



Figure: Your machine may look different to the one shown.

S8 – Quick Reference Guide



For your safety: read and understand manual before use.

S8 – Quick Reference Guide



These short instructions do not replace the 'S8 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children **AWAY**.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Rinsing the machine



You can initiate the rinse operation manually at any time.

Precondition: The start screen is displayed.

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
- ▶ Touch 'P'.
- ▶ **'Machine settings'**
- ▶ Move your finger across the display until **'Maintenance status'** is displayed in the center.
- ▶ Touch **'Maintenance status'**.
- ▶ **'Clean'**
- ▶ Move your finger across the display until **'Rinse'** is displayed in the center.
- ▶ Touch **'Rinse'** to start the rinse operation.
- ▶ **'Machine is rinsing'**
- ▶ **'Milk system is being rinsed'**

The rinse stops automatically. The start screen is displayed.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the milk system after preparing milk.

Cleaning the milk system

To ensure that the milk system always works properly, you must clean it **daily** when you have been preparing milk.

WARNING



Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

WARNING


Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

 
- ▶ Keep children **AWAY**.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

-  JURA milk system cleaner is available from specialized dealers.
-  To clean the milk system, use the container supplied.

Precondition: The start screen is displayed. **'Clean the milk system'** is displayed.

- ▶ Touch **'Clean the milk system'**.
- ▶ Touch **'Clean the milk system'** again.
- ▶ Touch **'Start'**.
- ▶ Touch **'Start'** again.
- ▶ **'Milk system cleaner' / 'Connect the milk tube' / 'Fresh water'**
- ▶ Remove the milk pipe from the milk container or milk cooler.

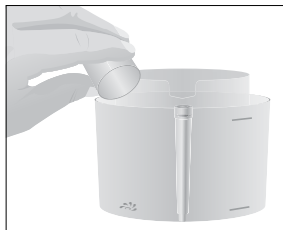


- ▶ Add milk system cleaner to the front part of the container up to the **bottom mark** (indicated by .
- ▶ Then fill with water up to the **upper mark**.
- ▶ Place the container under the fine foam frother.




- ▶ Connect the milk pipe to the container.
- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.
- ▶ Touch **'Next'**.
'Milk system is being cleaned'
The operation is interrupted, **'Fresh water'**.
 - ▶ Rinse the container thoroughly and fill the front part with fresh water up to the **upper mark**.
 - ▶ Place this under the fine foam frother and reconnect the milk pipe to the container.
 - ▶ Touch **'Next'**.
'Milk system is being cleaned'
The operation stops automatically.

Dismantling and rinsing the professional fine foam frother


To make sure the professional fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk.

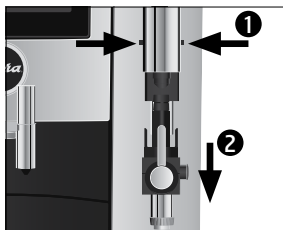

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Remove the professional fine foam frother.

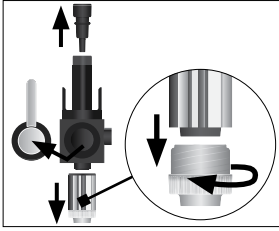


- ▶ Dismantle the fine foam frother into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.

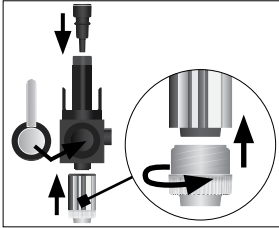

- ▶ Re-assemble the professional fine foam frother.

i Ensure that all individual parts are correctly and firmly connected to ensure optimum operation of the professional fine foam frother.

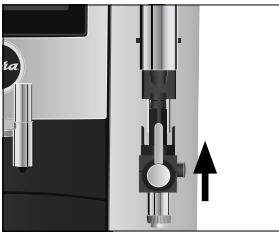

- ▶ Re-fit the fine foam frother on the milk system.


Inserting the filter

Your S8 no longer has to be descaled if you are using the CLEARYL Smart filter cartridge.

Precondition: The start screen is displayed.

- ▶ Remove and empty the water tank.
- ▶ Fit the filter cartridge extension supplied on top of a CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just inserted the filter cartridge.

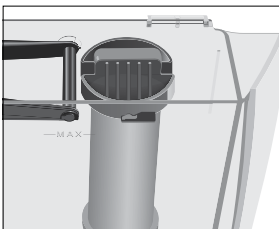

‘Saved’ appears briefly on the display.

‘Filter is being rinsed’, water flows directly into the drip tray.
Rinsing of the filter stops automatically.

‘Empty drip tray’

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

The start screen is displayed.


- i** If the filter is active, this is indicated by a blue filter symbol at the top of the display.

Changing the filter

- i** Once the filter cartridge stops working (depending on the water hardness setting), the S8 will prompt you to change the filter.
- i** CLEARYL Smart filter cartridges are available from specialized dealers.

Precondition: The start screen is displayed. ‘Change the filter’ is displayed.

- ▶ Touch ‘Change the filter’.
- ▶ Touch ‘Change the filter’ again.
‘Change filter’
- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

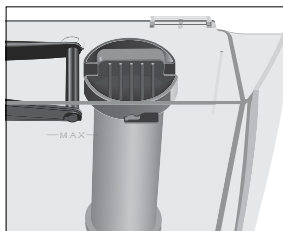

‘Saved’ appears briefly on the display. The machine has automatically detected that you have just changed the filter cartridge.

‘Filter is being rinsed’, water flows directly into the drip tray.
Rinsing of the filter stops automatically.

‘Empty drip tray’

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The start screen is displayed.

i If the filter is active, this is indicated by a blue filter symbol at the top of the display.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the S8 will prompt you to clean it.

WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

- i** The cleaning program lasts approximately 20 minutes.
- i** Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialized dealers.

Precondition: The start screen is displayed. 'Clean machine' is displayed.

- ▶ Touch 'Clean machine'.
'Clean'
- ▶ Touch 'Clean'.
- ▶ Touch 'Start'.
- ▶ Touch 'Start' again.
'Empty coffee grounds container'



- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
- ▶ Touch **'Next'**.
'Machine is being cleaned' appears and water flows out of the coffee spout and the fine foam frother.
 The operation is interrupted, **'Add cleaning tablet'**.
- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Touch **'Next'**.
'Machine is being cleaned', water flows repeatedly out of the coffee spout and the fine foam frother.
 The operation stops automatically.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
 Cleaning is now complete. The start screen is displayed.

Descaling the machine

The S8 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARLYL Smart filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children **AWAY**.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.

- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE If the descaling operation is interrupted, there may be damage to the machine.


- ▶ Allow the descaling program to run to the end.

i The descaling program lasts approximately 45 minutes.

i JURA descaling tablets are available from specialized dealers.

Precondition: The start screen is displayed. ‘Decalcify machine’ is displayed.

- ▶ Touch ‘Decalcify machine’.
- ▶ Touch ‘Descalc’.
- ▶ Touch ‘Start’.
- ▶ Touch ‘Start’ again.
- ▶ Touch ‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Pour descaling agent into water tank
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 17 oz (500 ml) of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

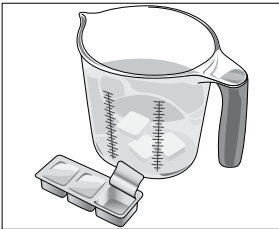

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
- ▶ Touch ‘Next’.
- ▶ ‘Machine is being descaled’ appears and water flows out of the fine foam frother repeatedly.
- ▶ The operation is interrupted, ‘Empty drip tray’.



- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

'Fill water tank'

- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
- ▶ Touch **'Next'**.

'Machine is being descaled', the descaling operation is continued.

The operation is interrupted, **'Empty drip tray'**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.


Descaling is now complete. The start screen is displayed.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: **'Fill bean container'** is displayed.

- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARLYL Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARLYL Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.