

# INSIGNIA™

## QUICK SETUP GUIDE

# 19"/24" 720p LED TV


NS-19D310NA21 / NS-24D310NA21 / NS-24D310CA21

ACCESSORIES  
Remote control and two AAA batteries




TV stands

19" 24"

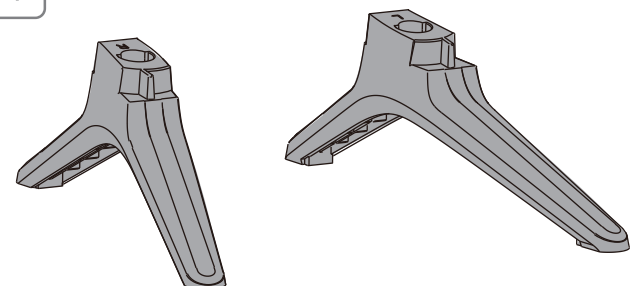

M3 screws (14 mm length) (2 pcs.)

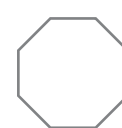

STOP


Before using your new product, please read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

## 1 INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

### STANDS

- 1 Align the TV stand screw holes with the holes on your TV's bottom.
- 2 Use a Phillips screwdriver and the two provided screws to secure the stands to your TV.

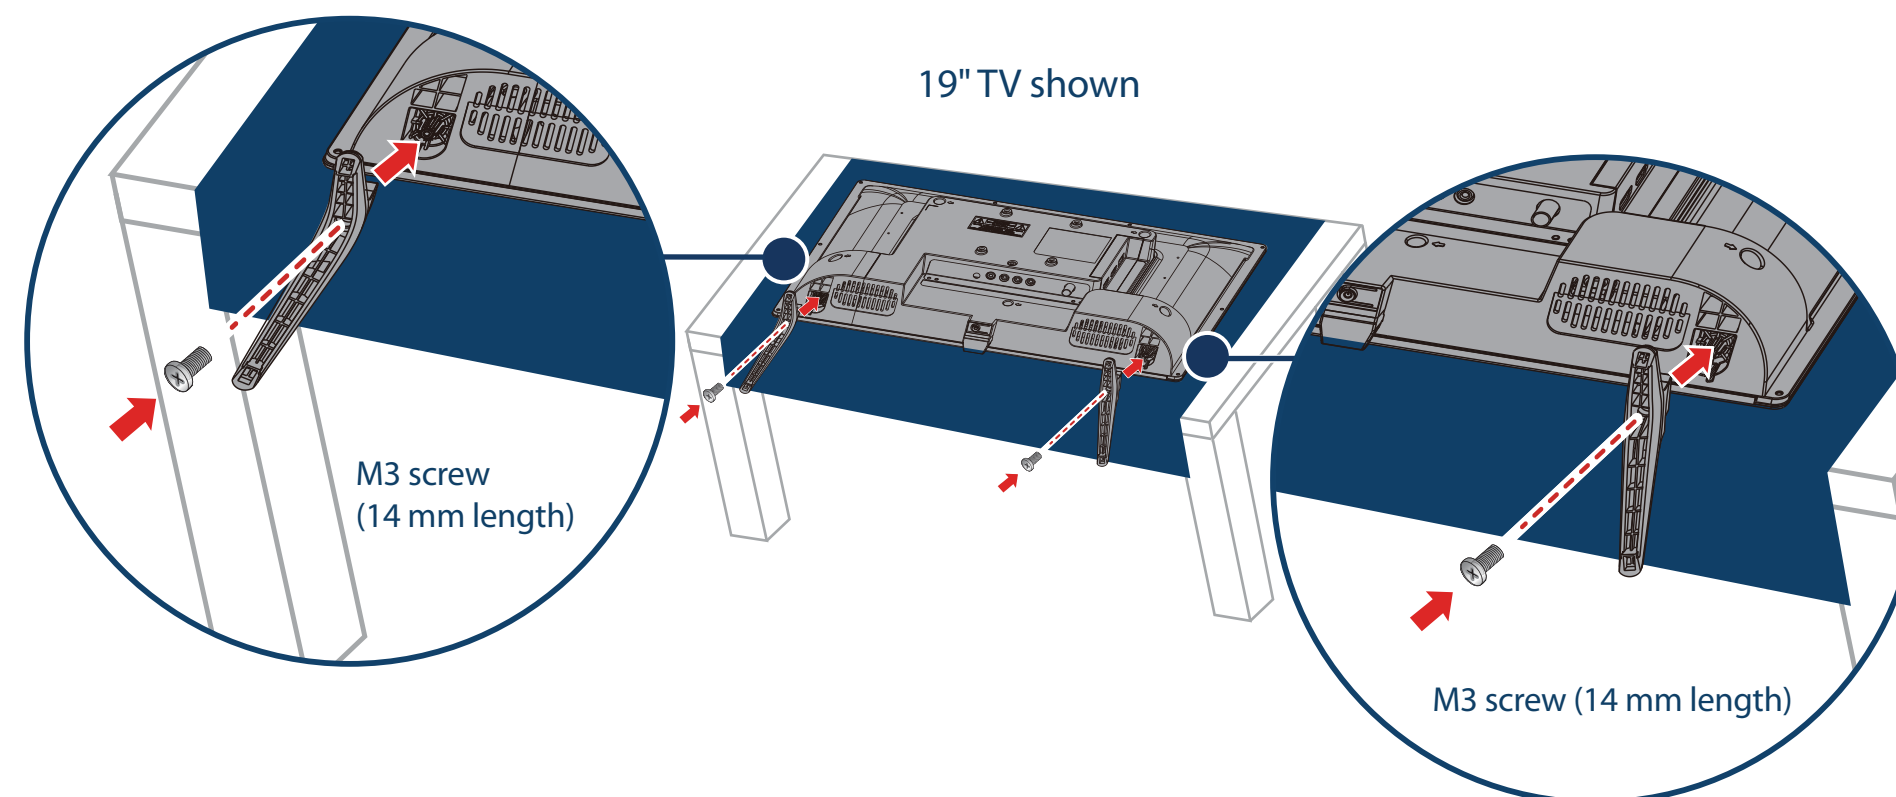


### WALL MOUNT

Before you mount your TV, make sure that:

- You remove the stands.
  - The wall-mount bracket supports the weight of your TV.
- See the instructions that came with your wall mount for more information about how to correctly mount your TV.

**WARNING:** Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

**Note:** Wall-mount screws are not included.

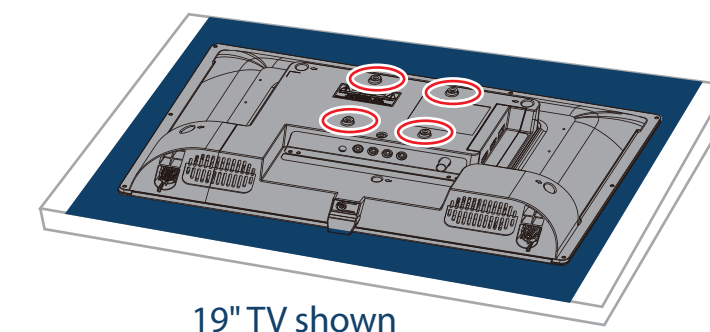

- 19" VESA Mounting Pattern**  
75 × 75 mm  
Screws: type M4, 10 mm minimum length depending on the wall-mount.
- 24" VESA Mounting Pattern**  
100 × 100 mm  
Screws: type M4, 10 mm minimum length depending on the wall-mount.

## FEATURES




19" 24"



19" TV shown

Remote control sensor




**Power/Input button**  
Press to turn your TV on or off manually. When your TV is on, a short press changes inputs and a long press turns off your TV.

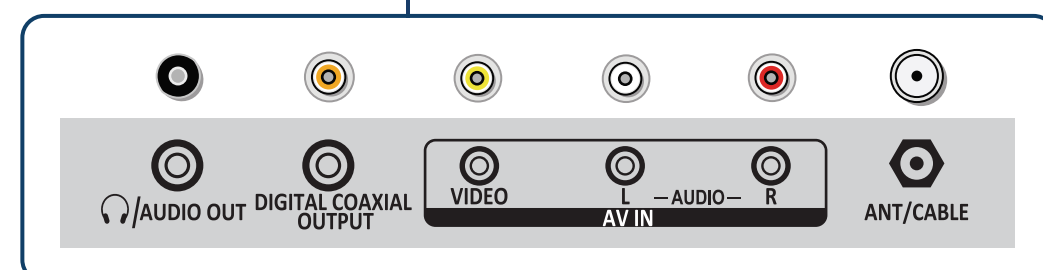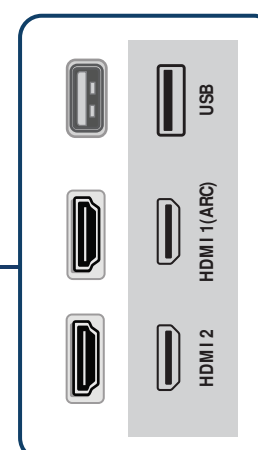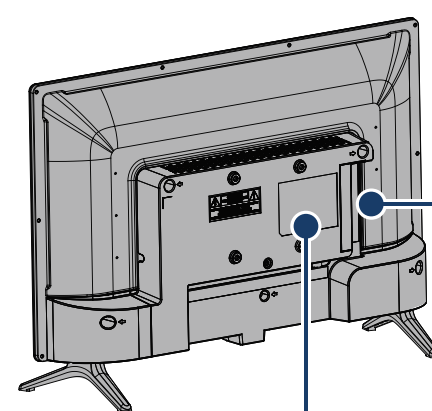



**Note:** Images do not necessarily represent the exact design of your television.

## 2 MAKING CONNECTIONS
 
### HDMI (best video quality)

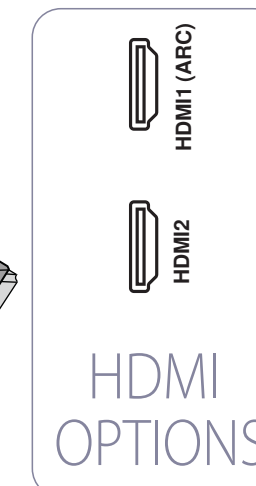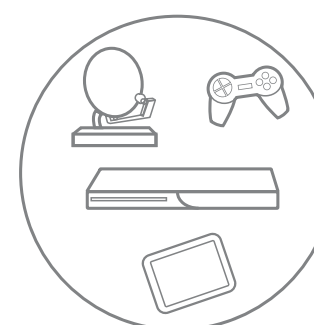


### DIGITAL AUDIO

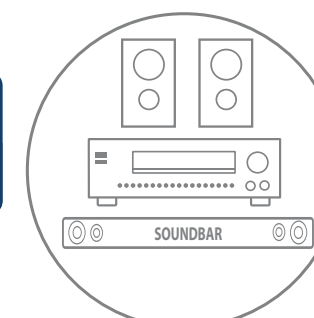
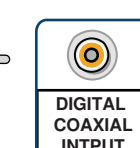


You can use the **DIGITAL COAXIAL OUTPUT** jack or the **HDMI 1 (ARC)** jack.  
**Note:** If you need to change the digital audio format: From your TV's *Audio* menu, select **Audio Format/Audio Delay**, then press **ENTER**. Set **Audio Format** to **PCM**.


### ANALOG AUDIO

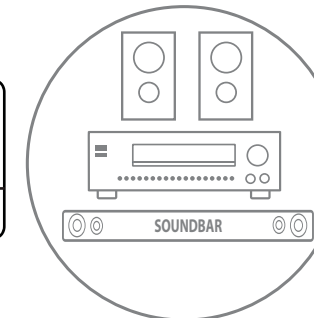

### AV (good video quality)

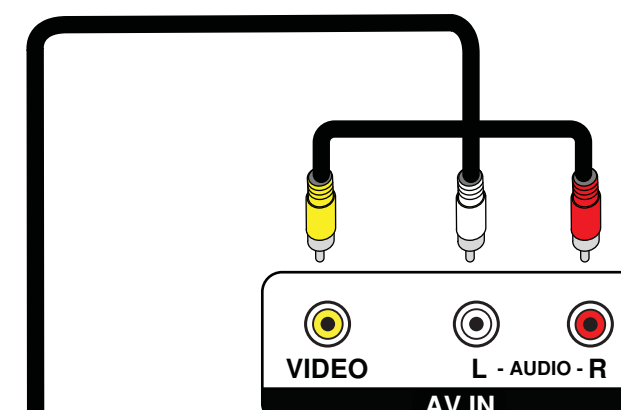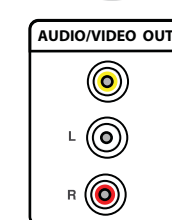


### Coaxial (good video quality)

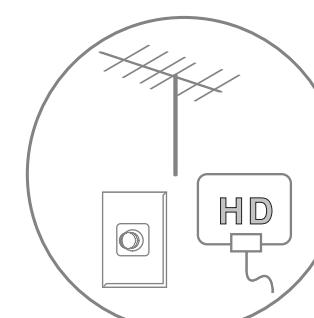


Connect an antenna to access live over-the-air TV.

### 3 TURNING ON YOUR TV

1 Plug the power cord into a power outlet.

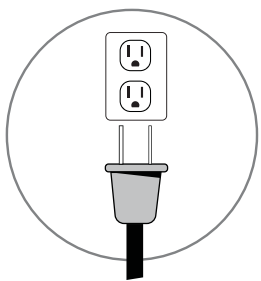

2 Remove the remote control cover and install the batteries.

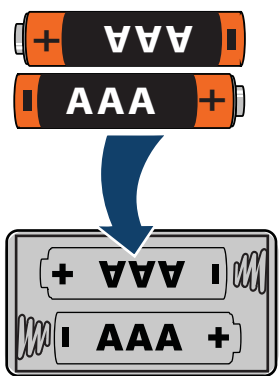

3 Press  on your remote .


4 Follow the on-screen instructions.



### FIND YOUR *USER GUIDE* ONLINE

- 1 Go to [www.insigniaproducts.com](http://www.insigniaproducts.com).
- 2 Use the search bar to find **NS-19D310NA21**, **NS-24D310NA21**, or **NS-24D310CA21**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

### USING YOUR REMOTE CONTROL

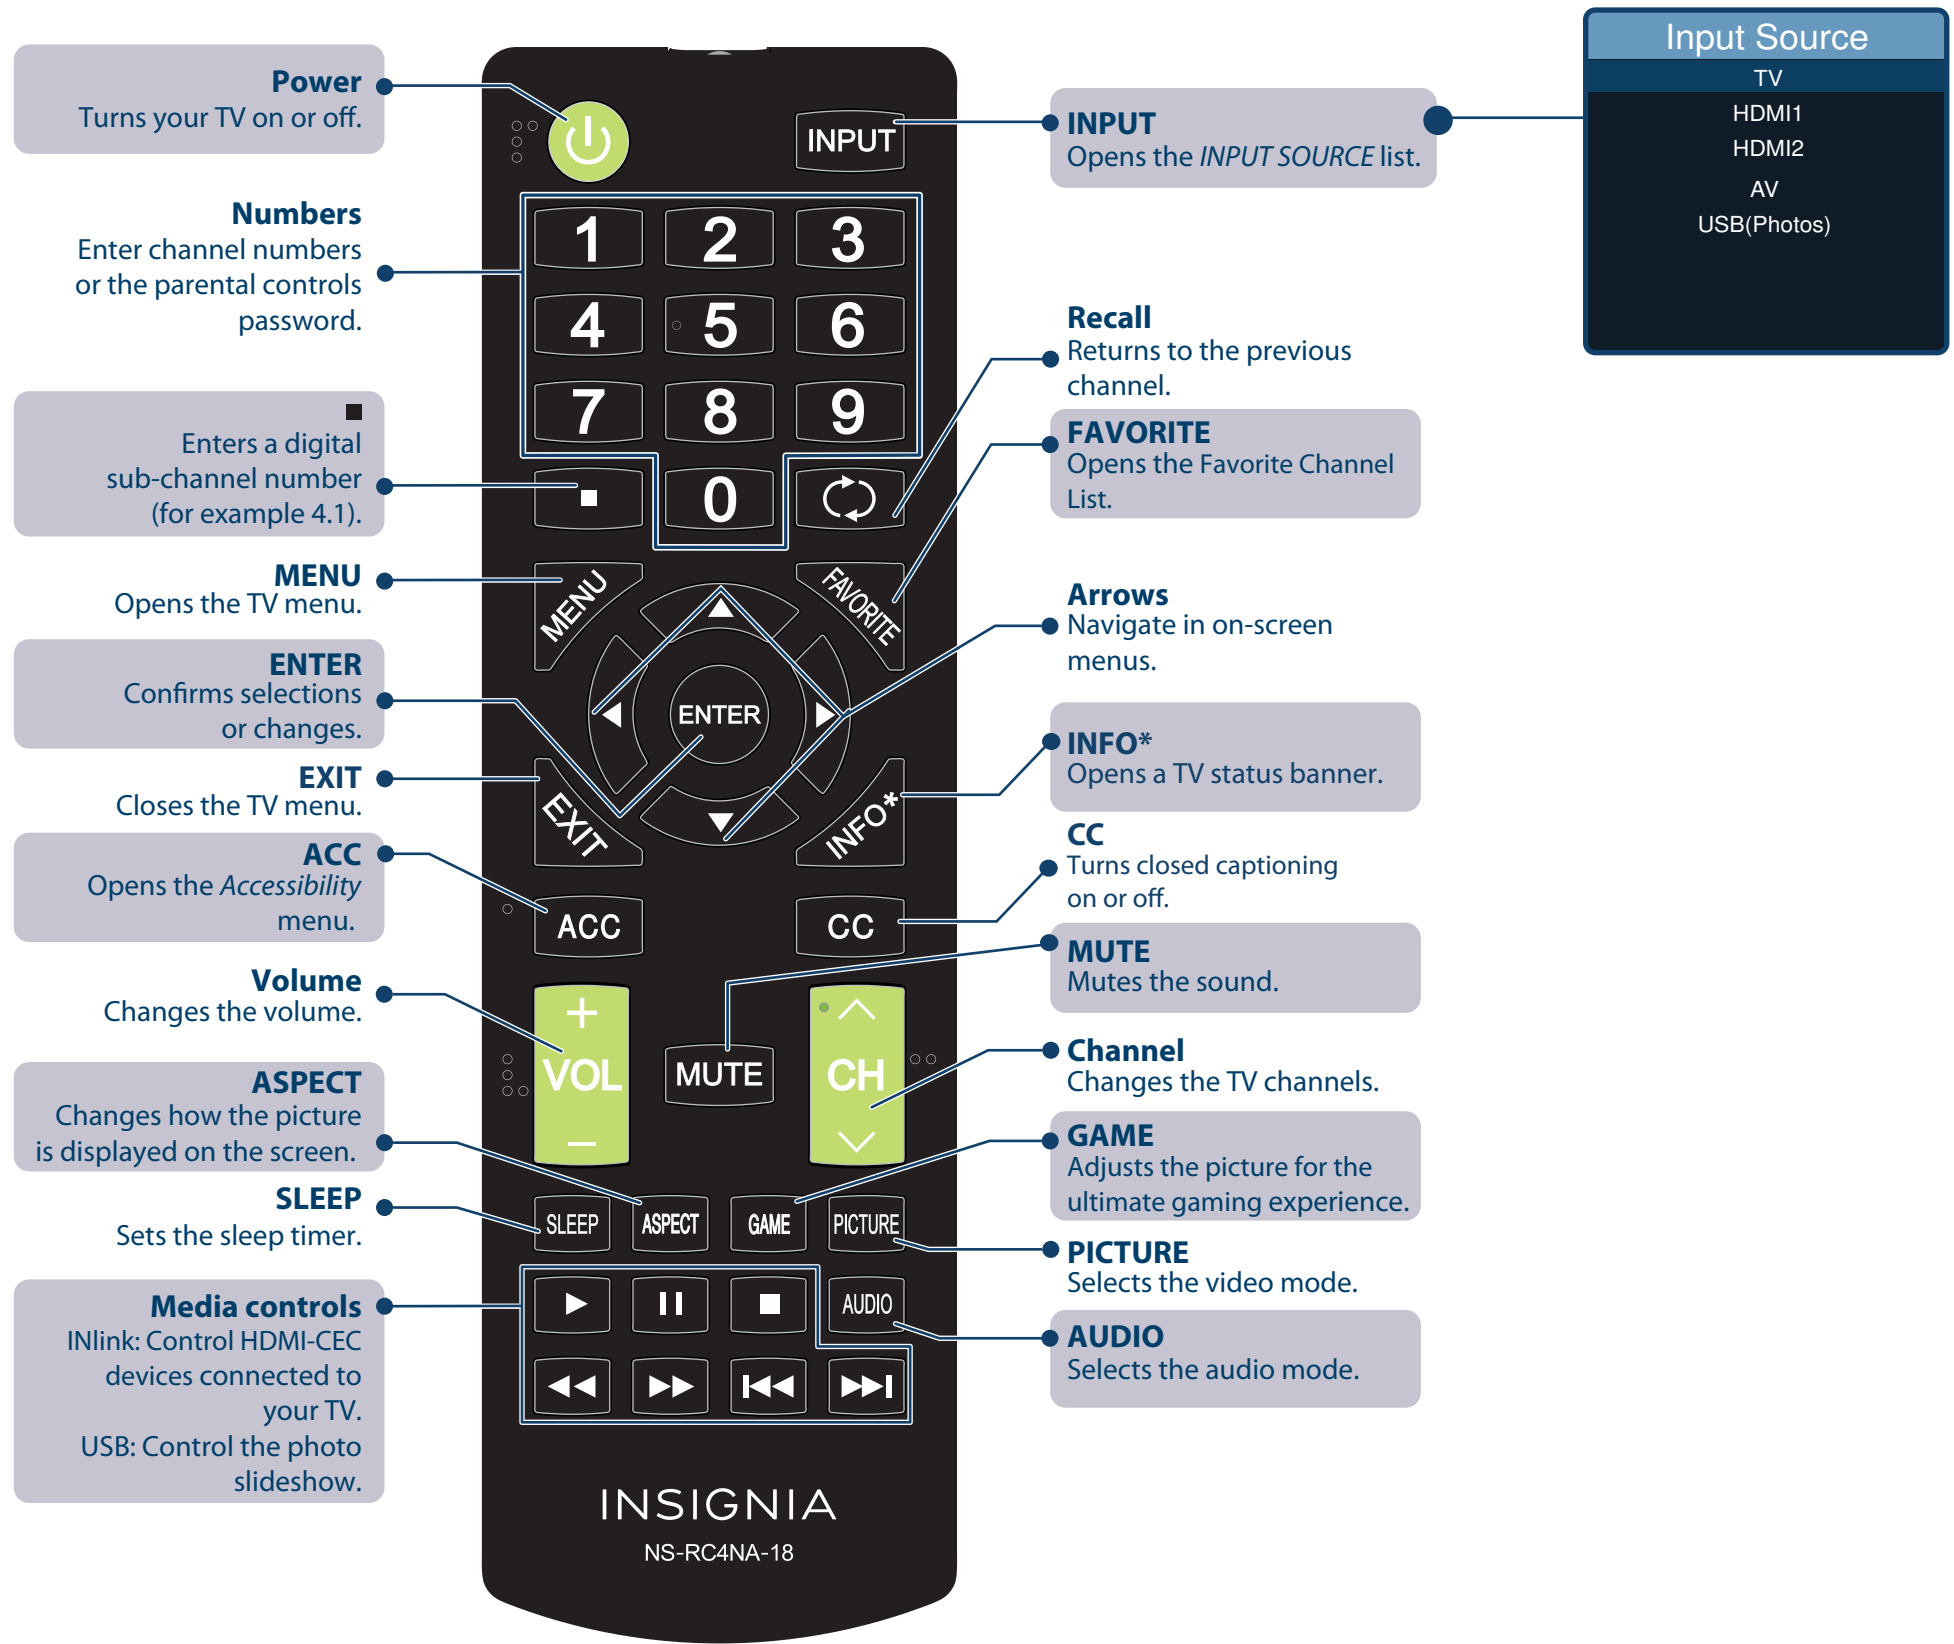

### I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you want to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

UNIVERSAL REMOTE CONTROL CODES	
<b>AT&amp;T U-verse</b>	1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227
<b>Cablevision</b>	068, 069, 078, 096, 100, 164, 168, 229, 026
<b>Charter</b>	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
<b>Comcast</b>	10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476
<b>Cox</b>	1326, 1463
<b>DirecTV</b>	10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049
<b>Dish Network</b>	834, 720, 222, 898, 365, 777, 754
<b>RCA</b>	135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
<b>Rogers</b>	0463, 1326, 2049, 1785, 1780, 1423, 1963
<b>Time Warner</b>	400, 450, 461, 456, 10463, 1463, 0463
<b>Verizon</b>	0198, 0490

For an up-to-date list of codes for other cable providers and universal remote brands, visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes)

# INSIGNIA™

**ONE-YEAR LIMITED WARRANTY**  
Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

#### NEED ADDITIONAL HELP?

Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

#### WE'RE HERE FOR YOU

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
For customer service, call:  
**1-877-467-4289** (U.S./Canada)



For DTS patents, see <http://patents.dts.com>.  
Manufactured under license from DTS, Inc.  
DTS, TruSurround and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries.  
© 2020 DTS, Inc. ALL RIGHTS RESERVED

**U.S. and Canada:**  
INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.