

Power Button Operation

- Turn on the printer. Hold down the power button for 3 seconds, then the white power indicator is lit.
- Turn off the printer. Hold down the power button for 3 seconds, then the power indicator will be off.
- Turn off the printer. Hold down the power button for 3 seconds, hold down the power button for 5 seconds, and then the white connection indicator will flash quickly. Release the button, the printer network has been reset.

LED Indicator Definitions

Power Indicator	
Color	Power status
On	Power on
Flashes rapidly	Power off
Flashes slowly	Power standby

Connection Indicator	
Color	Connection status
On	Connect failed, not connected
Flashes rapidly	Connect failed, not connected
Flashes slowly	Waiting network
Flashes slowly	Connecting network
On	Network connection successful

Print Indicator	
Color	Print status
On	Printing on
Flashes rapidly	Flashes rapidly
Flashes slowly	200 x 300 dpi resolution, standard
Flashes slowly	200 x 300 dpi resolution, standard
Flashes slowly	Flashes slowly

Printing from Mobile Phone

- **APP Download**
Scan the QR code to download the app.

- **Connect to printer via Wi-Fi mode**
1. Open Wi-Fi function, click "Add device" and "Connect" with "CP4100-000".
2. Open Wi-Fi function, click "Add device" and "Connect" with "CP4100-000". (2000 are last)
3. Click "Connect to printer" directly follow the prompts on the APP to join and connect to the Wi-Fi network by the printer.
- **Connect to printer via USB mode**
1. Connect the mobile phone to a USB (supported) front panel port.
2. Open Wi-Fi function, click "Add device" and "Connect" with "CP4100-000". (2000 are last)
3. Click "Connect to printer" or "Wi-Fi network" after the Wi-Fi password of the printer is connected, then click "Connect".

- **Print**
1. Click "Share" or "Home" choose the photos you want to print and adjust the **Preview**.
2. Click "Print" to print it.
*The product identifies the ribbon by NFC (13.56MHz)
▲Note: The above print instructions take "Picture" for example, for "Collage", "ID photo", "Video", "Template", and most functions, please follow the prompts on the APP for operation.

Operating Environment

1. Please place the printer on a desktop or other flat and stable surface for use.
2. When printing, the photo paper will move back and forth. Please ensure that there is more than 40 cm space behind the printer.

Precautions

1. The best operating temperature is 5°C-35°C. If the environmental temperature is too high, the print quality may be affected.
2. Please use official color paper (color and photo paper) to ensure the print quality.
3. Do not touch the film of ribbon and the glossy side of photo paper in case of polluting them, this may affect the print quality.
4. Do not pull out the photo paper by force during printing, this may damage the printer.
5. When not in use for a long time, please remove the paper cassette and close the covers of it and the printer to keep things like dust out.
6. Operating this device may cause radio interference in a residential environment.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to the 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC part 15B equipment guidelines, this equipment should be installed and operated with minimum distance between them and your body: Use only the supplied antenna.

FCC ID: 264714-F523A

