

## FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) if it does, you must accept the responsibility for correcting any interference caused by you.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly used or installed, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

The device has been tested to meet general FCC exposure requirements. The device can be used in a normal manner without restrictions.

## WHEN USING A KEYBOARD:

1. Maintain proper posture and avoid excessive force on the keys.

2. Use regularly to prevent sore fingers.

3. Clean the keyboard regularly to remove dust and dirt.

4. Avoid leaving the keyboard in humid.

5. Keep the keyboard in a suitable environment, free from extreme temperatures or humidity.

Remember these tips for a comfortable and durable keyboard experience.



GUARANTEE  
Non-human hand  
12-month warranty

## 产品基础

## PRODUCT BASIC INFORMATION



说明书  
Manual



拔轴拔键器  
Switch and Keycaps Puller



键盘  
Keyboard



 
Type-C 数据线  
Type-C Cable



2.4G 接收器  
2.4G Receiver

## 旋钮功能

## KNOB FUNCTION



## 长按旋钮三秒切换旋钮模式

Long press knob for 3 seconds to switch knob mode

音量模式 (默认): 顺时针音量加, 逆时针音量减, 按压静音

Volume Mode (default): Clockwise Volume Up, Counterclockwise Volume Down, Press to Mute

背光模式: 顺时针背光亮起, 逆时针背光亮起, 按压切换灯光

 
Backlight mode: clockwise backlight brightness plus, counterclockwise backlight brightness minus, press to switch the light effect

尺寸/Size	Layout	版本/Version	背光/Backlit	轴体/Key Switches
327.5(L)×150.7(W)×30.03(H)±2	80 keys	有线/2.4G/BT USB-C wired/2.4G wireless/BT	RGB	矮轴 low profile switch

## 有线模式

## WIRED MODE

1

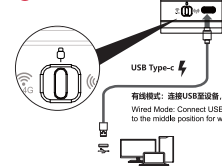

有线模式: 连接USB至设备, 电源开关拨到中间档位为有线模式  
Wired Mode: Connect USB to the device and pull the power switch to the middle position for wired mode.

## BT连接

## BT CONNECTION

1

## BT配对方法

BT Pairing Method

1. 开关状态

Switch to B

2. FN+Q / W / E, 任意一组长按, 比如长按FN+Q, 此时快速连续按键, 要求已进入配对状态, 指示灯表示键盘在配对状态

FN+Q / W / E, any group or long press pairing code, for example, long press FN+Q, at this time, the Q key flashes quickly, indicating that it has entered the pairing state, and the slow flash indicates that the keyboard is in the back-connecting state.

3. 打开手机/手机, 搜索并连接设备, 搜索显示的名称: K22i-75 3.0 (连接PC端Windows7以下系统), K22i-75 5.0 (连接Windows8以上系统版本, 移动设备)

Open PC/mobile BT search and connect the device, the search shows the name: K22i-75 3.0 (connect to PC with Windows 7 or below), K22i-75 5.0 (connect to Windows 8 or above system version, mobile devices, etc.)

4. 完成连接

Completing the connection

温馨提示: 重复以上步骤, Q/W/E 可分别配对3组设备, 在连接设备时, 同时按下Q/W/E 即可在大屏时设备之间切换 (温馨提示: 重复步骤, 请先配对好3组BT)

And so on: Repeat the above steps, Q/W/E can store 3 groups of BT devices, when using the switch Short press FN+Q/W/E, you can switch between different BT devices (Warm tips: before using the switch, please pair up the 3 groups of BT)

## 2.4G连接

## 2.4G RECEIVER CONNECTION

1

Switch to 2.4G

2

2.4G配对方法

2.4G pairing method



开关拨到2.4G状态, 长按FN+P时, P键快速连续按下接收器, P键停止闪烁即配对成功。  
Switch to 2.4G, Long press FN+P to pair code, P key blinks to insert the receiver, P key stops blinking that means code pairing is successful.

3



(温馨提示: 出厂已默认配对接收器, 无需自行再次配对2.4G, 此方法只供2.4G无法连接的时候使用, 首次设置即可, 无需每次重复设置)  
(Tip: The receiver is set to be paired at the factory. You just need to set it only once, when pairing not working properly.)

 
## 指示灯

## INDICATOR LIGHT

快捷开关: 显示桌面功能

Tap this key: Quick desktop view switch

(出厂默认显示桌面, 如使用其他功能, 可长按此键切换其他功能)  
(The factory default is to display the desktop, if you want to change other functions, you can use the driver to customize the function of the key)



1. Win Lock (白灯)

Win Lock (white light)

2. 充电指示灯 (红光) 充电充足, 充满熄灭, 低电量闪烁

Charging indicator (red light): Charging (solid), Fully charged (off), Low battery (flashing)

## 电池电量提示

## BATTERY LEVEL CHECK

键盘背光可显示当前电池电量状态

The keyboard's lighting can display the current battery level status

(无线模式下查看)  
View in wireless mode

按FN+ENTER 查看电池电量情况

Pressing FN+ENTER allows you to view the battery level status. Each key from "1" to "0" represents a specific battery level range.

比如:

For example:

背光亮 表示此时键盘10%的电量

The backlight of the "1" key is illuminated, indicating that the keyboard's current battery level is at 10%.

背光同时亮, 表示此时键盘20%的电量

 
The "1" and "2" keys are both illuminated, indicating that the keyboard's current battery level is at 20%.

背光同时亮, 表示此时键盘电量100%

When the backlighting illuminates from 1 to 0 simultaneously, it indicates that the keyboard battery is at 100% charge.

## 背光控制

## BACKLIGHT CONTROL

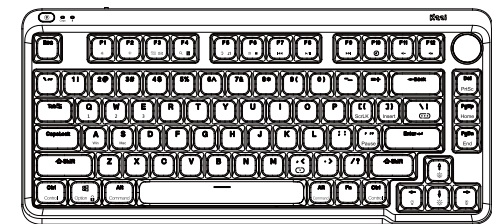

Fn + [Backlight Icon] 支持多种背光效果切换  
Multiple backlight effects switch

Fn + [Up Arrow] 背光亮度 +  
Backlight brightness +

Fn + [Down Arrow] 背光亮度 -  
Backlight brightness -

Fn + Win 窗口锁定  
Windows lock

Fn + [Monochrome Icon] 背光单色切换  
Backlight monochrome switching

Fn + [Left Arrow] 背光速度 -  
Backlight speed -

Fn + [Right Arrow] 背光速度 +  
Backlight speed +

Fn + [Space Bar] 长按3秒, 恢复出厂设置  
Long-press for three seconds to restore factory settings

## FN组合键功能

## FN KEY COMBINATION FUNCTION

Fn + Del Prtsc

 
Fn + PgUp Home

Fn + PgDn End

Fn + ] Ins

Fn + [ ScrLk

Fn + [Pause Icon] Pause

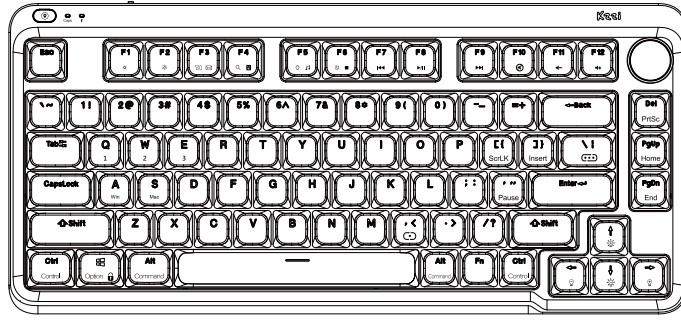

#### ISED STATEMENT:

English: This device complies with the essential requirements of the EMC Directive (2014/53/EU) for use with batteries, wireless and corded telephones. Compliance is subject to the following conditions:  
 (1) This device may not cause interference.  
 (2) This device may not be used in areas where the use of radio equipment is prohibited.  
 (3) The user must be informed of the conditions of use of the device.  
 (4) The user must be informed of the conditions of use of the device.  
 (5) The user must be informed of the conditions of use of the device.  
 (6) The user must be informed of the conditions of use of the device.  
 (7) The user must be informed of the conditions of use of the device.  
 (8) The user must be informed of the conditions of use of the device.  
 (9) The user must be informed of the conditions of use of the device.  
 (10) The user must be informed of the conditions of use of the device.

#### BATTERIES:

 
A warning that battery safety pack or batteries incident must not be exposed to excessive heat such as sunlight.  
 (1) The battery pack must be used in accordance with the instructions.  
 (2) The battery pack must be used in accordance with the instructions.  
 (3) The battery pack must be used in accordance with the instructions.  
 (4) The battery pack must be used in accordance with the instructions.  
 (5) The battery pack must be used in accordance with the instructions.  
 (6) The battery pack must be used in accordance with the instructions.  
 (7) The battery pack must be used in accordance with the instructions.  
 (8) The battery pack must be used in accordance with the instructions.  
 (9) The battery pack must be used in accordance with the instructions.  
 (10) The battery pack must be used in accordance with the instructions.



**GUARANTEE**  
Non-human damage  
12-month warranty

#### 背光录制

#### BACKLIGHT RECORDING

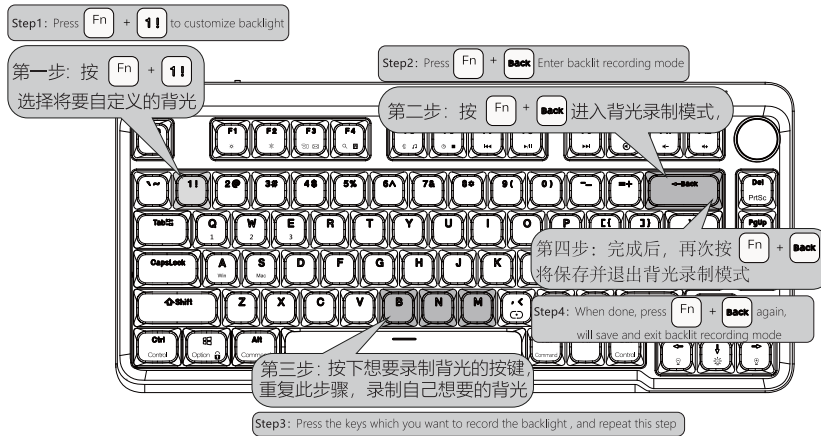

#### WINDOWS多媒体键

#### WINDOWS MULTIMEDIA KEYS

Windows模式下 (FN+A): 切换到Windows系统  
 In Windows mode (FN+A): Switch to Windows system)

<b>Fn</b> + <b>F1</b>	屏幕亮度- Screen Brightness-	<b>Fn</b> + <b>F4</b>	计算器 Calculator	<b>Fn</b> + <b>F7</b>	上一曲 Previous Song	<b>Fn</b> + <b>F10</b>	静音 Mute
<b>Fn</b> + <b>F2</b>	屏幕亮度+ Screen brightness +	<b>Fn</b> + <b>F5</b>	播放器 Media Player	<b>Fn</b> + <b>F8</b>	播放/暂停 Play/Pause	<b>Fn</b> + <b>F11</b>	音量- Volume -
<b>Fn</b> + <b>F3</b>	邮箱 Email	<b>Fn</b> + <b>F6</b>	停止 Stop	<b>Fn</b> + <b>F9</b>	下一曲 Next Song	<b>Fn</b> + <b>F12</b>	音量+ Volume +

#### MAC多媒体键

#### MAC MULTIMEDIA KEYS

Mac模式下 (FN+S): 切换到MAC系统, MAC系统键和ALT键互换  
 In macOS mode (FN+S): Switch to macOS system)

<b>F1</b>	屏幕亮度- Screen Brightness -	<b>F4</b>	搜索 Search	<b>F7</b>	上一曲 Previous Song	<b>F10</b>	静音 Mute
<b>F2</b>	屏幕亮度+ Screen Brightness +	<b>F5</b>	siri	<b>F8</b>	播放/暂停 Play/Pause	<b>F11</b>	音量- Volume -
<b>F3</b>	多屏显示 Multiscreen Display	<b>F6</b>	勿扰 (仅在有线模式下支持) Do Not Disturb (only supported in wired mode)	<b>F9</b>	下一曲 Next Song	<b>F12</b>	音量+ Volume +

Thank you for choosing KZZI products! If you have any questions or need assistance, please feel free to contact us. Our team is dedicated to providing support and addressing your inquiries.

We highly value your feedback and suggestions as they help us continuously improve and enhance product quality. Once again, we appreciate your support for KZZI!