



Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Freeze	 Pause / Step / Freeze	 9	 9
 Subtitle	 Subtitle / EQ	 Jump	 Back / Return
 Guide	 Guide / EPG / -/--	 0	 0
 Fav.CH	 Fav / Marker / PC	 Ent	 Display / Media
 I-II	 Audio / Lang I/II	 Vol+	 Vol+
 Text / Mix	 Text / Goto	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Setup / OPT /	 Input	 AV / Input / RDS
 1	 1	 CH-	 CH- / Page-
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right





Original	Replacement
 S. Mode	 Sound / Title
 Down	 Down
 P. Mode	 Picture / Format
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Index	 Rec / Rec Mode
 Reveal	 Play / Slow
 Size	 Zoom / Size
 Hold	 Stop / Hold

Original	Replacement

