

EN

USER
MANUAL



Comelit 1.2.x application
available on App Store and Google Play



 **Comelit®**
Passion. Technology. Design.

Table of contents

Table of contents	2	Advanced configurations.....	14
Introduction.....	2	Add an entry to the Directory.....	14
Smart Registration	3	Delete an entry to the Directory	15
Use.....	7	USER ADMINISTRATION [].....	16
Legend.....	7	Access to the administration area	16
MENU	7	System password change	16
Systems management	7	User activation/deactivation	16
HOME []	8	Adding new user	17
DOOR ENTRY SYSTEM [].....	9	Enable/Disable Smart registration	18
Perform an action on an element in the directory.....	9	ADVANCED SETTINGS []	19
Scroll through the directories (Android only).....	10	Virtual buttons programming	19
Switch to full screen view	10	Bitrate.....	19
Directory image customization	11	Device manual configuration.....	20
MESSAGES [].....	11	Functions available with monitor 6741W.....	21
ACTUATORS / LOCK-RELEASE [ / ]	12		
SETTINGS [].....	13		
Ringtone setting.....	13		
Video recording settings.....	13		
Widget.....	13		

This document may not be reproduced, even in part, without the express written consent of **Comelit Group spa.**
The brands and commercial names appearing in this publication remain the property of their respective owners.

The **Comelit** App is supported by devices with iOS 10 (or later) and by the most common Android devices with Android version 4.3 or higher, however some functionalities may be limited depending on the model and the version.

Introduction

The Comelit application installed on smartphones or tablets allows you:

- to receive audio and video calls from external unit
- to make intercom calls with other internal devices
- view (or record) videos from external units and remote camera
- to record video messages on missed calls
- to activate actuators
- to manage/configure multiple systems



With monitor Art. 6741W in building mode, some functions are only available when the monitor display is on; see [“Functions available with monitor 6741W”](#)

Smart Registration

 
1. Install the **Comelit** application, connect to your Wi-Fi network and open the application.

1.



2. **Login** if you already have a Comelit account or create a **new account**.


2.



3. Select **"Search for device"**.


- if the Comelit device is already connected to the WiFi network (📶) and is detected by the application: in the App, select the name of your device and go to step 6;
- otherwise (📶 / 📶 / 📶) continue to step 4.

 3.

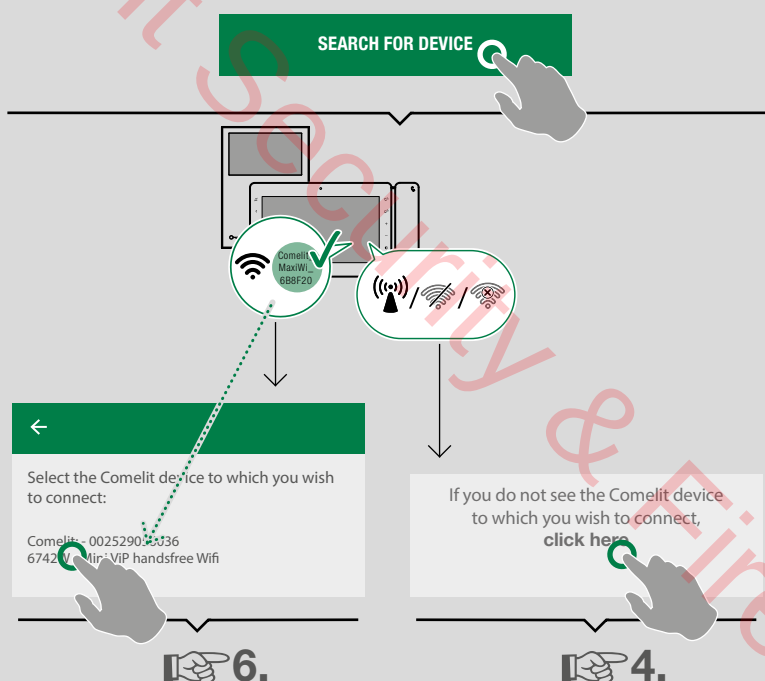


4. If the device is not already connected to the Wi-Fi network, or if the network cannot be detected, the **Comelit APP** launches the **Wi-Fi connection setup procedure**. Confirm the presence of a door entry monitor with a Wi-Fi connection and switch on the Comelit device.

 4.

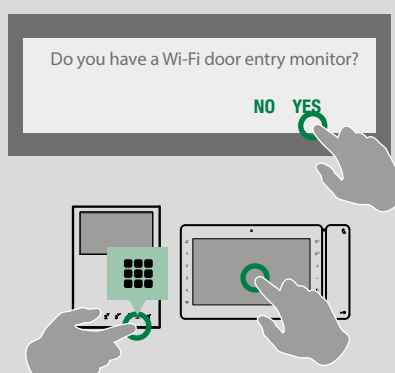

5. Check the status of the Wi-Fi connection on the door entry monitor; from the App, press the symbol displayed on the Comelit device and follow the instructions identified with the same icon ( /  /  / )


 
5.

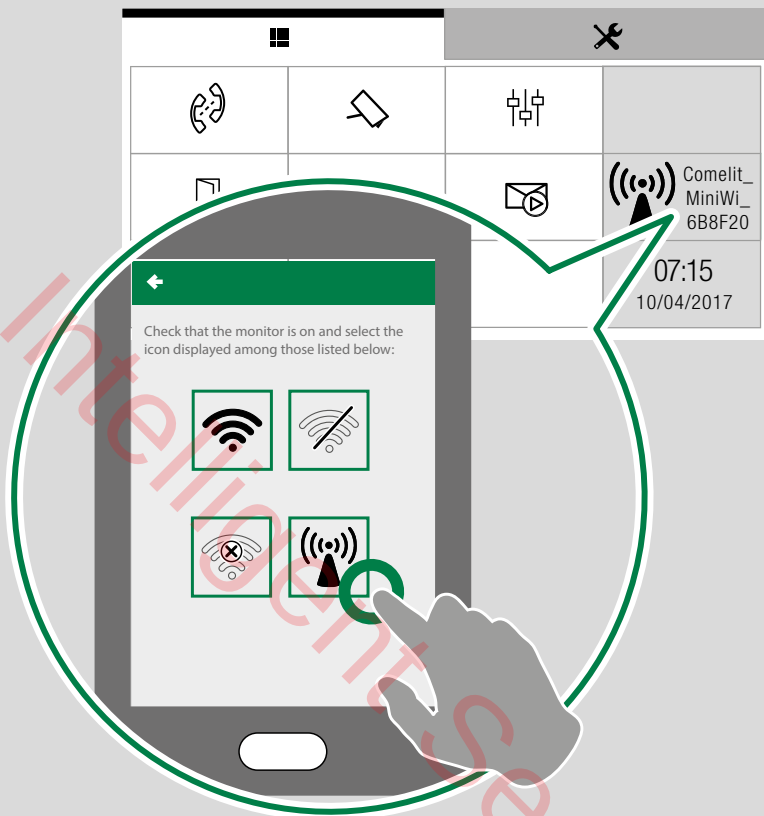


Wi-Fi connected (   ) : go to step 3.



  Door entry monitor Wi-Fi switched off: access the setup menu by selecting the Wi-Fi and "Enable Wi-Fi" connection.

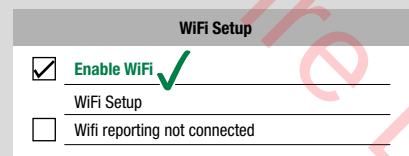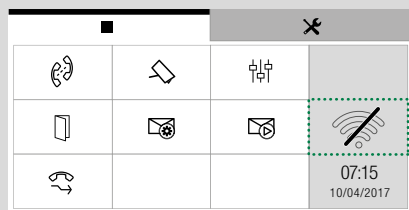

 No connection:
the monitor's Wi-Fi reception is active; check the router status and try again.

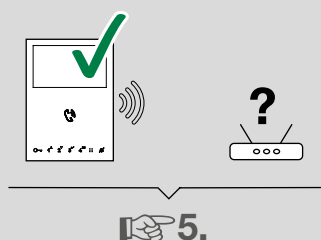


**iOS**


From the Wi-Fi settings of the iOS device, connect to the Wi-Fi network of the Comelit device and reopen the Comelit App.

android

 
Select the Wi-Fi network of the Comelit device and proceed.

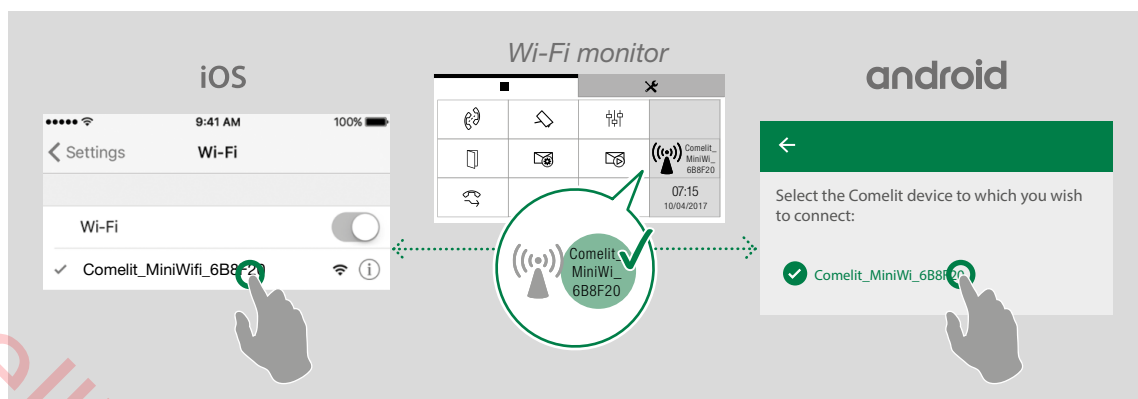

 
Check that the network name displayed corresponds to that of the Comelit device and proceed.

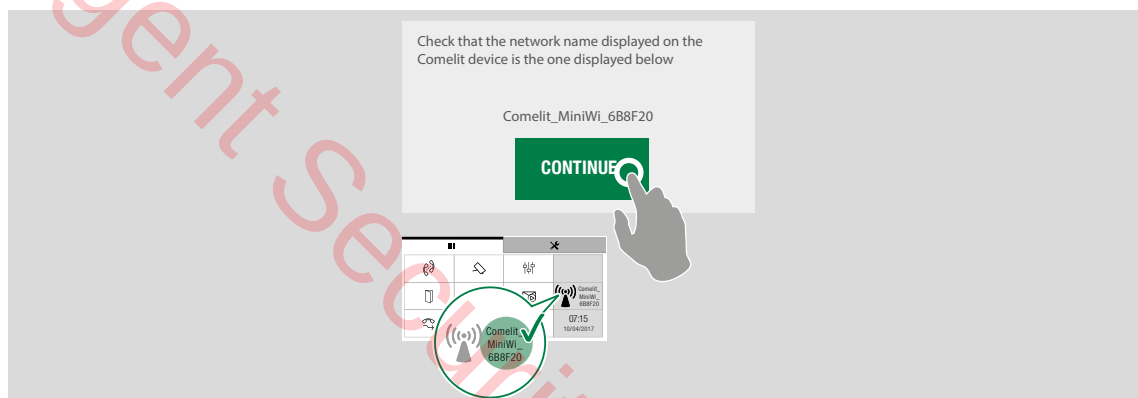

 
Select your Wi-Fi network and enter the password (for hidden networks, enter also the "protection level" and the SSID name of the network). Before confirming, check that the Comelit device is still powered on.

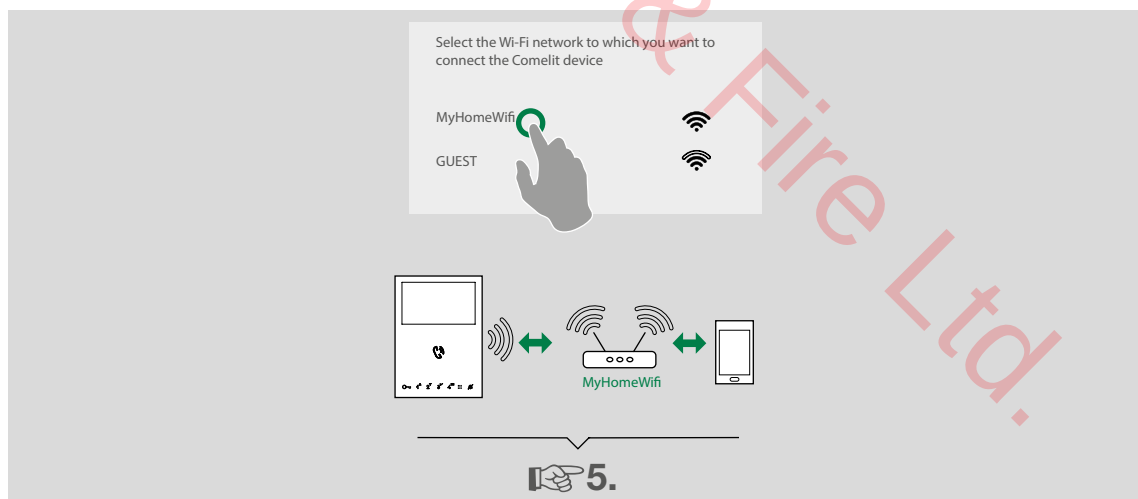

 6. Choose whether you wish to be added as a **new user** or if you want to be registered as the **only user** (thereby deleting all previously registered users) and follow the instructions on the screen to complete registration.

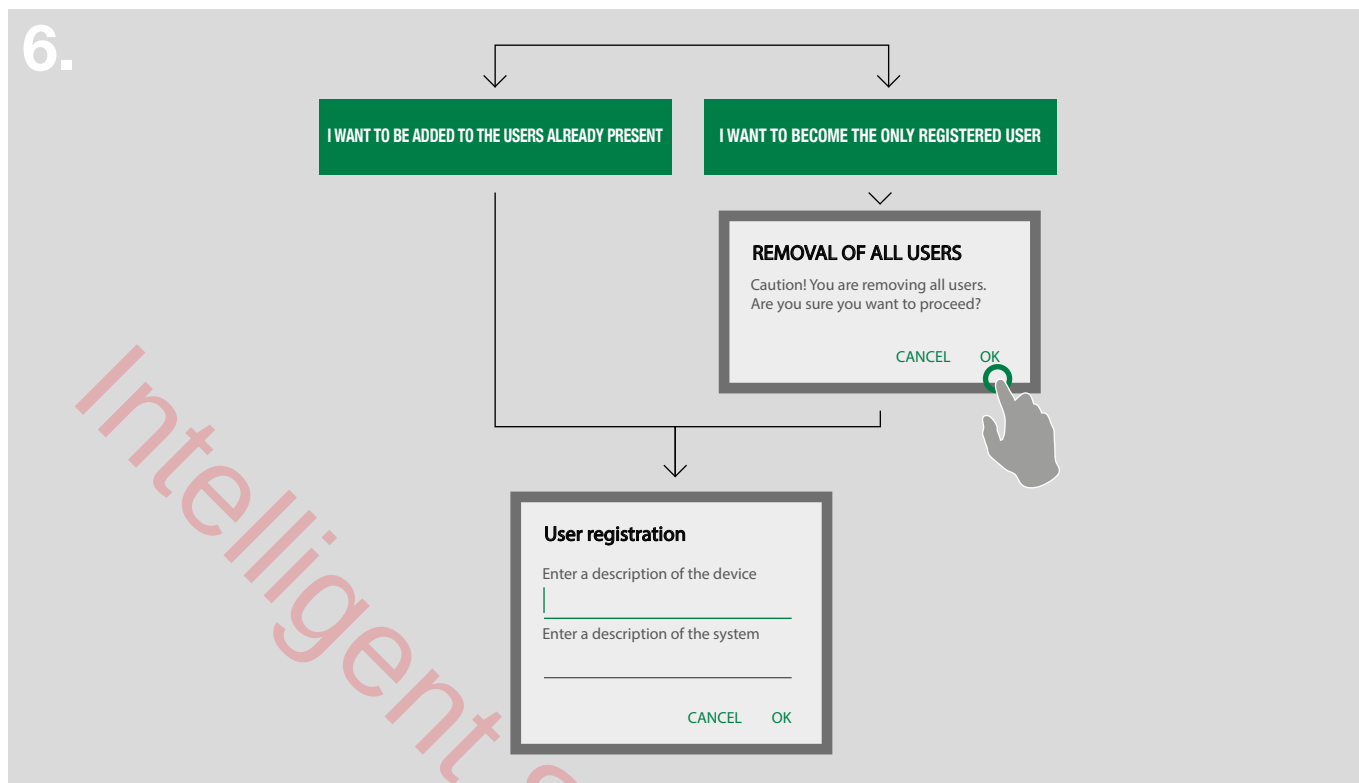

 7. Choose whether you wish to end the configuration process or register another system.

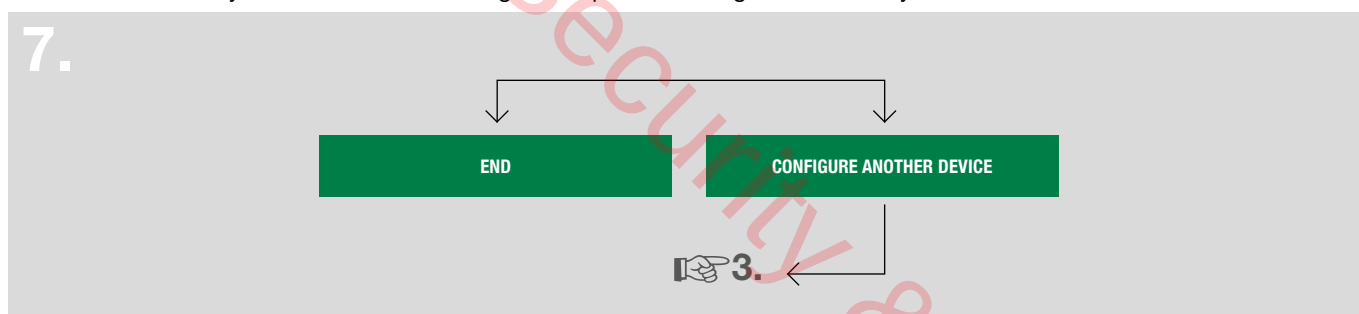

Use

Legend

	Press to open the navigation menu		System connected indication
	Press to return to the previous screen		System connecting indication
	Press to add a new element		System not connected indication
	Press to cancel/end the current operation		
	Press to edit the selected element		
	Press to delete the selected element		

MENU

From the menu page you can access all available functions and manage the systems.

	HOME	Press to quickly access the most used functions
	DOOR ENTRY SYSTEM	Press to access the directories and video entry monitors functions
	MESSAGES	Press to view the recordings and messages in the video memory function.
	ACTUATORS*	Press to display the actuators that can be controlled
	LOCK-RELEASE*	Press to display the entrances that can be controlled
	USER ADMINISTRATION	Press to access the users configuration
	SETTINGS	Press to set ringtones, video recordings, widgets and advanced settings
	LOGOUT	Press to disconnect the user

 
* Visible only if the directories customization is allowed or if there is at least one entry in the directory.



With monitor Art. 6741W in building mode, some functions are only available when the monitor display is on; see [“Functions available with monitor 6741W”](#)


Systems management

- ▶ From the pull-down menu choose **“Manage systems”**
 - **If you want to enable/disable notifications:** use the specific selector **[A]**
 - **If you want to change the name, change the Wi-Fi settings* or delete the configuration of a system:** press and hold one of the sections of the directory to activate the delete and edit keys **[B]**
* required when changing the password or the name of your Wi-Fi network
 - **If you want to add a new system:** press **+** **[C]**

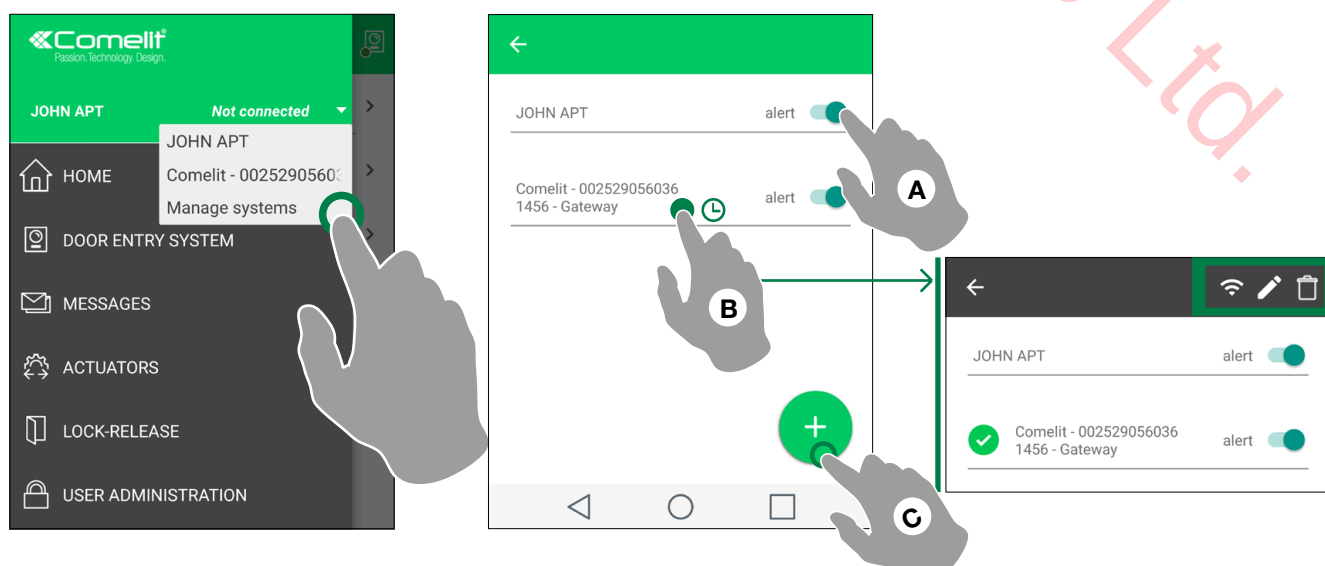

HOME []

 The home page provides quick access to the most common commands and to view the notifications in memory. You can customize the home page from the settings (see ["Widget"](#)).

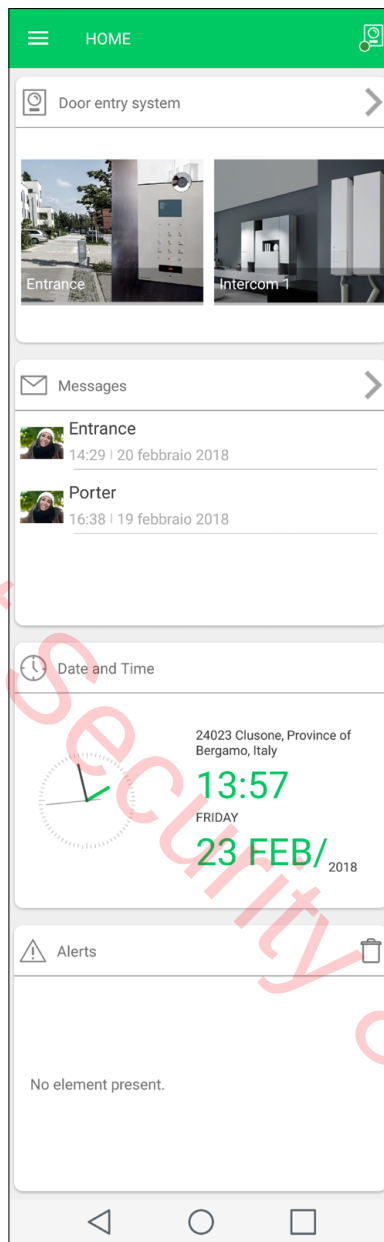


DOOR ENTRY SYSTEM []

In the door entry system section, the following functions are available: self-ignition of an external unit, intercom call, call to a switchboard, camera switch on.

Perform an action on an element in the directory

 
- Touch an element in the directory to control the desired action (see table)

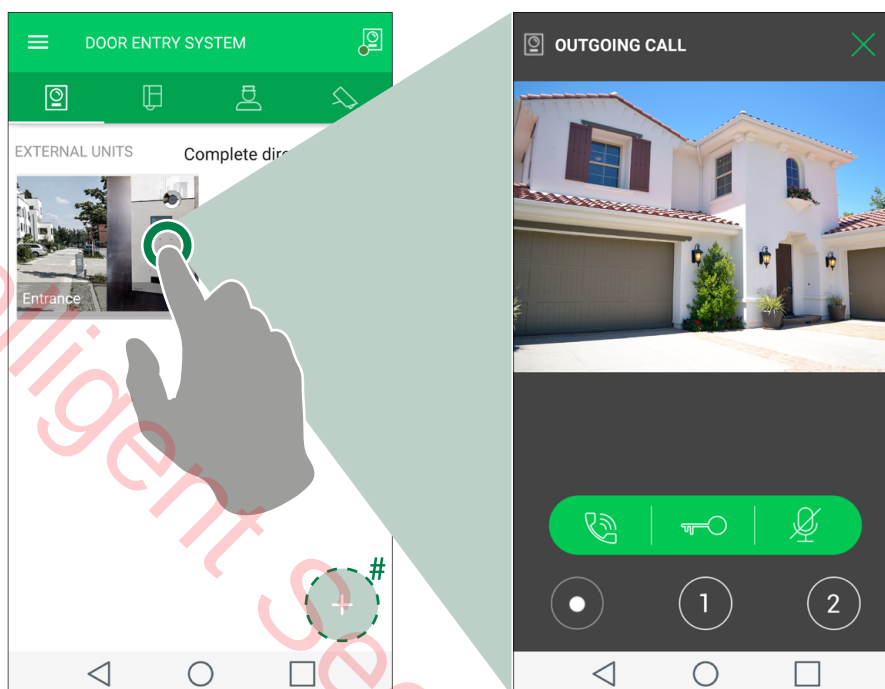


+ # Optional. Visible only if the directories customization is allowed (see [“Add an entry to the Directory”](#))

		FUNCTIONS AVAILABLE FOR EACH DIRECTORY			
					
Functions		External unit self-ignition	Intercom call	Secondary switchboard	Camera activation
 reply ► press to enter in communication with the calling subject	 call closure ► press to end the call	✓	✓	✓	
 lock-release ► press to activate the door lock of the interlocutor external unit		✓			
 microphone deactivation	 microphone activate	✓	✓	✓	
 start video recording	 stop video recording	✓			✓
 /  virtual button 1/2 ► press to command the programmed action (see “Virtual buttons programming”)		✓	✓	✓	✓

 Scroll through the directories (Android only)

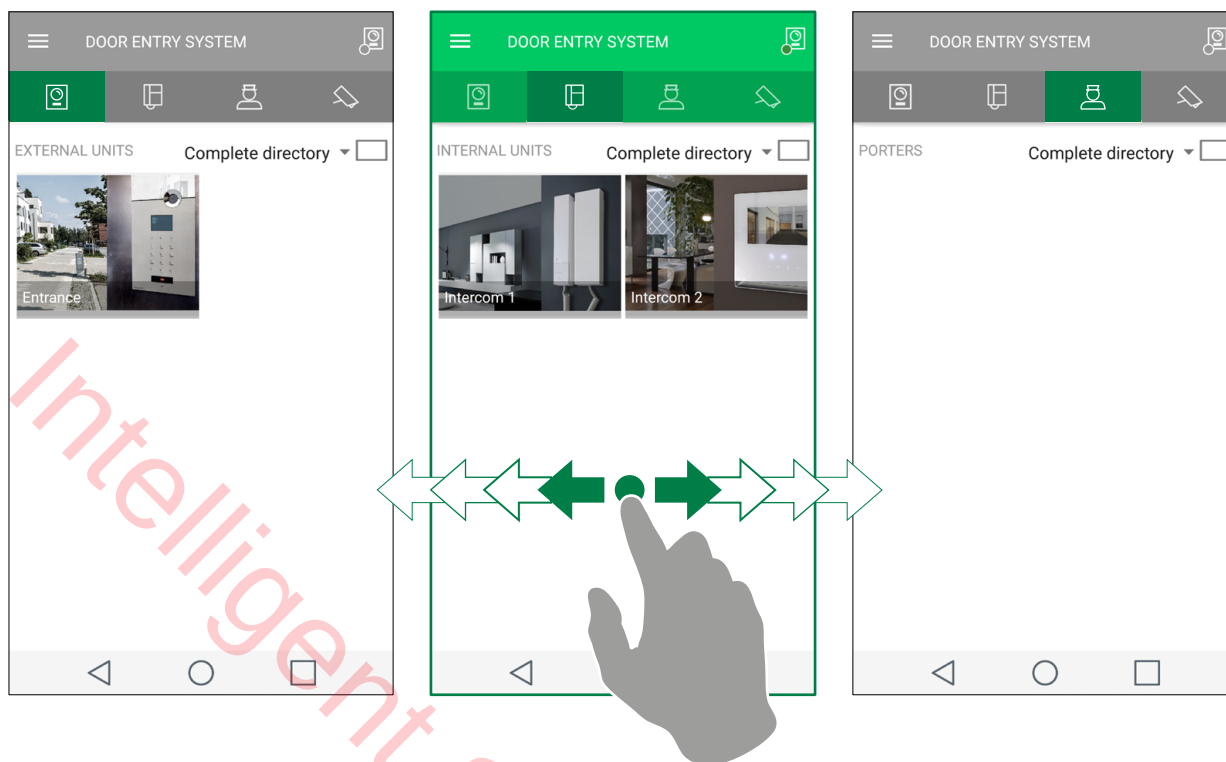


Switch to full screen view

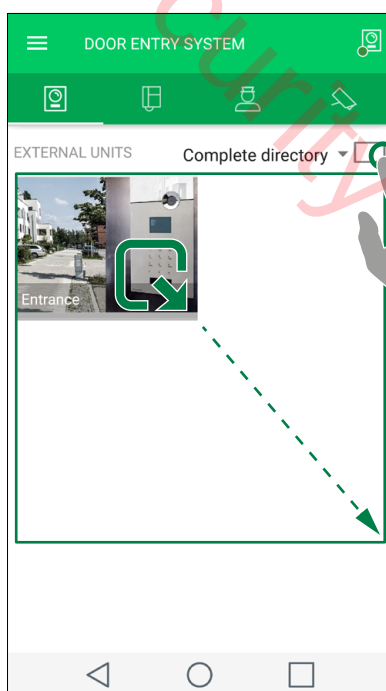 

Directory image customization

 
1. Press and hold the desired item to activate the edit buttons.
2. Press  to access the editing page.
3. Press the "image" icon, search for the desired photo in the memory of your device, and save.

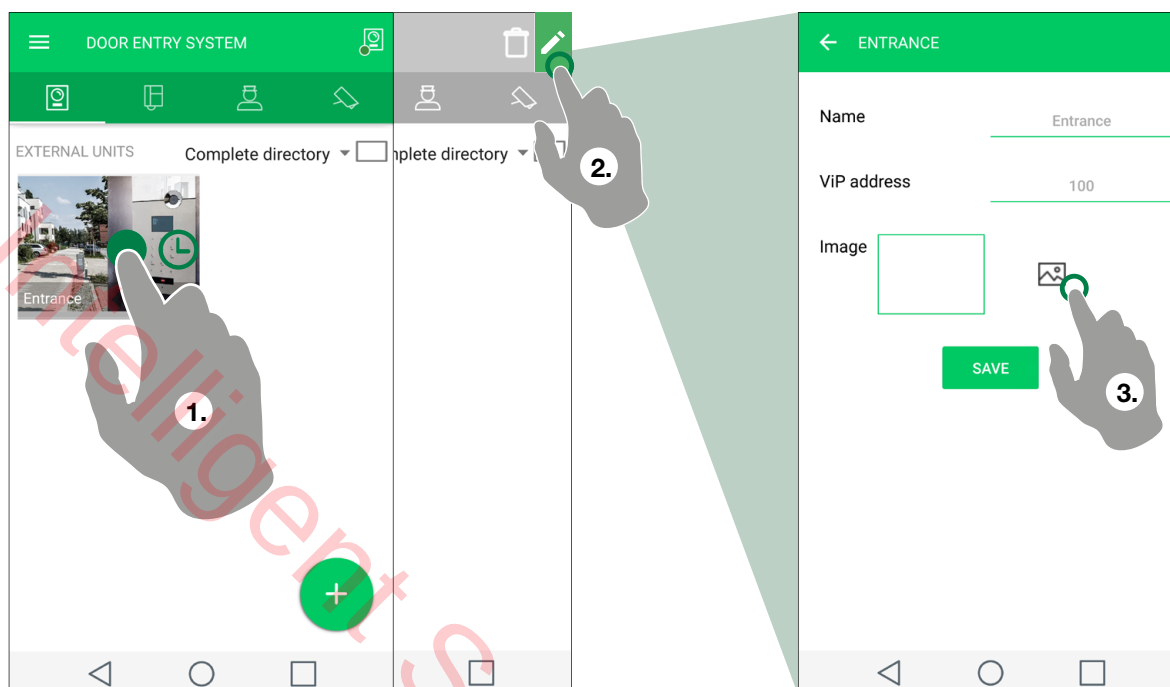

MESSAGES []

In the Messages section, you can view and delete the recordings made (from external unit and remote camera) and the messages in the video memory function.

 
1. Enter the Messages/Video memory function page
 2. Press the video you want to display to start the playback.
- Press  to delete an element in the video memory.

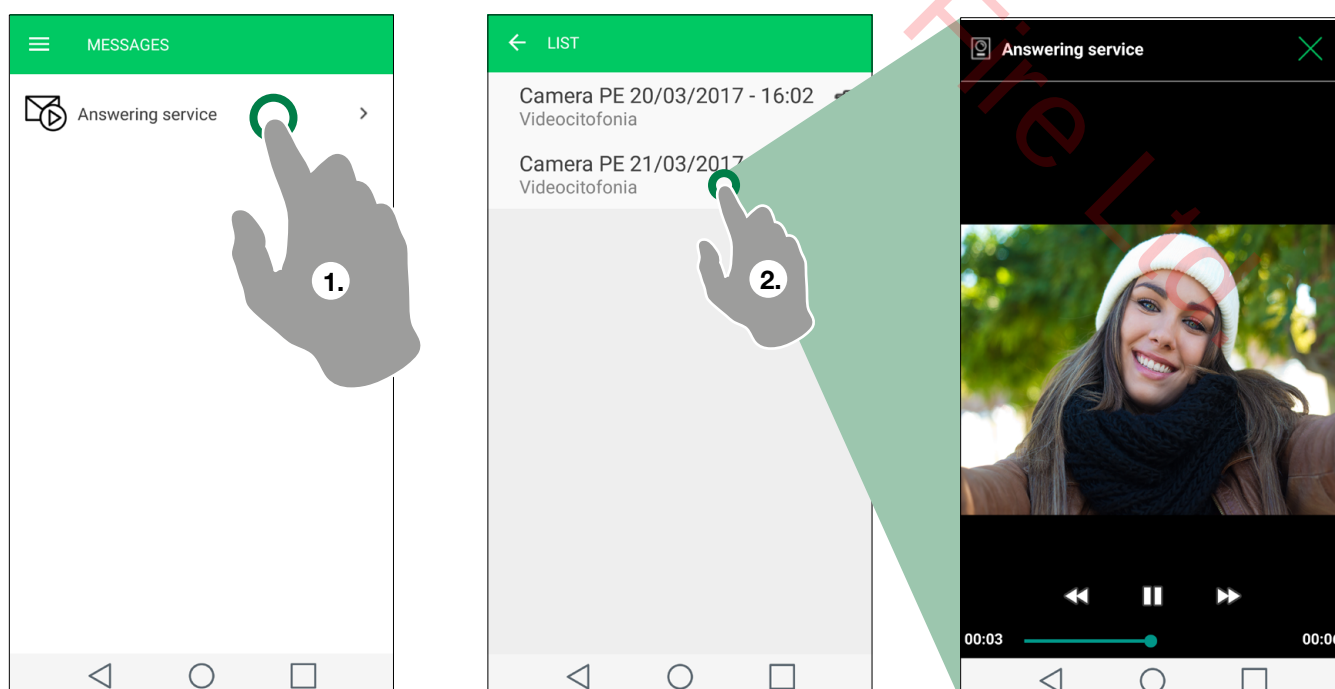

ACTUATORS / LOCK-RELEASE [/]

This section provides a list of actuators/lock-release controls

 - Touch the element to activate it

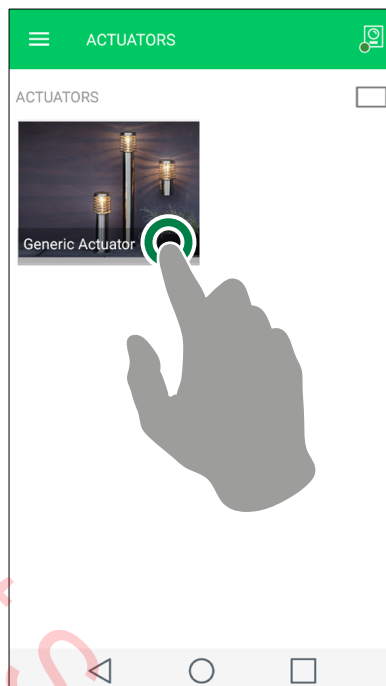

For more viewing and customization modes, see:

[“Switch to full screen view”](#),

[“Directory image customization”](#)

SETTINGS []

Ringtone setting

From the Settings/Ringtone Settings page, you can customize the ringtone for: Outgoing Call, Intercom Call, Alarm, Group Call, Notifications.

 
Video recording settings

From the Settings/Video recording settings page, you can enable/disable the missed call recording and set the length of the recording (to choose between: 5/10/20 seconds).

Widget

From the Settings/Widget page you can choose what to make visible on the home page and set the order of the elements.


1. Tick the elements that you want to make visible in home. For Door entry system, Actuators and Camera enter the submenu to select the individual devices/actuators.
2. Drag the elements in the desired order.

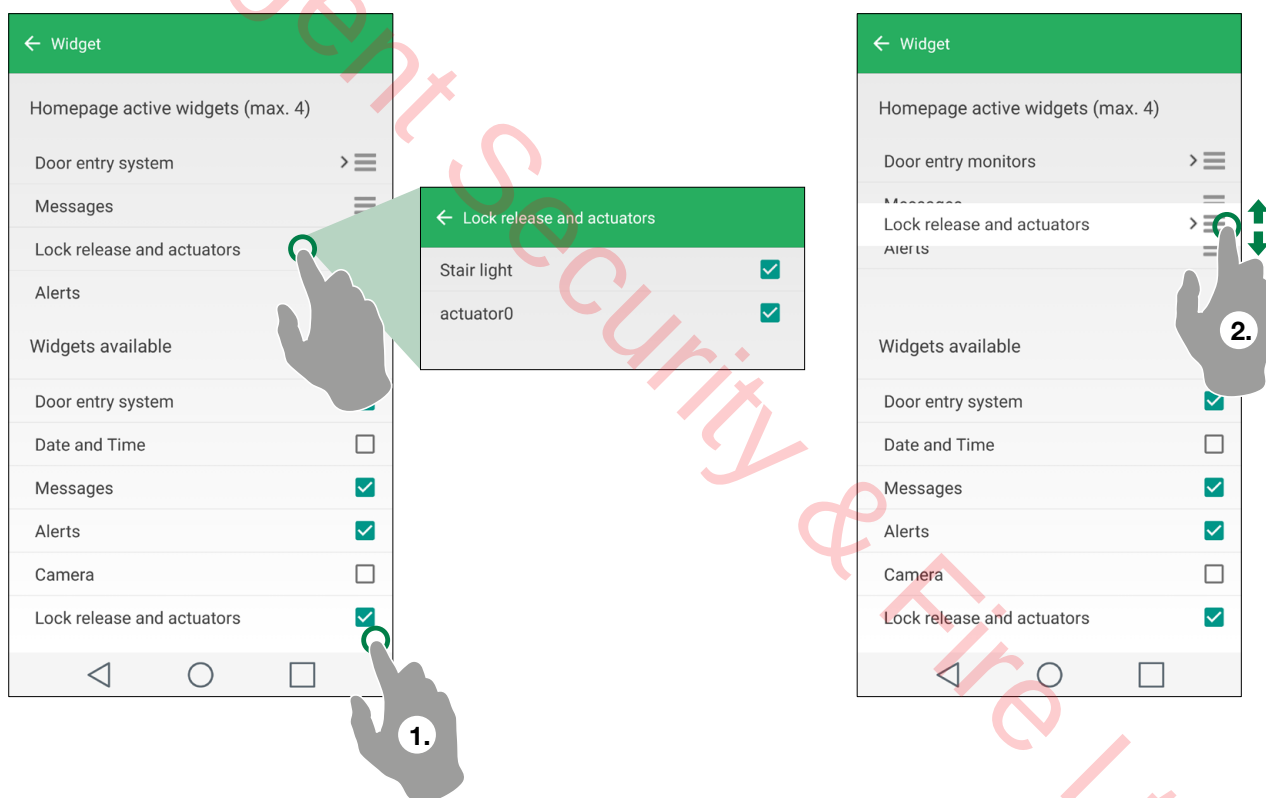

Advanced configurations

Add an entry to the Directory

 
- Press  and complete the required fields (see table) to add an entry to the directory.

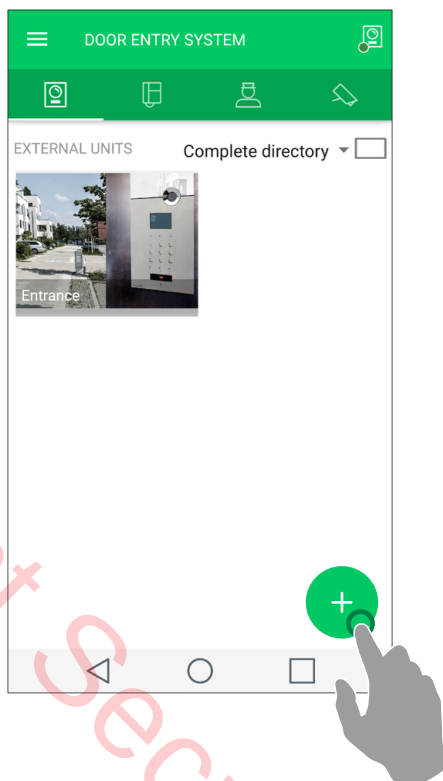

	Name: enter the description. ViP address: enter the ViP address. Image: see “Directory image customization”
	Name: enter the description. ViP address: enter the ViP address Slave: from the pull-down menu, choose whether to configure a call to the entire apartment or only to the master monitor or to a slave monitor, as required. Image: see “Directory image customization”
	Name: enter the description. ViP address: enter the ViP address Image: see “Directory image customization”
	Name: enter the description. ViP address: enter the ViP address Slave: select the desired camera from the pull-down menu. Image: see “Directory image customization”
	Name: enter the description. ViP address: enter the ViP address Relay: Enter the number of the actuator module (choose between “onboard” or from 1 to 10). Expansion: Enter the number of the relay (1 or 2) or the expansion number (from 1 to 10) that you wish to control. Image: see “Directory image customization”
	Name: enter the description. ViP address: enter the ViP address Relay: Enter the number of the output you want to control. Image: see “Directory image customization”

Delete an entry to the Directory

 1. Press and hold the desired item to activate the delete button.
2. Press  to delete the element.

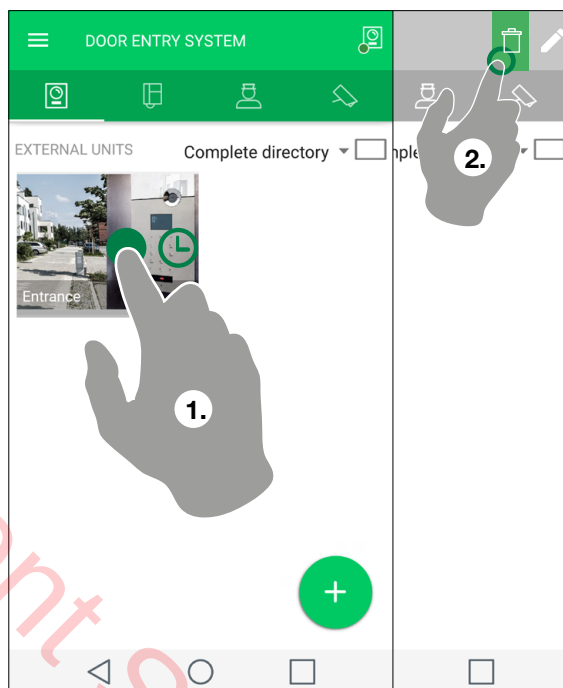


USER ADMINISTRATION []

From the User Administration page you can change the system password, enable/disable a user, add/delete/edit a registered user/device.

Access to the administration area

 
- From the “User Administration” main menu, complete the required fields (with the data provided by your installer) to access the administration area.

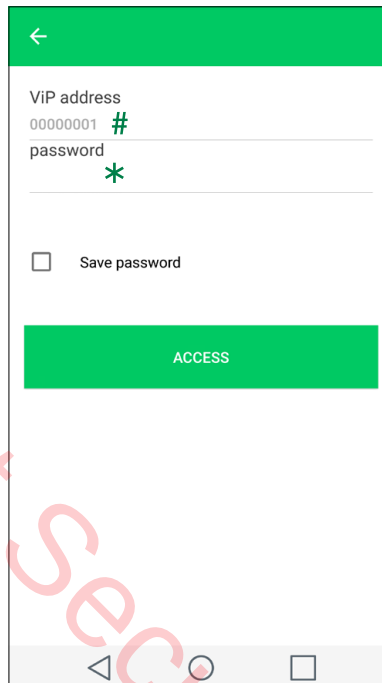

* the default password for all devices except 1456B is: **admin**


System password change

 - ✓ After accessing the user administration area (see: [“Access to the administration area”](#)).
- Press the  followed by **“Password Change”** and follow the instructions that appear on the video to change the system password.

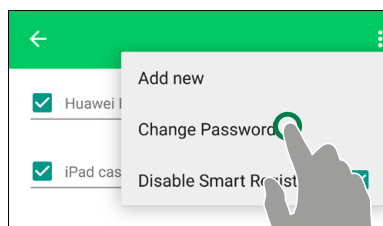

User activation/deactivation

 - ✓ After accessing the user administration area (see: [“Access to the administration area”](#)).
- Activate/deactivate an already registered user to the system by selecting/deselecting it.

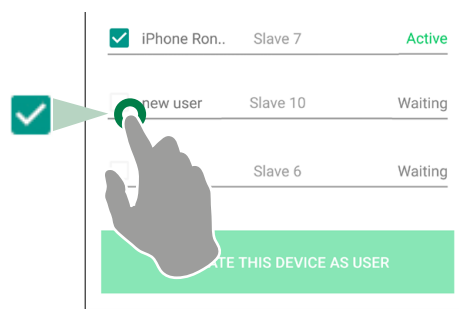


Adding new user

This function allows you to add a new user unconnected to your home network (useful if you want to allow access to your system to friends/relatives)

✓ After accessing the user administration area (see: [“Access to the administration area”](#))

1. Press  followed by **“Add new”** to add a new user.
2. Complete the description field, choose an available slave and confirm.
3. From the user list, press the newly entered user to access the registration data.
4. Send the recording data (.mug file) pressing the **“send registration data”** button.

 
» the new user must install the Comelit application and open the .mug file received, to complete the registration procedure.

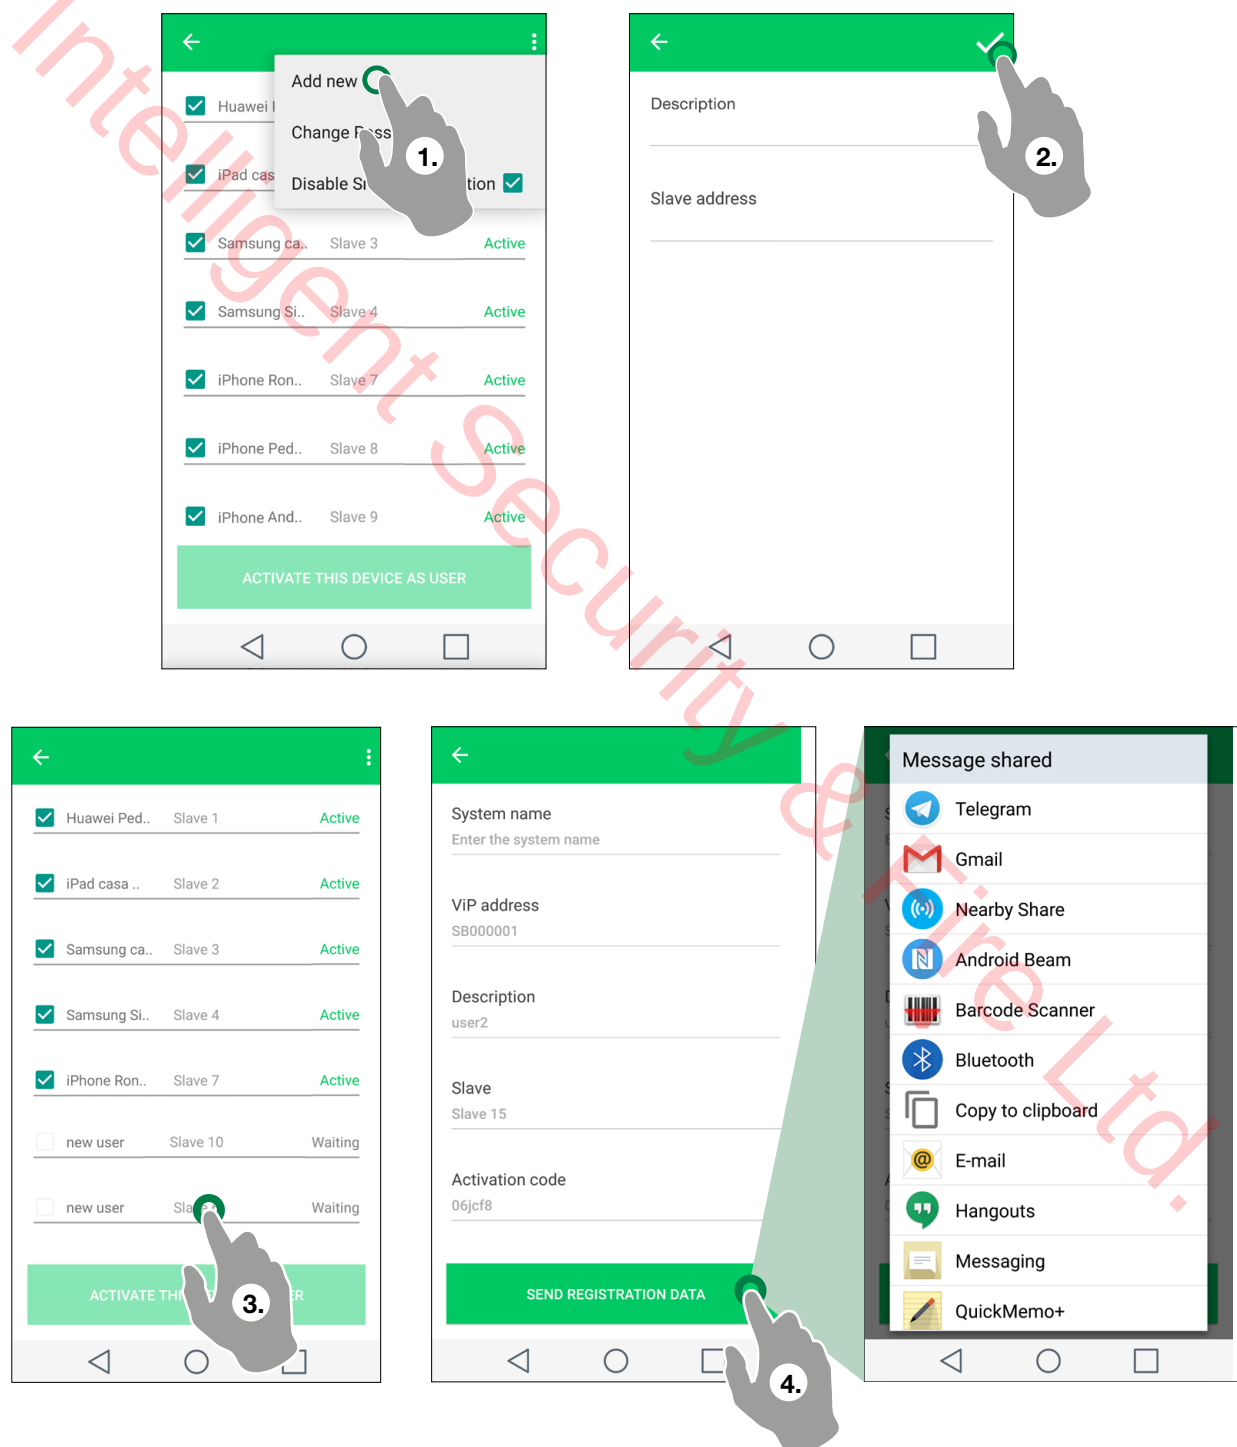

Enable/Disable Smart registration

This function allows a new user to register their system from their smartphone via Smart registration, or prevents them from doing so.

 - ✓ After accessing the user administration area (see: [“Access to the administration area”](#)).
- ▶ Press  and select the function to enable App registration
- ▶ Press  and deselect the function to disable App registration, **to prevent the registration of unknown items and keep your system secure**

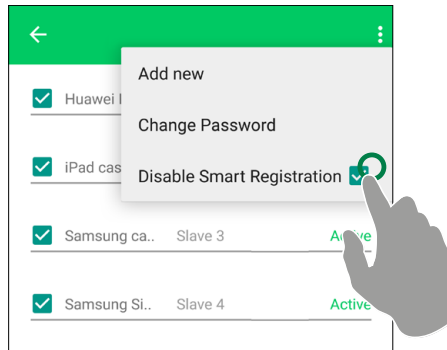

ADVANCED SETTINGS []

Virtual buttons programming


From the Settings/Advanced Settings/Virtual buttons page you can configure the key button and virtual buttons 1 and 2.

	LOCK-RELEASE FUNCTION CONFIGURATION ← Action 1 during call ☒ Automatic Directory The key button commands the action configured in the directory through ViP Manager (in Lock-release Actions) or on monitor 6741W; deselect "Automatic Directory" if you want to customise operation. Action 1 calling / Action 2 calling: choose the option you want between • None: to disable the button • Intercom: to control the relay of the external unit in communication • Other external unit: to command a specific relay of another external unit Select external unit (visible only for Action 1/2 in call: Other external unit): select the desired external unit. Relay: enter the number of the output from 1 to 3 that you wish to control
	ACTUATOR FUNCTION CONFIGURATION Actuators: select the actuator that you want to command.
1 2	← Action 1 during call ☒ Automatic Directory Button 1 commands the first action configured in the directory through ViP Manager (in Additional Actuators) or on monitor 6741W; deselect "Automatic Directory" if you want to customise operation. Function: choose the option you want between • Manual lock release: To manually configure the lock-release key as described for the key button (see line above). • Lock release and actuators: to select an element in the directory. • None: to disable the button.

Bitrate

From the Settings/Advanced Settings/**Bitrate** page it is possible to adjust video streaming quality via the bitrate (Kilobits transmitted per second).

 1. Enable the Video Signal Bitrate editing.
2. Press the current value and enter the desired value.

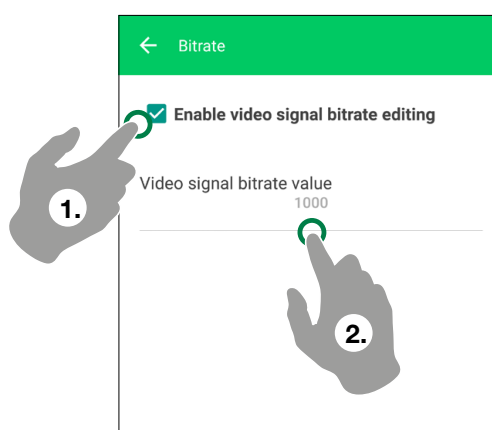

Device manual configuration

1. Install the **Comelit** application, connect to your home network and open the application.

2. **Login** if you already have a Comelit account or **create a new account**.

3. Choose **"Manual configuration"**.

 
4. Complete the requires fields and confirm(as **IP address**, enter the public IP address or hostname provided by your installer).

5. Choose whether you want to register as **user** or access as **apartment administrator** (special user who can configure new users) enter the data provided by your installer and press **"Access"** to complete the recording.

In case of access as administrator:

- the first time you access, you will be asked to set a new password
- it is necessary to select **"activate this device as user"** to access all the functionalities of the application.

6. Choose whether you wish to end the configuration process or register another system.

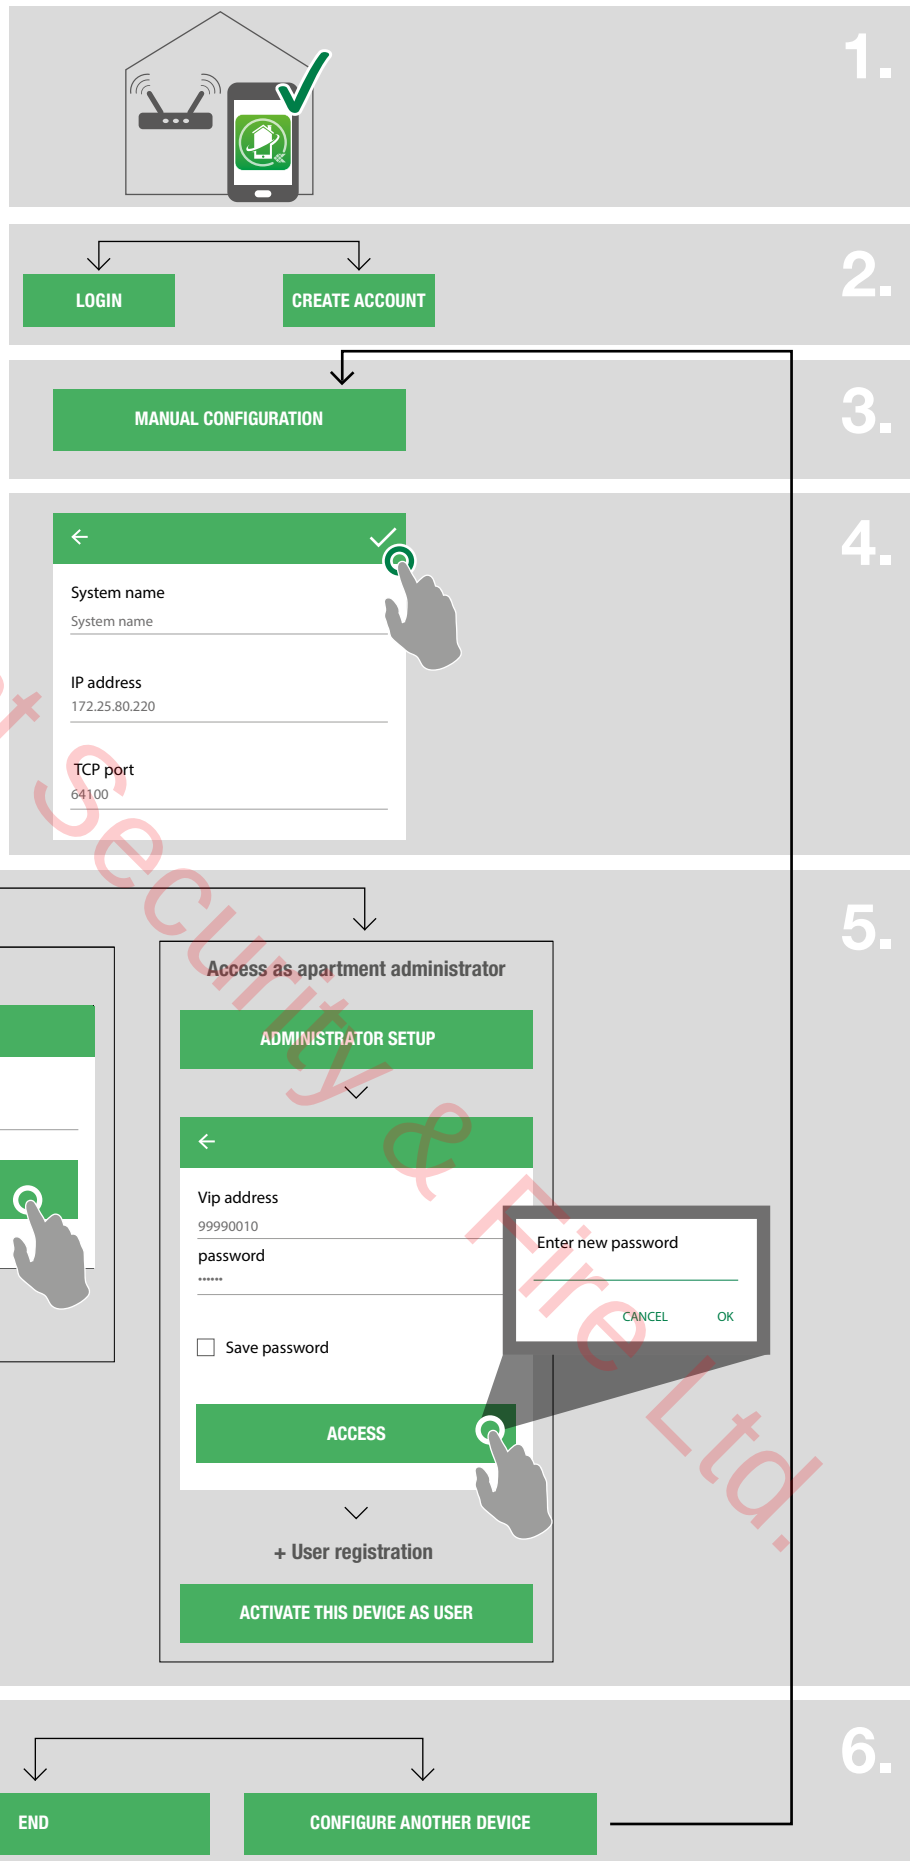

Functions available with monitor 6741W

		with monitor 6741W	with monitor 6741W in building mode with display off
	HOME/WIDGET		
	Door entry monitors	✓	-
	Date and time	✓	✓
	messages	✓ <i>Video recordings only on smartphone</i>	✓ <i>Video recordings only on smartphone</i>
	alerts	✓	✓
	camera	✓	-
	actuators	✓	-
	DOOR ENTRY MONITORS	✓ <i>No option of adding items in the directory</i>	-
	MESSAGES	✓ <i>Video recordings only on smartphone</i>	✓ <i>Video recordings only on smartphone</i>
	ACTUATORS*	✓ <i>No option of adding items in the directory</i>	-
	LOCK-RELEASE*	✓ <i>No option of adding items in the directory</i>	-
	USER ADMINISTRATION	✓	- <i>A pop-up appears, advising you to switch on the monitor</i>
	SETTINGS		
	Ringtone setting	✓	✓
	Video recording settings	✓	✓
	Widget	✓	-
	Advanced settings	✓	✓

Intelligent Security & Fire Ltd.

CERTIFIED MANAGEMENT SYSTEMS



www.comelitgroup.com

Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

 **Comelit®**
Passion. Technology. Design.