



Nokia 105 4G (2023)

User Guide

Table of Contents

1	About this user guide	4
2	Get started	5
	Keys and parts	5
	Set up and switch on your phone	6
	☎️ 📞 📠 📧 📧	8
	Keypad	9
3	📞, 📞📞📞📞 📞📞 📞📞📞📞	10
	Calls	10
	Contacts	10
	Send messages	11
4	📱 📱 📱📱📱📱📱 📱📱	12
	Change the look of your home screen	12
	Profiles	12
	Add shortcuts	12
5	🕒, 📅📅📅📅📅 📱 📱📱📱📱📱	14
	Set the time and date manually	14
	Alarm clock	14
	Calendar	14
	Calculator	14
6	Empty your phone	15
	Remove private content from your phone	15
7	Product and safety information	16
	📱📱 📱📱📱📱 📱📱	16
	📱📱 📱	18
	📱📱 📱📱📱📱 📱📱 📱📱	18

1. Introduction 19
 2. Safety information 20
 3. Battery and charger information 20
 4. Using the device 21
 5. Network settings 21
 6. Troubleshooting 22
 7. Protect your device from harmful content 22
 8. Privacy policy 23
 9. Environmental information 23
 10. Radio frequency (SAR) 23
 11. Legal notices 24
 12. Copyrights and other notices 24

1 About this user guide

 


Important: For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

2 Get started

KEYS AND PARTS

Your phone

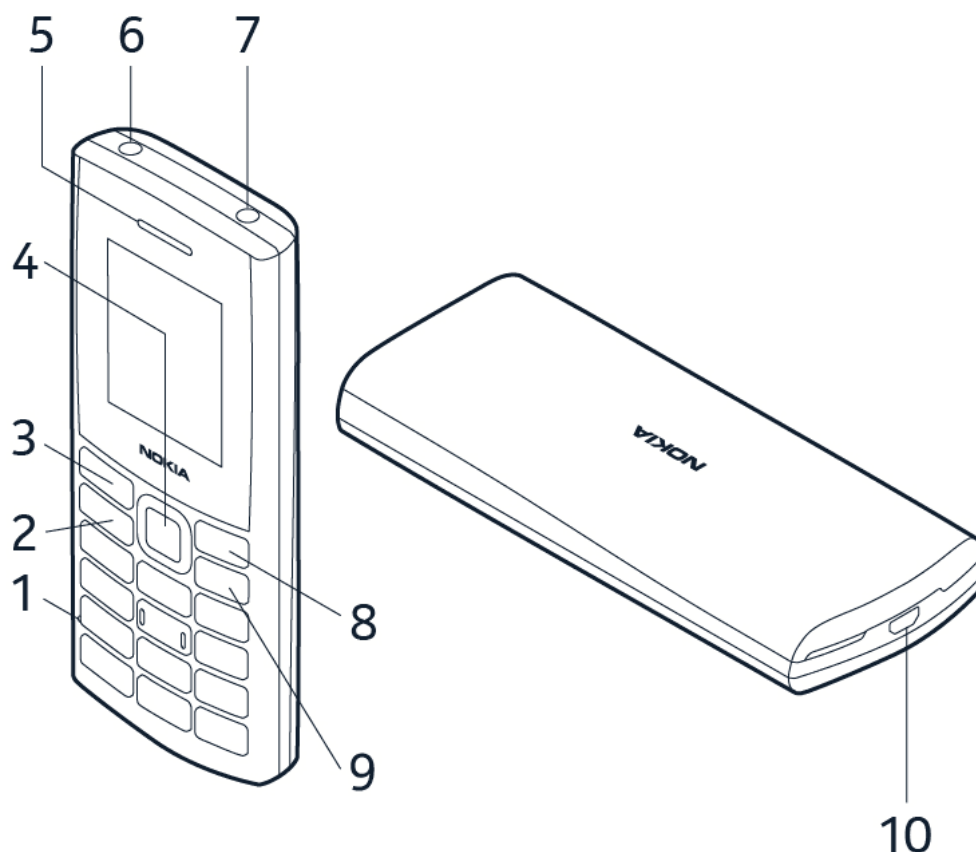

This user guide applies to the following models: TA-1538, TA-1551, TA-1546, TA-1553, TA-1547, TA-1555.

- | | |
|-------------------------|------------------------|
| 1. Microphone | 6. Flashlight |
| 2. Call key | 7. Headset connector |
| 3. Left selection key | 8. Right selection key |
| 4. Scroll key | 9. Power/End key |
| 5. Earpiece/Loudspeaker | 10. USB connector |

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.



Note: You can set the phone to ask for a security code to protect your privacy and personal data. The pre-set code is 12345. To change the code, select **Menu** > **Settings** > **Security** > **Phone locked**, make up a code with 4-8 digits, and select **OK**. Note, however, that you need to remember the code, as HMD Global is not able to open or bypass it.

Parts and connectors, magnetism

 
Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

SET UP AND SWITCH ON YOUR PHONE


[illegible][illegible][illegible]

Open the back cover

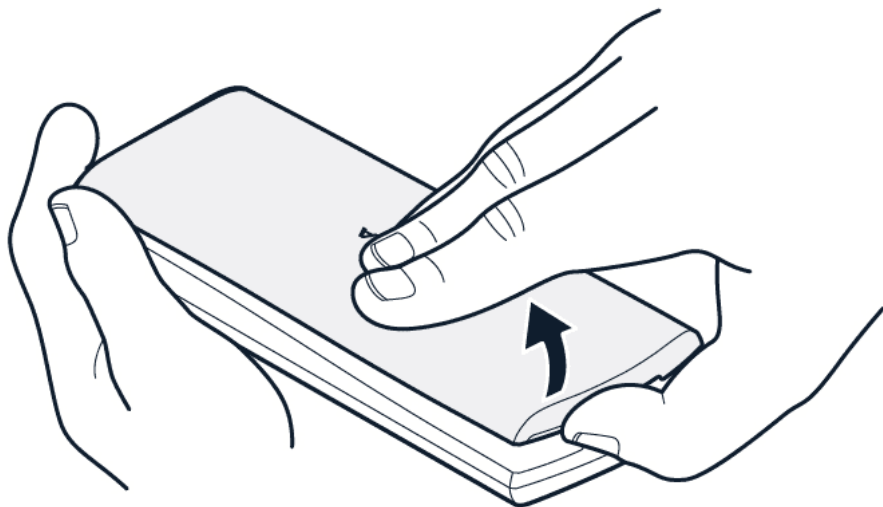

1. Put your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.

 Insert the SIM cards

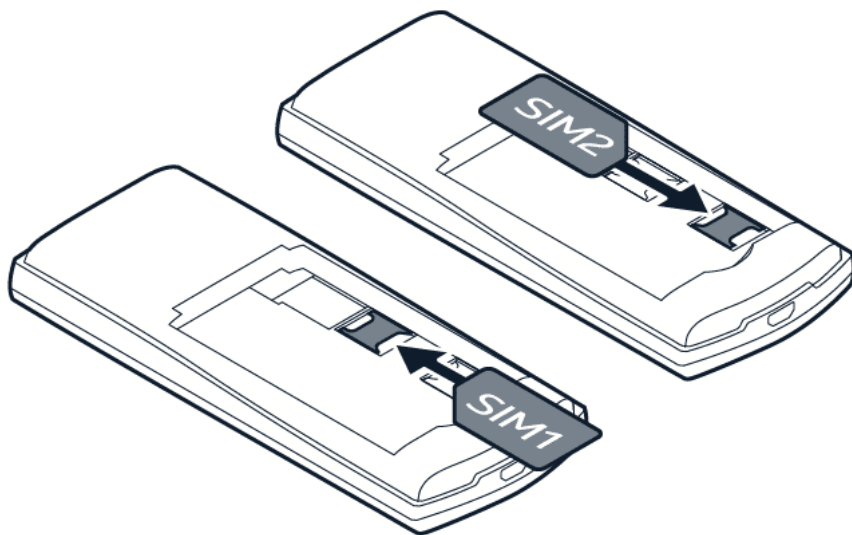


1. Slide the SIM card in the SIM card slot.
2. If you have a dual-SIM phone, slide the second SIM in the SIM2 slot.

Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.



Tip: To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.

 Insert the memory card

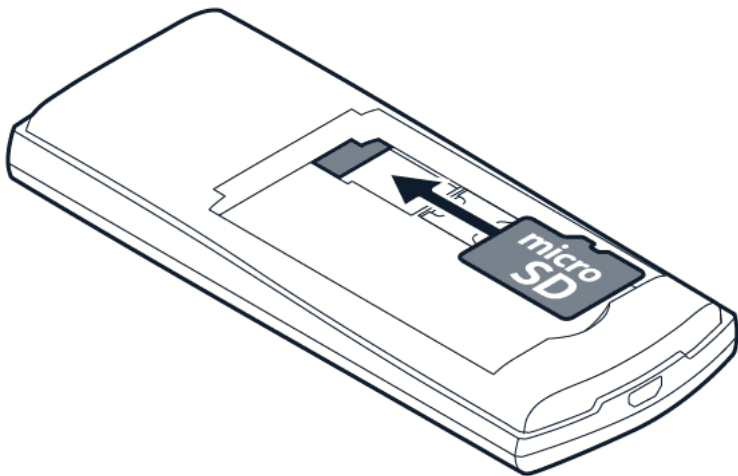

- 1. Slide the memory card in the memory card slot.
- 2. Put back the battery.
- 3. Put back the back cover.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

 **Tip:** Use a fast, up to 32 GB microSD memory card from a well-known manufacturer.

பெரிய பைப் பைப்பை

🔗 பை பைப்பை பை பைப்பை!

பெரிய பைப் பைப்பை பைப்

பெரிய பைப்பை பைப்பைப்பை பைப்பைப்பை பைப்பை பைப்பை பைப் பைப், பெரிய பைப்பை பைப் பைப்பைப்பை பைப் பைப் பைப்பைப்பை பைப் பைப் பைப் பைப்பை பைப் பைப் பைப் பைப் பைப்!

பெரியப்பைப் பைப்பை பைப்

- 1. பெரியப்பைப்பைப் பைப் பைப்பைப் பைப்பைப் பைப்பை பைப்!
- 2. பெரிய பைப் பைப்பைப் பைப்பை பைப்பை பைப்பை பைப் பை, பெரியப்பைப்பைப் பைப் பைப் பைப், பெரிய பைப்பைப் பைப்பைப் பைப் பைப்பைப் பைப்!



KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- If you have selected the zoomed menu view, press the scroll key up or down to go to an app or feature. To open the app or feature, press the scroll key.

Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select  > **Lock keypad**. To unlock the keypad, press , and select **Unlock** > .

Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press 0.

To type in a special character or punctuation mark, select > **Insert options** > **Insert symbol**.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.

3 𐀀𐀀, 𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀

CALLS

𐀀𐀀 𐀀𐀀

𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀

1. 𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀 + 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀 * 𐀀𐀀'𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀
2. 𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀 𐀀𐀀𐀀𐀀𐀀𐀀
3. 𐀀𐀀 𐀀𐀀𐀀 𐀀𐀀𐀀, 𐀀𐀀𐀀𐀀𐀀𐀀

𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀 𐀀𐀀𐀀𐀀𐀀 𐀀𐀀

𐀀𐀀𐀀𐀀𐀀𐀀

CONTACTS

Add a contact

1. Select **Menu** > **Contacts** > **≡** > **New**.
2. Select where to save the contact.
3. Select **Last name**, write the name, and select **𐀀𐀀**.
4. Select **First name**, write the name, and select **𐀀𐀀**.
5. Select **Mobile** or **Home number**, type in the number, and select **𐀀𐀀**.
6. Select **𐀀𐀀**.

Save a contact from the call logs

1. Select **Menu** > **Call logs**, and select the call type.
2. Scroll to the number you want to save, select **≡** > **Add to contacts**, and select **Add to new contact** to create a new contact, or **Add to existing contact** to add the number to a contact in your contacts list.
3. Select where to save the contact.
4. Add the contact details and select **𐀀𐀀**.

Call a contact

You can call a contact directly from the contacts list.

Select **Menu** > **Contacts**, scroll to the contact you want to call, and press the call key.

SEND MESSAGES

Write and send messages

1. Select **Menu** > **Messages** > **Create message**.
2. Write your message.
3. To insert numbers or symbols to the message, select **≡** > **Insert options** > **Insert number** or **Insert symbol**.
4. Select **≡** > **Send**. If asked, select which SIM to use.
5. Type in a phone number, or select **Search** and a recipient from your contacts list.
6. Select **OK**.

4 表紙の見た目を変更する方法

CHANGE THE LOOK OF YOUR HOME SCREEN

Choose a new wallpaper

1. Select **Menu** > **Settings** > **Display** > **Wallpaper settings**.
2. Select **Static wallpaper** to select from pre-defined wallpapers, or **More pictures** to select a picture from your phone or memory card.
3. Scroll to the wallpaper you want, and select **Select**.

PROFILES

Set a profile

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

1. Select **Menu** > **Settings** > **Profiles**.
2. To adjust a profile, scroll to it, and select **≡** > **Settings**. Change the settings you want.
3. To set on a profile, scroll to it, and select **Select**.

ADD SHORTCUTS

You can add shortcuts to different apps and settings on your home screen.

Edit Go to settings

On the bottom left of your home screen is , which contains shortcuts to various apps and settings. Select the shortcuts that are the handiest for you.

1. Select **Menu** > **Settings** > **Phone settings** > **Go to settings**.
2. Select **Select options**.
3. Scroll to each shortcut you want to have on the list and select **Mark**.
4. Select **✓** > **Yes** to save the changes.

You can also reorganize your list.

1. Select **Organise**.
2. Scroll to the item you want to move, select **Move** and where you want to move it.
3. Select **← >** **Yes** to save the changes.

5 時間, 日付を手動で設定する

SET THE TIME AND DATE MANUALLY

Change the time and date

1. Select **Menu** > **Settings** > **Phone settings** > **Time & date**.
2. Select **Update time settings** and switch **Auto update time** off.
3. Select **Manual update time** and enter the time and date.
4. Select ←.

ALARM CLOCK

Set an alarm

1. Select **Menu** > **Alarm**.
2. Select  and enter the alarm time and other details.
3. Select .

CALENDAR

Add a calendar event

1. Select **Menu** > **Extras** > **Calendar**.
2. Scroll to a date and select  > **Add new schedule**.
3. Enter the event details, and select .

CALCULATOR

Use the calculator

1. Select **Menu** > **Extras** > **Calculator**.
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Press the scroll key to get the result of the calculation.

Select  to empty the number fields.

6 Empty your phone

REMOVE PRIVATE CONTENT FROM YOUR PHONE

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

Restore factory settings

1. To reset your phone to its original settings, select **Menu** > **Settings** > **Phone settings** > **Restore factory settings** > **Full restore (delete data)**.
2. Enter your security code, or if you haven't changed the code, enter the pre-set code 12345.
3. Select **OK** > **Yes**.

7 Product and safety information

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

මම මගේ ප්‍රතිපත්තිමය ක්‍රියාමාර්ගයන් මගින් මාගේ මානසික සුවසේනාව සහ මාගේ පවත්මය සුරැකිමට සහ මාගේ ජීවිතයේ සුඛය සහ සමතුලිතතාව සහතික කරමිනි. මාගේ මානසික සුවසේනාව සහ මාගේ පවත්මය සුරැකිමට මාගේ ජීවිතයේ සුඛය සහ සමතුලිතතාව සහතික කරමිනි.

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □



මගේම මගේම මගේම මගේමම මගේමමම ම ම මගේමම මම මගේමමම ම මගේ මගේම මම, මගේමමමමමම, මගේම, මගේමමමම ම මගේමම මගේමමමමමමම මගේම, මගේමමම, මගේමමම ම මගේමමම මගේමම, මගේමමම මගේ මගේම, මගේමමම මගේ මගේම! මම මගේමමමමමමමම මගේමම මගේම මගේමම මගේ මගේම

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □



000000 00000000 000 0000 000000 0000 00000000 000 0000000 000000 000 0000 0000000000 0000 00000000
 000000 00000000 000000 0000 00000000 000 00 000000000000 000 000000 00000000 00000000 000000 000000

□ □ □ □ □ □ □ □ □

[illegible]

பொது குறிப்புகள்



பொருத்தப்பட்டிருக்கும் அனைத்து அங்குகளும் அழகுறப்படுத்தப்பட்டிருக்கும். நீங்கள் பொருத்தும் போது அவைகளை அழகுறப்படுத்திப் பாருங்கள்.

பொருத்தும்போது, பொருத்தும்படியான அங்குகளைப் பொருத்திவைக்கவும்.



நீங்கள் பொருத்தும்போது அனைத்து அங்குகளும் அழகுறப்படுத்தப்பட்டிருக்கும். HMD Global Oy பொருத்தும்போது அழகுறப்படுத்தும், பொருத்தும்போது அனைத்து அங்குகளும் அழகுறப்படுத்தும் அனைத்து அங்குகளும் அழகுறப்படுத்தப்பட்டிருக்கும். நீங்கள் பொருத்தும்போது அனைத்து அங்குகளும் அழகுறப்படுத்தப்பட்டிருக்கும்.

பொது குறிப்புகள் பொது குறிப்புகள்



பொது குறிப்புகள் பொது-பொருத்தும்போது நீங்கள் நீங்கள் பொருத்தும்போது

பொது குறிப்புகள் பொருத்தும்போது பொருத்தும்போது



000000000000 00000000 000000 0000000000 00000, 0000000000 000000 000 0000 0000 000 000000000000
 0000000000 000000 0000000000 000000 00000 00000 0000000000 0000000000 000000

11/11/11



பெயர்: _____

□□ □□□□ □□□:

- [illegible]

□□□□□□ □□□□ □□□□□□ □□□□□□□ □□□□ □□□ □□□□:

- [illegible]

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

[illegible]

- [illegible]

- បញ្ជូន ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។
- បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។

បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។

បញ្ជូនសារ ឬទទួលបានសារ



បញ្ជូនសារ ឬទទួលបានសារ អ្នកប្រើប្រាស់អាចប្រើប្រាស់ លេខ ឬឈ្មោះ អ្នកប្រើប្រាស់ ដើម្បីបញ្ជូន ឬទទួលបានសារ ពីអ្នកប្រើប្រាស់ ផ្សេងទៀត។

Смартфон Nokia 105 4G (2023) не подлежит утилизации вместе с обычными бытовыми отходами.

Crossed-out wheelie bin symbol



Смартфон Nokia 105 4G (2023) не подлежит утилизации вместе с обычными бытовыми отходами. Смартфон Nokia 105 4G (2023) должен быть утилизирован отдельно от обычных бытовых отходов. Смартфон Nokia 105 4G (2023) должен быть утилизирован в соответствии с местными требованиями к утилизации электронных отходов. Смартфон Nokia 105 4G (2023) должен быть утилизирован в соответствии с местными требованиями к утилизации электронных отходов. Смартфон Nokia 105 4G (2023) должен быть утилизирован в соответствии с местными требованиями к утилизации электронных отходов.

BATTERY AND CHARGER INFORMATION

Battery and charger info

To check if your phone has a removable or non-removable battery, see the printed guide.

Devices with a removable battery Use your device only with an original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

Devices with a non-removable battery Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, to replace the battery, take the device to the nearest authorized service facility.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

Battery and charger safety info

Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold

temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

□ □ □ □ □ □

በሰላም ስምምነት ላይ ባለው የጥያቄ መሰረት የሚከተሉትን ስራዎች ማጠናቀቅ ይገባል፡

[illegible][illegible]

[illegible][illegible]

- **பெரிய அளவுகிலம்** - பருத்தி உலர்வு மற்றும் பருத்தி உலர்வு
பெரிய அளவுகிலம் **6 மீட்டர் (15.3 மீட்டர்)**
பெரிய அளவுகிலம் பெரிய அளவுகிலம் பெரிய அளவுகிலம்
 - **பெரிய அளவுகிலம்** - பெரிய அளவுகிலம் பெரிய அளவுகிலம் பெரிய அளவுகிலம்
 - **பெரிய அளவுகிலம்** - பெரிய அளவுகிலம் பெரிய அளவுகிலம் பெரிய அளவுகிலம்

[illegible][illegible]

00000000: 00000000 0000 000, 000000 000000 000000 000000000000 000 000000 000000
 00000000 000000 000 0000 000 000000000000 0000000 0000000 000000 000

□□□□ □□□□□□ □□□□□□ □□□□ □□□□□□□□□□□□ □□□□ □□□□□□□□ □□□□ □□□□

PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests or browsing the internet. Do not accept Bluetooth® connections from sources you do not trust.
- Install antivirus and other security software on any connected computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

□ □ □ □ □ □ □ □ □ □ □ □

000000 000000 0000000000 00000000 00 00000000000000 00000000 00000000000 0000000000
 00000000 0000 0000; 000 000000 0000, 000000 00000 00 00 000000000000 000000000000000000 0000
 00000000 0000; 00000000000 000000 0000000000 00000000 000000 00 000000000 000000 000 0000; 00000000
 0000000 0000 00 000000000 000 0000 000 00000 000000000000 000000 000 0000; 000000 000000 000
 000000 000000000000 000000000000 000000 000 000000 0000 000 000000 00000000000 000 0000 0000 00
 000000000000 000000 0000; 000000, 00 0000000000, 00 00000000000 00000000000000 0000 000 000000 000000
 00 0000000000 0000000 0000000 00 00 000 00000 00; 000000 0000000 0 000000000000 0000000000 0000 000000
 0000000000 0000000 0000000 00;

□□□□□□□□□□ □□□□ (SAR)

00 000000 00000000 00000 00000000 0000000000 000000 00000000000000 00000 0000

SAR 係根據電磁波之傳播特性，以適當之電磁波之接收強度，計算出電磁波之電場強度，並根據電場強度計算出 SAR 值。SAR 係根據電磁波之傳播特性，以適當之電磁波之接收強度，計算出電磁波之電場強度，並根據電場強度計算出 SAR 值。

00000000000000000000 SAR-00 000 000000000000 0000 0000000 00000 0000 000 00000000 0000
 0000; 00 0000 000, 000 00 0000 0000 000000 000000 00000 0000 000 0000000000 000000000000
 00000000 0000000000 0 00000000000000 000 0000000000 0000000 0000 000000 0000000000 000000 000000
 0000000000000000000000 000 0000; 0000000 0000000000 00 00 000, SAR-00 000 00 00 000;

000000 0000000000 0000000 (WHO) 0000000 0000000 00, 000000000 00000000000 0000 00000000 00000000
 000000000000 00000000 0000 0000 0000 00000 000000000 0000000000 00000 000; 000 0000 000000
 00000000000 000000 0000000 00, 000000 0000 0000000 0000 00000000 00000 0000 0000 0000 000000
 0000 0 0000 0000 000000000000 0000 000000 0000 000000000-00000 000 00000000 0000 0000 00000000
 00000; 000 0000 0 00000000000 0000 000 RF 0000000000 0000000000 00000000 0000 WHO-0 000000000
www.who.int/peh-emf/en 0 0000

COPYRIGHTS AND OTHER NOTICES

Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select *#6774# on the home screen.