

INSTALLATION, OPERATION, AND MAINTENANCE MANUAL



Consumer Safety Information	2
Overview of the RedZone™ Air Handler	3
Codes and Standards	3
Receiving and Checking Equipment	4
Physical Data	5
Installation	
Locating and Mounting	6-10
Plumbing	11-14
Electrical Connections	15-17
Thermostat Installation	18
Start-Up Procedure	19
Troubleshooting	20
Sequence of Operation	21
Maintenance	22
Specifications	23
Accessories	24
Air Delivery Performance	25-29
Parts List	30
Limited Warranty	31-32



IMPORTANT: READ AND SAVE THESE INSTRUCTIONS!

To register your Air Handler, please visit www.redzone-products.com

PART LIST

Replacement Parts List

I HAVE
↑

	DVS400	DVS600	DVS800	DVS1000	DVS1200
Relay	PTRC-1C-24C-T5-X	PTRC-1C-24C-T5-X	PTRC-1C-24C-T5-X	PTRC-1C-24C-T5-X	PTRC-1C-24C-T5-X
Transformer	PU30va	PU30va	PU30va	PU30va	PU30va
Motor	RW400ECM-1/3	RW600ECM-1/3	RW800ECM-1/3	RW1000ECM-3/4	RW1200ECM-3/4
Door Switch	CARLING-TA20B	CARLING-TA20B	CARLING-TA20B	CARLING-TA20B	CARLING-TA20B
Coil	BC9061	BC9061	BC9061	BC7923FX	BC7923FX
Housing	DC1020-600-5	DC1020-600-5	DC1020-600-5	DC1020-800-5	DC1020-800-5
Pump	UPS15-58RU	UPS15-58RU	UPS15-58RU	UPS15-58RU	UPS15-58RU
Check Valve	96806141	96806141	96806141	96806141	96806141
Flow Valve	Mesurflo 2517- 1.0GPM	Mesurflo 2517- 1.5GPM	Mesurflo 2517- 2.0GPM	Mesurflo 2517- 2.5GPM	Mesurflo 2517- 3.0GPM
Control Board	ECB 1.0	ECB 1.0	ECB 1.0	ECB 1.0	ECB 1.0

Wiring diagram located on page 18