 
 


蓝牙自拍杆 使用手册

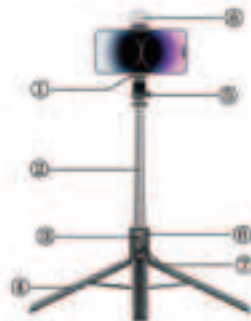 


- ① 手机夹 ⑤ 锁紧装置
- ② 伸缩杆 ⑥ 蓝牙遥控器
- ③ 指示灯 ⑦ 拍摄键
- ④ 三脚架 ⑧ 补光灯(选配)

自拍杆功能介绍

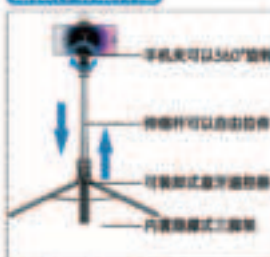

补光灯 (选配)

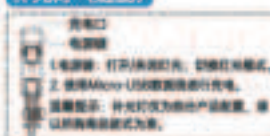

蓝牙遥控器的装即



蓝牙遥控使用步骤

 
第1步: 在手机上, 依次点击 设置 > 蓝牙, 并将手机蓝牙打开。
第2步: 长按拍摄键 (即2步) 直到指示灯闪烁或灯打开。
第3步: 当搜索到名为 "VIPSY" 的蓝牙设备时, 点击并选择配对。
第4步: 打开手机APP, 按下拍照键即可拍摄照片或视频。
第5步: 长按拍摄键 (即2步) 直到指示灯再次闪烁或关机。
温馨提示: 此蓝牙遥控器兼容 Android 4.3, iOS 5.0及以上系统版本。

遥控操作步骤

温馨提示: 本产品蓝牙遥控器有两种型号, 请按照所购型号选择对应的。

1. 充电式

1. 长按心号键开机, 遥控器指示灯开始闪烁。
2. 打开手机蓝牙功能 (设置-蓝牙)。
3. 搜索连接本遥控器的名称 (VIPSY)。
4. 点击(VIPSY) 连接成功, 指示灯停止闪烁方可使用。

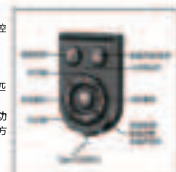

2. 滑盖式

按照箭头方向将遥控器推杆, 取出电池进行充电。随后将电池安装回去即可。



故障排除:

1. 蓝牙遥控器无法开机。
• 更换一节新电池。
2. 开机后蓝牙无法连接/无法正常工作。
• 将手机上蓝牙配对时, 重新蓝牙遥控器与手机配对连接。
3. 安卓手机如果无法使用遥控器拍照。
1. 按下拍摄键可以调节音量。
• 打开手机App, 将"音量键功能"修改成拍照或者拍照, 即可使用遥控器拍照。
4. 按下拍摄键无法调节音量。
• 按照步骤3的步骤重新进行配对连接。

注意事项:

 
1. 请勿将产品置于高温、潮湿环境保存。
2. 请勿将产品置于暴晒、火源等高温环境。
3. 请勿在设备附带的箱中使用, 避免造成分离秩序。
4. 更换电池时, 请将电池正负极放置, 禁止有正负极短路。
5. 本产品含有电池, 请放置于婴幼儿触不到的地方, 防止小孩误吞。

感谢您的支持!

RE CE RoHS




Selfie Stick User Manual

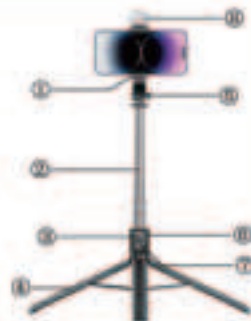


- ① Phone Clip ⑤ Locking Knob
- ② Telescopic Shaft ⑥ Remote Control
- ③ Indicator Light ⑦ Shutter Button
- ④ Built-in Tripod ⑧ Fill Light (optional)

 Selfie Stick Introductions

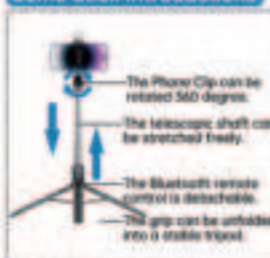

Fill Light (options)

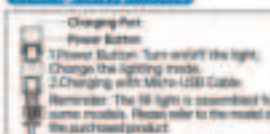 

Detachable Remote



Quick Steps for Remote

 
Step 1: On your phone, tap Settings > Bluetooth, and then turn on the Bluetooth.
Step 2: Hold down the shutter button (about 2s) until indicator light starts flashing to turn on the remote control.
Step 3: Once the Bluetooth name of "VIPSY" appears in the display, select it and tap "pair".
Step 4: Press the Shutter button to take photos.
Step 5: Hold down the shutter button (about 2s) until indicator light goes out to turn off the remote control.
Reminder: The remote control is compatible with Android 4.3, iOS 5.0 and later.

Replace the Battery

Reminder: The Bluetooth remote control has two types. Please follow the corresponding steps to replace the battery according to the type of your purchased product.

1. Rechargeable

1. Long press the heartkey to turn on the remote control indicator light starts to shine.
2. Enable Bluetooth on the phone (Settings - Bluetooth).
3. Search for the matching name connected to this remote (VIPSY) to connect successfully, the light stops shining before use.

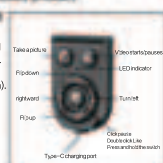

2. Sliding Type

Slide the back cover in the direction of the arrow as shown, then replace a new battery, and finally insert the cover back.



Troubleshooting:

1. If your phone is unable to connect to the remote.
• Delete the Bluetooth pairing on your phone, reboot the remote and start a new device search.
 2. If your Android phone can't take photos when you press the shutter button.
• Open the camera App and change the "Volume button function" to "Default" or "Shutter".
- Attention:
1. Don't store the product in icy or damp environment.
 2. Don't place the product in the heat.
 3. When replacing the battery, place the positive pole "+" of the battery outwards.
 4. This product contains a battery, please place it out of the touch of infants to prevent children from swallowing it by mistake.
 5. Don't use the product in restricted district to avoid violating public order.

Thanks for your support!

RE CE RoHS



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.