

Component code numbers
Codes d'appareils
Números de código de componentes

TV and VCR Téléviseurs et magnétoscopes Televisores y videgrabadoras		
Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Sony	VCR	001 (VTR1: Beta) 002 (VTR2: 8 mm) 003 (VTR3: VHS) 004, 005, 006 (VTR4, 5, 6: DV)
	TV	001
Admiral	VCR	030
	TV	002, 014, 009
Aiwa	VCR	041, 050, 035
Akai	VCR	052, 053, 054
AOC	TV	012
Audinac	TV	034
Audio Dynamic	VCR	017, 040
	VCR	033, 046
Bell & Howell	TV	014, 009, 038
	VCR	020, 022, 017
Brocsonic	TV	003, 012
	VCR	012, 011
Canon	VCR	018, 044, 035
CCE	TV	063, 072, 011, 041
	VCR	044
Cineral	TV	035, 034
	VCR	035
Citizen	VCR	018, 035
	TV	022, 023, 020, 021
Croslex	TV	011
Crown	TV	023
Curtis Mathis	VCR	007, 041, 012
	TV	003, 019, 023
Daewoo	VCR	044, 015, 012
	TV	035, 036, 003, 041
	TV/VCR Combo	036/044
DBX	VCR	017, 039, 040
Dimensia	VCR	007
Emerson	VCR	044, 022, 023, 019, 020, 021, 041, 058
	TV	022, 020, 021, 023, 003, 015, 042
	TV/VCR Combo	021/023, 021/022, 020/058
Fisher	VCR	033, 037, 038, 036
	TV	025
Funai	VCR	041
General Electric	VCR	032, 007, 012
	TV	002, 018, 003, 007, 045
	TV/VCR Combo	027/024, 027/025

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Goldstar/LG	VCR	035
	TV	003, 012, 030, 046, 050, 051
	TV/VCR Combo	003, 012, 030, 046, 050, 051/035
GO VIDEO	VCR	051, 042, 043
Gradiente	VCR	061, 047, 041
	TV	064, 028, 006
	TV/VCR Combo	046/035
Hitachi	VCR	011, 007, 008
	TV	031, 003, 032
HQ	VCR	015
Instant Replay	VCR	012, 011
JC Penny	VCR	012, 008, 007, 033, 017, 039, 040
	TV	003, 002, 030, 007
JVC	VCR	017, 047, 048, 049, 039, 040
	TV	028, 029
Kenwood	VCR	017, 039, 035, 040
KTV	TV	033, 003, 023, 034
LXI (Sears)	VCR	041, 035, 008, 036, 037, 033, 038, 052
	TV	002, 003, 011, 025, 019, 012
Magnavox	VCR	013, 011, 012, 010
	TV	011, 012, 003, 043, 047
	TV/VCR Combo	011, 018, 047/012, 013
Marantz	VCR	017, 039, 040
Marta	VCR	035
Memorex	VCR	012, 038
Minolta	VCR	008, 007
Mitsubishi/MGA	VCR	026, 027, 028, 029, 056, 057, 059
	TV	024, 003, 012, 066
Multitech	VCR	028, 041, 024
NEC	VCR	017, 039, 040
	TV	003, 012
Noblex	TV	057, 061, 062
Nokia	VCR	044
Olympic	VCR	012, 011
Optimus	VCR	027
Orion	VCR	055
Panasonic	VCR	009, 010, 011, 012, 060
	TV	018, 016, 007, 049, 067
	TV/VCR Combo	018/011, 018/012
Pentax	VCR	008, 007
Philco	VCR	011, 012, 044, 020
	TV	011, 003, 068, 035, 031
Philips	VCR	035, 013, 011, 012
	TV	011, 056, 043

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Pioneer	VCR	011
	TV	037, 018, 019
	TV	003, 008
Portland	TV	071
Proton	TV	071
Quasar	VCR	011, 012, 009, 010, 006
	TV	018, 007, 048
	TV/VCR Combo	018, 048/012, 009, 010
Radio Shack	TV	002, 012, 024, 023
RCA/PROSCAN	VCR	007, 008, 011, 012, 013, 014, 015, 016
	TV	002, 003, 004, 006, 007, 008, 044, 045, 046, 053
	TV/VCR Combo	018/011
Realistic	VCR	012, 033, 031, 038, 027, 041
Sansui	VCR	017
Singer	VCR	018
Samsung	VCR	025, 016, 024
	TV	026, 012, 003, 055
	TV/VCR Combo	023, 027/024, 025, 029
Sanyo	VCR	033, 038, 046, 044, 035
	TV	025, 054, 069, 023
Scott	VCR	015, 016, 024, 038, 026, 027, 028, 029
	TV	023, 012
SEMP	VCR	025
	TV	019
Serie Dorada	TV	058
Sharp	VCR	030, 031
	TV	014, 015, 070
Shintom	VCR	018
Signature 2000	VCR	041, 030
	TV	014, 009
Sylvania	VCR	013, 011, 012, 041
Symphonic	TV	011, 012, 003
	VCR	041
	TV	023, 039, 040
	TV/VCR Combo	023/041
Tashiro	VCR	035
Tatung	VCR	017, 039, 040
Teac	VCR	017, 039, 041, 040
Technics	VCR	012, 011
Toshiba	VCR	015, 014, 052
	TV	019, 014, 059, 060
Videch	TV	031, 003, 012
Wards	VCR	030, 031, 038, 034, 035
	TV	003, 015, 012
Yamaha	VCR	033, 017, 039, 040
Zenith	VCR	034
	TV	009, 010

Cable Box
Décodeurs
Adaptadores para cablevisión

Brand/Marque/Marca	Code No./Code/Núm. de código
Hamlin/Regal	022, 023, 024, 025, 026
Jerrold/G.I.	001, 002, 003, 004, 005, 006, 007, 008, 018, 043
NET	042
Oak	027, 028, 029
Panasonic	019, 020, 021
Pioneer	014, 015
Scientific Atlanta	009, 010, 011
Tocom	016, 017, 043
Zenith	012, 013

Mini Hi-Fi component system
Appareils d'une minichaîne Hi-Fi
Minisistemas de componentes de alta fidelidad

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ amplituner/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/cassette/ Decks de cassettes	MD/lecteur MD/ Deck de minidiscos
Sony	001	001	001	001
	001	001	002	—
	002	001	001	001
	002	001	002	—
	003	002	003	—
	003	002	004	—
	003	002	005	—
	096	086	—	—
Admiral	022	021	—	—
	023	022	025	—
	023	022	026	—
	040	037	042	—
	080	075	072	012
	075	069	068	—
	069	064	059	—
	063	059	—	—
Daewoo	005	003	—	—
	010	008	009	—
	028	009	028	—
	028	009	029	—
	028	009	010	—
	024	023	027	—
	037	009	028	003
	058	054	—	—
Garrard	035	091	—	—
Harman/Kordon	061	085	033	—
Jensen	019	018	022	005
JVC	019	018	023	—
	020	019	024	—
	071	018	060	—
	071	018	061	—
	019	018	060	005
	019	018	061	005
	079	074	071	008
	015	014	015	—
Kenwood	016	015	017	—
	016	015	018	—
	025	034	036	—
	025	024	—	—
	072	066	064	014
	072	066	065	014
	072	066	016	—
	083	078	074	011
GoldStar/LG	084	079	075	014
	009	007	008	—
Marantz	017	016	019	—
	029	039	019	—
	095	016	050	—
McIntosh	098	091	—	—
Onkyo	034	035	038	—
	034	035	039	—
	034	030	038	—
	034	030	039	—
	085	080	076	015

Mini Hi-Fi component system Appareils d'une minichaîne Hi-Fi Minisistemas de componentes de alta fidelidad				
Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ amplituner/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/cassette/ Decks de cassettes	MD/lecteur MD/ Deck de minidisques
Panasonic	008	006	—	—
	008	005	067	—
	078	073	070	010
	100	095	—	—
	017	016	019	—
Philips	006	004	006	—
Pioneer	091	028	034	—
	018	017	020	—
	018	017	021	—
	006	017	006	—
	018	017	006	—
RCA	073	067	066	—
	082	077	073	016
	092	081	082	—
	092	081	083	—
SABA	041	042	—	—
Samsung	042	043	—	—
Sansui	088	084	077	—
Sanyo	011	010	011	—
Schneider	070	065	062	—
Sharp	037	009	028	003
	016	015	—	—
	028	009	028	—
	028	009	010	—
	081	076	—	013
Sherwood	101	096	—	—
	012	011	012	—
Sounde-sing	013	012	013	—
	097	088	—	—
T+A	064	060	058	—
Teac	055	050	064	—
	055	050	065	—
	088	—	077	—
	088	—	078	—
Technics	007	005	007	—
	008	005	067	—
	045	025	046	—
	026	032	007	—
Toshiba	074	067	066	—
	102	097	—	—
Yamaha	014	013	014	—
	030	027	014	—
	030	027	030	—
	030	027	063	—

Separate Components Appareils indépendants Componentes separados	
Receiver/Amplifier Amplis-tuner/amplificaterus Receptores/amplificadores	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001, 002
Aiwa	040, 022
Denon	027, 028, 036, 037
Fisher	011
Harman/Kardon	035
JVC	047, 020, 019, 099
Kenwood	025, 016, 015
Marantz	029
Magnavox	021
NAD	033
Nakamichi	087
Onkyo	034, 039, 043
Panasonic	008
Philips	029
Pioneer	032, 086, 091
RCA	093, 094, 021
Rotel	068
Sansui	038, 090, 088, 087
Sanyo	011
Sharp	028, 016
Sherwood	031
Teac	089, 058, 088
Technics	026, 045, 008
Yamaha	030, 046, 014

Cassette Deck Platines à cassette Decks de cassettes	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001, 002, 005
Aiwa	042, 045, 025
Denon	028, 029, 009, 010
Fisher	011
GoldStar/LG	008
Harman/Kardon	033
JCV	022, 023, 024
Kenwood	036, 037, 015, 016
Marantz	047
NAD	031, 032
Nakamichi	079
Onkyo	038, 039, 040, 041, 043, 044
Panasonic	067
Philips	047
Pioneer	034, 035, 020, 021, 006
RCA	084, 085
Sansui	079, 077, 078
Sanyo	011
Sharp	028
Teac	077, 078, 080, 081
Technics	046, 007, 067
Yamaha	030, 014

CD Player Lecteurs CD Reproductores de discos compactos	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001, 002
Aiwa	037, 021
Denon	026, 009
Emerson	092
Fisher	040, 010
Harman/Kardon	031
Hitachi	041
JVC	033, 018, 019
Kenwood	034, 014, 024
Magnavox	016, 026
Marantz	072
NAD	029
Nakamichi	044, 083
Onkyo	030, 035, 038
Panasonic	010
Philips	016
Pioneer	028, 017
RCA	082, 089, 090
Sansui	083, 084, 087
Sanyo	040, 010
Sherwood	039
Sharp	009, 015
Teac	049, 054, 084
Technics	025, 032, 005
Yamaha	027, 036, 013

MD Deck/DAT Deck Platines MD/DAT Decks de minidisques/cinta audiodigital	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001, 002, 019 (DAT)
Aiwa	012
Akai	018
Denon	003
JVC	005, 008
Kenwood	004, 011, 014
Marantz	007
Onkyo	020 (DAT)
Panasonic	010, 006
Pioneer	016, 020 (DAT)
Sansui	009
Sharp	013
Teac	005
Yamaha	017

DVD Lecteur DVD Reproductor de videodiscos digitales	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001
Denon	006
Hitachi	008
JVC	007
KLH	010
Panasonic	002
Philips	012
Pioneer	004
RCA	005
Sharp	011
Thomson	013
Toshiba	003
Yamaha	006
Zenith	009

VD (Video disc player) VD (Lecteur de vidéodisque) VD (Reproductor de videodiscos)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001, 002, 003, 004
Hitachi	008
Kenwood	013, 014
Magnavox	010
Panasonic	005, 006, 007
Philips	015
Pioneer	009
Sanyo	012
Sharp	011, 016

SAT SAT (Récepteur satellite) SAT (Sintonizador de recepción satélite)	
DirecTV (for the U.S.A./pour les États-Unis/para EE.UU.)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	001
Hitachi	005
Hughes	004
Panasonic	003
RCA/Proscan	002, 007
Toshiba	006

Ster Choice (for Canada/pour le Canada/para Canadá)	
Brand/Marque/Marca	Code No./Code/Núm. de código
General Instrument	009*

* as of 1998/ en 1998/ en 1998

Express Vu (for Canada/pour le Canada/para Canadá)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Echo Star	010*

* as of 1998/ en 1998/ en 1998

This file has been downloaded from:

www.UsersManualGuide.com

User Manual and User Guide for many equipments like mobile phones, photo cameras, mother board, monitors, software, tv, dvd, and others..

Manual users, user manuals, user guide manual, owners manual, instruction manual, manual owner, manual owner's, manual guide, manual operation, operating manual, user's manual, operating instructions, manual operators, manual operator, manual product, documentation manual, user maintenance, brochure, user reference, pdf manual