 
 




Original	Recharge	Original	Recharge
 St andby / On	 Power	 Band	 Smart / Li st
 Li ne 1/2	 Shi ft + 5	 CD Di sp	 Di spl ay / Medi a
 Open / Cl ose	 E j ect / Surround	 Di mmer	 Shi ft + Mute / Di mmer
 Net St andby	 Shi ft + Power	 Bass	 Audi o / Lang I / I I
 Ti ner	 Shi ft + Sl eep / Ti ner	 Top Menu	 D. Menu / Top
 Sl eep	 Sl eep / Ti ner	 Up / Tune+	 Up
 i Pod	 Shi ft + 1	 Up / Tune+	 Shi ft + >> /
 USB	 Shi ft + 8	 i Pod Control	 Menu / Home
 CD	 Shi ft + 3	 Vol ume+	 Vol +
 Sound	 Sound / Ti tle	 Left / Preset	 Left
 Net wor k	 Shi ft + 2	 Left / Preset	 Shi ft + I << / Preset -
 Tuner	 Shi ft + 6	 Ent er	 OK
 Audi o I n	 Shi ft + 7	 Ri ght / Preset	 Ri ght
 P. Bass	 Subti tle / EQ	 Ri ght / Preset	 Shi ft + >> / Preset +
 BT Audi o	 Shi ft + 9	 Down / Tune-	 Down
 +Favorite	 Fav / Marker / PC	 Down / Tune-	 Shi ft + << /
 Trebl e	 Zoom / Si ze	 Vol ume-	 Vol -





Original	Recharge	Original	Recharge
 Set up	 Set up / OPT /	 6	 6
 Ret ur n	 Back / Ret ur n	 Repeat	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 7	 7
 Stop / PTY	 Stop / Hol d	 8	 8
 Pl ay / RDS Di s	 Pl ay / Sl ow	 9	 9
 Pl ay / RDS Di s	 AV / Input / RDS	 Shuf fl e	 Bl ue / Pri ne Vi deo / Random
 Mut e	 Mut e / Di mmer	 +10	 Gui de / EPG / - / -
 I <<	 I << / Preset-	 0	 0
 >>I	 >>I / Preset+	 +100	 Shi ft + Gui de / EPG / - / -
 <<	 << / Tune-	 Pl ay Mde	 Yel low / YouTube / Repeat
 >>	 >> / Tune+	 Ent er	 Shi ft + OK
 1	 1	 Cl ear	 Exi t / Cancel / Cl ear
 2	 2	 Fol der -	 CH / Page-
 3	 3	 Fol der +	 CH+ / Page+
 Tuner Edi t	 Red / Netflix / Search		
 4	 4		
 5	 5		

