



Vanity

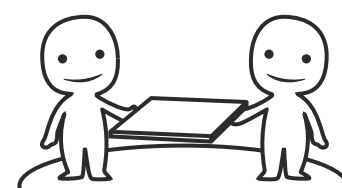

ASSEMBLED BY 2 ADULTS

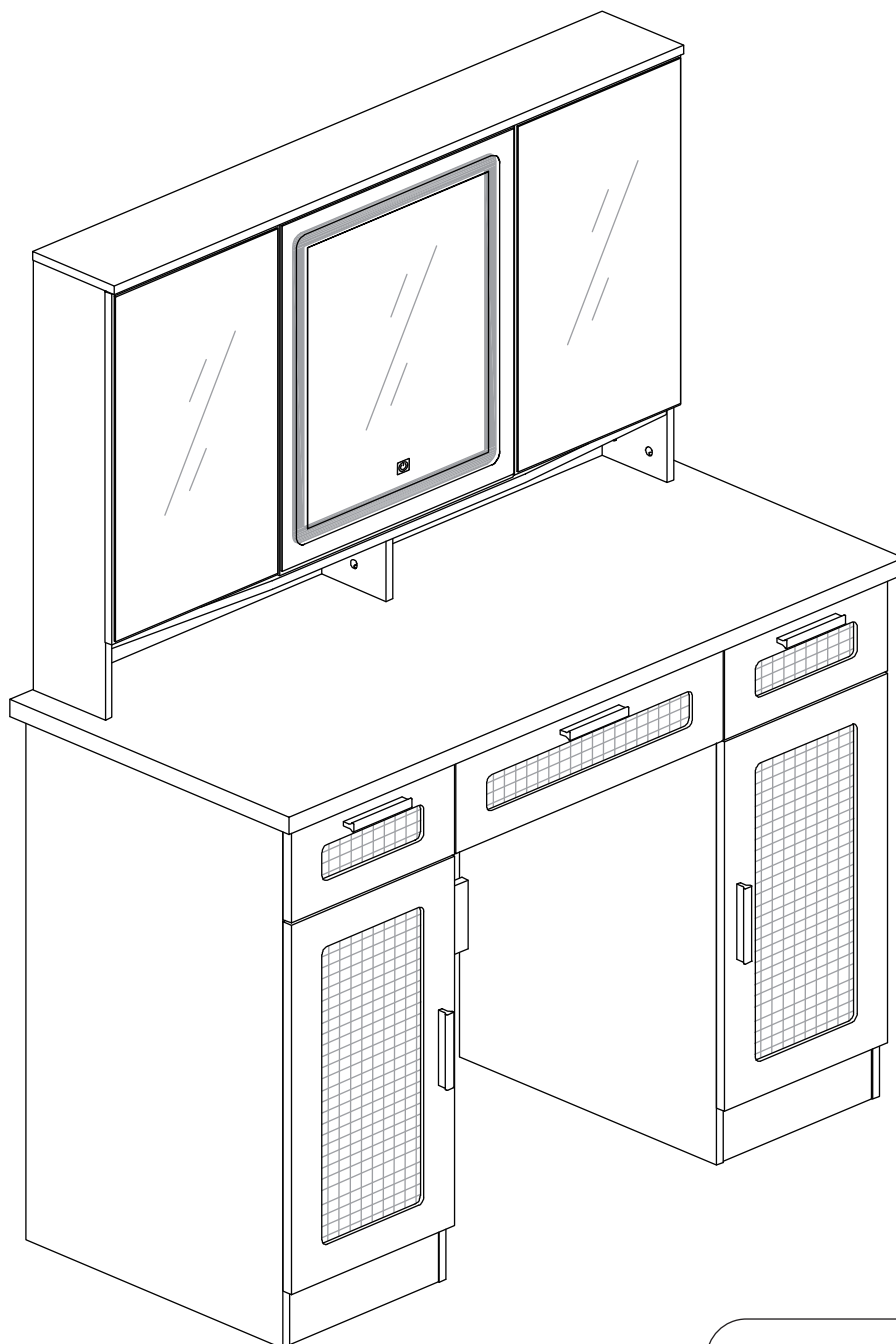

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



Please prepare the following tools

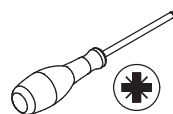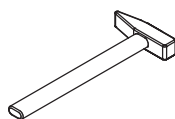


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 86




CRB1295A

B x 86

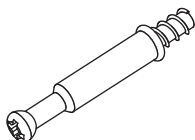


CRA0640A

C x 21

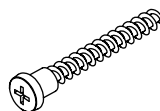


CRC0540A

D x 2

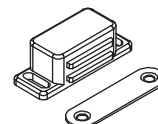


E x 5

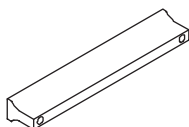

96 mm

F x 10

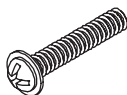


CRE0418A

G x 28




CRD0312A

H x 24

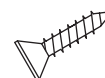


CRD3512A

I x 4

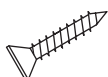

CRD0314A

J x 4

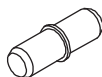


Ø 5 x 16 mm

K x 8




L x 3

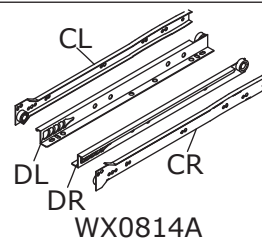


M x 8




N x 4

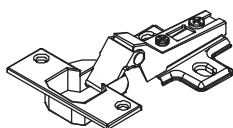

Power plug x 1

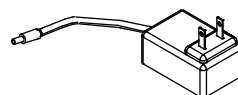

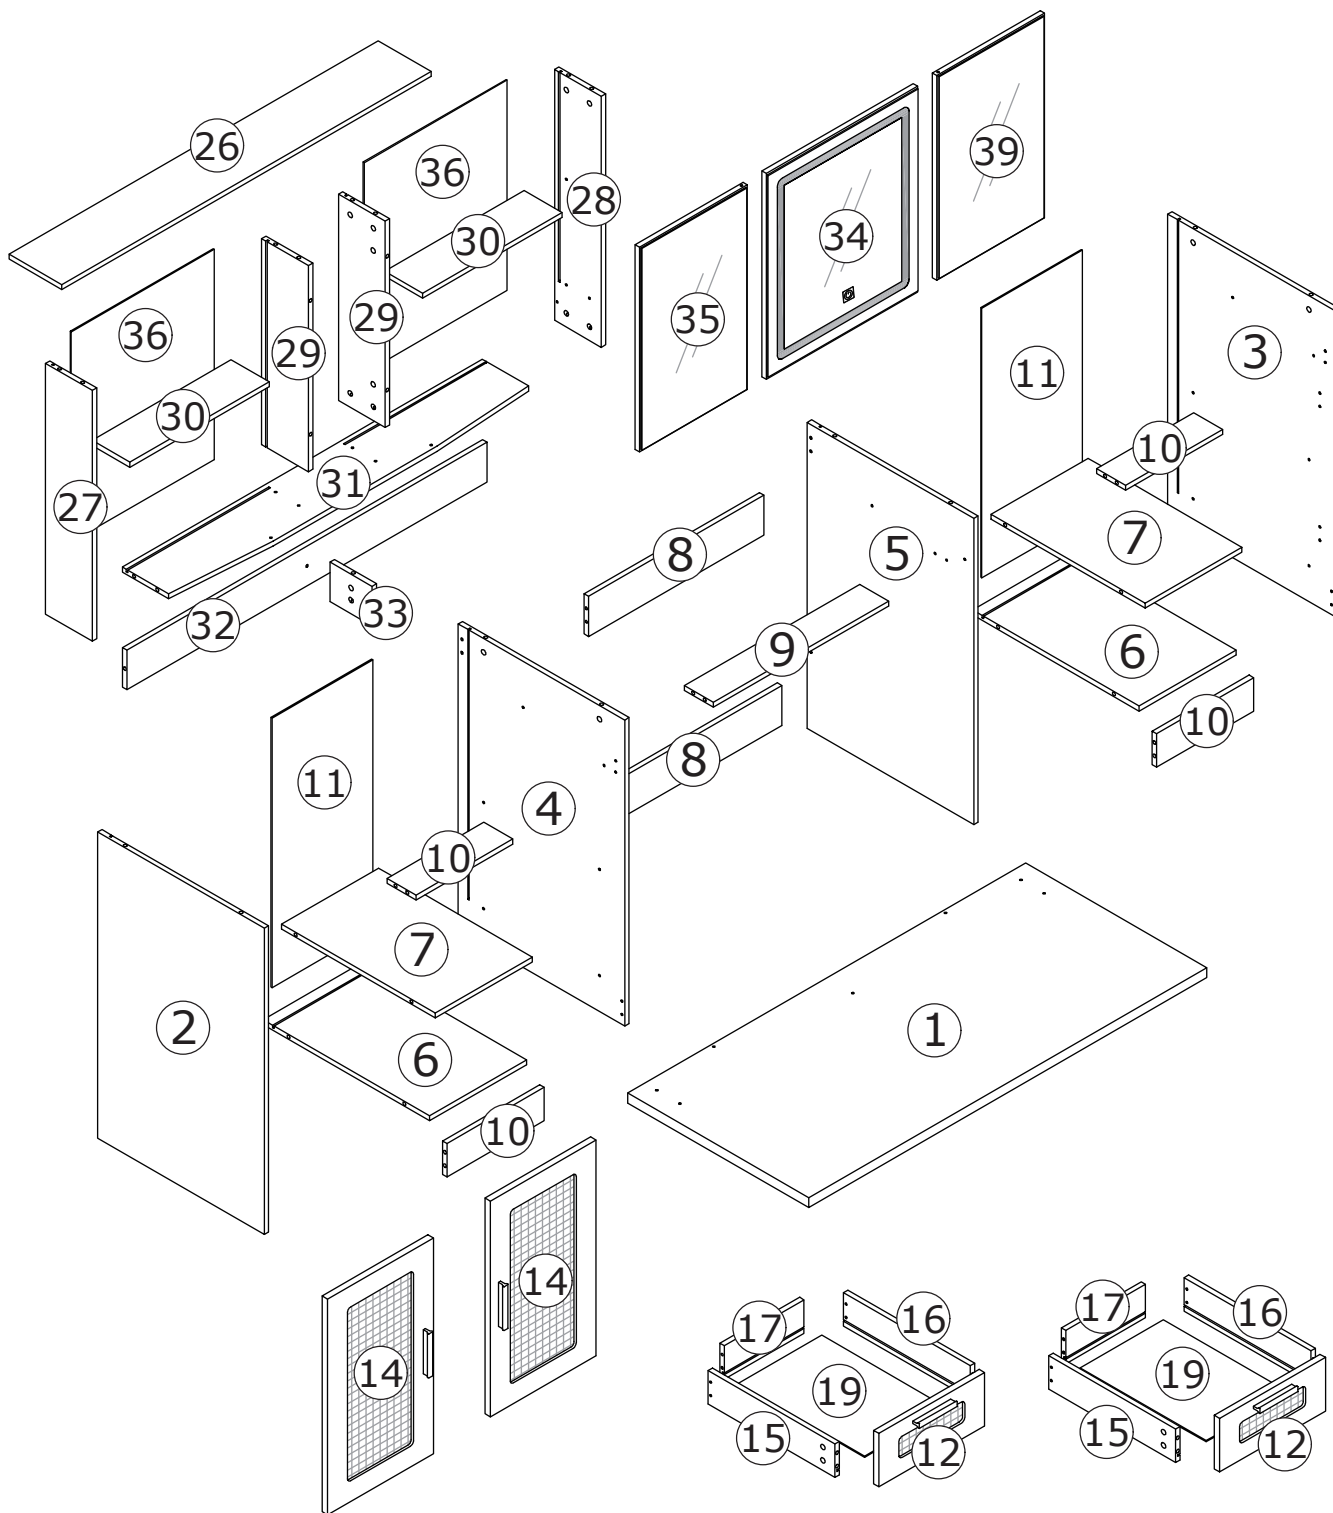


⚠ WARNING






Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.






*This is a permanent label.
Do not remove!*

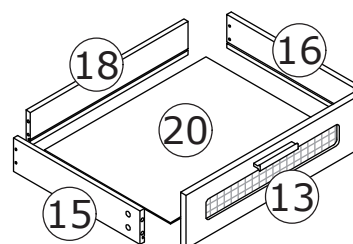

1

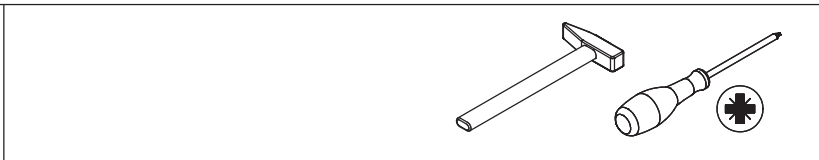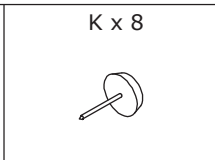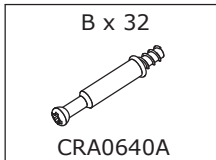


Screw eccentric rod(B) into board 2, 3, 4 and 5 at first.
Knock foot pad(K) into board 2, 3, 4 and 5 as shown.

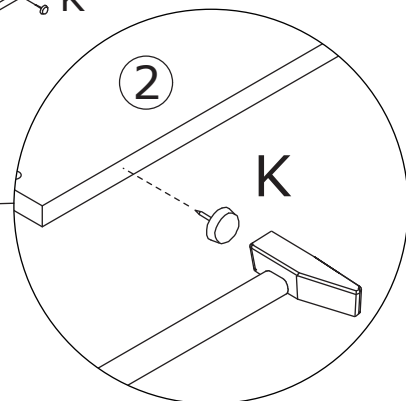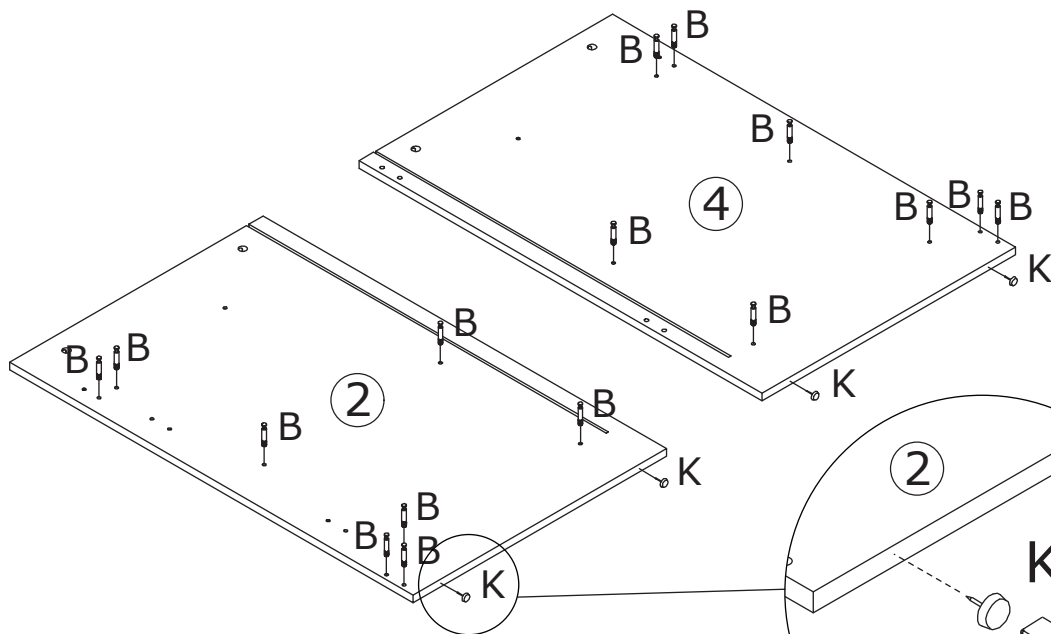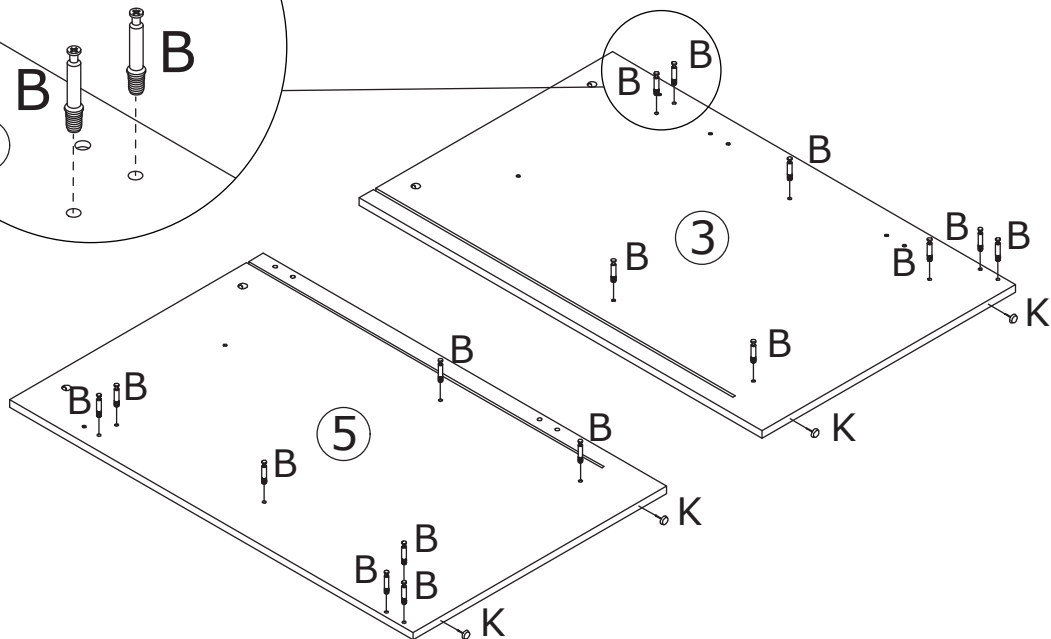
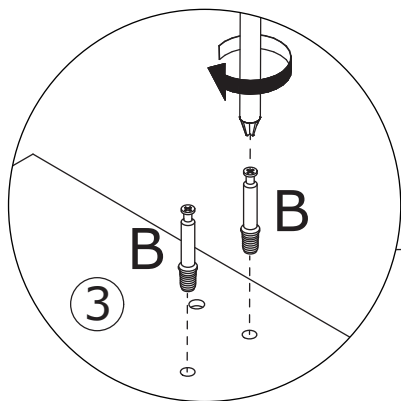
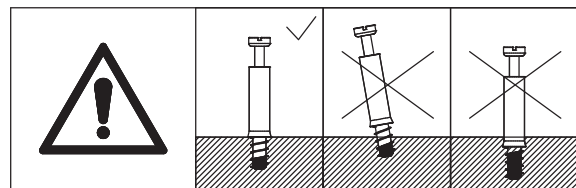


2

A x 8
CRB1295A

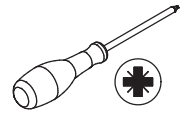


Attach board 6, 7 and 10 to board 2, add cam lock(A) into board 6,7,10 and turn clockwise to tighten as shown.

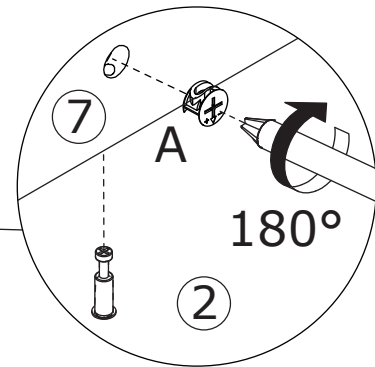
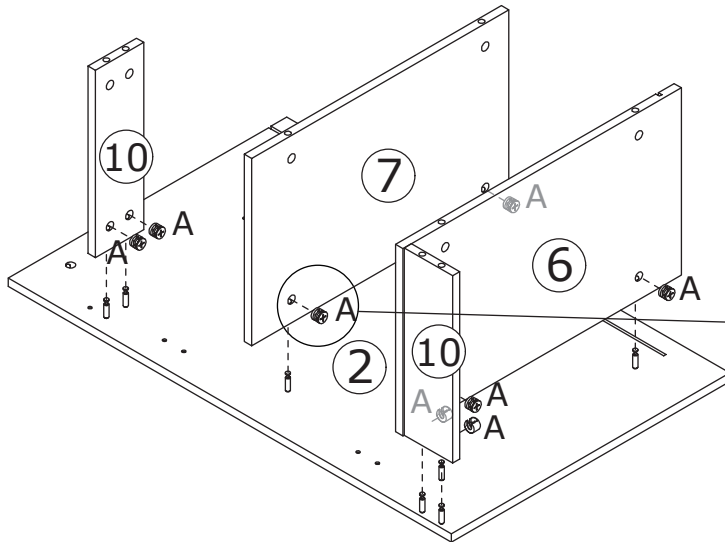
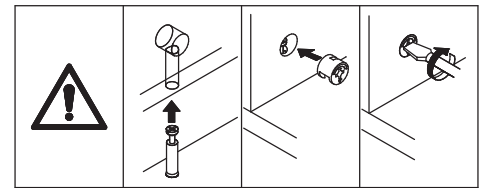


3

A x 8
CRB1295A

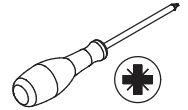


Attach board 4 to board 6, 7 and 10, add cam lock(A) into board 6,7,10 and turn clockwise to tighten as shown.

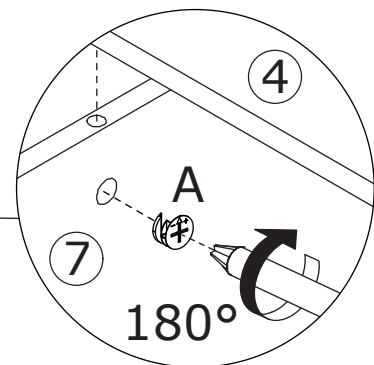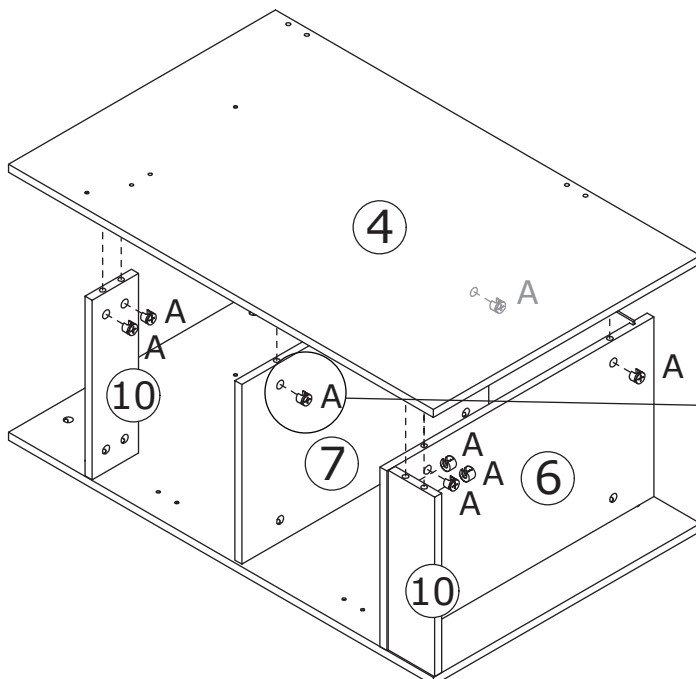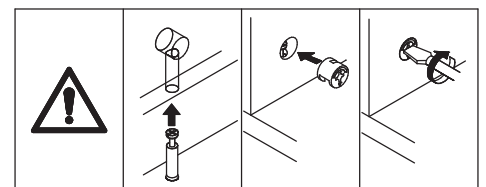


4




B x 2

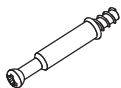

CRA0640A

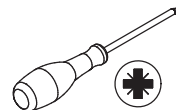

Screw eccentric rod(B)
into board 4 at first.

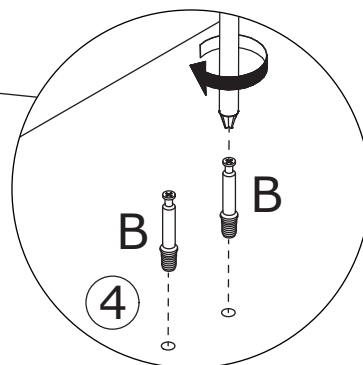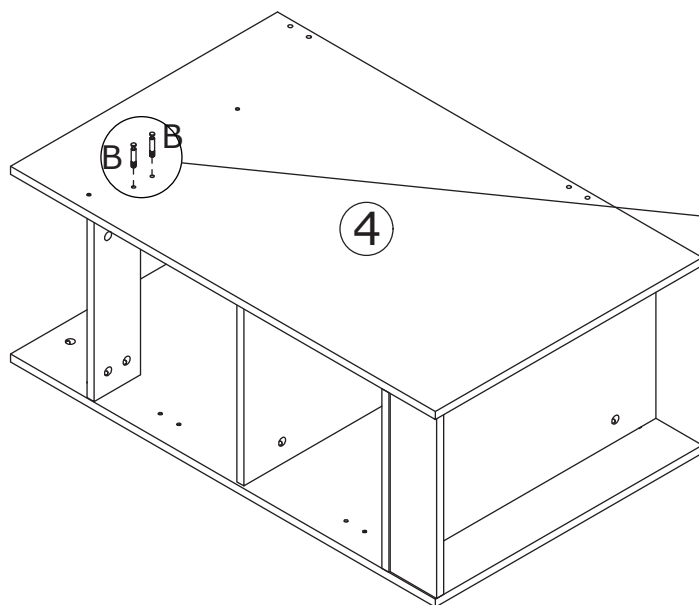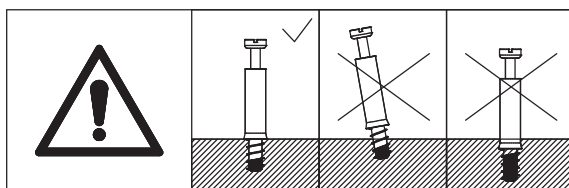


5




A x 8



CRB1295A

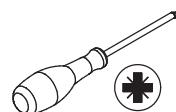


Attach board 6, 7 and 10 to board 3,
add cam lock(A) into board 6,7,10 and
turn clockwise to tighten as shown.

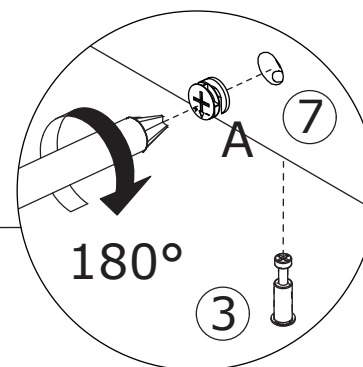
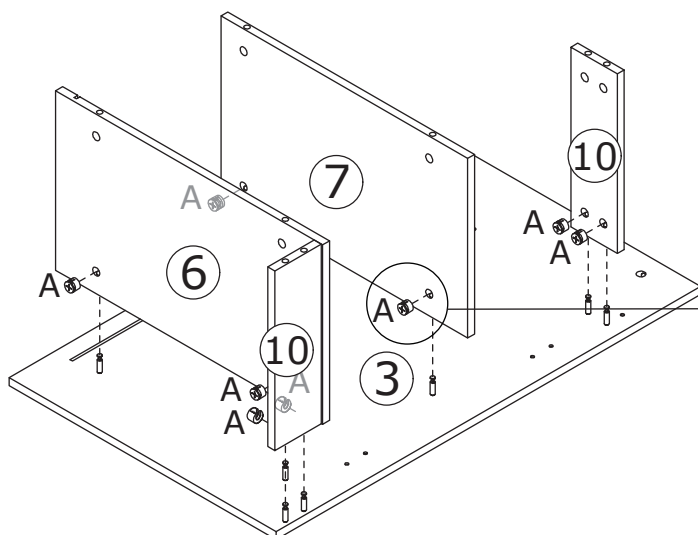
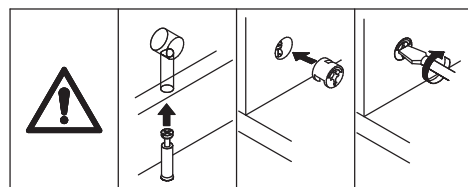


6

A x 8
CRB1295A

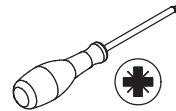


Attach board 5 to board 6, 7 and 10,
add cam lock(A) into board 6,7,10 and
turn clockwise to tighten as shown.

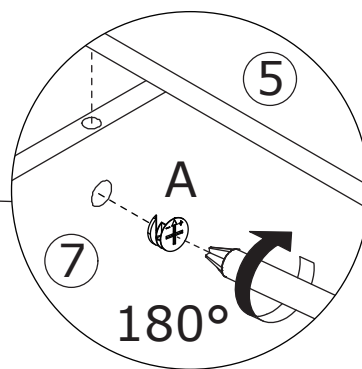
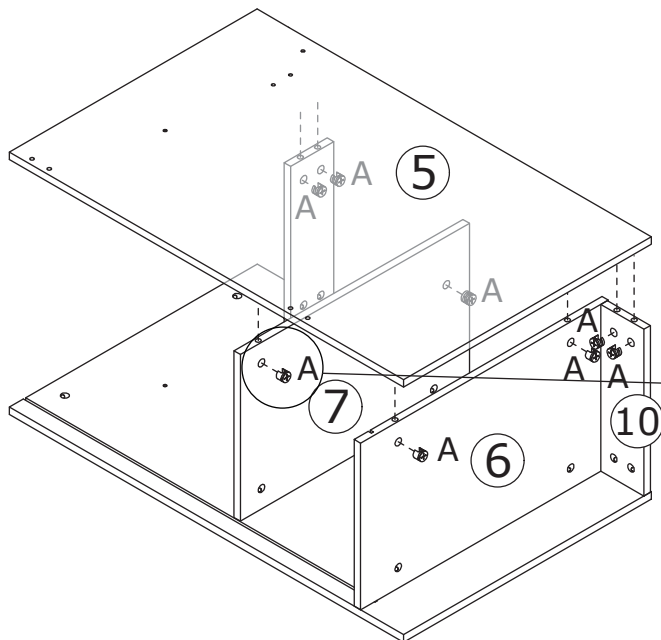
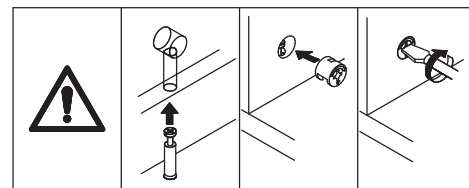


7

B x 2
CRA0640A




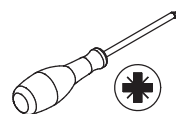


Screw eccentric rod(B)
into board 5 at first.

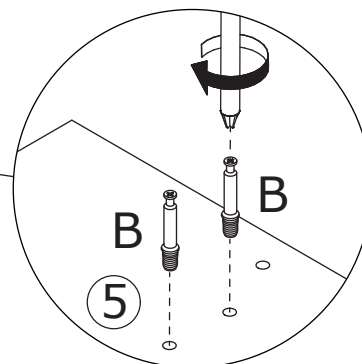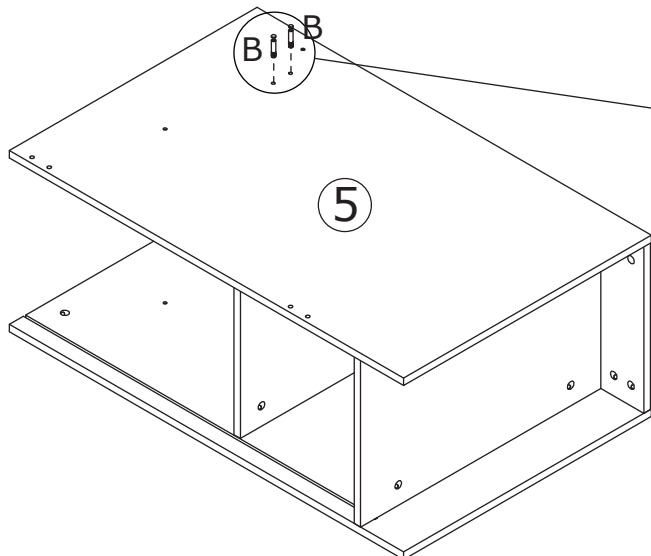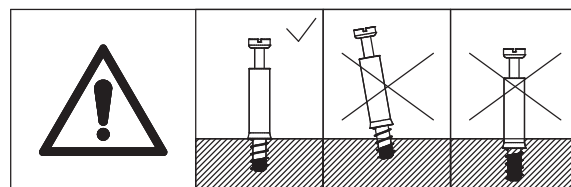

8




A x 4
CRB1295A

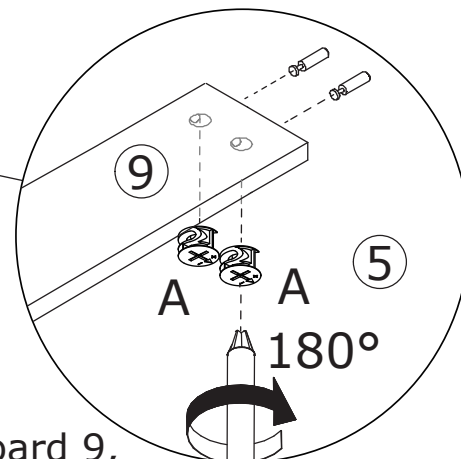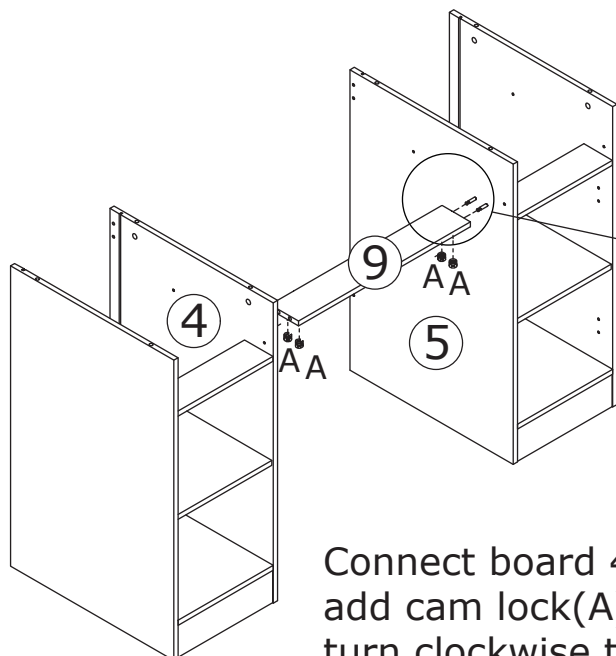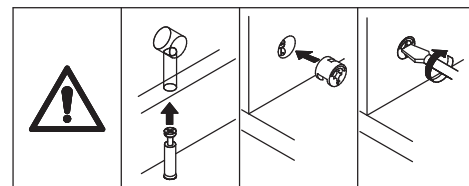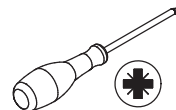

Connect board 4 and 5 to board 9,
add cam lock(A) into board 9 and
turn clockwise to tighten as shown.

9

C x 8
CRC0540A

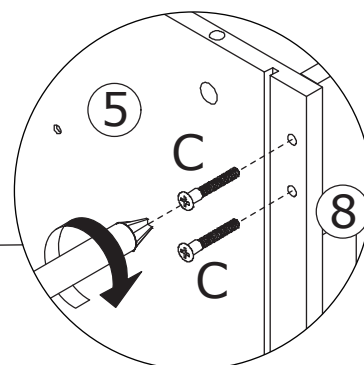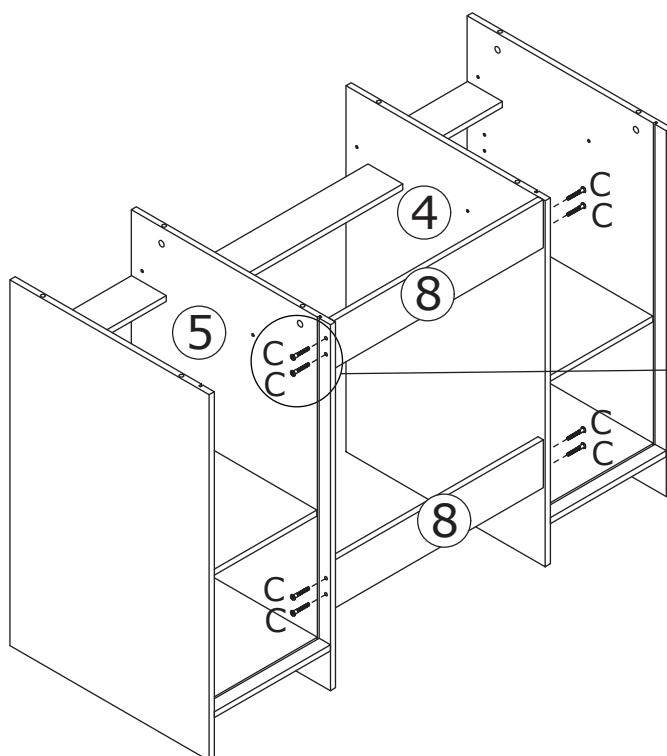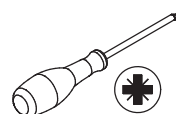

Fix board 8 to board 4 and
5 with screw(C) as shown.


10

G x 12





CRD0312A




L x 3

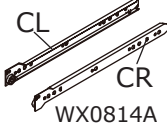

WX0814A

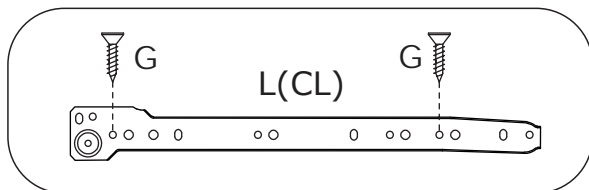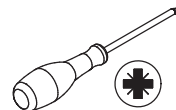


Fix rail(L) to board 2, 3, 4 and 5 with screw(G) as shown.

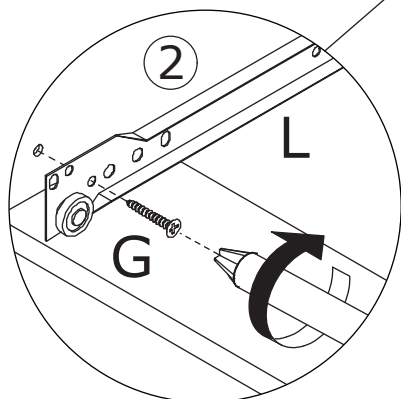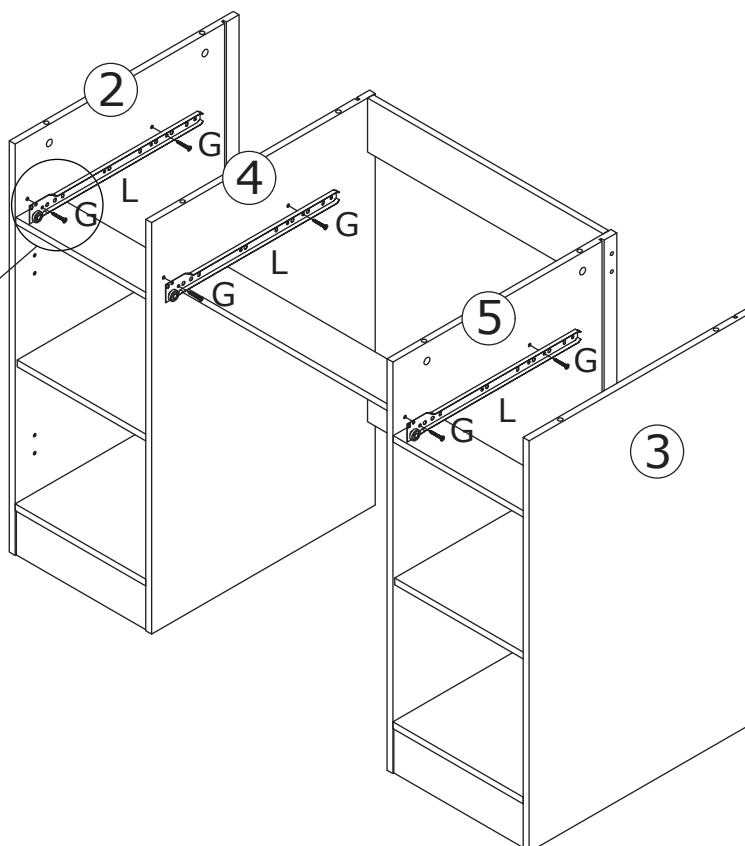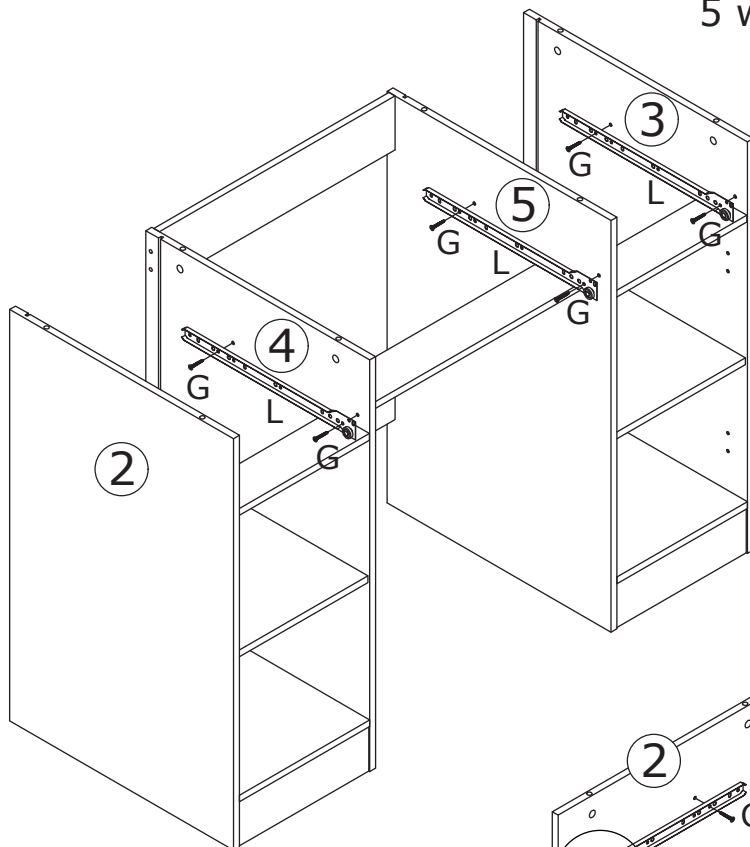


11

Insert back board 11 along
available grooves as shown.

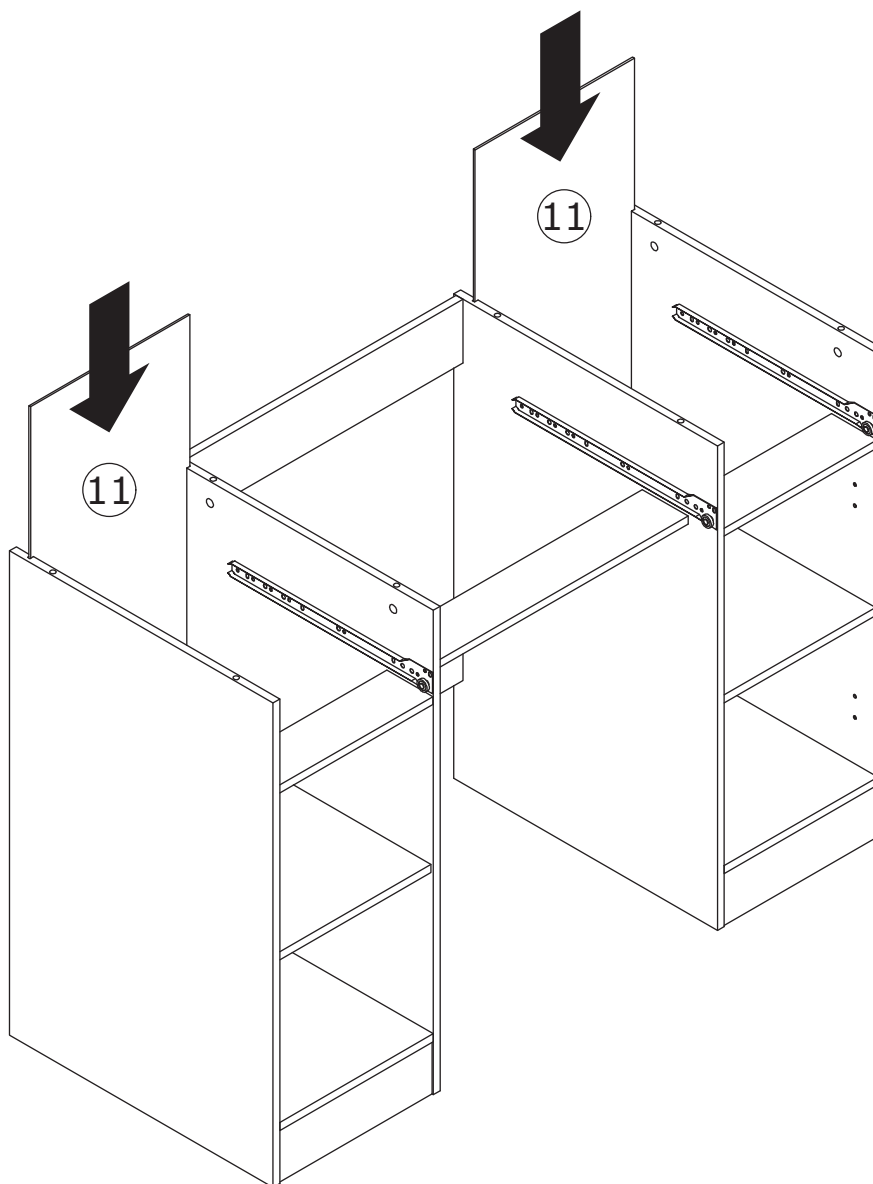

12




B x 8

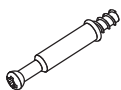

CRA0640A



Screw eccentric rod(B)
into board 1 at first.


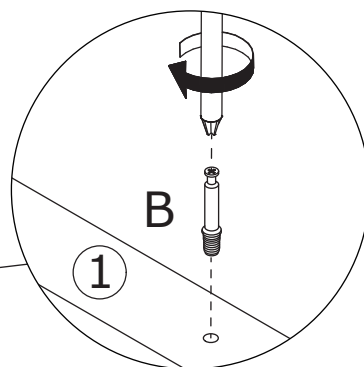
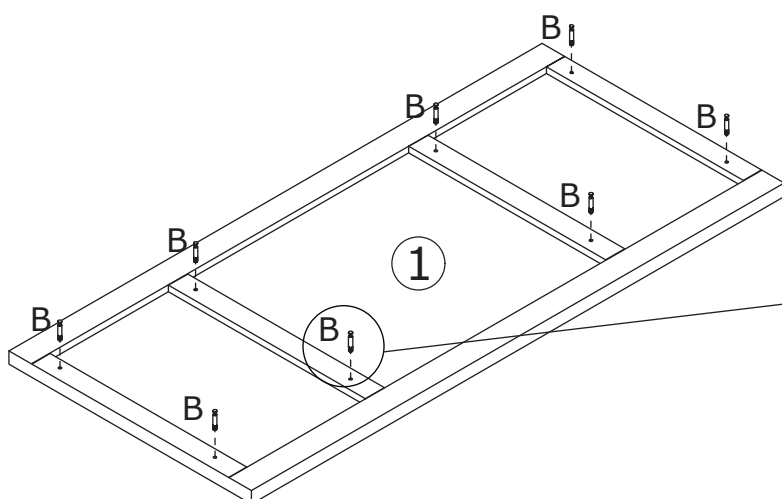
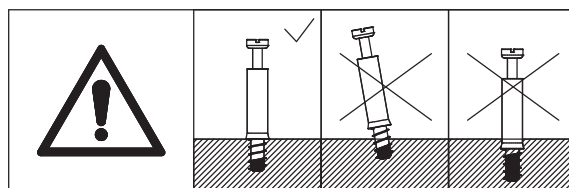


13

A x 8




CRB1295A

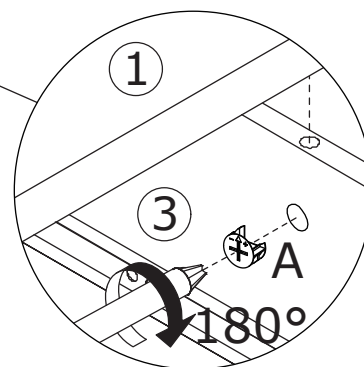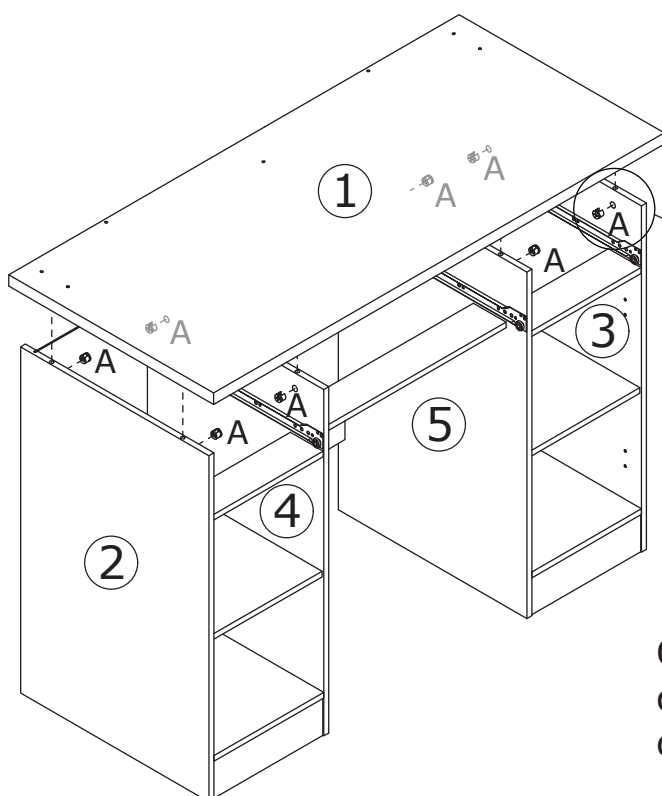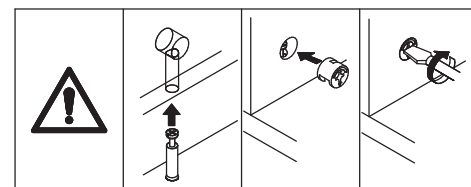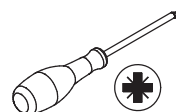





Cover board 1 to the top, add
cam lock(A) into and turn
clockwise to tighten as shown.

14

B x 7

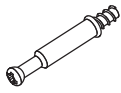


CRA0640A

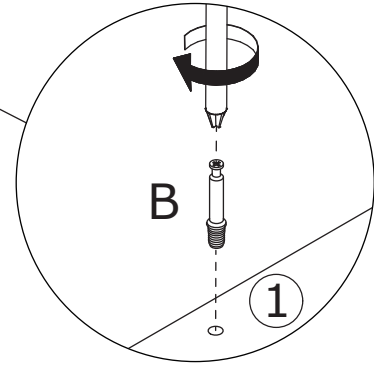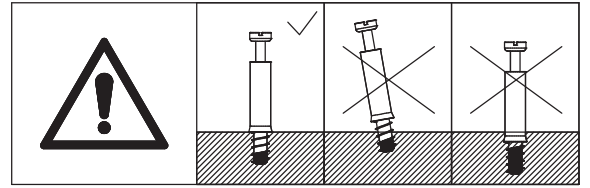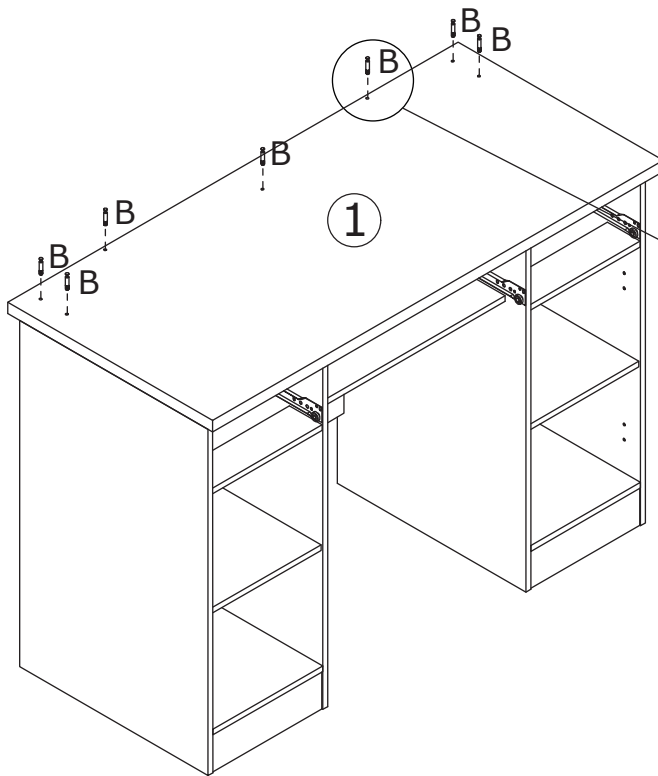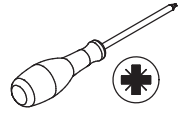



Screw eccentric rod(B)
into board 1 at first.

15



B x 6

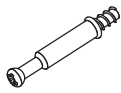

CRA0640A

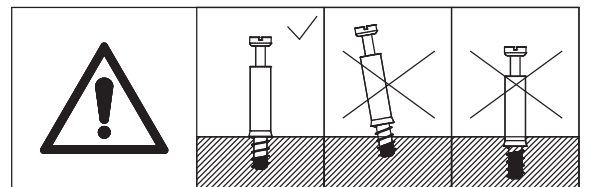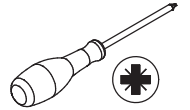

Screw eccentric rod(B)
into board 27 and 28 at first.

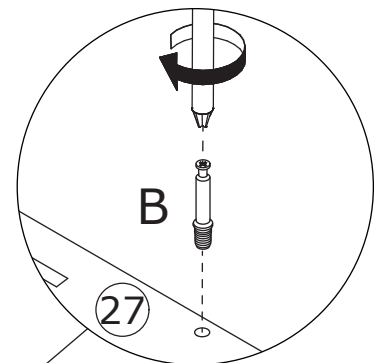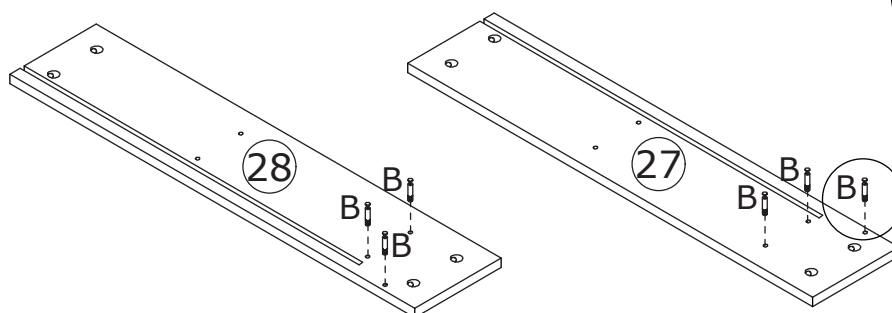


16



A x 6



CRB1295A

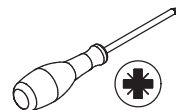


Connect board 28 and 27 to board 31 and 32, add cam lock(A) into board 31, 32 and turn clockwise to tighten as shown.

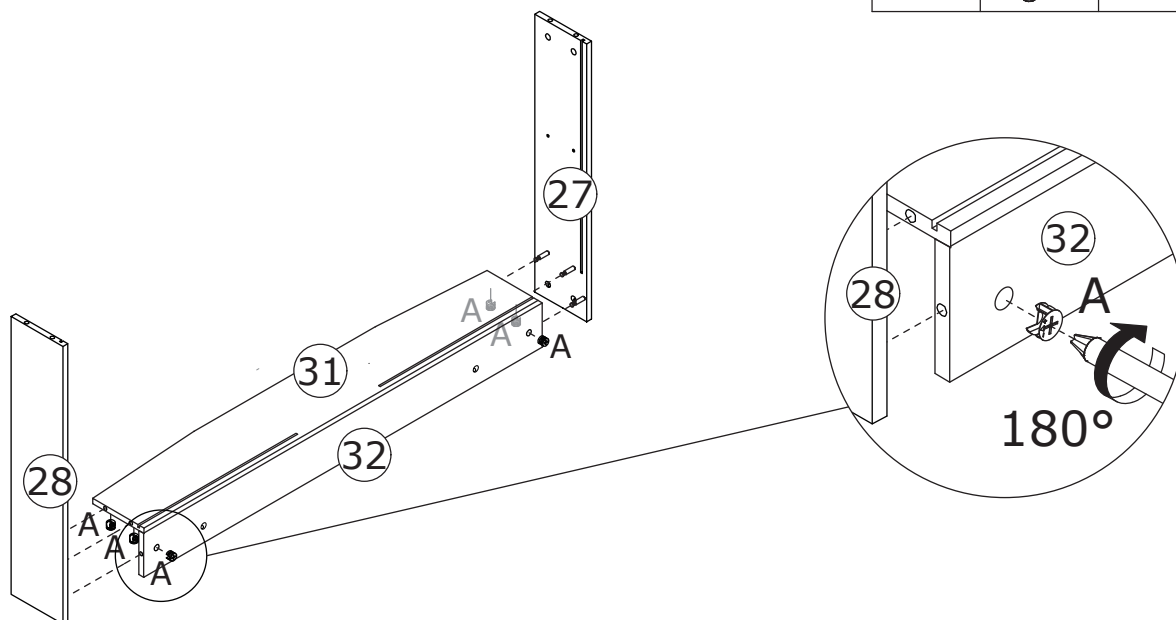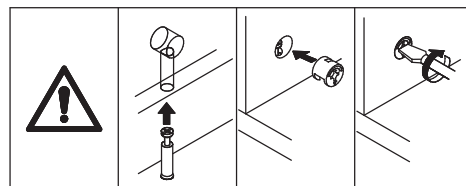


17



B x 4

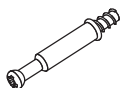

CRA0640A

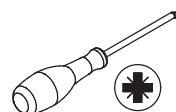

Screw eccentric rod(B) into board 31 at first.



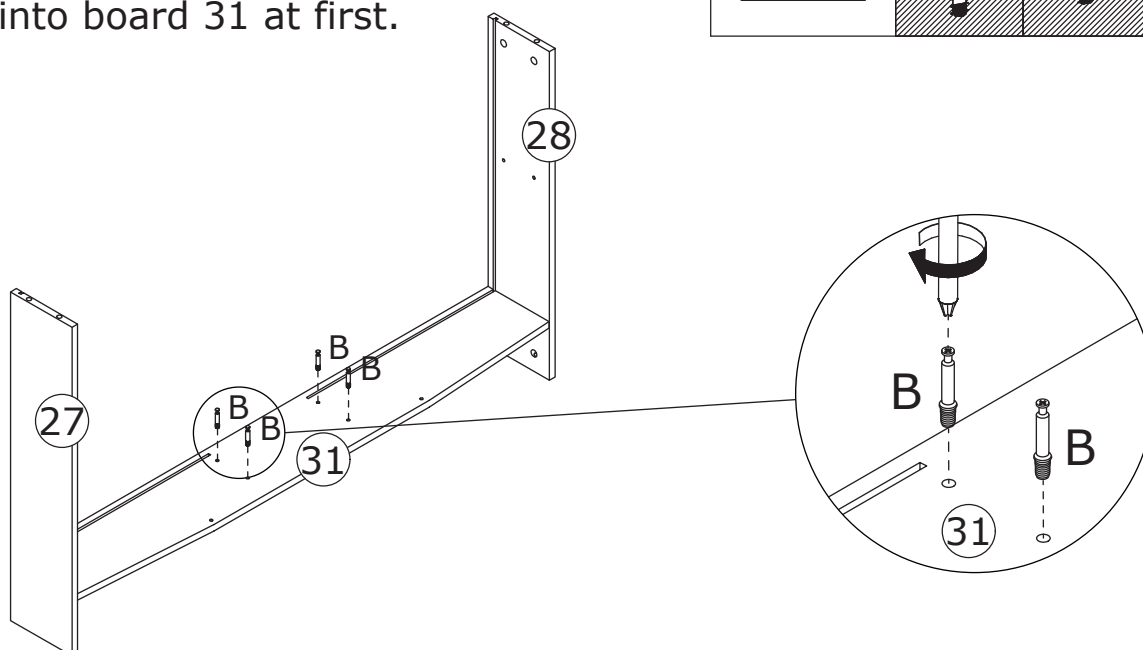
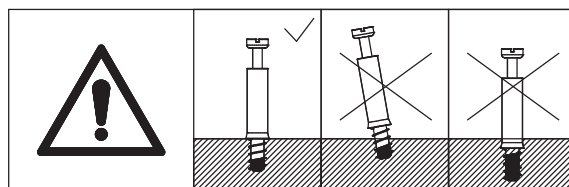


18

A x 4




CRB1295A

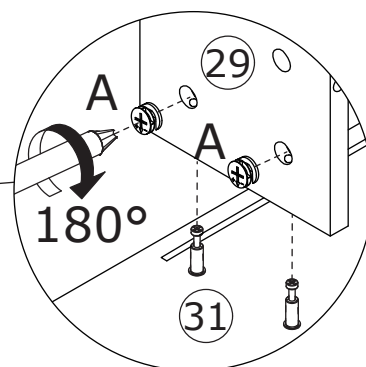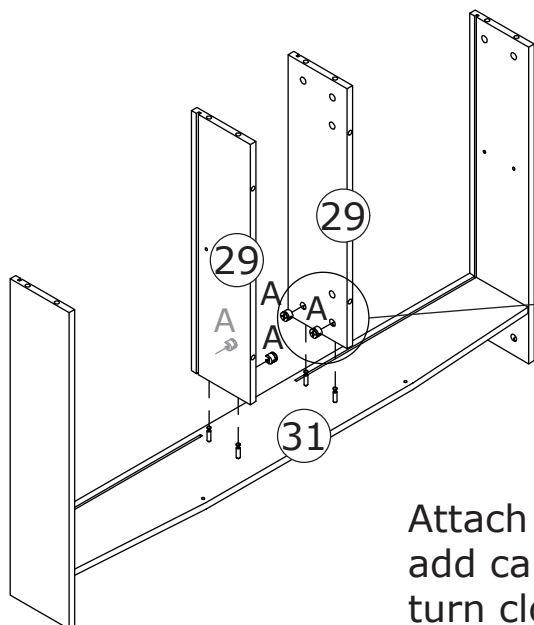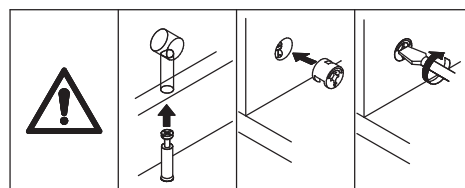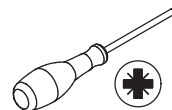



Attach board 29 to board 31,
add cam lock(A) into board 29 and
turn clockwise to tighten as shown.

19



B x 1

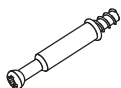

CRA0640A

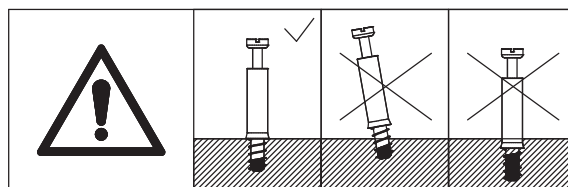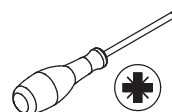

Screw eccentric rod(B)
into board 31 at first.

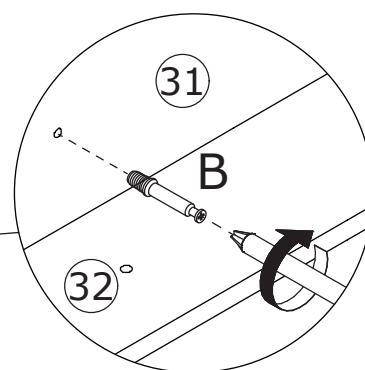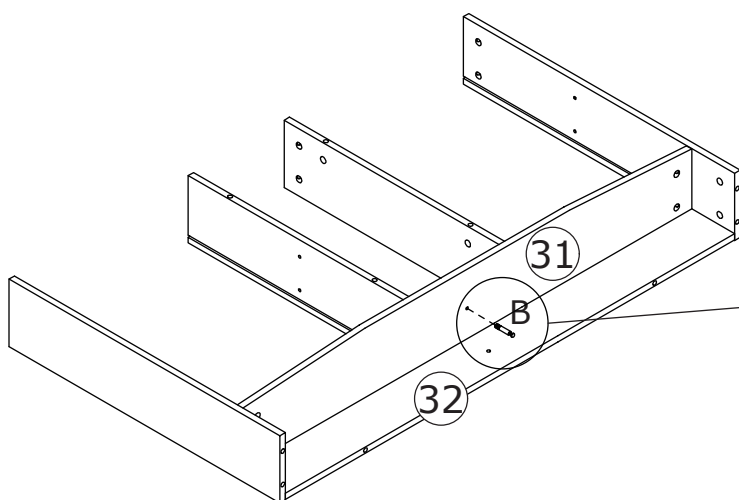


20




A x 1



CRB1295A

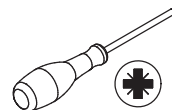

Attach board 33 to board 31,
add cam lock(A) into board 33 and
turn clockwise to tighten as shown.

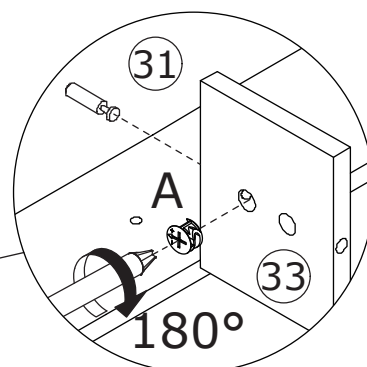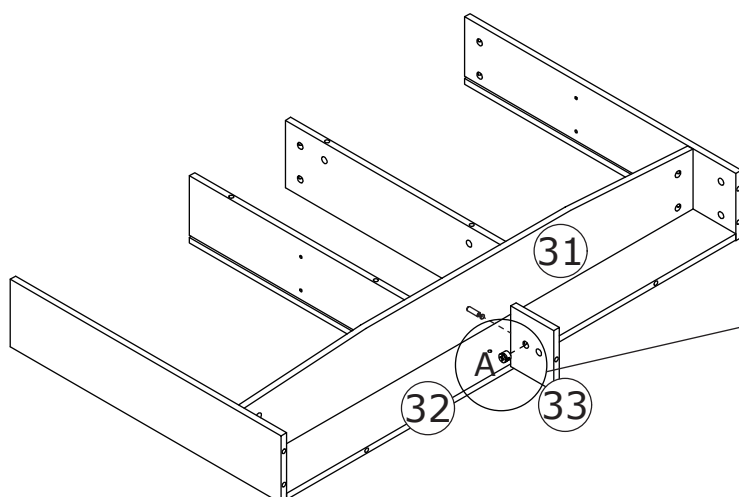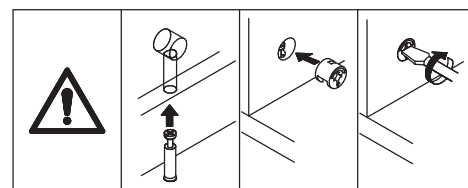

21



C x 1





CRC0540A






Fix board 32 to board 33
with screw(C) as shown.

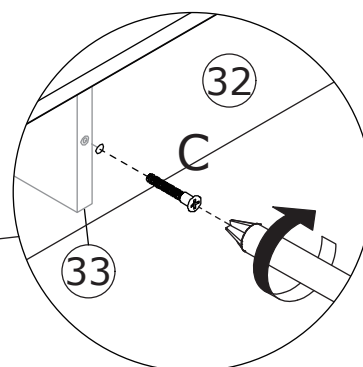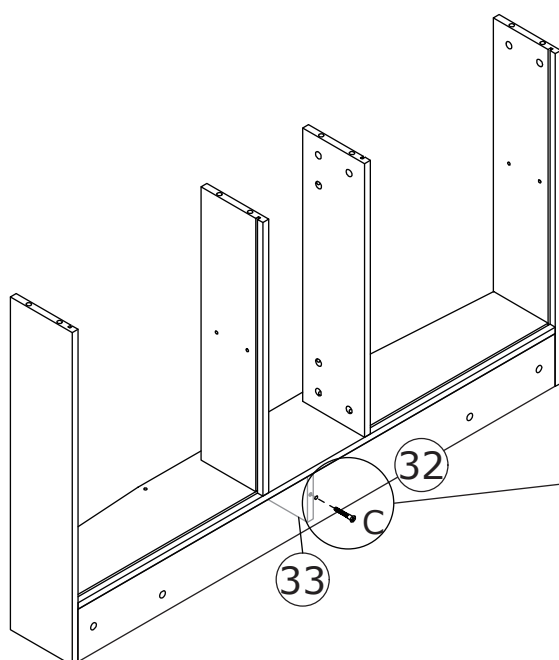






22

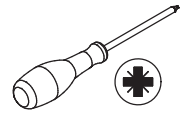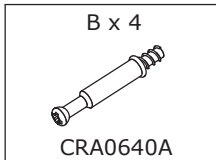

Screw eccentric rod(B)
into board 34 at first.

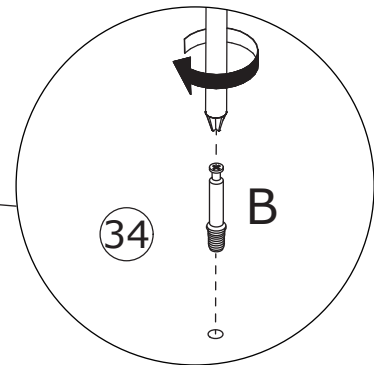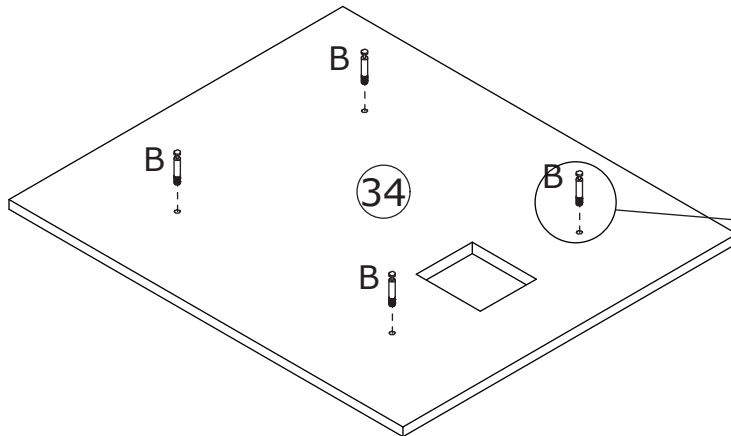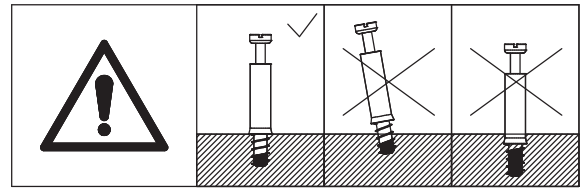

23

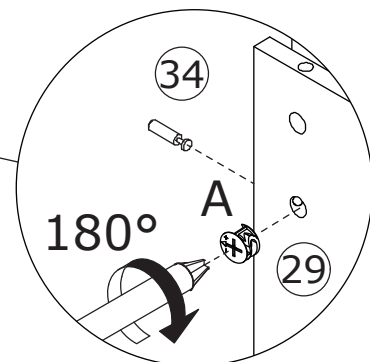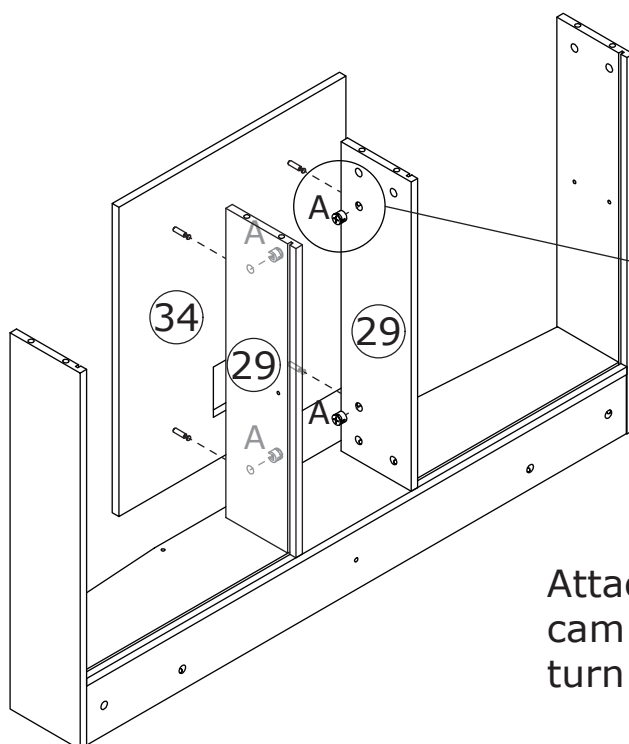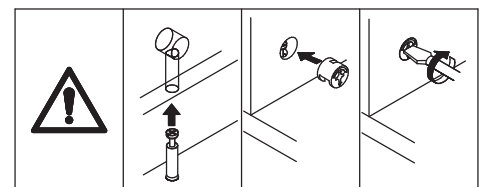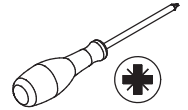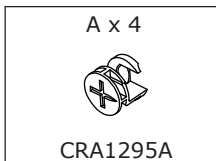


Attach board 34 to board 29, add
cam lock(A) into board 29 and
turn clockwise to tighten as shown.

24

M x 8



Insert layer pin(M) into board 27, 29 and 28 as shown.


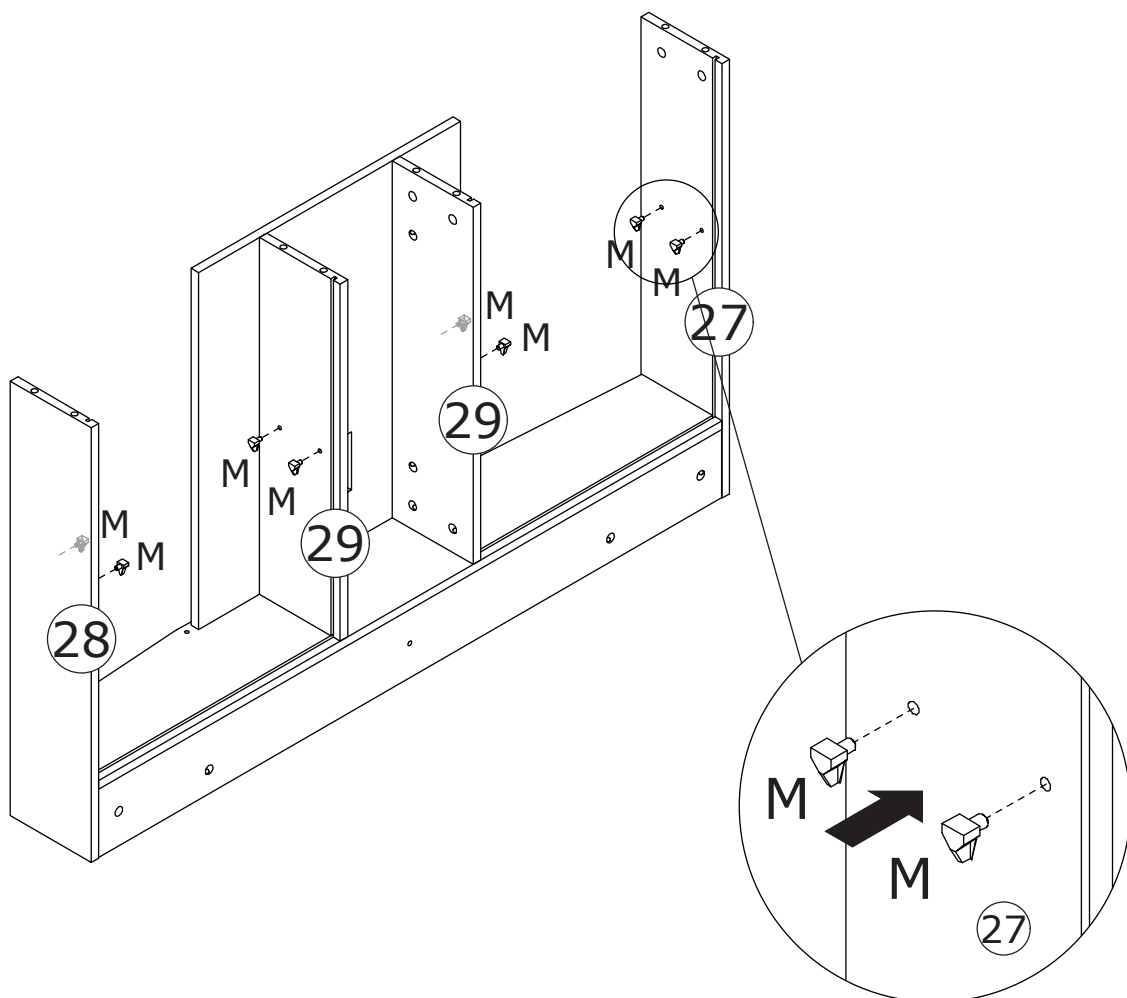


25



A x 7




CRB1295A

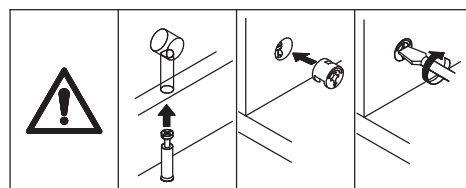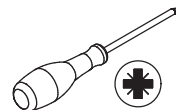

Attach the component to board 1,
add cam lock(A) into and turn
clockwise to tighten as shown.

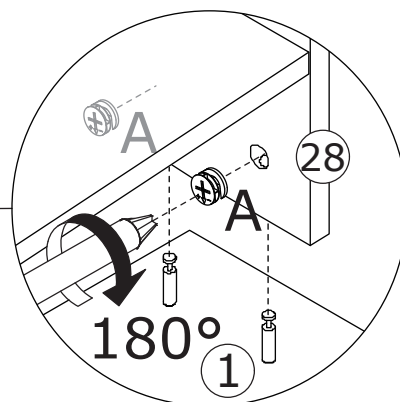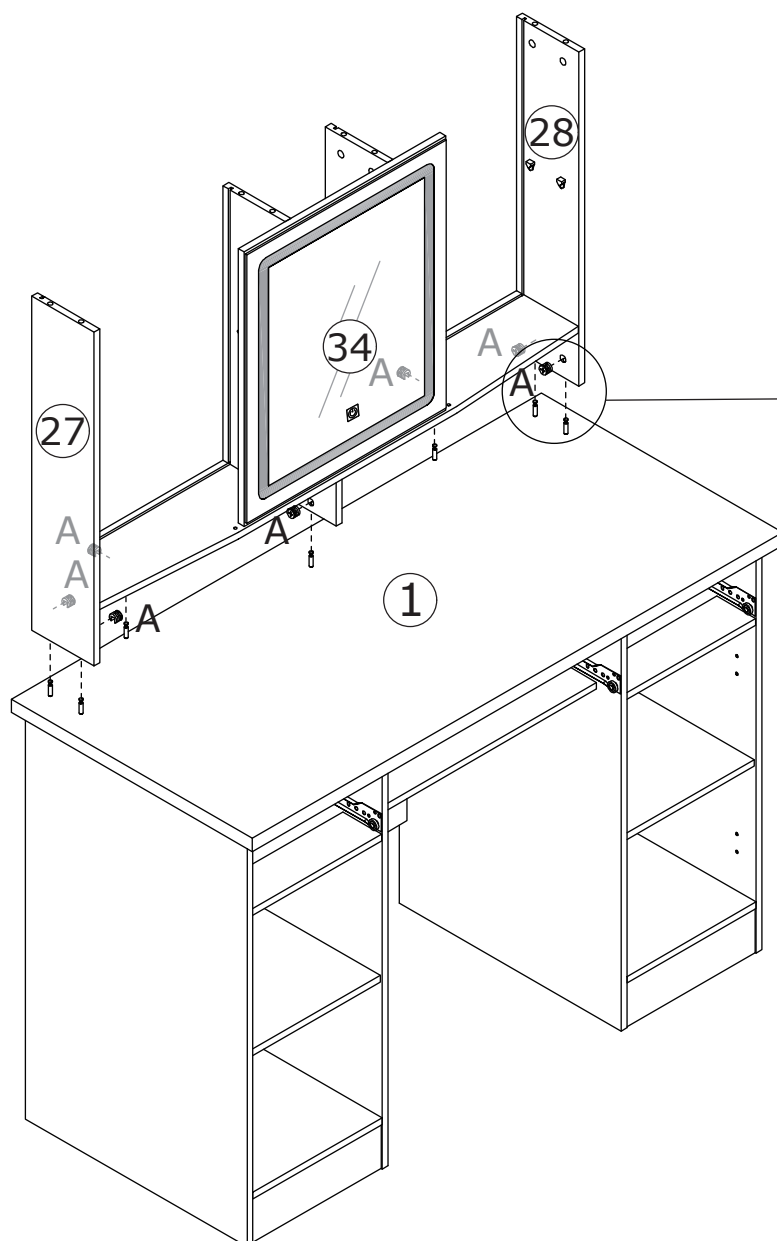


Insert back board 36 along available grooves as shown.

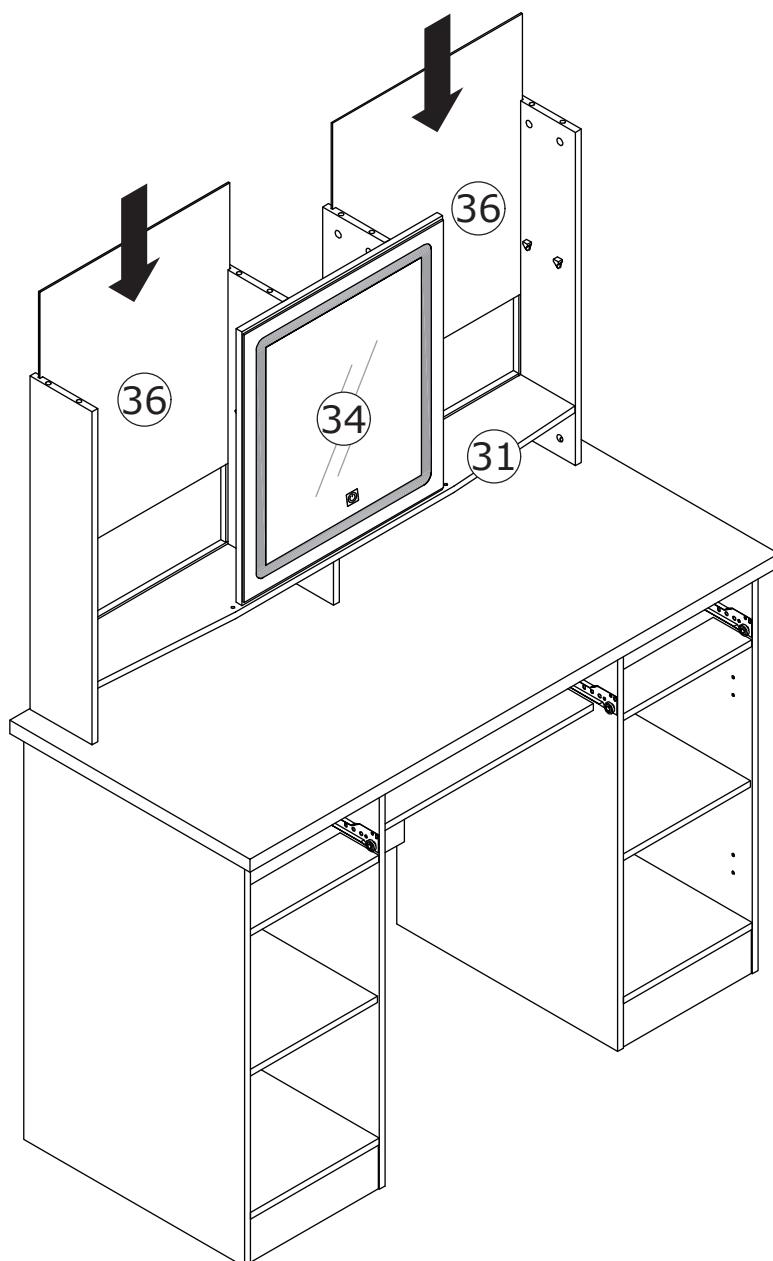

27

Place shelf board 30 as shown.

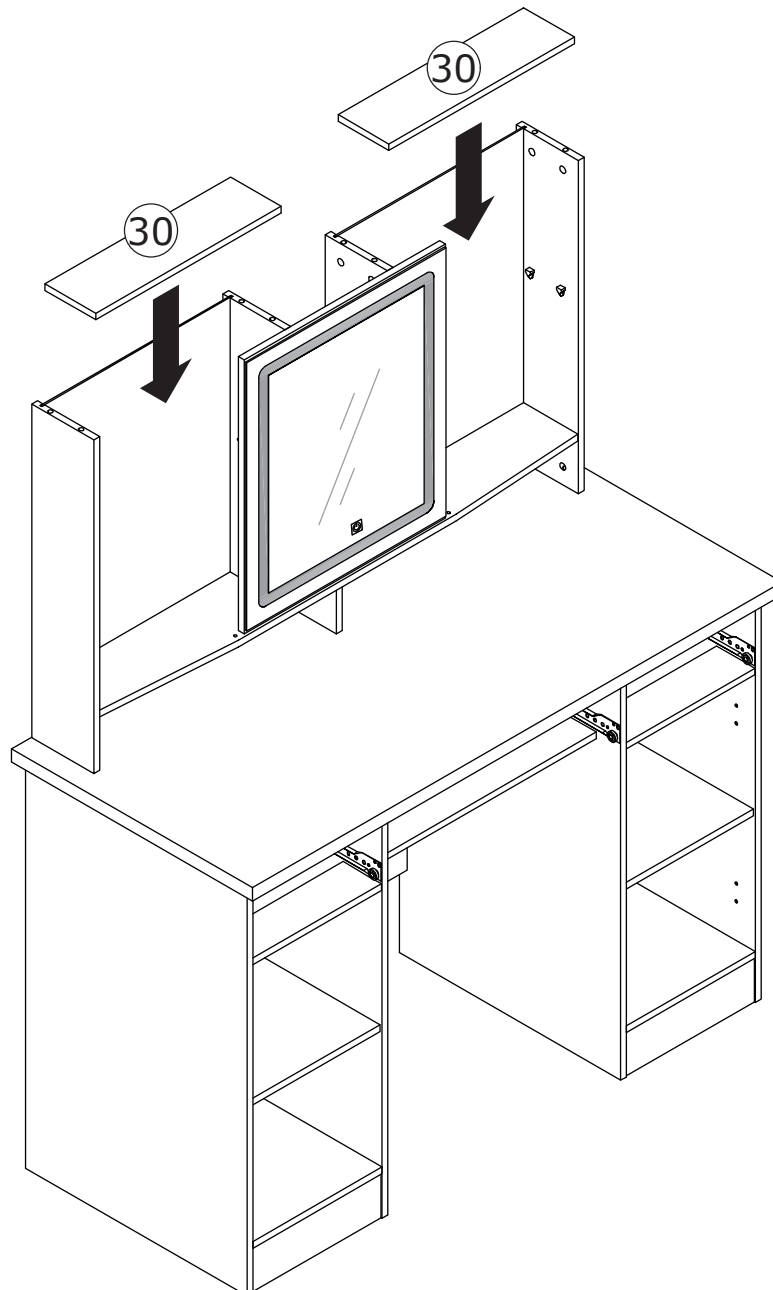

28


D x 2




G x 4



J x 4

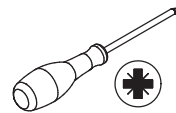

Insert part(J) into door plate 35 and 39.
Fix part(D) to door plate 35 and 39 with screw(G) as shown.


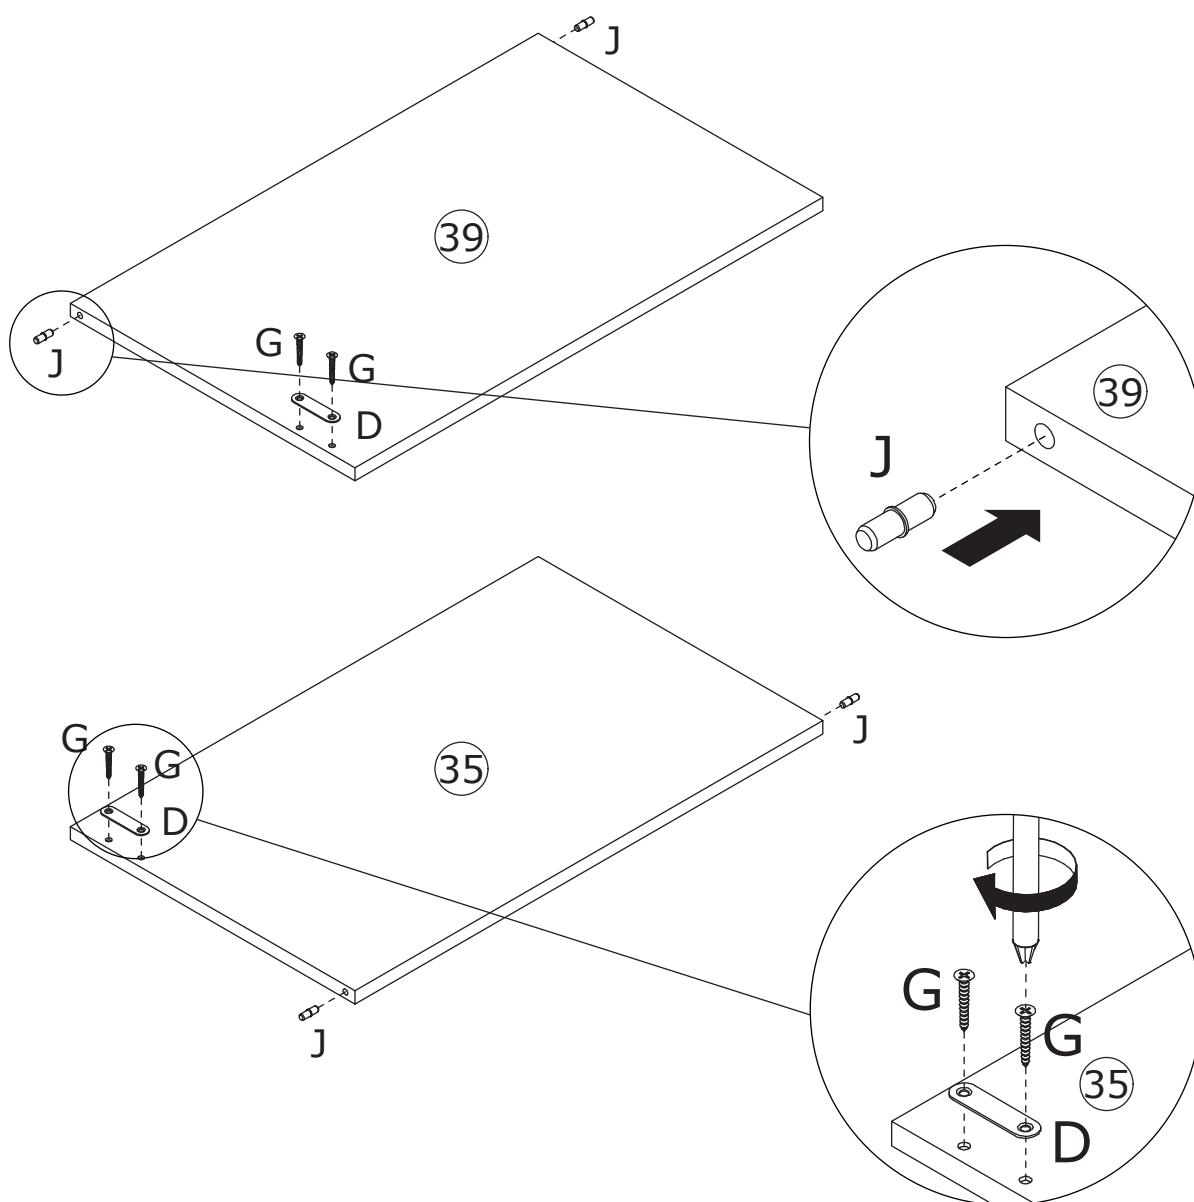


29


B x 8
CRA0640A

D x 2

I x 4
CRD0314A

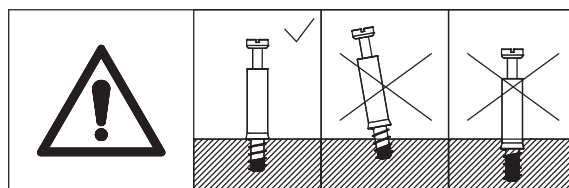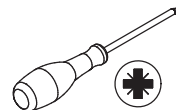


Screw eccentric rod(B) into board 26 at first.
Fix part(D) to board 26 with screw(I) as shown.

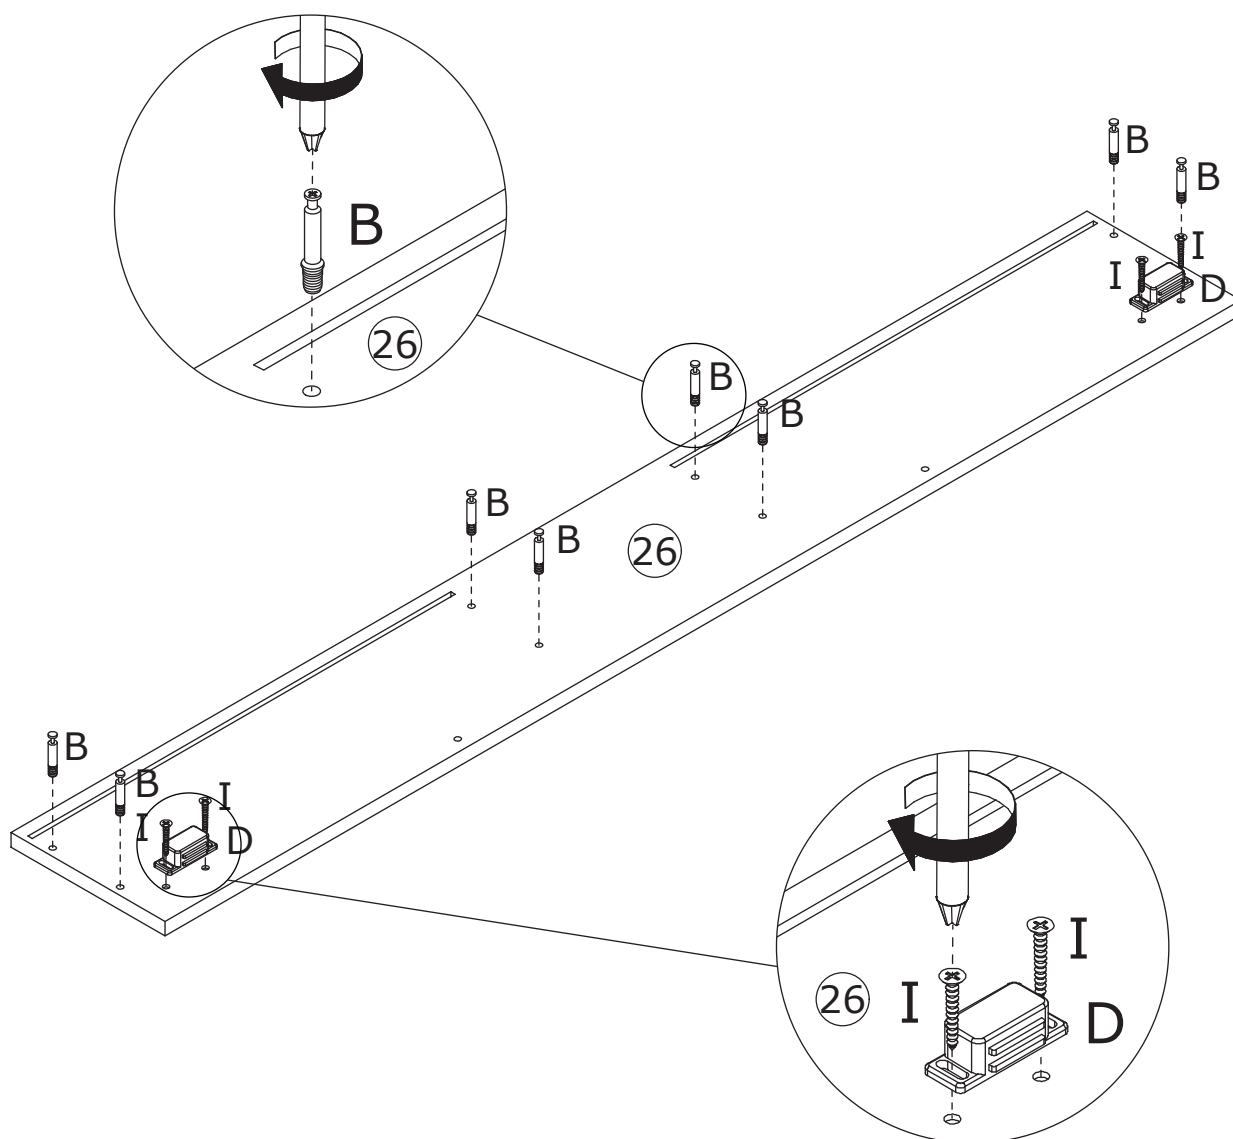

30

Assemble door plate 35 and 39 as shown.


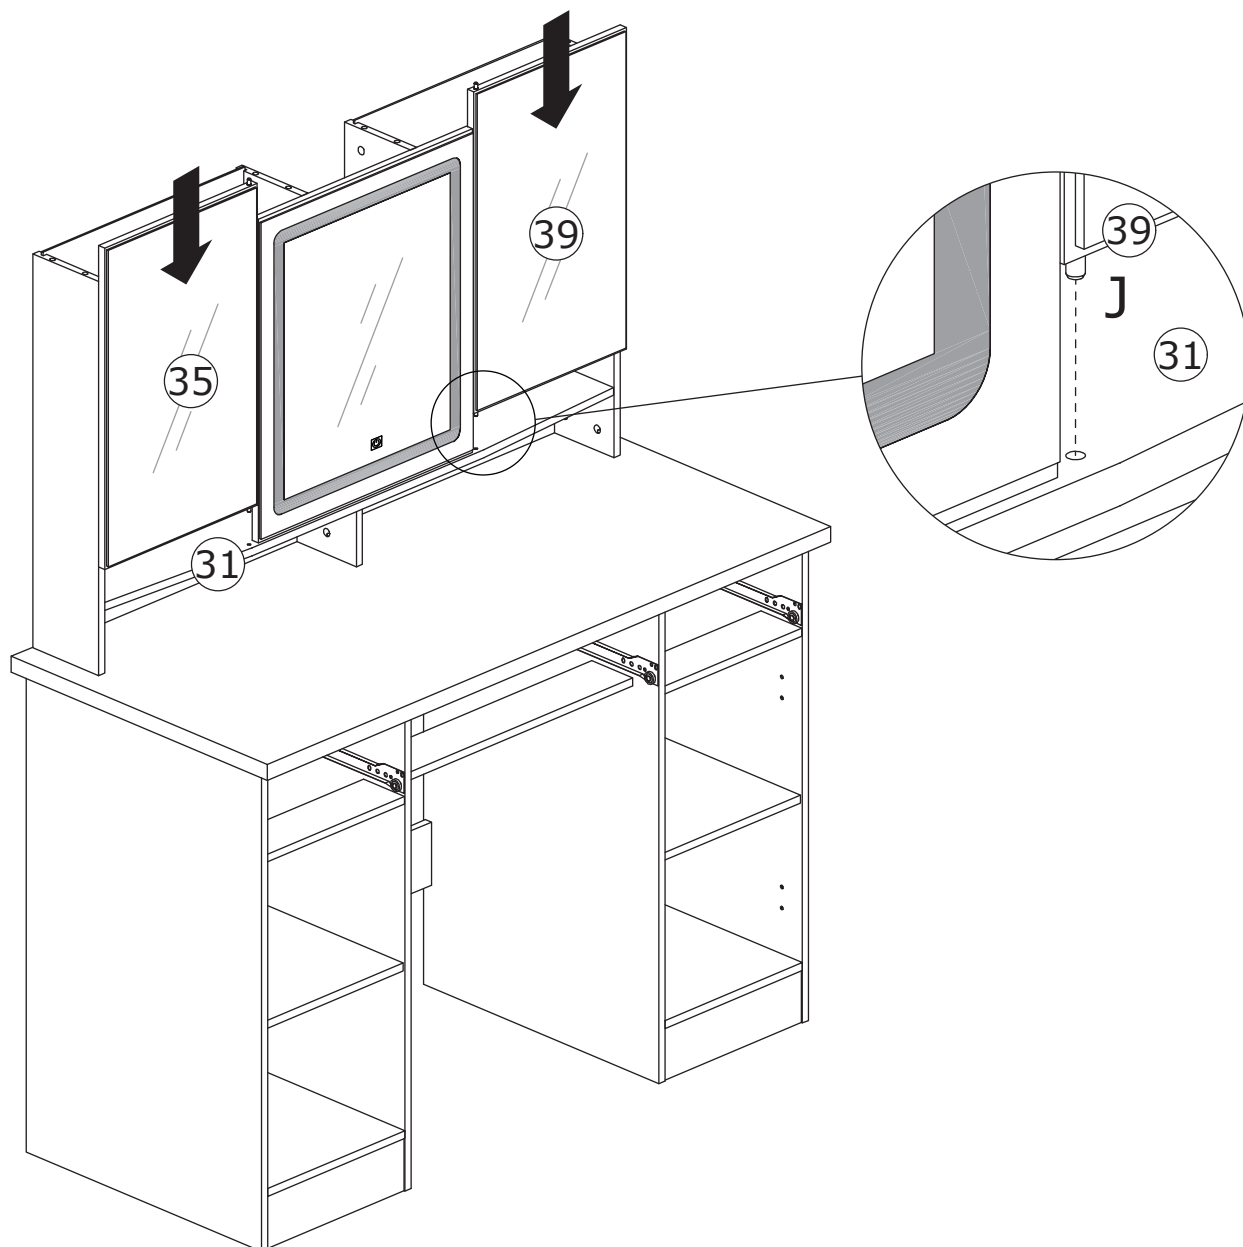


31




A x 8






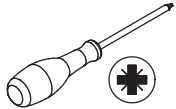
CRB1295A

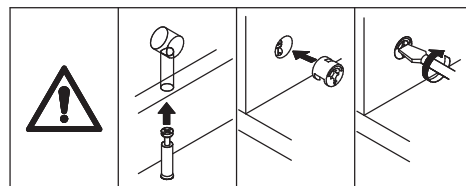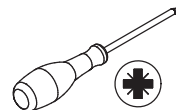



Attach board 26 to board 27, 29 and 28, add cam lock(A) into and turn clockwise to tighten as shown.

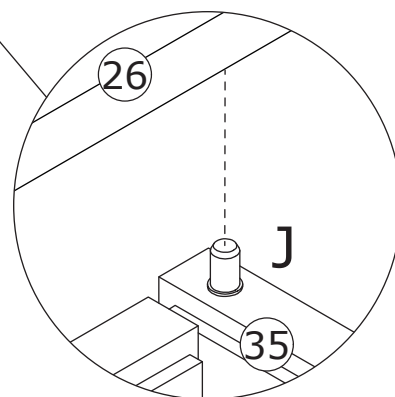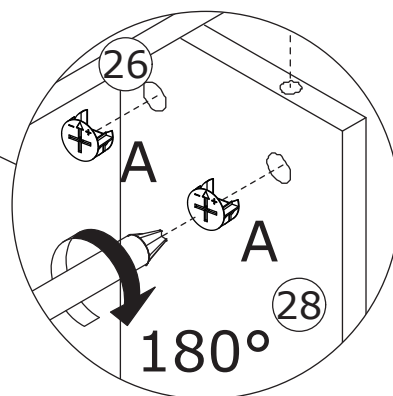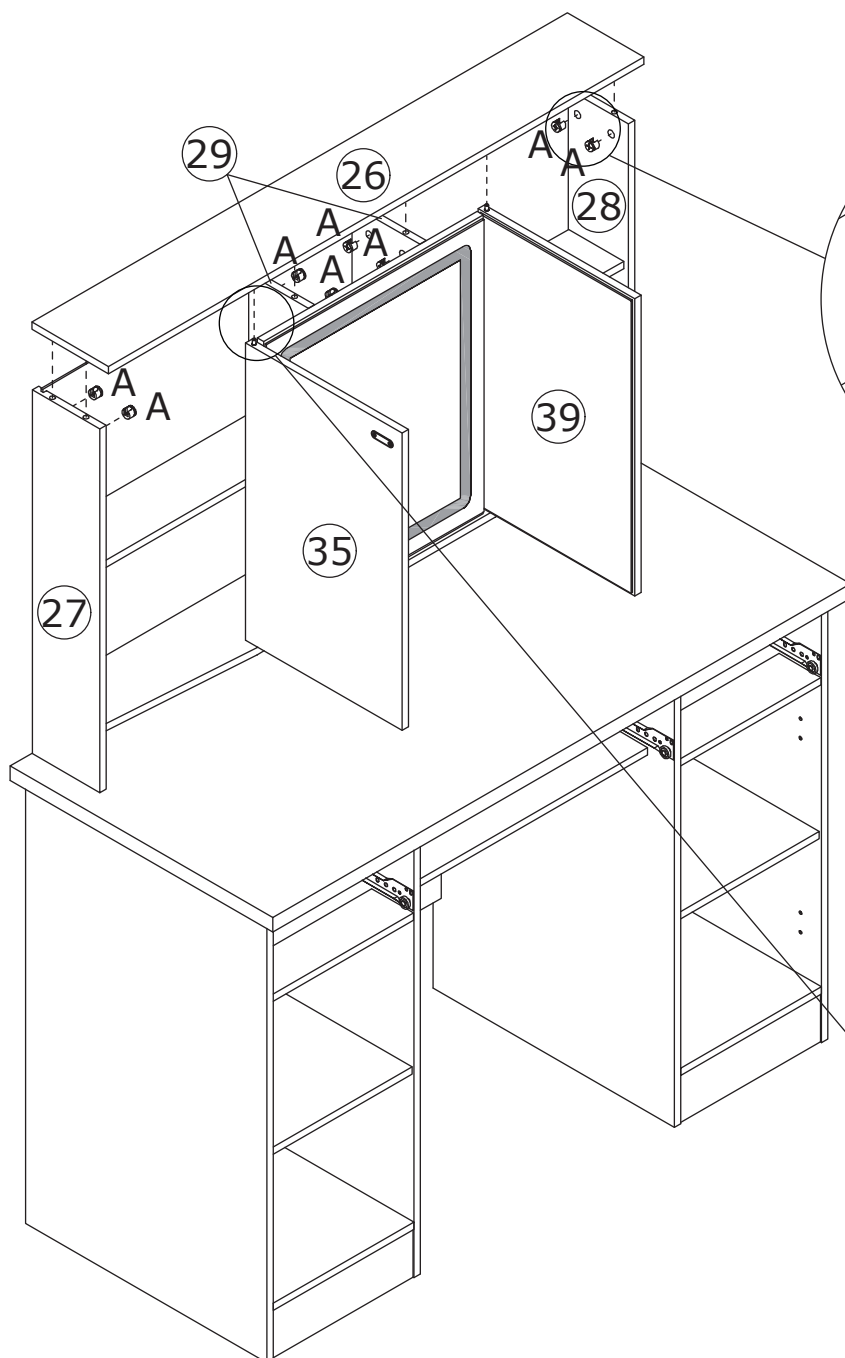

32
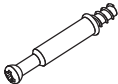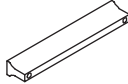
<p>B x 8</p>  <p>CRA0640A</p>	<p>E x 2</p>  <p>96 mm</p>	<p>F x 4</p>  <p>CRE0418A</p>	
--	---	--	---



Screw eccentric rod(B)
into board 12 at first.
Fix handle(E) to board 12
with screw(F) as shown.

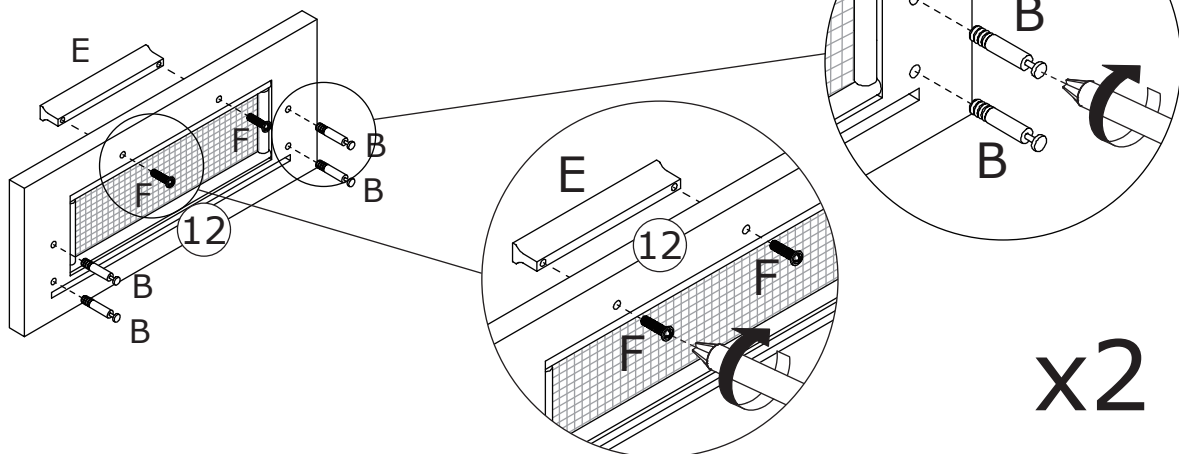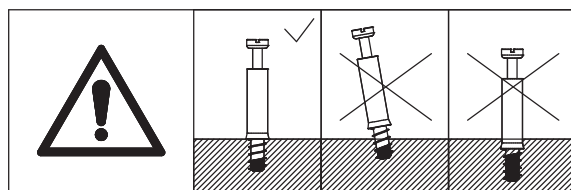


33

<p>A x 8</p>  <p>CRB1295A</p>	
--	---

Attach board 12 to board 15 and
16, add cam lock(A) into and turn
clockwise to tighten as shown.

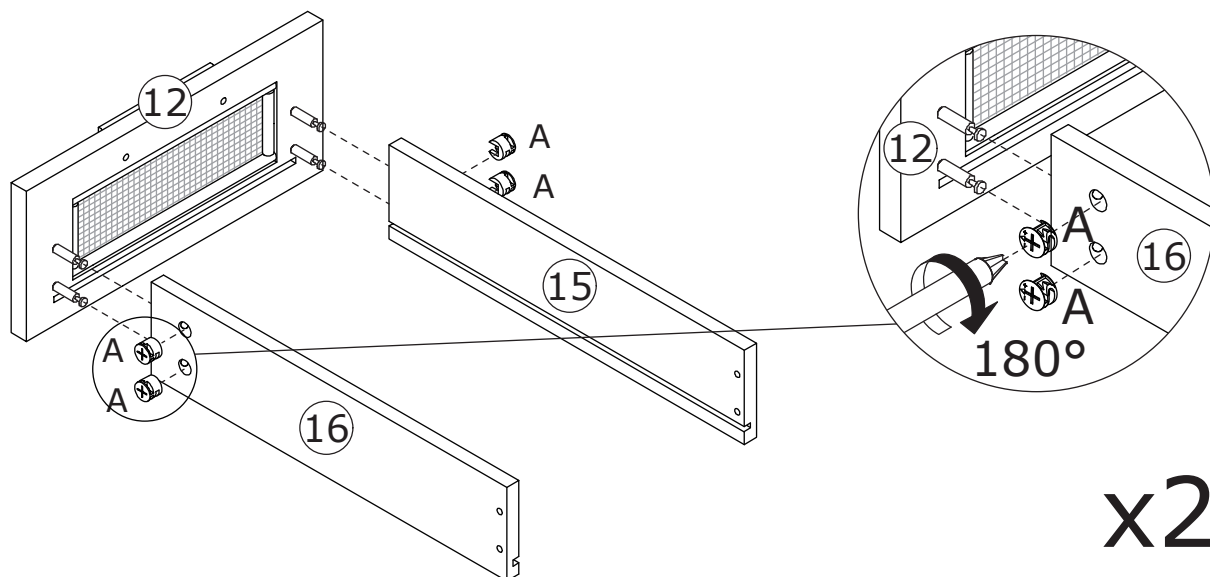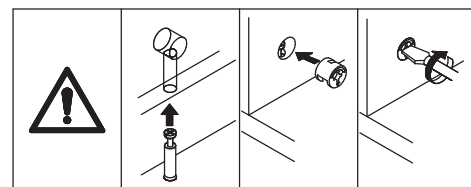

34

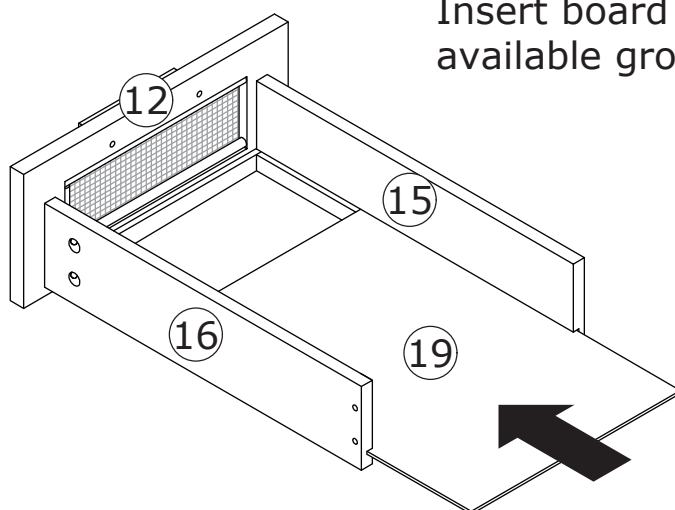


Insert board 19 along available grooves as shown.


x2

35

C x 8
CRC0540A

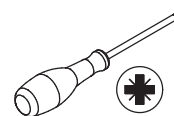


Fix board 17 to board 15 and 16 with screw(C) as shown.


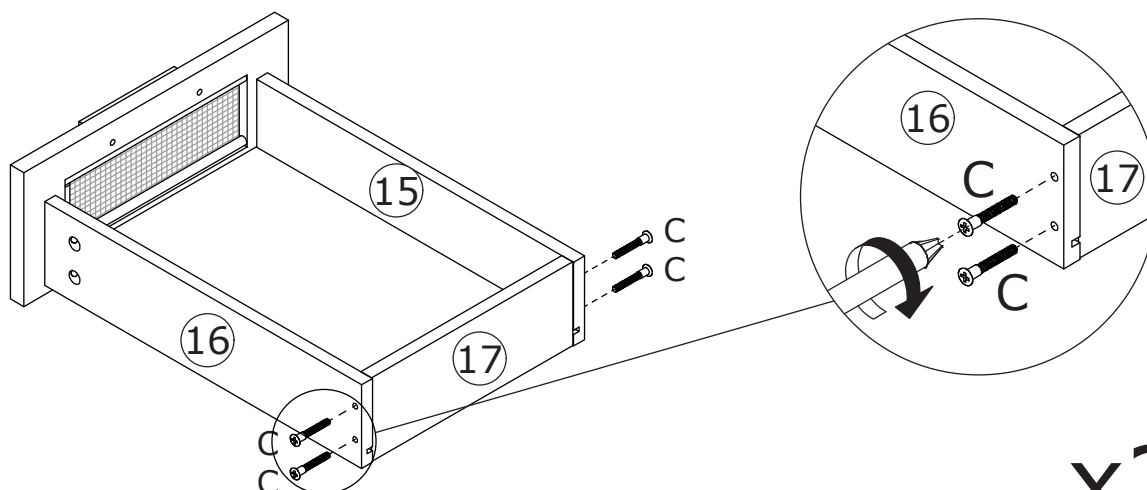


x2

36

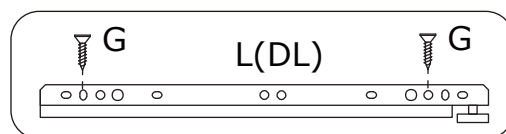


Fix runner(L) to board 15 and 16 with screw(G) as shown.


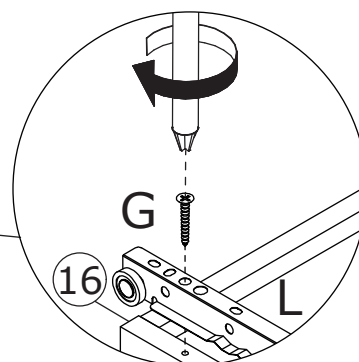
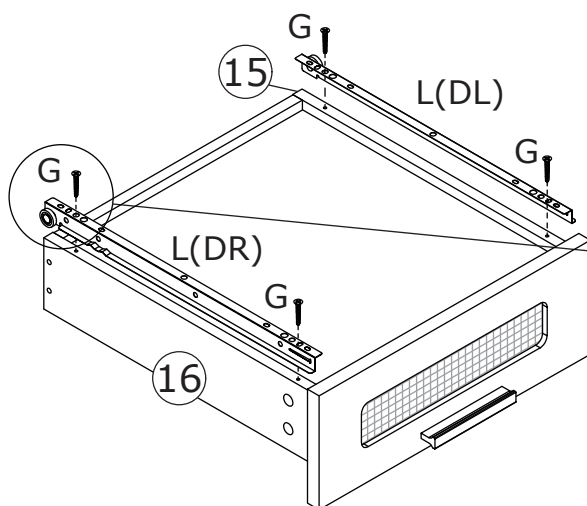


x2

37

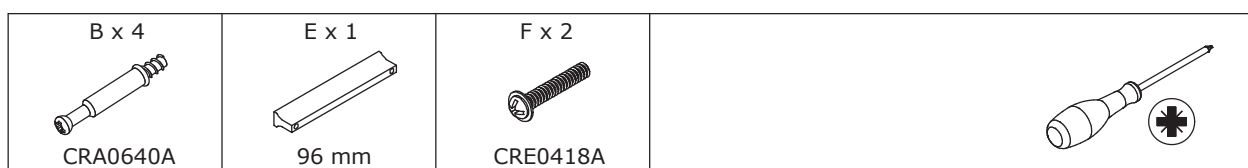


Screw eccentric rod(B) into board 13 at first.
Fix handle(E) to board 13 with screw(F) as shown.

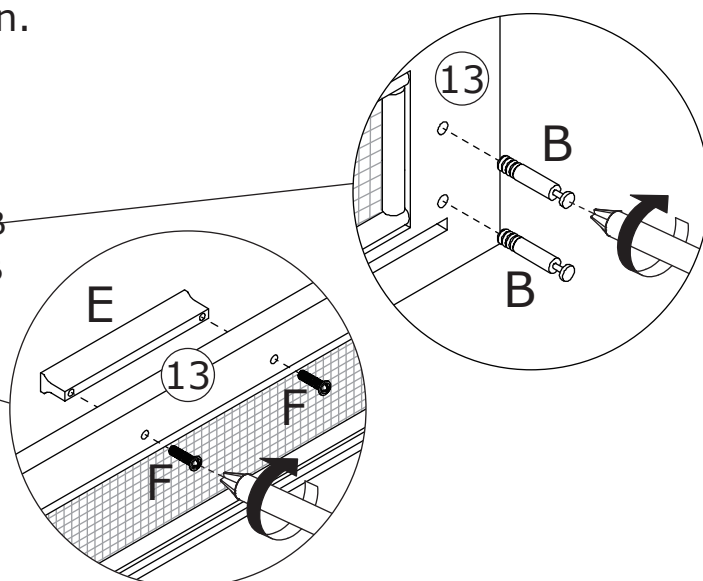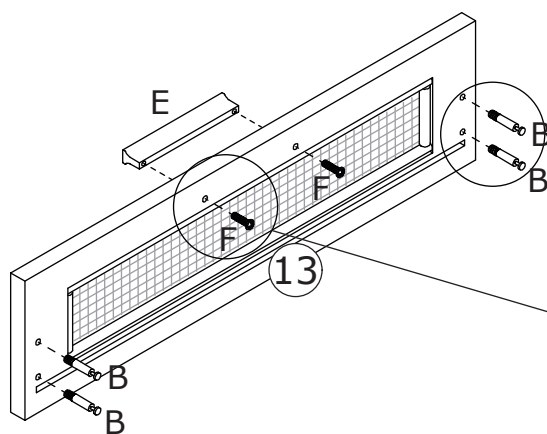
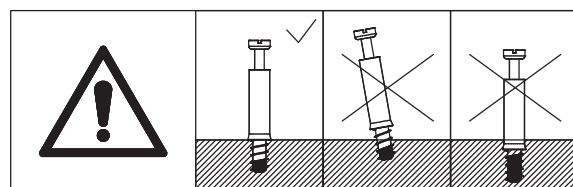


38

A x 4
CRB1295A

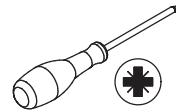


Attach board 13 to board 15 and 16, add cam lock(A) into and turn clockwise to tighten as shown.

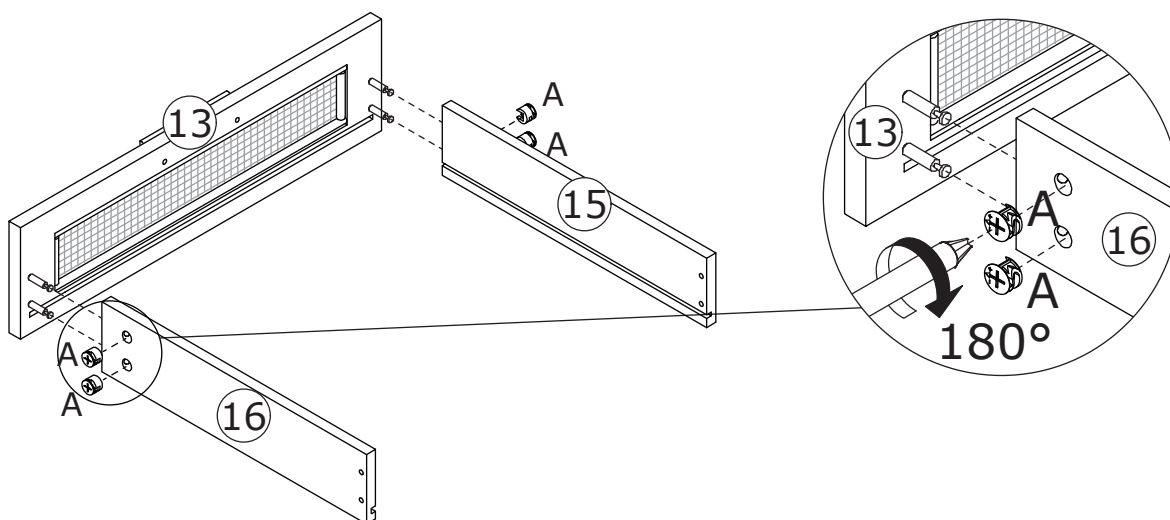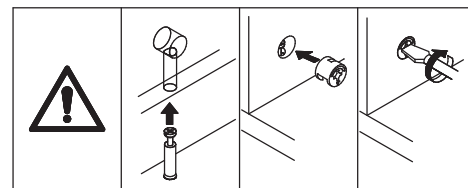

39




Insert board 20 along available grooves as shown.

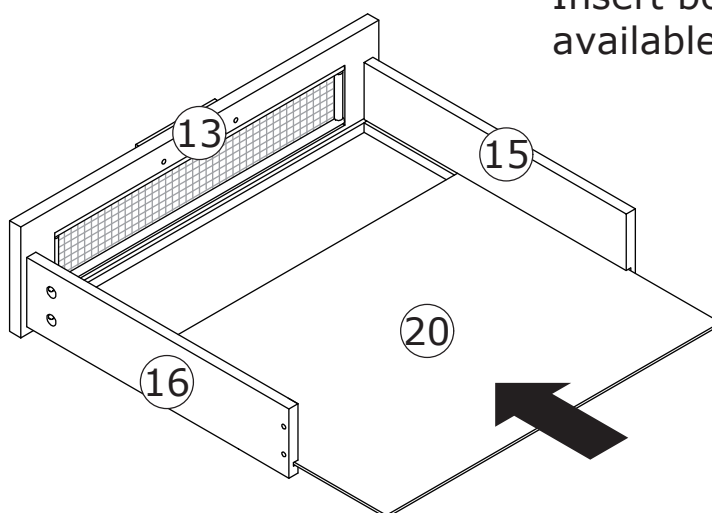


40


C x 4

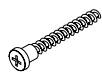

CRC0540A

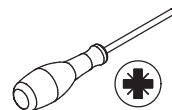

Fix board 18 to board 15 and 16 with screw(C) as shown.

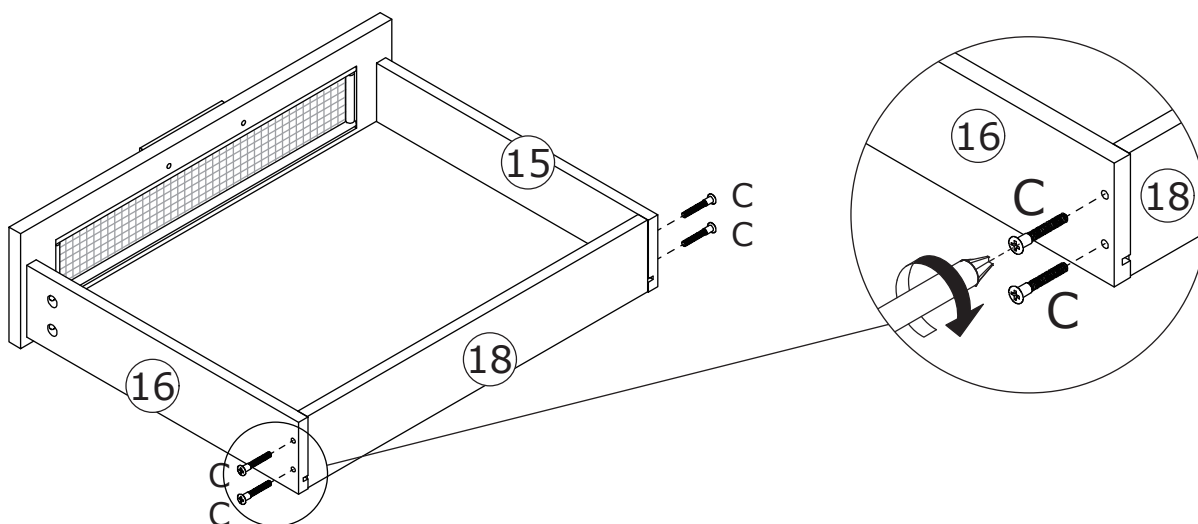


41

G x 4




CRD0312A


L x 1

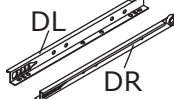


WX0814A

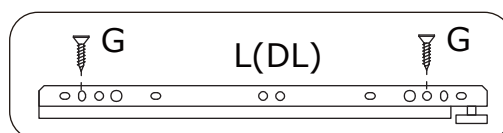

Fix runner(L) to board 15 and 16 with screw(G) as shown.

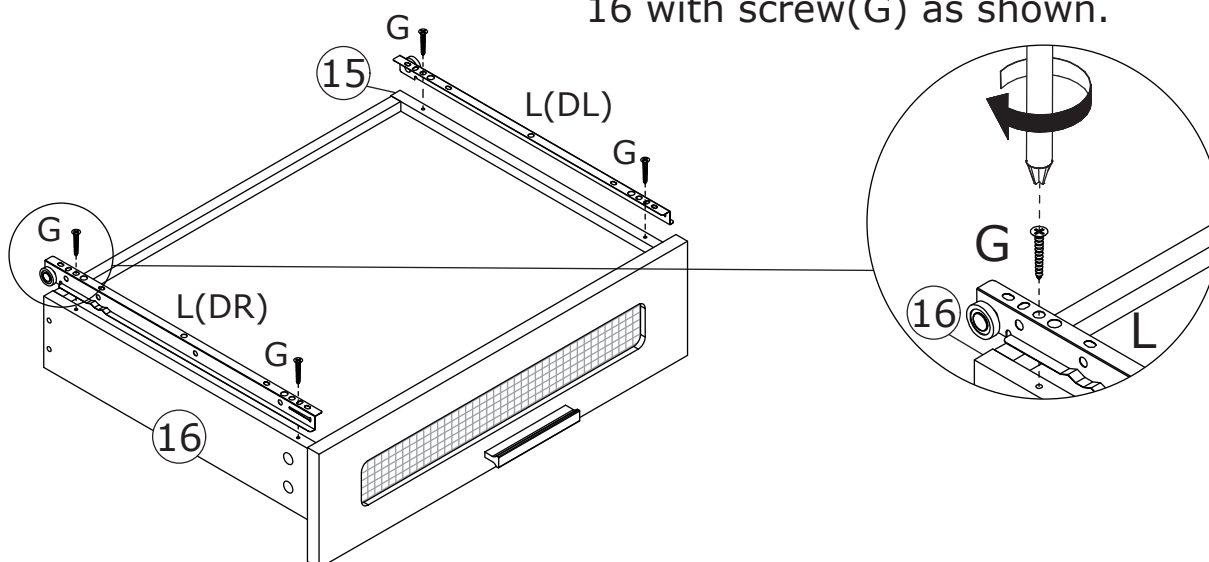


Align rails, insert drawers into.

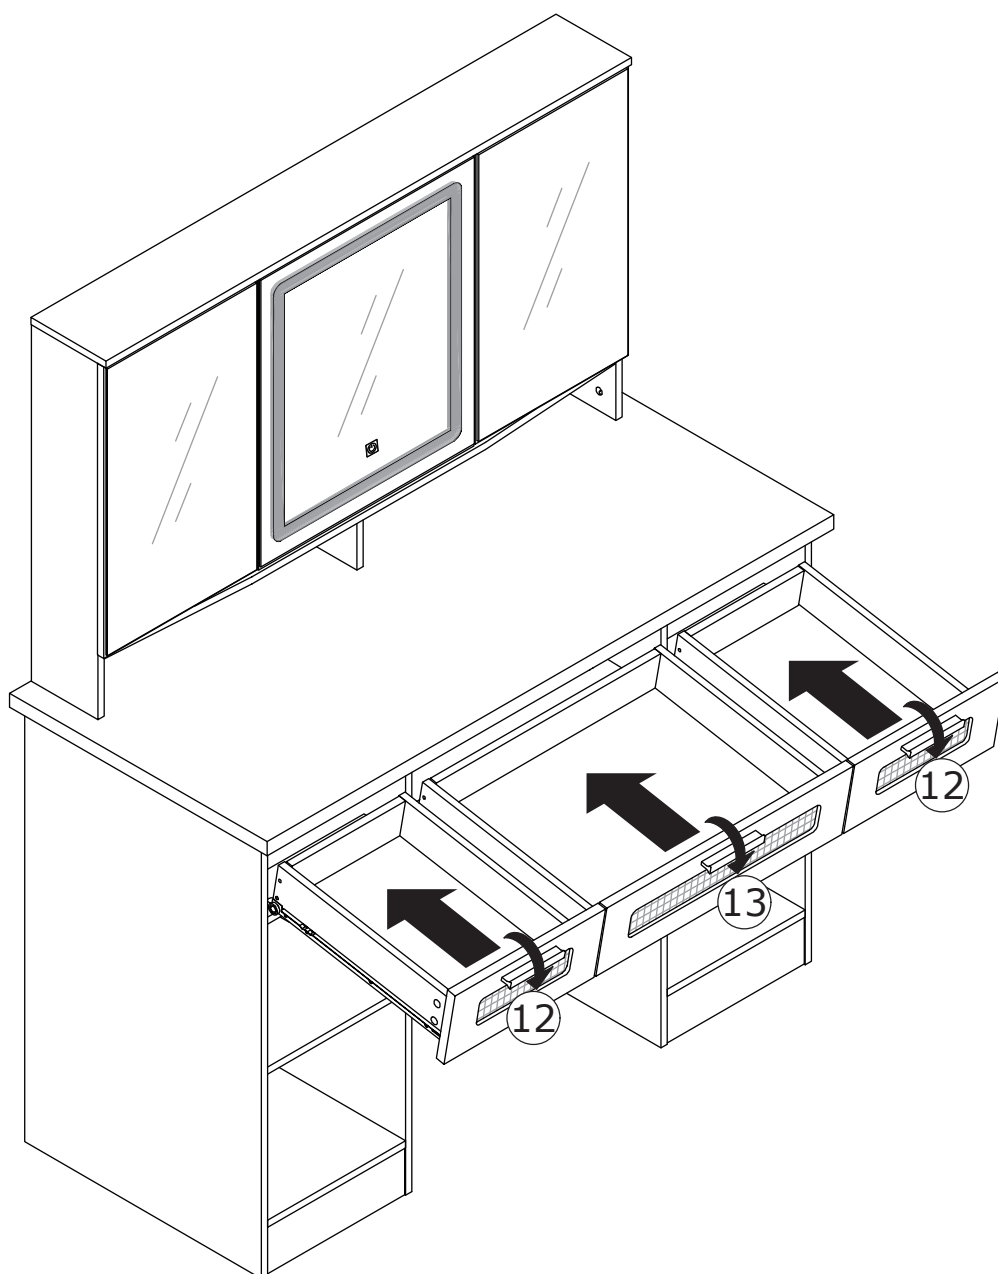

43

E x 2

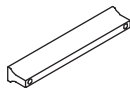

96 mm

F x 4





CRE0418A

H x 8




CRD3512A

N x 4

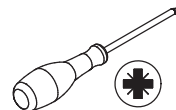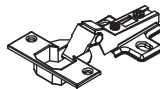

Fix hinge(N) to board 14 with screw(H) as shown.
Fix handle(E) with screw(F) as shown.

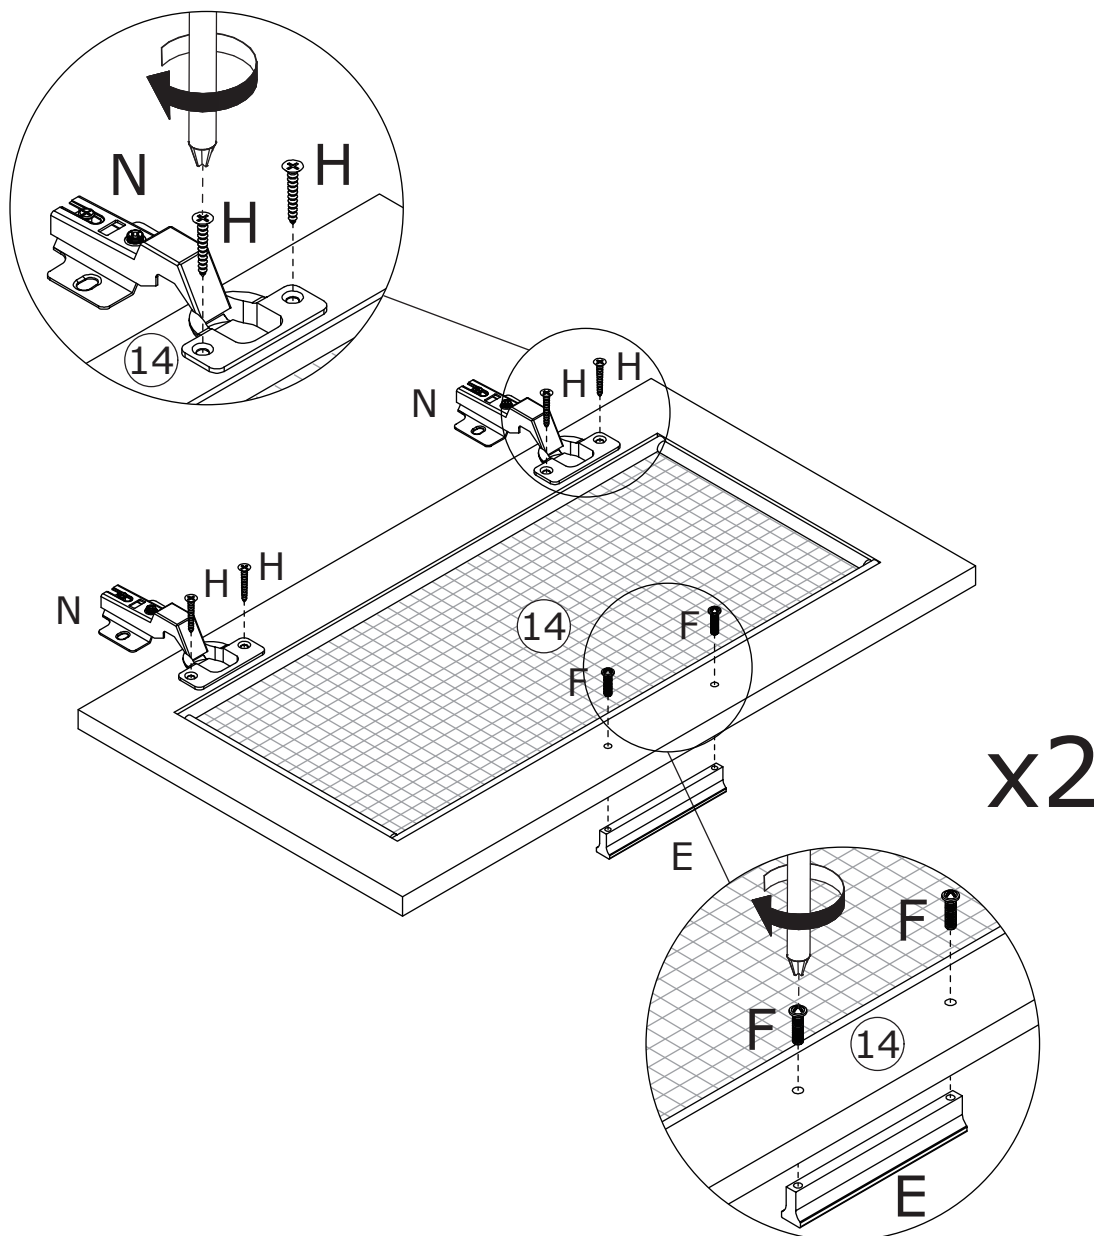


44




H x 8



CRD3512A

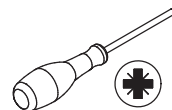


Assemble door 14 to board 2 and 3 by fixing hinge with screw(H) as shown.

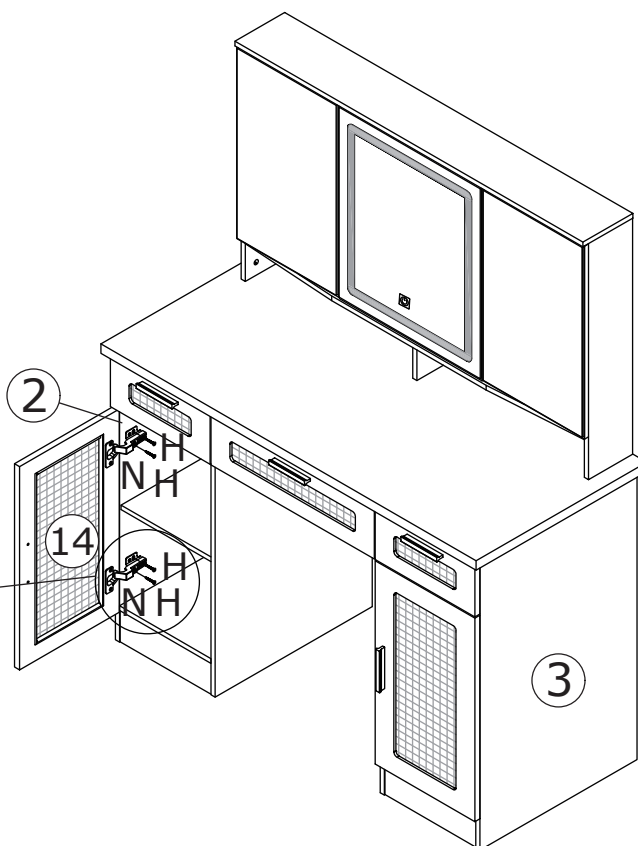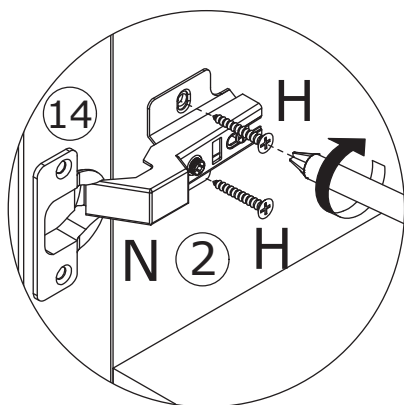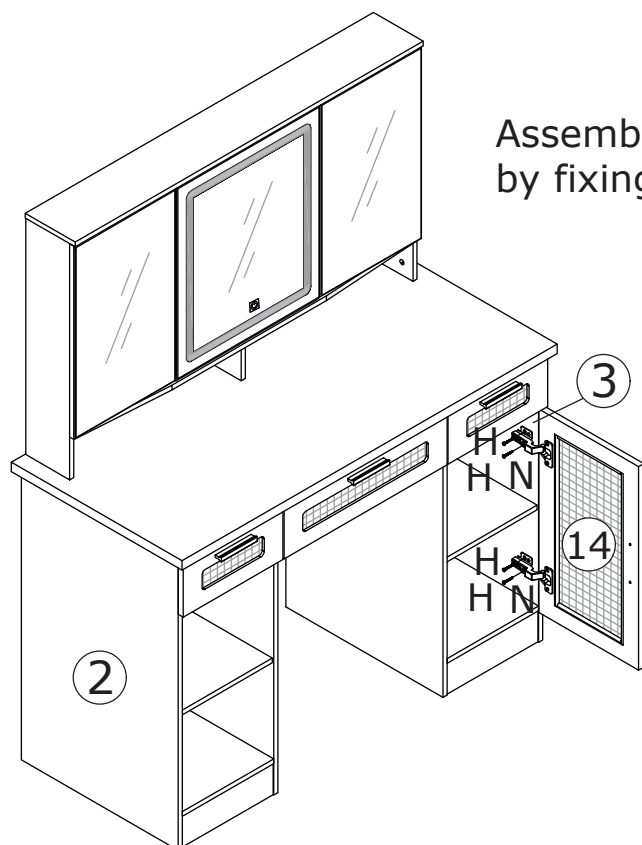


45

Power plug x 1

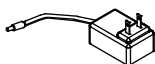

Connect the power cable with light connectors.

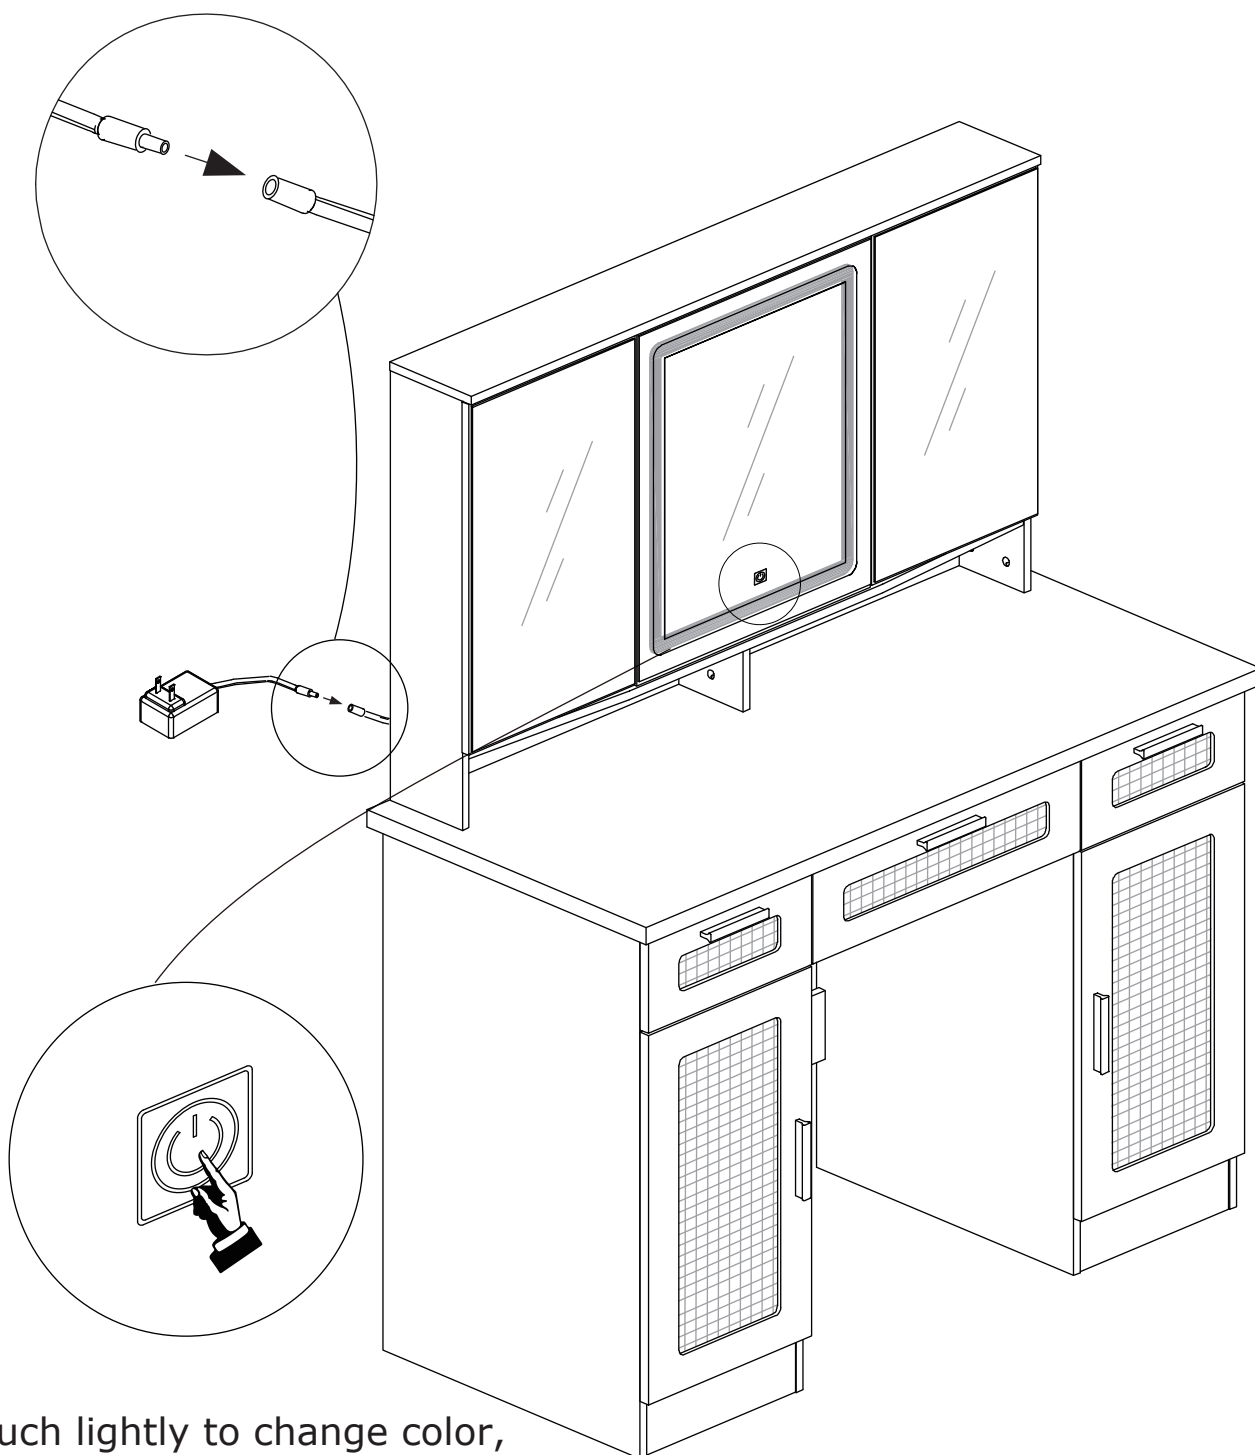

Touch lightly to change color,
press and hold to adjust the
brightness.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387