S-Class

Brief overview

Mercedes-Benz



Cockpit - overview



(1) Seat functions

Adjusts the seat electrically

₩ Seat heating

Seat ventilation Adjusts the front-passenger seat LB Memory function and presets

1 2 3 2 Light switch

Adjusts the instrument lighting

③ Driver assistance systems Active Steering Assist

✓ Active Lane Keeping Assist Night View Assist ZiX

Head-up display Rear window roller sunblind (4) Adjusts the air vents:

open O or closed O 5 Multifunction steering wheel control panels

(6) DIRECT SELECT lever for transmission

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Cockpit - overview

- Start/Stop button
- Multimedia system display
- Buttons for automatic climate control
- 10 Multimedia system controller with
 - Seats menu J. NAVI
 - Navigation menu Radio menu RADIO
 - Media menu MEDIA TEL Telephone menu
 - Vehicle menu 6 Back button
 - Switches multimedia system on or off
- 11) ტ Adjusts the volume VOL
 - Press: switches the sound on or off Lowers or raises the head restraints in the rear compartment
 - Poff Deactivates PARKTRONIC

- 12 Multimedia system touchpad (13) Driving functions
 - ECO start/stop function
 - **▼▲** DYNAMIC SELECT
 - Vehicle level **6**€0 Active Parking Assist
 - Electric parking brake
- ত্তি Opens or closes the trunk lid (15) (6) Door control panel with
 - controls for power windows, exterior mirror settings and the override feature for power windows and roller sunblinds for the side windows in the rear
- (7) Door handle

14)

- Locks the vehicle centrally Unlocks the vehicle centrally



Overhead control panel

- ① Buttons for interior lighting and reading light
 - Button for Mercedes me connect*
- € sos SOS button* 3 (Mercedes-Benz emergency call
- system) Panoramic roof
- Front roller sunblind MAGIC SKY CONTROL or Rear roller sunblind
- * Not available in all countries


Note that your vehicle may not be fitted with all features described.

Lever on the steering wheel




Overview

- 1 Combination switch for turn signals, high-beam headlamps and windshield wipers
- Lever for electrical steering column adjustment and steering wheel heating

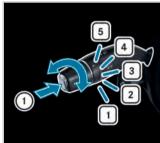



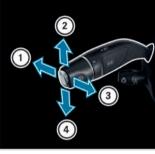

Combination switch - windshield wiper

- functions 1
 - Single wipe Wipes with washer fluid
- Windshield wipers off 1 0 ••• Intermittent wiping, normal 2
- •••• Intermittent wiping, frequent 3 4 Continuous wiping, slow 5 Continuous wiping, fast

Combination switch - lighting functions

- 1 High-beam headlamps or
- Adaptive Highbeam Assist Plus
- 2 Turn signal, right 3 Headlamp flasher
- (4) Turn signal, left

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Activating/deactivating

- Switches Active Distance Assist DISTRONIC on or off
- (3) SET/+ Activates Active Distance Assist SET/- DISTRONIC with the current speed
- 4 PIRES Activates with the stored speed/pulls away with Active Distance Assist DISTRONIC
 - **CNCL** Deactivates Active Distance Assist DISTRONIC



Changing the speed/distance

- Increases the specified minimum distance
- Reduces the specified minimum distance
- Increases the speed SET/+ Reduces the speed

Active Distance Assist DISTRONIC maintains a constant speed which has been stored. The lowest speed that can be set is 12 mph

Active Distance Assistant DISTRONIC

You can change the set speed:

(20 km/h).

- ▶ 1 mph step (1 km/h): Briefly press rocker switch ③ up or down.
- 5 mph step (10 km/h): Press rocker switch 3 up or down beyond the pressure point.

Using rocker switch ②, you can change the specified minimum distance to the vehicle in front. The specified minimum distance depends on the currently driven speed.

If rocker switch (4) is pressed upwards twice, Distance Assist DISTRONIC is activated with the speed restriction displayed in the instrument

Note that your vehicle may not be fitted with all features described.

Climate control



You can set automatic climate control using:

important settings and the status of automatic climate control.

Automatic climate control panel AUTO Sets climate control to automatic mode

- ▼▲ Sets the temperature
- Sets the airflow
 - The air in the vehicle interior is recirculated.

In air-recirculation mode, the windows can fog up more quickly.

Defrosts the windshield MENU Calls up the climate control menu

Defrosts the rear window

If you press and hold the MENU button for approximately 4 seconds, automatic climate control is reset to the basic settings.

Cooling with air dehumidification

Residual heat with the engine off

Climate control menu of the multimedia system

- ► To call up the climate control menu: press the MENU rocker switch on the control panel up or down. • A/C - Activates/deactivates the cooling and
- air dehumidification functions of the automatic climate control Climate Mode – Changes the air flow • Air Distribution - Sets the air distribution for
 - the driver and front passenger
- Footwell Temperature Adjusts the temperature for the footwell separately
- Rear Operates the automatic climate control in the rear • SYNC - Changes settings for all climate zones
- in the vehicle simultaneously Ionization – Freshens the air in the vehicle interior using ionization
- Air Freshener Sets the intensity of the perfume atomizer

- At level 0: climate control off Air-recirculation mode
- Order no. P222 0289 13 Part no. 222 584 33 12 Edition B-2020


7 VOL Adjusts the volume

★ Displays favorites


Press: switches the sound on or off

System or cancels the current Voice Control System voice command

图 版 Starts dialog with the Voice Control

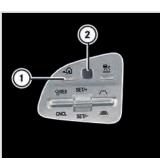



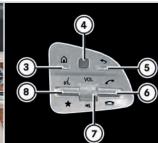

Operating the menu of the on-board computer

- 1 Back button for the on-board computer
- (2) Touch Control for the on-board computer

Operating the multimedia system

- ③ Main menu of the multimedia system
- 4 Touch Control for the multimedia system
- S Back button for the multimedia system
- 6 Accepts a telephone call

Rejects a telephone call Ends a call

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Voice Control System

Starting a dialog

The Voice Control System allows you to comfortably operate the majority of the multimedia system's functions.

▶ To say a voice command: press the <a>™{ button and speak a voice command after the signal tone.

Voice Control System help functions

- General information: Say the "Help Voice Control System" voice command.
- · Help for the current function: Say the "Help" voice command.
- Help for a specific system: Say the voice command for the desired system, e.g. "Help telephone".

Examples

Voice commands for Navigation

- "Navigate to Woodward Avenue, Detroit" Starts route guidance to the named address.
- "Navigate to John Doe" Starts route guidance to a contact in the address book.
- "Nearest gas station" Further categories are also available: restaurant, car park and rest area.

Voice commands for telephone

- "Call lane Doe" Calls the number of a contact in the address book.
- "Latest calls" Shows the latest calls.

Voice commands for audio mode

 
- "Station Z100" Calls up stations which are in range or stored stations.
- "Play Moonlight Sonata" Plays the named media file. All tracks available in the system can be used.

Note that your vehicle may not be fitted with all features described.

Overview of the multimedia system







Controller: turn or slide in the direction of the desired entry.

You can operate the multimedia system with the

- Slide to the left or right in order to open a menu.
- Confirm your choice by pressing the controller.
- Touchpad: swipe in the direction of the desired entry.
- menu.

- Swipe to the left or right in order to open a
- Press and hold: calls up main functions

- Press briefly: returns to the previous
- Calls up main functions
- Confirm your selection by pressing.
- Rapid access to audio sources

Favorites allow you to quickly call up applications which you use regularly.

- To call up the menu: press the \bigcirc button. The main functions are displayed.
- Navigate downwards. The favorites bar is shown.
- To create your own favorite: select the desired function in the multimedia system.
- Press and hold the $\ \ \ \ \ \ \ \ \ \$ button until the favorites are displayed.
- Add your own favorite at the desired position.

Personalization

You can store your own personal settings for the multimedia system in a user profile.

- ▶ To call up the menu: press the 🛕 button.
- Select ¬→ System >> Personalization.

Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Operating the multimedia system



Zooming the map

▶ Touchpad: move two fingers together or apart.



Contacts

Options

Recent Calls



Depending on the audio source to which you are currently listening, you can move to the next radio station or music track.

- or
- To select the previous or next station/ music track: use one finger to swipe up or



- ► To open the access bar: swipe up with two fingers. ▶ Press the ►► button on the touchpad.
- To close the access bar: swipe down with two fingers or press \longrightarrow on the touchpad.



Handwriting recognition

You can enter individual characters.

- To delete c: swipe to the left.
- ► To insert a space ____: swipe to the right.

Quickly storing radio stations If you are listening to the radio and the Radio

menu is shown in the multimedia system:

Press and hold the controller or touchpad or the right-hand Touch Control on the multifunction steering wheel. A tone confirms the save.

Note that your vehicle may not be fitted with all features described.

Start Search on System

Search from Device

Press the TEL button on the center console.

The available devices are shown in the display. If your mobile phone is not found, select Search

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

➤ Select Devices ➤> Connect a New Device.

Connect a New Device

Connecting a mobile phone Select the desired mobile phone.

and on the mobile phone.



If the codes match: Confirm with Yes on the multimedia system. Confirm the code on the mobile phone.

A code is displayed in the multimedia system

Establishing a Bluetooth® connection

- You can simultaneously connect two
- telephones with your system. **Further information**

Detailed information on Bluetooth® connections

with your mobile phone can be found at: https://www.mercedes-benz.com/connect



from Device.

Searching for a mobile phone

Select Start Search on System.

or

Further information

Further information on your vehicle

Connecting external media sources

• Bluetooth[®] is switched on on the mobile phone

Bluetooth[®] is switched on on the multimedia

and visible for other devices (see the

manufacturer's operating instructions).

- SD card slot The USB connection for Apple CarPlay™ and
- ② USB ports

Requirement

system.

Android $Auto^{TM}$ is marked with the \square symbol.



Do not touch the bumper and maintain a distance of around 12 in (30 cm). To open or close: kick into the sensor detection area below the bumper.

https://www.mbusa.com

Obtain further information on your vehicle from:



