


TESVOR

S8 Max Robotic vacuum cleaner

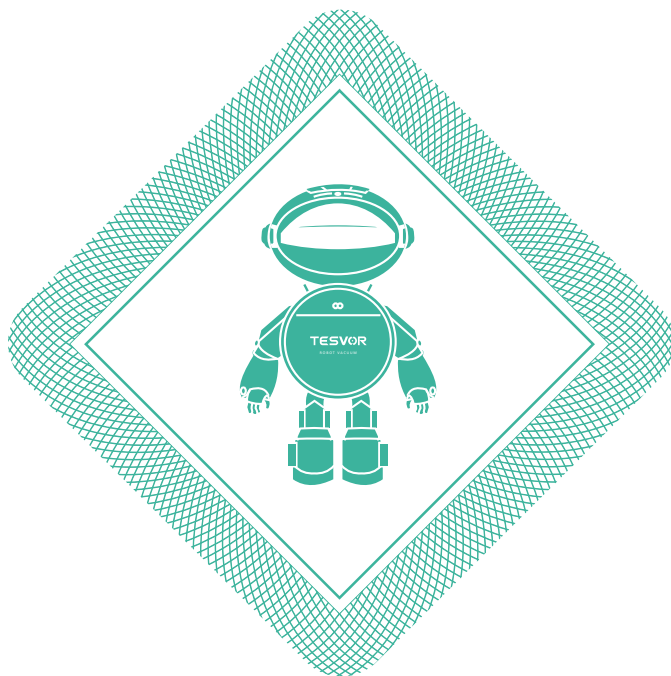

User Guide

MORE FAMILY TIME. LESS CLEANING.

CONTENTS

1. WIFI settings instructions

2. Safety instructions

3. Product composition

- 3.1 Part name
- 3.2 Product parameters
- 3.3 Product features

4. Instruction manual

- 4.1 Things to note
- 4.2 Operation guide

5. Product maintenance

- 5.1 Side brush cleaning and replacement
- 5.2 Two-in-one water tank assembly maintenance
- 5.3 Dust collector maintenance
- 5.4 Maintenance of roller brush components
- 5.5 Other component maintenance

6. Common malfunctions

- 6.1 Fault description
- 6.2 Replaceable modules

WIFI settings

1

Download and install “Tesvor Home” APP from the market or scan the QR code below.




2


Open "Tesvor Home" APP and log in. There are two ways to log in: by verification code or by password. Then long press the “Power button” to turn on the robot vacuum.



- 3 After logging in, click "+" on the upper right corner to add the robot. On the device selection page, choose the "Laser Sweeper(AP)", or scan the QR code below and add the robot vacuum manually

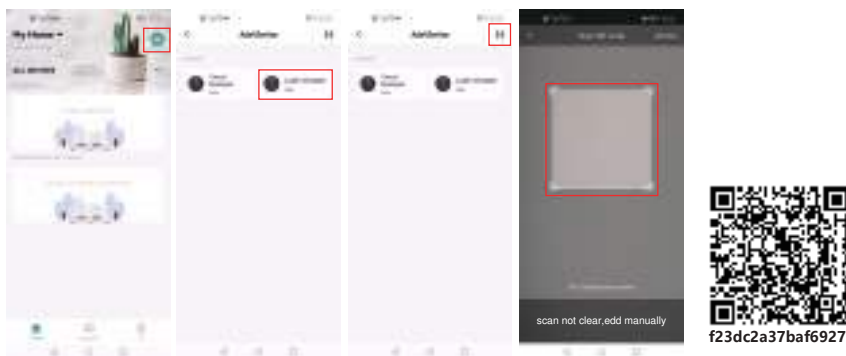

- 4 Then follow the APP page to connect the robot, select the "AP" (You can also choose "Bluetooth" if your robot is with Bluetooth function and then follow the steps for fast connection according to the page)
Long press the "Home" button and follow the APP page to connect the robot

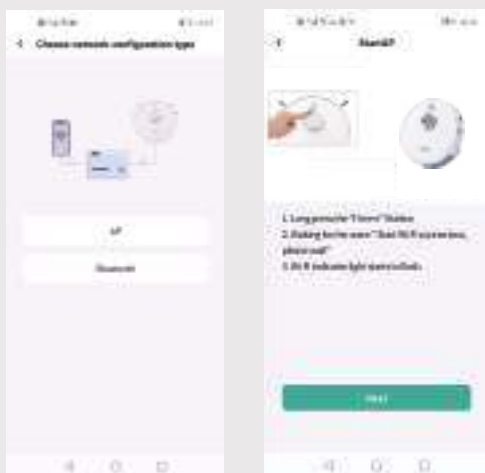

5

Select the working Wi-Fi of the robot (only support 2.4Ghz Wi-Fi, Wi-Fi name does not support Chinese and full-angle symbol).Input wi-fi password and click“Next”.



6

1. Connect the robot according to the APP page(Picture 1)
 2. Select and connect the phone to the hotspot Wi-Fi of the robot "Robot## Libos -xxx" or "Robot##xxx-xxx" (Picture 2) and then return to the App (Picture 3).
 If the phone is connected successful to the robot hotspot, please click “Confirm that clean.. and go to next step” (Picture 3). If the phone is not connected to the robot hotspot, please click "Re-connect"



Picture1



Picture2



Picture3



Picture 4

- 7 Jump to home page after successful connection.
After the robot is successfully connected, click it to enter the robot control page (Picture 5).



Picture 4



Picture 5

- 8 Android:
Picture 1: Wait for the hotspot "Robot## Libos -xxx" or "Robot##xxx-xxx" to pop up of the robot. Choose it and wait for the connection.
Picture 2: Jump to home page after successful connection and click the robot to work.



Picture 1



Picture 2



Picture 3

Quick Guide of Using Amazon Alexa to Control Your Tesvor Home Robot

What you need to get started

Before using Echo to control your robot vacuum, make sure you meet the following conditions.

- ✓ **Stable Wi-Fi network which could access to Amazon server.**
- ✓ **An Echo device, including Echo, Echo Tap, or Echo Dot.**
- ✓ **An Amazon account.**
- ✓ **Tesvor Home App and a related account.**
- ✓ **Your robot vacuum**

Step 1

Add devices in Tesvor Home App (See in App Instruction)

You can skip this part if you've already added some devices to your Tesvor Home account, and in the meantime, the devices' names are easily recognized.

Step 2

Download and install "Amazon Alexa" from App Store or Google Play on your phone, then log in and set well with "Amazon Alexa" and "Amazon Echo"

You can skip this part if you have it on your phone

Step 3

Connect your Tesvor Home on Amazon Alexa

1. Turn on "Amazon Alexa" App, and then switch to "More" on the bottom right corner and click "Skills & Games"



2. Search "Joy Life" and choose it



3. On the logging page, click “Please select a country”, then choose your Country and District, enter your Area Code and Phone Number, click “Send”, next you will receive a Verification Code and log in. Finally it will show “Successfully linked”. Now, you can easily control your robot vacuum on Google Home App by Amazon Alexa.



5. Here are several voice demands for reference:

Start Cleaning: Alexa, turn on tom

Stop Cleaning: Alexa, turn off tom/ Alexa, pause tom

Start Charging: Alexa, turn on charge on the tom

Stop Charging: Alexa, turn off charge on the tom

(Note: Tom is the name of your device, which you can change it)

Quick Guide of Using Google Home to Control Your Tesvor Home Robot

What you need to get started

|| Before using Google Home to control your devices, make sure you meet the following conditions.

- 1.A Google Home device, or Android phone with Google Assistant.
- 2.Latest Google Home App.
- 3.Latest Google App (Android only)
- 4.A Google account.
- 5.The device display language must be set to English US.
- 6.Tesvor Home App and a related account
- 7.Your smart devices.

Step 1

Add your robot vacuum in Tesvor Home App

You can skip this part if you' ve already added some devices to your Tesvor App account

Step 2

Download and install "Google Home" from App Store or Google Play on your phone, then log in and set it well.

You can skip this part if you have it on your phone

Step 3

Connect your Tesvor Home on Google Home

1. Open your Google Home App, click “Device” and “Add device”, then choose “Works with Google”



2. Click the Search Button on the top right corner and enter “Joy Life”




3. On the logging page, click “Please select a country”, then choose your Country and District, enter your Area Code and Phone Number, click” Send”, finally you will receive a Verification Code and log in.

(Note: if you want to log in with Email, you can click” Phone” to switch the Logging type)



4. Click “Continue”, then your robot vacuum is successfully connected. And you can control your device via Google Home App

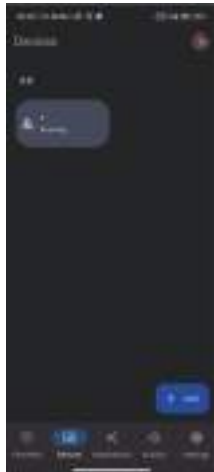

5. Here are several voice demands for reference:

Device Location: Google, location Tom

Start Cleaning: Google, turn on Tom

Start Charging: Google, turn off Tom

Stop Cleaning: Google, charge Tom

(Note: Tom is the name of your device, which you can change it)

2. Product composition

Before using this product, please read the following safety instructions and follow all general safety precautions

Please read this manual carefully Please keep this manual Any operation inconsistent with this manual may cause damage to the product.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING ROBOTIC VACUUM CLEANER

WARNING – To reduce the risk of fire, electric shock, or injury:

01. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
02. Do not use outdoors or on wet surfaces
03. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
04. Use only as described in this manual. Use only manufacturer's recommended attachments.
05. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
06. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord round sharp edges or corners. Do not run appliance over cord. Keep cord away from heated Surfaces.
07. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
08. Do not handle plug or appliance with wet hands.
09. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
13. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
14. Do not use without dust bag and/or filters in place.
15. For use only with ___S8Max___ Intelligent Sweeping Robot Dust Collector.
16. Place the cords from other appliances out of the area to be cleaned.
17. Do not operate the vacuum in a room where an infant or child is sleeping.
18. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
19. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
20. Do not allow children to sit on the vacuum.
21. Do not use the vacuum on a wet surface.

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- 01.Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- 02.Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- 03.Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- 04.Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- 05.Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 06.Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- 07.Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- 08.Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- 09.Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
- 10.To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- 11.SERVICING OF DOUBLE-INSULATED APPLIANCES

SAVE THESE INSTRUCTIONS

During storage:

Cleaning and drying: Before long-term storage, please wipe the surface and wires of the appliance clean with a soft cloth and ensure that they are completely dry.

- Properly wrap wires: Avoid wrapping wires too tightly, as this may cause damage to the internal wires. It is recommended to use loose curling or specialized cable managers to organize wires.

- Choose a suitable location: Find a place with moderate temperature, low humidity, and no direct sunlight to place the appliances. Avoid humid environments, as moisture may cause electrical components to rust; At the same time, stay away from sharp objects to prevent scratches.

- Proper packaging: If conditions permit, the equipment can be returned to its original packaging box or wrapped in a protective bag to prevent dust accumulation.

Instructions for wire care during use:

- Regular inspection: Regularly check the power cord for signs of wear, cracks, or other damage. Once a problem is discovered, immediately stop using the equipment and seek professional repair.

- Gentle handling: When moving devices with wires, be careful not to forcefully pull or twist the wires, as this can cause damage to the internal structure.

Safe placement: Ensure that wires are not pressed by furniture and do not let them come into contact with heat sources, such as near radiators. In addition, when plugging or unplugging the plug, one should grip the plug itself instead of pulling on the wire part.

Only use official accessories: Always use the manufacturer's original charging cable and other accessories, non certified products may pose safety hazards.

IMPORTANTES MESURES DE SÉCURITÉ

L'utilisation d'un appareil électrique demande certaines précautions, dont les suivantes:
LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER ASPIRATEUR ROBOTIQUE

AVERTISSEMENT: pour réduire le risque d'incendie, de choc électrique ou de blessure:

01. Ne pas laisser l'appareil sans surveillance lorsqu'il est branché. Le débrancher lorsqu'il n'est pas utilisé et avant le dépannage.
02. Ne pas utiliser à l'extérieur ou ne pas aspirer de déchets humides.
03. Ne pas laisser les enfants jouer avec l'appareil ou s'en servir sans surveillance. Redoubler d'attention s'il y a des enfants à proximité lorsqu'on utilise l'appareil.
04. Utiliser l'appareil en respectant les consignes de cette notice d'emploi et n'utiliser que les accessoires recommandés par le fabricant.
05. Ne pas utiliser l'appareil si le cordon ou la fiche est endommagé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas normalement, s'il a été échappé, s'il est endommagé, s'il a été oublié à l'extérieur ou immergé.
06. Le cordon ne doit pas être utilisé comme une poignée ou pour tirer, traîner ou soulever l'appareil. Ne pas faire passer l'appareil sur le cordon ; ne pas coincer le cordon dans l'embrasure en refermant les portes ni tirer dessus à l'angle d'un mur ou d'une autre arête vive et le tenir à distance des surfaces chaudes.
07. Ne pas tirer sur le cordon pour débrancher l'appareil; tirer plutôt sur la fiche.
08. Ne pas toucher la fiche du cordon ou l'appareil avec les mains humides.
09. Ne pas insérer d'objet dans une ouverture quelconque de l'appareil. Ne pas utiliser l'appareil lorsqu'une ouverture est bloquée et enlever la poussière, la peluche, les cheveux, etc., qui peuvent gêner le débit d'air. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
10. Veiller à bien se garder – doigts, cheveux, vêtements amples – à distance des ouvertures et des pièces mobiles.
11. Mettre toutes les commandes en position d'arrêt avant de débrancher l'appareil.
12. Ne pas se servir de l'appareil pour aspirer des liquides combustibles ou inflammables comme de l'essence ou dans un endroit où il peut y avoir de tels liquides.
13. Doit être branché sur une prise de courant avec mise à la terre. Voir les instructions de mise à la terre.
14. Ne pas aspirer tout ce qui est en train de brûler ou de fumer, comme des cigarettes, allumettes, ou de cendres chaudes.
15. Ne pas utiliser l'appareil sans filtre ou sans sac à poussière.
16. pour une utilisation uniquement avec —S8MaxJCB— capteur de poussière Intelligent de Robot de balayage.
17. Éloigner les cordons d'autres appareils de la zone à nettoyer.
18. Ne pas utiliser l'aspirateur dans une pièce où un nourrisson ou un enfant dort.
19. Ne pas utiliser l'aspirateur dans un endroit où il ya des bougies allumées ou des objets fragiles sur le plancher à nettoyer.
20. Ne pas utiliser l'aspirateur dans une pièce où il ya des bougies allumées sur les meubles que l'aspirateur peut heurter ou se cogner accidentellement.

AVERTISSEMENT: Lire toutes les mises en garde et toutes les instructions. Le non-respect des mises en garde et des instructions peut causer des chocs électriques, des incendies et/ou des blessures graves.

01. Emêcher une mise en marche accidentelle. S'assurer que l'interrupteur est à la position arrêt avant de raccorder la batterie, de lever ou de déplacer l'appareil. Transporter l'appareil en gardant un doigt sur l'interrupteur, ou mettre sous tension un appareil dont l'interrupteur est à la position marche peut causer un accident.

02. Recharger uniquement avec le chargeur prescrit par le fabricant. Un chargeur convenant à un type de batterie peut présenter un risque d'incendie lorsqu'il est utilisé avec une autre batterie.

03. Utiliser uniquement les batteries recommandées pour l'appareil. L'utilisation d'autres types de batteries peut présenter un risque de blessure ou d'incendie.

04. En condition d'usage abusif, du liquide peut s'échapper de la batterie ; éviter tout contact avec ce liquide. En cas de contact accidentel, rincer abondamment avec de l'eau. En cas de contact avec les yeux, consulter également un médecin. Le liquide projeté peut causer des irritations ou des brûlures.

05. Ne pas utiliser une batterie ou un appareil endommagé ou qui a été modifié. Des batteries endommagées ou modifiées peuvent avoir un comportement imprévisible pouvant causer un incendie, une explosion ou un risque de blessure.

06. Ne pas exposer une batterie ou un appareil à la flamme ou à des températures excessives. L'exposition à une flamme ou à des températures supérieures à 130 °C peut causer une explosion.

07. Respecter toutes les instructions de chargement et ne pas charger la batterie ou l'appareil à des températures qui ne sont pas incluses dans la gamme de températures indiquées dans la notice d'instructions. Un chargement mal effectué.

08. Confier les réparations à une personne qualifiée qui utilisera uniquement des pièces de remplacement identiques. Cette façon de faire garantira la sécurité du produit.

09. Ne pas modifier ni tenter de réparer l'appareil ou la batterie (selon le cas) sauf comme il est indiqué dans les instructions d'utilisation et d'entretien.

10. Pour réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une des lames est plus large que l'autre). Cette fiche ne peut être insérée dans une prise polarisée que si elle est orientée dans le bon sens. Si elle ne peut pas être insérée dans un sens, inverser la fiche dans l'autre sens. Si elle ne peut toujours pas être insérée dans la prise, faire installer la prise appropriée par un électricien compétent. Ne pas modifier la prise en aucune façon.

11. ENTRETIEN DES APPAREILS À ISOLATION DOUBLE

CONSERVER CES INSTRUCTIONS

Before using this product, please read the following safety instructions and follow all general safety precautions.

Please read this instruction carefully. Please keep this instruction manual. Any operation not in accordance with this manual may cause damage to the product.

Safety precautions for the host and accessories

Warning

01. Do not disassemble, repair or modify the machine by yourself, otherwise the product will be damaged and dangerous.
02. Do not use this product in an environment where fire or explosion may occur.
03. This product can only use the original power cord, otherwise it may cause damage to the product and fire.
04. It is prohibited to stand or sit on this product, otherwise it may cause product damage or fall.
05. If there is dust around the metal part of the power plug, be sure to wipe it clean with a dry cloth.
06. The dust collector uses USA 120V AC voltage. Please insert the plug correctly into the socket to avoid children touching it.
07. It is forbidden to wash or soak the host and electronic components in water, otherwise it will cause short circuit damage.
08. Do not damage the processing power cord, do not put heavy objects on the power cord, heat the power cord or pull or bend the power cord.
09. When the product is running and cleaning, please pay Note to the safety of young children and the elderly to avoid tripping and danger. Do not touch the wheels and side brushes with your hands to avoid getting entangled and causing injuries. (Children should pay special Note).
10. This product is for indoor use only. Please do not use it outdoors.
11. Do not use metal or conductive materials to contact the battery contacts, otherwise a short circuit may occur.

Note

01. Do not touch with wet hands, otherwise it may cause electric shock.
02. Do not place this product in a place where it may fall, such as on a high platform in a room with tables or chairs.
03. This product is a precision electronic device and should be avoided from prolonged exposure to sunlight.
04. Do not use this product in a humid environment, such as a bathroom.
05. Do not place this product near cigarette butts, lighters or other open flames.
06. Please clean this product after charging.

- 07. Please turn off the machine if it is not used for a long time.
- 08. Please check carefully whether the power cord is connected to the socket before use, otherwise the machine will not be able to charge.
- 09. Laser standard: IEC-60825; Grade: class I; Wavelength: 930-950nm, Laser radiation power: 120nJ.
- 10. This device is only for normal people over 8 years old. Users must not use or maintain the device without fully understanding the safe use of the device or if they lack physical sensory, mental or other abilities.
- 11. Before using this product, please remove all fragile items on the ground, such as glasses, lamps, and items that may get entangled in the side brush and suction channel, such as wires and curtains.
- 12. Do not use machines to clean construction waste.
- 13. The operating temperature range of this product is 0 degrees Celsius to 40 degrees Celsius. Do not use it in high or low temperature environments.
- 14. Please remove the battery from the product before scrapping. Make sure the product is not connected to the power supply when removing the battery. Please recycle the discarded battery safely and environmentally friendly.

Safety precautions for rechargeable

⚠ **Dangerous**

- 01. Be sure to use a dedicated battery adapter, otherwise it will cause leakage, heating or rupture.
- 02. Never short-circuit or disassemble the battery, otherwise it will cause leakage, heating or rupture.
- 03. Do not transport or store it together with metal objects such as necklaces and hairpins, otherwise it will cause a short circuit and cause leakage, heating or rupture.
- 04. Never throw the battery into fire or heat the battery, otherwise it will cause leakage, heating or rupture.


⚠ **Note**

- 01. If you find abnormal overheating during charging, please stop using it immediately, otherwise it will cause leakage, heating or rupture.
- 02. To extend the battery life, please unplug the battery when not in use for a long time and place it in a cool and dry environment, otherwise it will cause leakage, heating or rupture.
- 03. Do not immerse in water or contact with liquid, otherwise it will leak, heat up or rupture.
- 04. Please stop using the product if any abnormality (such as discoloration or deformation) occurs, otherwise it may cause leakage, heating or rupture.
- 05. When recycling or disposing of the product, be sure to insulate the electrode using tape, etc.
- 06. If the battery leaks, please wipe it clean with a dry cloth and recycle or discard it in time.

Warning


- 01.If battery leakage comes into contact with skin or clothes, be sure to rinse with clean water immediately. If left untreated, it may cause skin inflammation and other problems.
- 02.Do not use the rechargeable battery of this product on other devices. This battery is only suitable for smart sweeping robots.
- 03.If the battery box is deformed, expanded, and the electrolyte leaks out, it is forbidden to charge or continue to use it to avoid danger.
- 04.Do not hit the battery strongly or throw the battery, otherwise it will cause leakage, heating or rupture.
- 05.Do not disassemble the battery pack, otherwise it will cause the battery pack to rupture and the electrolyte to leak out, causing dangers such as fire and explosion.
- 06.Watt hour (Wh) : 72.44 Watt hour (72.44Wh)

How to remove the battery

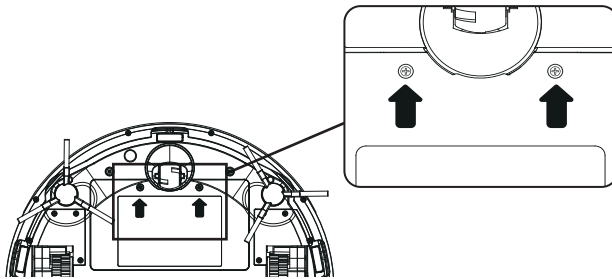


- 01.Use a screwdriver to remove the two screws on the battery cover.
- 02.Remove the battery cover.
- 03.Remove the battery, unplug the wires, and remove the battery.


3.1 Part name

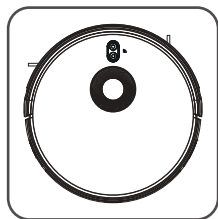


Host

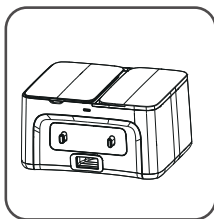


Dust Collector

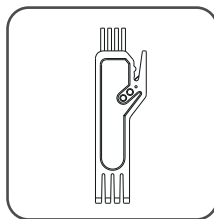


cleaning tools

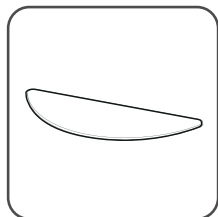


Mop

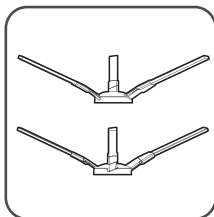


Side brush

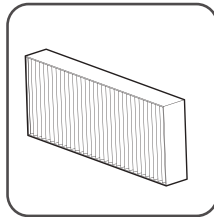

High efficiency filter

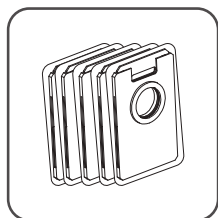


Dust bag

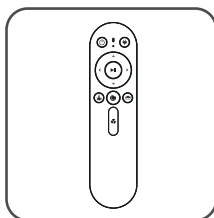


Remote Control
(2 * AAA Batteries required
but NOT included)

The accessories are slightly different. Please refer to the actual product received.

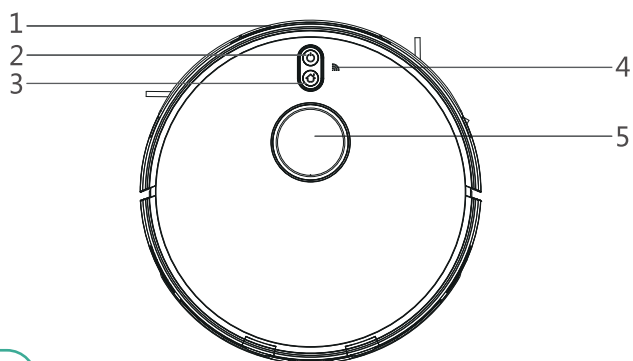


Main Body

- | | | |
|-------------------|---------------------|--------------------|
| 1. Bumper | 2. Clean button | 3. Recharge button |
| 4. WIFI indicator | 5. Laser components | |

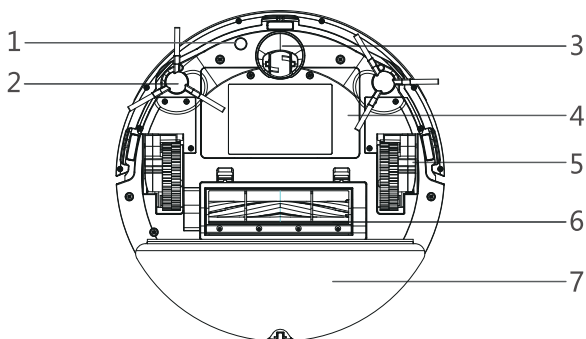

Main Body


- | | | |
|------------------------------|---------------|--------------------------|
| 1. Carpet recognition sensor | 2. Side brush | 3. Universal wheel |
| 4. Battery cover | 5. Side wheel | 6. Roller brush assembly |
| 7. Two-in-one water tank | | |

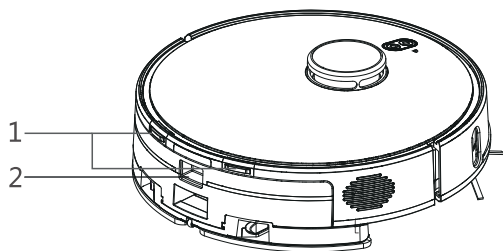

Main Body

1. Charging electrode

2. Two-in-one water tank release button

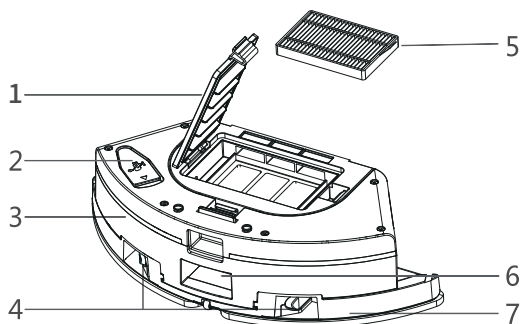

Two-in-one water tank assembly

1. Dust box cover

2. Water tank sealing plug


3. Water storage tank

4. Tray release button

5. HEPA


6. Dust box suction port

7. Tray assembly

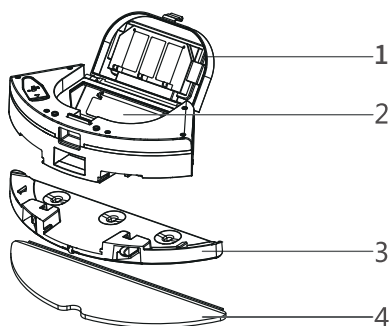

Two-in-one water tank assembly

1. Dust box cover 2. Dust box 3. Mop holder 4. Mop

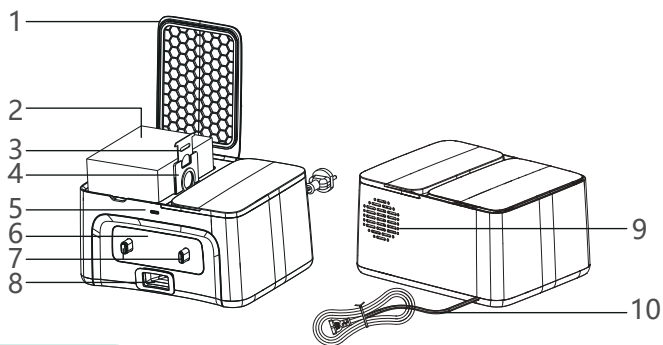

Charging stand

1. Cover 2. Dust bag 3. Dust bag handle 4. Dust bag guide plate
 5. Status indicator 6. Infrared receiver 7. Charging terminal
 8. Dust box suction port 9. Dust collection outlet 10. Power cord


3.2 Product parameters

Product parameters	S8 Max
Diameter of the main body	330 mm
Thickness of the main body	100 mm
Net weigh of the main body	4 kg
Voltage	14,4 V
Battery capacity	5100 mAh
Main body button type	LED button
Water tank capacity	350 ml
Dust box capacity	300 ml
Cleaning cloth(polyester cotton)	295 X 100 X 5 mm
Charging Type	Manual/Automatic
Operating Duration	Approx 160min
Charging duration	Approx 360min
Base station rated input	USA 120V~60Hz
Base station rated output	19V $\overline{\text{---}}$ 1A
Software version	10083265
WIFI module(FCS940R) Frequency Range(MHz)	2400-2483.5/Max E.I.R.P (dBm) 17
BT- (FCS940R) Frequency Range(MHz)	2400-2483.5/Max E.I.R.P (dBm) 4

3.3 Product features

Intelligent cleaning adjustment


This product can adjust the cleaning mode through the APP according to different cleaning modes, which greatly improves the cleaning efficiency and saves 30% of electricity.

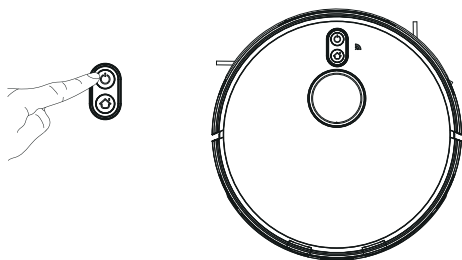

Humanized design

The operation is simple and easy to use. Just press the "Control" button to control the machine!


Follow the prompts and let the machine start working for you!

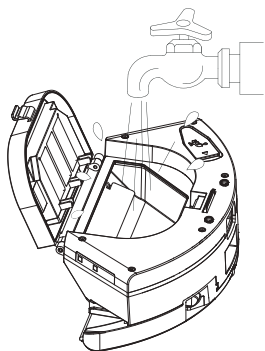



The trash box can be rinsed with water

The trash box and primary filter can be directly washed with water without spending too much labor on you, and washing the trash box with water can prevent dust from flying!


4.1 Things to note

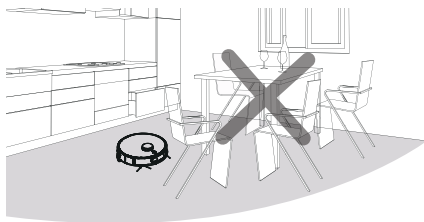



When it is working, please help to remove the unfriendly obstacles. Put the furniture and home appliances such as tables and chairs in the house neatly, the robot will clean up smoothly to give you a clean new home.

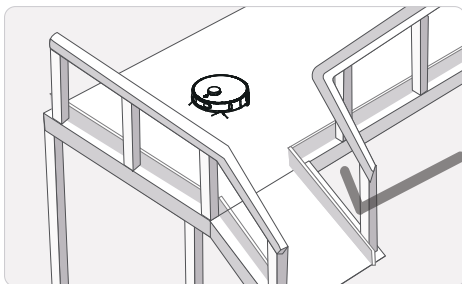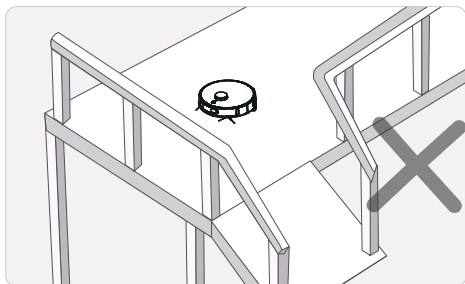

If the robot works at the stairway, the edge of the step, or the entrance to the narrow area among the furniture, slope etc, please place a fence to ensure it is safe and running smoothly.

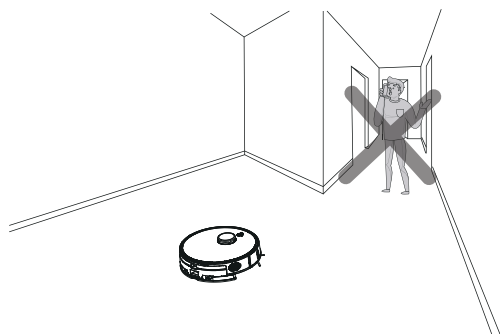


Please do not stand in narrow places such as thresholds and aisles to avoid missing sweeping. When the robot is working, please ensure that the object with the thickness less than 1.8 cm is not placed in the cleaning area to prevent the machine from climbing and jamming.

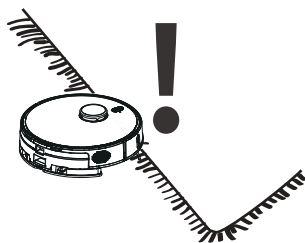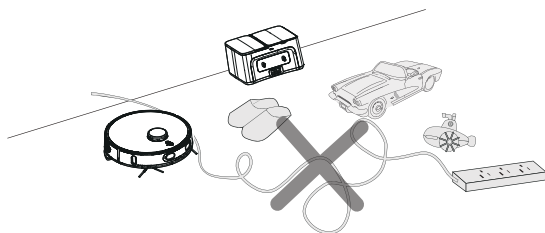


Power cords, toys and other debris scattered on the ground may trip or entangle the host, so be careful to remove the debris.
Before cleaning the carpet, please remove the drag board assembly of the two-in-one water tank.

4.2 Operation Guide

Place the charging station

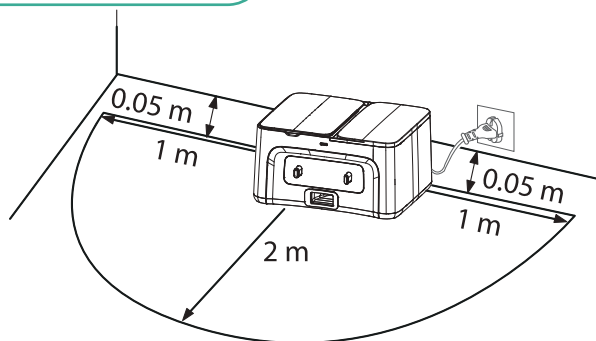


Place the charging stand flat against the wall. Do not place any objects within 1M to the left and right and 2M in front of it, and do not place objects with strong reflective surfaces such as mirrors. The excess length of the power cord should be tied with zip ties to prevent it from being too long and tripping people and animals, causing unnecessary injury or loss.

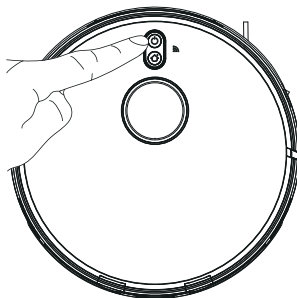

Press and hold the cleaning button for 3 seconds to turn on or turn off the device.

Install 2 AAA batteries (Not included in the package) into the remote control.

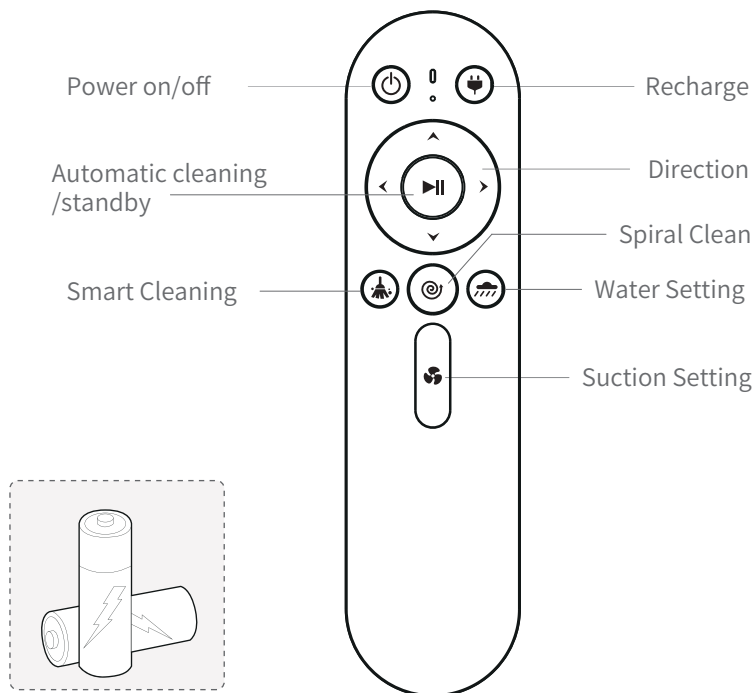

Note: For app users, please refer to our User Guide for App&Alexa.

When the device is in the vicinity of the charging base and the virtual protection wall, it may not be able to receive a signal from the remote control, If you do not use the remote control for a long time, please remove the batteries.

Power on/off

When the device is in sleep mode, press  to active the Robot. When the vacuum is in standby mode, press this button to make the Robot into sleep mode.

Direction button

In the standby mode, press   to turn left/right, press  the vacuum cleaner will rotate 180 degrees. After releasing the button it will return to standby mode. Press  the vacuum cleaner will continue forward.



LED Indication

Indicator Light	Machine Status	Scene
running white light 	Standby / Cleaning / Fully charged	The S8 Max is in Standby or Cleaning mode, or fully charged.
blinking white light 	Configuring mode	When connecting with the app
running white light 	Return for charging	Return for charging after cleaning finished
blinking white light 	Return for charging	Low power and returning to Charging Base
pulse white light 	Recharging	Low power recharging
Off   	Sleep	The S8 Max is off. To conserve power, the light automatically turns off when the S8 Max has been inactive for 10 minutes.
pulse red light 	Error	The S8 Max has an error.

Charging Modes

Method 1: Press  on the remote control to return the S8 Max to the Charging Base.

Method 2: When cleaning is completed, or the battery is too low, the S8 Max will automatically start finding the charging base to charge itself. Please keep the charging base energized, or the S8 Max will not be able to find the charging base.

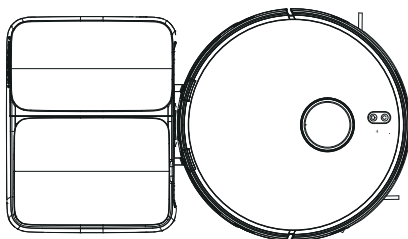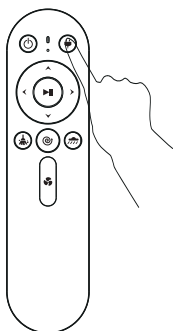

▶|| Automatic cleaning/standby

Press the Automatic cleaning/standby ▶|| button to switch the device between operating mode and standby mode. When the Robot vacuum is running, press this button, the Robotic vacuum will pause, and press it again to start.



Smart Cleaning (S shape Cleaning)

Press , Robot enters Smart Cleaning mode, clean edges first. and then it will perform S shape route cleaning. according to the room environment. After cleaning is over or the battery is low, it will automatically return to the charging base for charging.



Spiral Clean


Press  for Spot Cleaning mode. The robot will intensively clean a specific area in a spiral pattern. which useful if there is a concentrated area of dust or debris. When in the Spot Cleaning mode, the unit will stop cleaning after 2 minutes.



Water Output Setting


When the robot vacuum is in mopping mode, press , the water volume adjustment in the water tank output level will be changed cyclically. Press the button to change the water output level. For example, if the Robot is in the first level output, the water output level will increase to the second level by pressing it once, press again to increase to the third level, press third to back to the first level.

Power on and charge

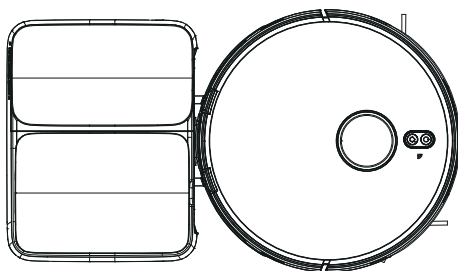

In any mode, select the recharge button on the robot or APP to automatically recharge the device.

Automatic charging

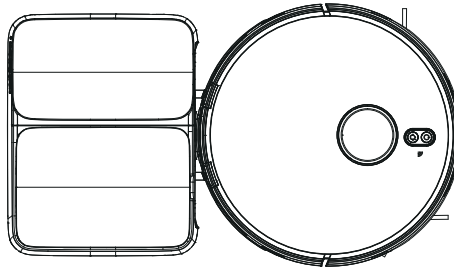


This product complies with the European ERP energy consumption standard.

When cleaning is complete or the battery is too low, the machine will automatically start looking for the dust collector to charge. Please keep the dust collector powered on, otherwise the machine will not be able to find the dust collector to charge.

Charging instruction

01. When using the machine for the first time, please let the machine run out of power.
02. Please fully charge the machine for 12 hours for the first time. When the machine is charging, the control button will flash in a cycle. When charging is complete, the control button light will stay on. When it enters sleep mode, the light will go out.
03. If you do not use the machine for a long time, please turn it off.
04. After the power is used up, please recharge the machine as soon as possible.
05. This product can only be charged with the dust collector provided by the factory.
06. The battery is repaired and replaced by the after-sales department.

Mode switching

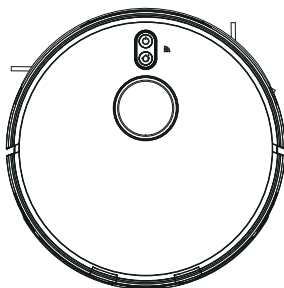

Power on

01. Long press the "⏻" on the machine to turn on or turn off the machine.
02. Press the "⏻" control button on the machine or the cleaning button on the APP to start the machine working.

Pause

Pause means switching the machine from working state to selection mode. The following operations can be used to pause the machine:

01. Press the "⏻" control button on the machine to pause the machine.
02. Press the pause button on the APP to pause the machine.

Note: After the machine is paused, it can be operated again.

Network distribution mode

Long press the "🔗" control button on the machine to put the machine into network configuration mode.


Hibernation

Sleep mode means the machine is in a stopped state and the control button lights are off.

If the machine is not operated for 10 minutes, it will automatically enter sleep mode.


Note: If the machine is not used for a long time, please turn it off.

Water tank filling

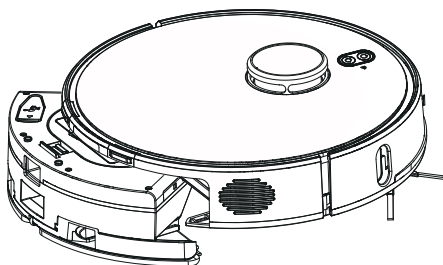

Remove the water tank assembly



Press the two-in-one water tank release button at the rear of the host and take out the two-in-one water tank.

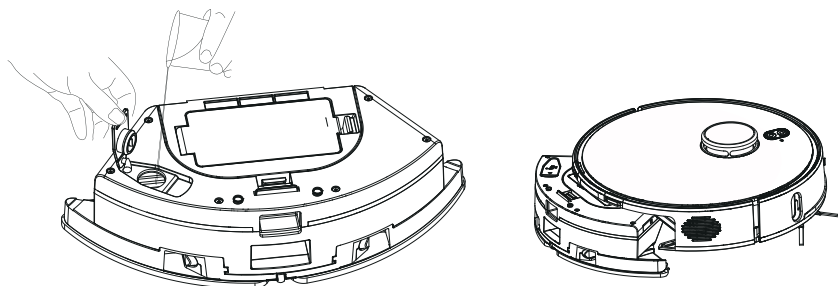

Add water

Open the water tank sealing plug and slowly pour water into the water tank. Close the water tank sealing plug tightly and then put it back into the machine.

Cleaning Carpets

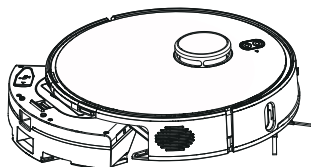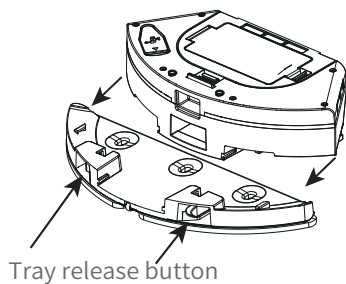


Remove the carriage assembly
Press the two sides of the tray to release the tray and pull out the tray.
Before cleaning the carpet, please remove the tray assembly of the two-in-one water tank and then reinstall it into the machine.

Press the two sides of the tray to release the tray and pull out the tray.
Before cleaning the carpet, please remove the tray assembly of the two-in-one water tank and then reinstall it into the machine.


Cleaning mode

Plan Cleaning

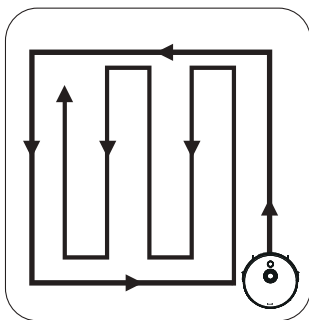


The robot will perform the plan will clean along the cleaning in S shape according to the room environment.

Setting Forbidden Area

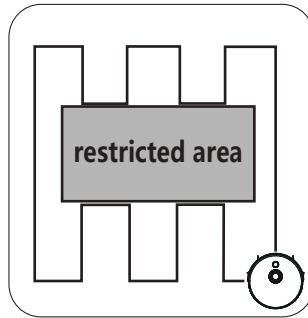

Only available by App control, After setting the forbidden area, the robot will not enter the forbidden area of the room.

Laser relocation

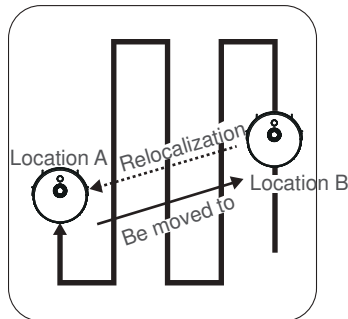



In the process of cleaning, if you move the sweeper to a new place after suspension, and restart it, it seeks to relocate. If the relocation is successful, the sweeper continues to clean. If it fails, the previous cleaning map will be lost, it will restart a new cleaning.

Set Scheduled Cleaning

Only available by App control, After setting into scheduled cleaning, the robot will start cleaning the room at the time you specify


Water Control

Note: Make sure the water tank has been installed in the robot, otherwise this function will not work

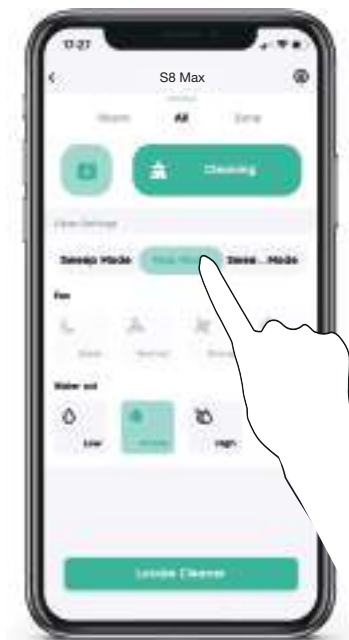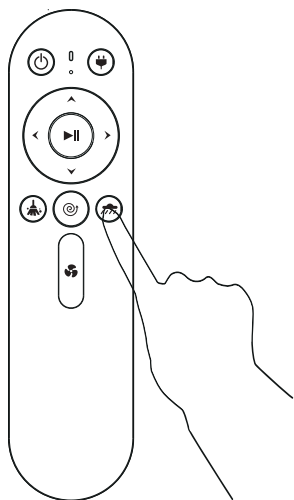


Press on the water control button, you can adjust the water output when the robot is mopping the floor

5.1 Side brush cleaning and replacement

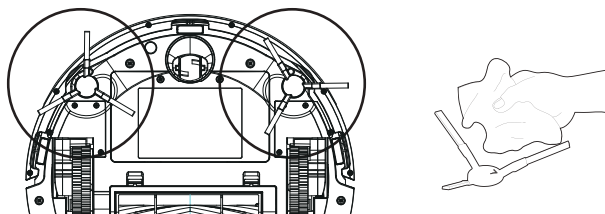


Check the condition of the side brush from time to time to see if it is damaged or entangled with foreign objects. Clean the side brush with a cleaning tool or rag. When the side brush is damaged and cannot be used, please replace it in time.


5.2 Two-in-one water tank assembly maintenance

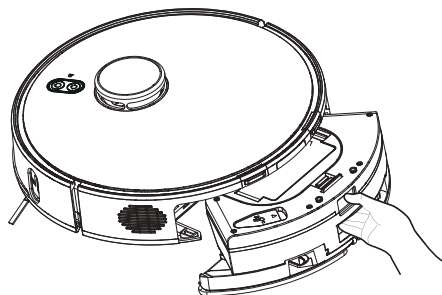


Press the two-in-one water tank release button to take out the two-in-one water tank.

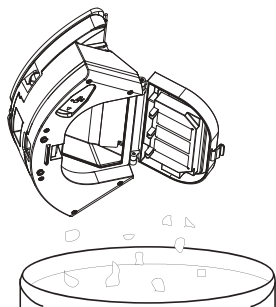


Open the dust box cover and dump the garbage.

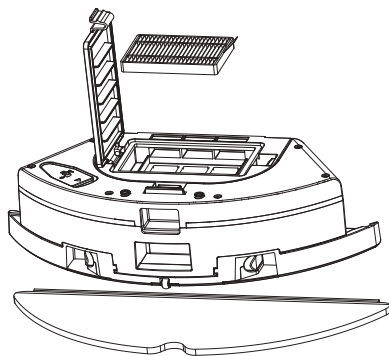


Open the dust box cover, take out the high-efficiency filter and remove the mop.

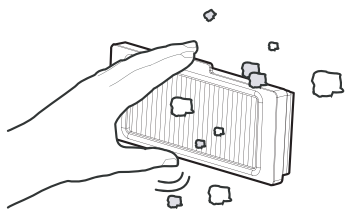


It is not recommended to wash the high-efficiency filter with water. Please tap it gently to remove dust.

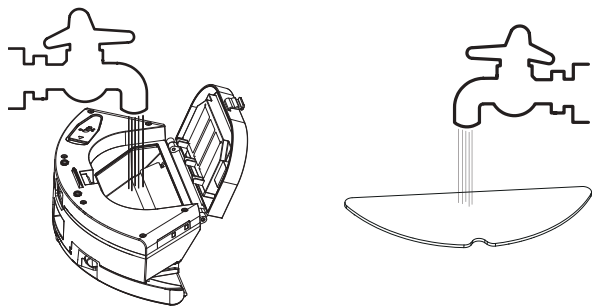


Rinse the dust box and mop clean.

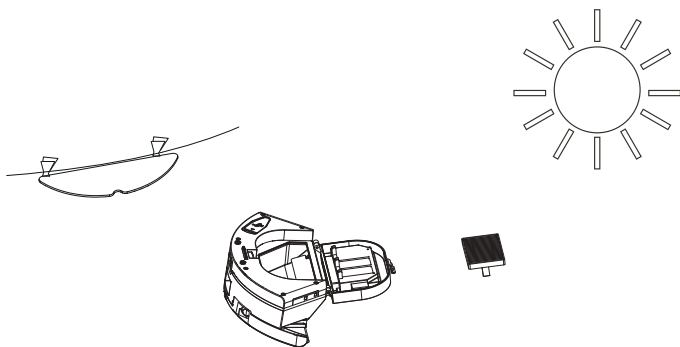

Dry the dust box and filter components to ensure their service life.
It is recommended to wash the two-in-one water tank after 15-30 days of use.
The maximum service life of the high-efficiency filter is 3 months.

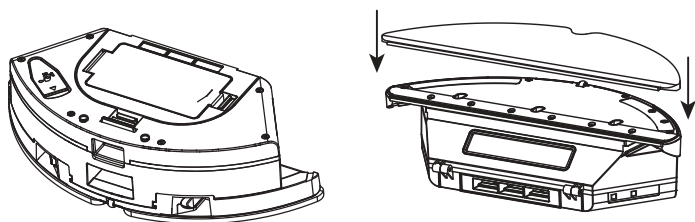


Put the primary high-efficiency filter back into the two-in one water tank, and then stick the mop to the tray.
Before installation, make sure the dust box, high-efficiency filter and mop are dry.

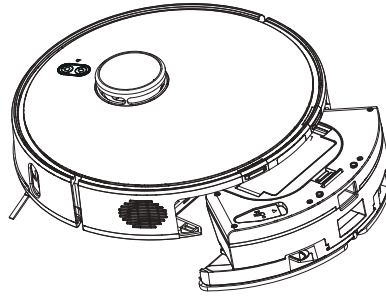


Install the two-in-one water tank onto the host.

5.3 Dust collector maintenance

Place dust bag

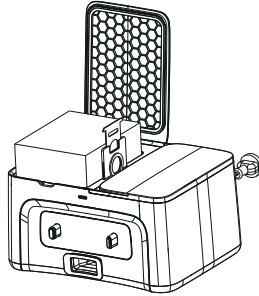

Open the dust collector cover, insert the dust bag guide plate into the dust bag position of the dust collector, and fully insert the dust bag handle into the dust bag guide plate. Close the cover.

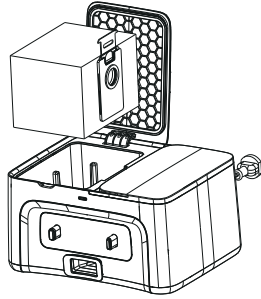

Open the dust collector cover, pinch the dust bag handle and pull it upwards to separate the dust bag from the dust collector. Then follow the steps for placing the dust bag and replace it with a new one.

Indicator light description

The fast flashing red light indicates that the dust bag is not installed properly. Please check whether the dust bag is installed or installed properly.


The slow flashing red light indicates that the dust bag is full. Please replace the dust bag in time.

The constant white light indicates that dust collection is in progress.



The slow flashing white light indicates that the dust collector is idle or charging the robot.

The fast flashing white light indicates that dust collection is completed.

5.4 Maintenance of roller brush components

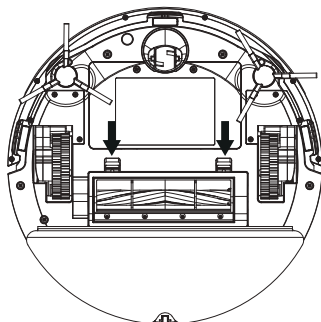


Open the brush cover assembly

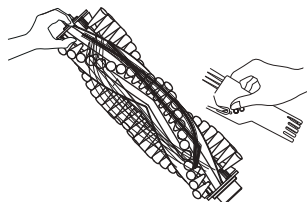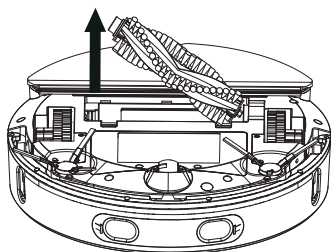


Take out the roller brush shaft and clean the debris and hair on it.

5.5 Other component maintenance

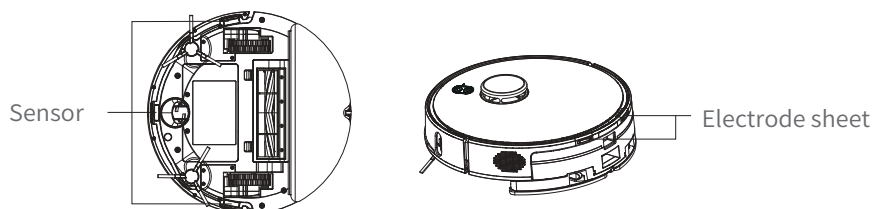

Use cleaning tools or dry soft cloth to gently wipe the charging electrode sheet and sensor window on the chassis of the machine from time to time.

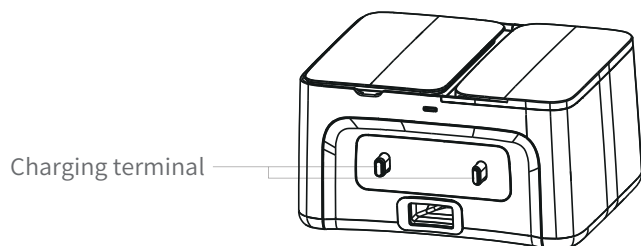

Disconnect the power supply and clean the charging cradle terminals with a dry cleaning tool or soft cloth.

6.1 Fault description

Fault conditions	Possible causes	Solution
Host cannot be charged	The charging electrodes of the main unit and the dust collector are not in full contact.	Make sure the host is fully connected to the charging electrode of the dust collector.
	The power of the dust collector is turned off, but the host is turned on, resulting in power consumption.	When the host is not working, it is recommended to keep it charged so that it can work better next time.
Host cannot be charged	The host is entangled and blocked by scattered wires, drooping curtains or carpet edges on the ground.	The Host will try various methods to get out of trouble autonomously. If it fails to get out of trouble, it is recommended to help manually.
The cleaning is not completed, the Host returns to charge	The Host can sense low battery during operation and automatically return to charge.	Charge the host.
	The host's working speed and duration are different for wooden floors, tiles and other flat floors.	The Host's working time varies depending on the complexity of the room, the amount of garbage, and the cleaning mode.
Host does not automatically clean according to the scheduled time	The Host is not turned on. The Host cannot work on its own at the agreed time when it is turned off.	Press and hold the cleaning button on the machine to turn on the Host.
	The host is low on power.	When the Host is in standby mode, it should be kept on the charging dock to ensure that it has sufficient power to work at any time.
	The host components are clogged and entangled with garbage.	Turn off the power, clean the dust box, and turn the bottom of the Host upwards. Clean each component separately.
	The host is in Do Not Disturb mode	Check whether the Do Not Disturb mode switch is turned on in the smart cleaning settings of the app.

When the Host is working, there are problems such as missed sweeps, disordered routes, deviations, and irregular and untidy display of the cleaning map on the APP.	The drive wheel may slip on the ground when the host climbs small steps, thresholds, and door strips, thus affecting the host's judgment of the whole house working environment.	It is recommended to close the door of the area and clean the area separately. The Host has the function of self-identifying a single room and will return to the starting point after cleaning. Please feel free to use it.
	Working on a newly waxed, polished floor or smooth floor tiles will reduce the friction between the drive wheel and the ground	It is recommended that you wait until the floor wax is dry before cleaning.
	Objects such as wires and slippers placed on the ground will affect the normal operation of the host	Before the host starts working, please tidy up the scattered wires, slippers and other objects on the ground to reduce the scattered items on the ground as much as possible.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

6.2 Replaceable modules

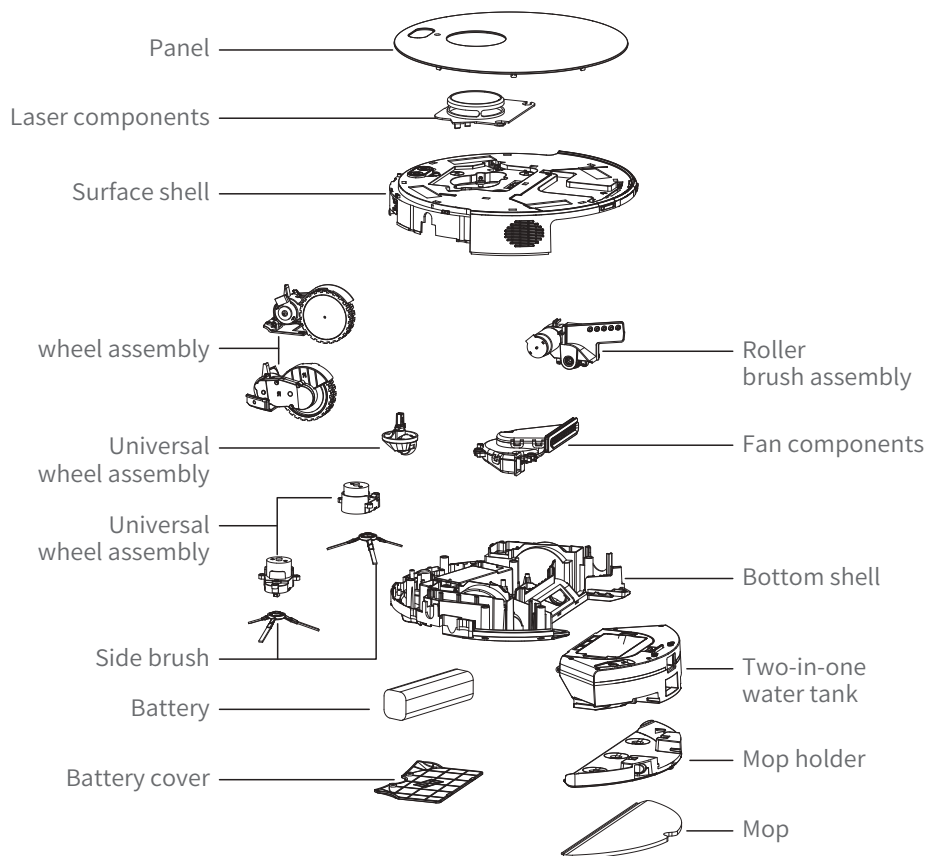

Scope of application

This product is suitable for cleaning homes, hotel rooms, and small offices. It has a good cleaning effect on various short and long carpets (carpet hair less than 1.5 cm), wooden floors, hard floors, and tiles.

MORE FAMILY TIME. LESS CLEANING.

Manufacturer: Tesvor, Huaxin Innovation Co., Ltd
Address: B301, building 4, No.7 Industrial Area,
Heshuikou Community, Matian Street,
Guangming District, Shenzhen, China
Whatsapp: +14244680655
Customer Service: service.us@tesvor.com
Company website: <https://www.tesvor.com>