 



Nokia True Wireless Earphones
T3010

User guide


Contents

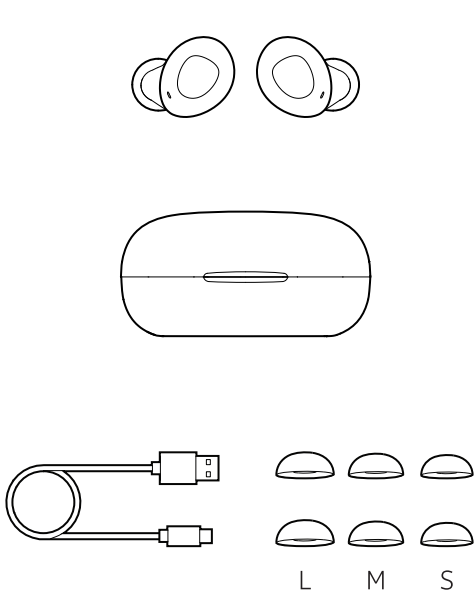

 
Powering on

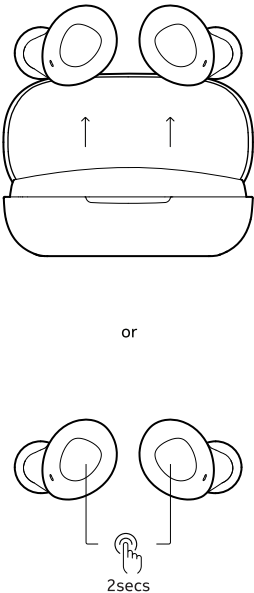

Pairing mode

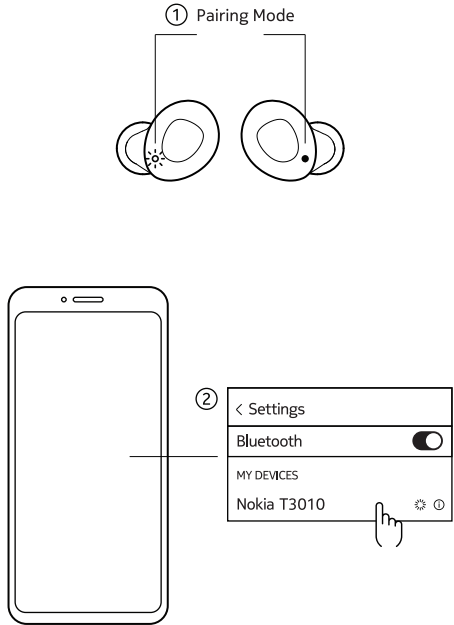 


Charging

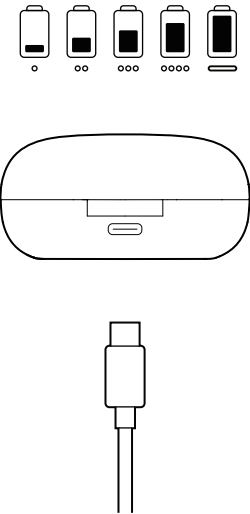 


Flipkart India Private Limited is a licensee of the Nokia brand in India. Nokia is a registered trademark of Nokia Corporation.
All trademarks are the property of their respective owners.

 Reset

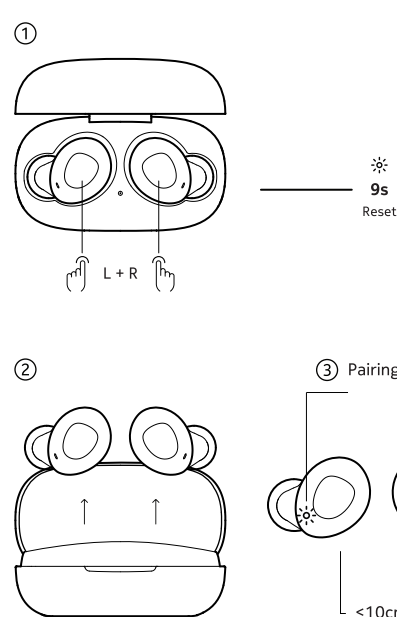

Controls

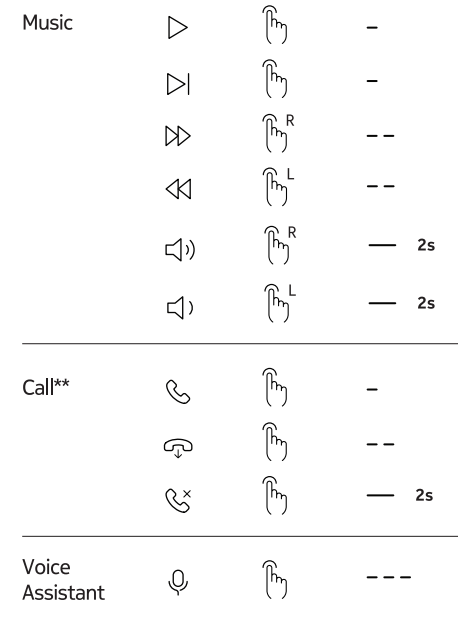 

**Only the right (R) earbud has a microphone for speaking.

Specifications

Nokia True Wireless Earphones T3010

Wearing style	: True wireless earphones
Ear coupling	: Ear canal
Frequency response	: 20Hz to 20kHz
Transducer principle	: Dynamic, closed
Transducer size	: 6mm
Sound pressure level(SPL)	: 91dB(1kHz/ 1mW)
Impedance	: 32Ω
Microphone principle	: MEMS x 1
Power supply	: Built-in Lithium rechargeable batteries, 3.7V Left earbud: 40mAh Right earbud: 40mAh Charging case: 400mAh
Operating time	: 2.5hrs (music playback via A2DP) with rechargeable batteries of the earphones* 10hrs with rechargeable battery of the charging case*
Charging time	: Earphones: approx. 2hrs Charging case: approx. 2hrs
Ingress protection (earbuds)	: Splash proof (IPX3)
Weight	: Left earbud; approx. 4g Right earbud; approx. 4g Charging case; approx. 30g
Volume Control	: Yes

Wireless Profile

Version	: Wireless specification version 5.0
Profiles	: HSP, HFP, AVRCP, A2DP
Effective Range	: Line of sight approx. 30ft (10m)
Transmission frequency	: 2402MHz to 2480MHz
Output power	: 10mW (max.)
Supported Audio Format(s)	: SBC

* Charging case that holds multiple charges for having the total play time. Battery life depends on device settings, environment, usage and many other factors.

Troubleshooting

Problem	Reason	Solutions
Does not power on / Does not respond	Battery is low	Charge the earphones for 2 - 3 hours and restart the earphones
No sound after pairing	Incorrect pairing	Pair the earphones again or reset the earphones
Turns off automatically	Battery is low	Charge the earphones for 2-3 hours
Failing to charge	Error with power supply	Perform a hardware reset
No light on the case during charging	Error with power supply	Check the charging cable is plugged in and ensure that the switch is on.
Hearing an echo	Volume is too loud or the environment is too noisy	Adjust the volume or change your location
Noise in-call / Sound occasionally drops	Noisy environment or distance between earphones and mobile phone is too far	Change your location or bring your earphones and mobile device closer together
Sound is too low	Low volume	Increase the volume
Pairing unsuccessful / Only one side has sound / Cannot find the pairing name on the device / Mono pairing unsuccessful	Reset the earphones / Reconnect the earphones again	Reset and reconnect the earphones
Earphones don't power on when removing from the charging case	Charging case has low battery power	Charge the earphones and the charging case for 2-3 hours

Safety Guide

Important safety instructions

- Read the user guide & warranty manual (as supplied) carefully and completely before using the product.
- Always include this safety guide when passing the product on to third parties.
- Do not use an obviously defective product.
- Use only the product in environments where wireless transmission is permitted.

Preventing damage to health and accidents

- Do not listen at high volume levels for long periods of time to prevent hearing damage.
- The product generates stronger permanent magnetic fields that could cause interference to cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.94" (10cm) between the product component containing the magnet and the cardiac pacemaker, implanted defibrillator or other implant.
- Keep the product, accessories and packaging parts out of reach of-children and pets to prevent accidents.
- Use only attachments, accessories, spare parts supplied or recommended by Flipkart.
- Do not use the product in an environment that requires your special-attention (e.g. in traffic).

Preventing damage to the product and malfunctions

- Always keep the product dry and do not expose it to extreme temperatures (hair dryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation. The normal operating temperature is from 0 °C to 40 °C/32 °F to 104 °F.
- Use only attachments, accessories, spare parts supplied or recommended by Flipkart.
- Only clean the product with a soft, dry cloth.

Safety instructions for lithium rechargeable batteries

- WARNING**
In extreme cases, rechargeable batteries may leak and may cause the following hazards if abused or misused:
explosion · fire development · heat generation · smoke or gas development

	Dispose of defective products with built-in rechargeable batteries at special collection points or return them to your specialist dealer.
	Only use rechargeable batteries recommended by Flipkart and the appropriate chargers.
	Only charge the product / rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F.
	Switch battery pack-powered products off after use.
	When not using for extended periods of time, recharge the product / rechargeable batteries regularly (about every 3 months).
	Do not heat the product / rechargeable batteries above 70 °C/158°F. Avoid exposure to sunlight and do not throw the product / rechargeable batteries into fire.