 


MateStar®

Stand Air Circulator
with Remote Control

Model: MAT-1913R

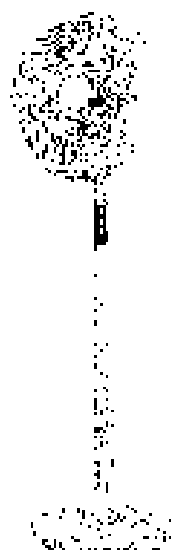

INSTRUCTION MANUAL

Please read these instructions carefully before using and keep them for further use.

Made in PRC

IMPORTED BY:

ROMICO L.T. FRAGERS LTD

11 Dias Str., 1050 Nicosia - Cyprus

tel: 22400310

www.matestar.eu



Dear customer,

Thank you for choosing our product. This manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new fan.

IMPORTANT INSTRUCTIONS

When using this appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the followings:

 
1. Read all instructions before using this fan.
2. **CAUTION:** Risk of electric shock. Do not open or try to repair the fan yourself.
3. Never insert foreign objects, such as fingers, pencil, etc. through the grille when fan is running.
4. Always unplug the fan when moving from one location to another, when cleaning grilles or fan cleaning.
5. Do not use the fan if it is not stable, even without blades depending on displacement of fan.
6. Do not use the fan in window, lightning may create an electrical hazard. Do not leave fan operating adjacent to an area where water has fallen through, the potential of electrical hazard. Do not immerse unit, plug or cord in water or spray with liquids.
7. Do not operate the fan with a damaged cord or plug or if the fan malfunctions, has been dropped or damaged in any manner. Return the fan to authorized service facility for examination, electrical or mechanical adjustment, or repair.
8. Do not operate in the presence of explosive and/or flammable fumes.
9. Do not place fan near an open flame, cooking or other heating appliances.
10. Do not use this fan outdoors or where there are bodies of water, such as the bathroom or laundry room. Never locate fan where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
11. Do not use fan without base. The fan must operate in standing upright.
12. Do not use fan near curtains, blinds, window treatment or where other objects can be caught in the blades.
13. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
14. Do not use cord under carpeting. Do not cover cord with tape, rags, furniture, or similar coverings. Arrange cord away from heat areas and where it will not be tripped over.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given instruction or supervision concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
16. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polyethylene) out of their reach.
17. If you notice any malfunctioning or have a complaint with the fan, turn the appliance off and unplug it immediately.
18. Use only for intended household use as described in this manual. Any other use not

recommended by the manufacturer may cause fire, electrocution, or injury to persons. The use of attachments not recommended or sold by manufacturer.

19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.

PARTS REFERENCE

1. Front grille
2. Decorative circle
3. Grille frame
4. Rear grille
5. Motor housing
6. Control panel
7. Control buttons
8. Fan body
9. Upper column
10. Lower column
11. Securing nut
12. Base
13. Base locking nut
14. Remote control

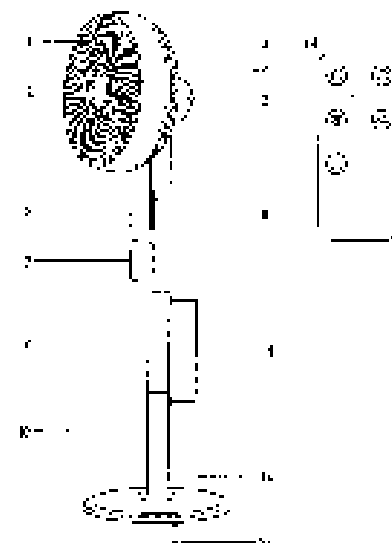

ASSEMBLY

Assembly of base

Remove all parts from packing.

1. Set the base of the fan.
2. Unscrew base locking nut from the threaded end of the lower column.
3. Insert the lower column into the control side of the fan base, put the locking nut onto the threaded end of the lower column and turn clockwise to secure and tighten the base to the lower column.
4. Turn the base over and set it on the floor.
5. Insert the upper column into the top base of the lower column, tighten the column securing knob.
6. Place the fan body on the top of the upper column. Tighten the body securing knob.

Assembly of fan blade and grilles

1. Remove and discard the axis sleeve on the motor shaft. Fasten the rear grille against the front of the fan housing through the motor shaft. Ensure that all guiding rings on the motor housing are lined up with cutouts on the rear grille.
2. Set the rear grille into place with the mounting nut. Fasten the nut firmly onto the motor housing by tightening it with a screwdriver.

1. Insert the fan blade into the motor shaft and make sure the blades *lock* with the pins inside of the motor shaft.
2. Place blade cap on the motor shaft after blade. Fasten into place by tightening the blade cap counter clockwise direction.
3. Attach the front grille to rear grille by aligning the alignment mark on the top of the grille, clasp them together by the hooks (a in Fig. 1) on the front grille and the slots (b in Fig. 1) on the rear grille. (See Fig. 1), rotate the front grille clockwise to the lock position.
Note: Unscrew the lock screw from the front grille before assembly (see Fig. 2).

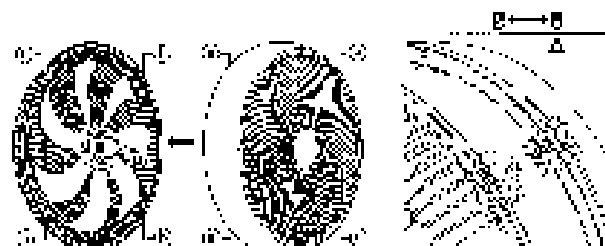 


Fig. 1

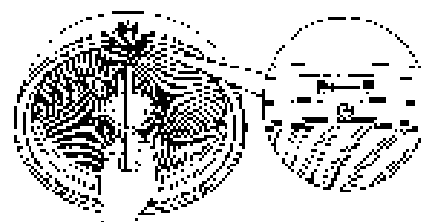 


Fig. 2

- A. Tighten the lock screw to secure the grilles (see Fig. 2).

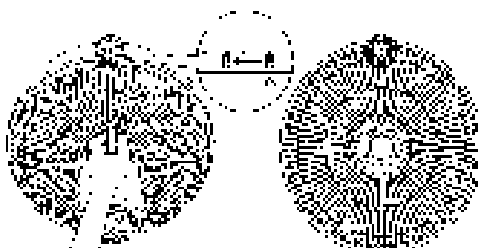 


Fig. 3

- B. Check the correct rotation of the fan.

OPERATING INSTRUCTIONS

CAUTION: Ensure the product is fully assembled before plugging it into a power socket.

1. Place the fan on a flat, level and stable surface.
2. Plug into 220-240V, 50Hz power socket, the appliance will be in standby mode.
3. The appliance may be operated by the push buttons on the control panel or by the supplied remote control.
4. **ON/OFF SETTING**
Press "ON/OFF" button on the control panel or the fan ON, the fan start running at the default middle speed(F1). Press again to turn the fan OFF.
5. **SPEED SETTING**
Press "SPEED" button on the control panel or supplied remote control will cycle the fan through 4 constant speeds(F1=low speed, F2=middle speed, F3=high speed, F4=Max speed).
6. **SWING SETTING**
Press "SWING" button on the control panel or supplied remote control will activate the oscillation for widespread air distribution, press it again to stop the oscillation.
7. **TIMER SETTING**
Press "TIMER" button on control panel or the supplied remote control sets the timer in increments of 1 hour to a maximum of 8 hours. When the timer runs out, the fan will automatically shut off.
8. **MODE SETTING**
Press "MODE" button on control panel or the supplied remote control will make the fan through different patterns of wind modes.
NORMAL wind: The fan is operating on the normal mode.
NATURAL wind: The fan's simulating a natural wind by cycling through all the speeds.
SLIP wind: The fan runs in NATURAL mode and decrease by one level per half an hour and continue to run at low speed, ideal for resting.
- If it is selected HIGH, the fan will work under HIGH NATURAL wind mode for half an hour, then revert to work under MID NATURAL wind mode for half an hour and then revert to LOW NATURAL wind mode.
- If it is selected MID, the fan will work under MID NATURAL wind mode for half an hour and then revert to LOW NATURAL wind mode.
- If it is selected LOW, the fan will work under LOW NATURAL wind mode.
9. Unplug the fan when not in use.

REMOTE CONTROLLER INSTRUCTION

1. The remote control includes one CR2025 battery. Battery comes pre-installed.
2. Pull the plastic insulation B away from the backside of the remote control before first use.
3. The remote control functions are the same as the control panel on unit. Follow the same instructions above to operate the fan remotely.
4. Note: The remote control must be pointed towards the appliance for the fan in order to work.
5. Please take out the battery for long time no use.



WARNING: KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. The remote control supplied with this product contains a button cell battery. Leaking or damaged batteries can cause burns on contact with skin. The battery could potentially be a choking hazard for children. If the button cell battery is swallowed, it can cause severe internal harm in just 2 hours and can lead to death. If you think the battery may have been swallowed or placed inside any part of the body seek immediate medical attention.
DO NOT DISPOSE OF BATTERY IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

MAINTENANCE AND STORAGE

1. Unplug the unit.
2. To keep the fan clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. **CAUTION: DO NOT let liquid enter the fan.**
3. **DO NOT** use alcohol, acetone, abrasive powders, furniture polish, or any other harsh to clean the fan. This may cause damage or deterioration to the surface of the fan.
4. **DO NOT** immerse the fan in water.
5. Wait until the unit is completely dry before use.
6. Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packing to repack the unit.

TECHNICAL DATA

Voltage: 220-240VAC

Rated frequency: 50Hz

Max. power output: 15W

Electrical protection: Class II

PLEASE FILL YOUR DETAILS FOR FUTURE USE

GUARANTEE CARD

CUSTOMER'S DETAILS

NAME OF BUYER

ADDRESS

TELEPHONE

DETAILS OF SHOP

NAME OF SHOP

RECEIPT VOUCHER NO.

DATE OF PURCHASE

APPLIANCE DETAILS

TYPE OF APPLIANCE

MODEL NO.

SERIAL NO.