



To Register Through Website



1 Visit Foxwell website www.foxwelltech.us and press **Register** icon, or go to the registration page by selecting **Support** from home page and then click **Register**.

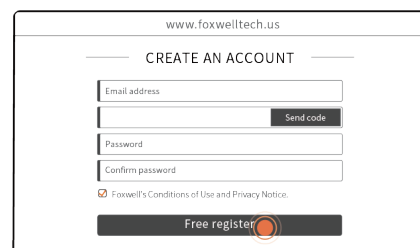

2 Enter one of your email addresses as your user ID and click the **Send Code** button. Find the security code in your mailbox, input the code, create a password and click **Free Registration** to complete.

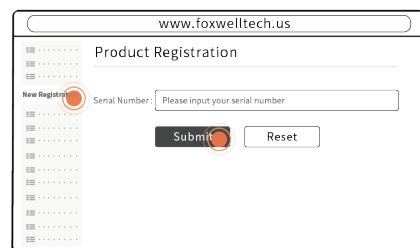


3 Sign in to the Member Center, click **New Registration**, input the right serial number and click **Submit** to activate the product. **(Password is not required)**


Serial Number

To find the serial number:

 1. On the back of the main unit.



 
2. In the scanner About page.




To Register Via Update Client




1 Visit our site www.foxwelltech.us and then click **Support** at the home page. Click **Tools** at the support page and find the product you have to download the update client.

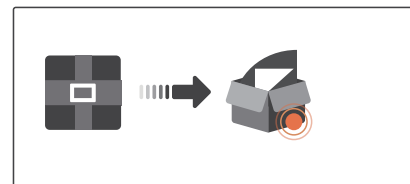


2 Unzip the file and find the installer to install the update client to your computer.

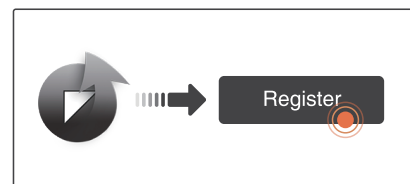

3 Click the desktop icon to launch the update client and click **Register** icon to create a Foxwell ID.

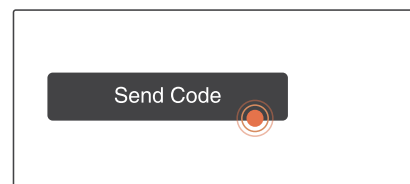

4 Enter one of your email addresses as your user ID and click the Send Code button. We will send a 4-digit verification code to the email you just entered.

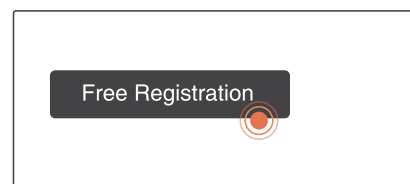


5 Find the security code in your mailbox, input the code, create a password and click **Free Registration** to complete.




6 Sign in your Foxwell account and select **Activation**. Input a serial number or click the **Read** icon to read the SN from the scanner. Click **Activate** button to activate. **(Password is not required)**


TPMS Sensor Activation

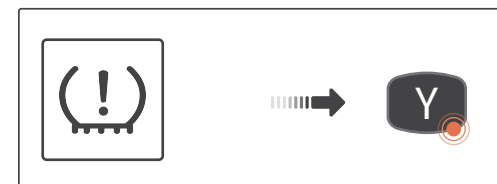

1 Highlight TPMS from the main menu and select the vehicle model as need.

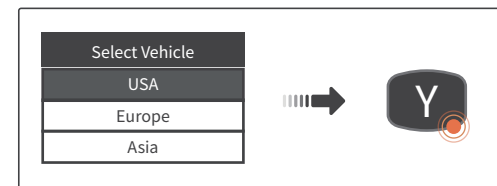

2 Select Trigger from the available menu.

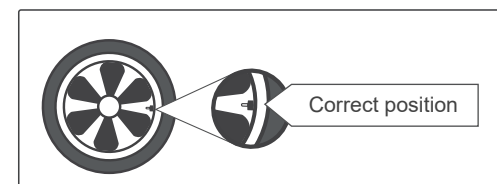



3 Place the tool to the correct position to ensure sensor activation and decode.



4 Press **Activate** to test the TPMS. If test passes, TPMS data will be briefly displayed for 3 seconds.

Battery Charging

The scanner has a built-in lithium-ion polymer rechargeable battery.
The unit charges on any of the following sources:

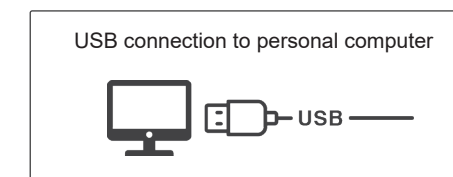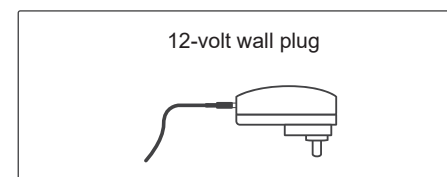


TPMS Sensor Programming

Manual Create



Highlight **TPMS** from the main menu and select the vehicle model as need.

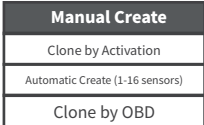

Select **Programming--Manual Create** from the available menu.



Input the sensor ID in the dialog box and press **Y** to continue.



Place a new Foxwell sensor near the TPMS tool (around 0-20 cm).




Press **F3** to start the programming when the tool detect the sensor.

Clone by Activation



Highlight **TPMS** from the main menu and select the vehicle model as need.

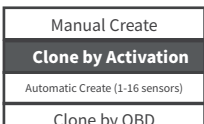

Select **Programming--Clone by Activation** from the available menu.



Place the tool near the original sensor to be copied and press **Activate** to continue.



After trigger successfully, press **Y** to continue.



Place a new Foxwell sensor near the TPMS tool (around 0-20 cm).




Press **F3** to start the programming when the tool detect the sensor.

Automatic Create (1-16 sensors)



Highlight **TPMS** from the main menu and select the vehicle model as need.

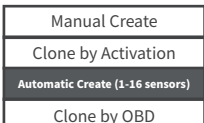

Select **Programming--Automatic Create** from the available menu.



Place new Foxwell sensors(1-16) near the TPMS tool (around 0-20 cm).




Press **F3** to start the programming when the tool detect the sensor.


Clone by OBD



Highlight **TPMS** from the main menu and select the vehicle model as need.

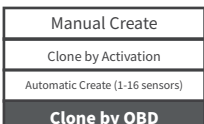

 Select **Programming--Clone by OBD** from the available menu.



Connect the TPMS tool with the vehicle via **OBDII cable** and turn the ignition on.



Select the sensor ID to be copied after reading ID information successfully and press **Y** to continue.



Place a new Foxwell sensor near the TPMS tool (around 0-20 cm).



Press **F3** to start the programming when the tool detect the sensor.

Update

Before updating, please ensure you are connected to the Internet and you have created a Foxwell ID.



Desktop icon

1

Launch the update tool **FoxAssist** by double clicking the desktop icon and login with your Foxwell ID and password.



USB

2

Connect the scanner to the computer with the TF card reader or USB cable provided (TF card reader update is suggested).



3

Select **Download** then all the updates applicable to your tool display. Click the check box(s) in front of the software you wish to update and then click **Upgrade** button to start updating.

Contact Us

For service and support, please contact us.

-  Website : www.foxwelltech.us
 E-mail : support@foxwelltech.com
 Service Number : + 86 - 755 - 26697229
 Fax : + 86 - 755 - 26897226



REGISTER YOUR PRODUCT AT
<http://www.foxwelltech.us/register.html>