



**NESPRESSO®**

DESCALING  
GUIDE





# IMPORTANT INFORMATION BEFORE YOU BEGIN

*Nespresso* recommends descaling every 3 months or 300 capsules (whichever comes first).

---

*Nespresso* machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

---

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

---

Keep descaling solution out of reach of children.

---

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

---

Do not swallow or ingest the descaling solution.

---

The descaling solution may be irritating to the eyes and skin.

---

Avoid filling up the water tank during the descaling process.

---

After descaling, wipe down the machine with a damp cloth.

---



---

EVOLUO




Duration: 20 minutes

## STEP 1



Fill water tank with **1 packet** of descaling solution and 1/2 tank of water.

## STEP 2

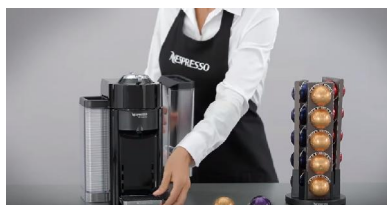

With machine plugged in, empty the capsule container and drip tray and place back onto the machine.

## STEP 3



Leave the lever in the unlocked position. Press and release button once and wait for steady light.

## STEP 4



Press and hold button until you see steady light turn off first, and then start blinking quickly. It may take approximately 7 seconds before light starts to blink.

## STEP 5



Turn lever to the left to lock the lever, then turn lever back to the front to unlock the lever.

## STEP 6



Press and hold the button until the light turns off and then starts blinking quickly again. **Steps 5 and 6 must be completed within 45 seconds.**

## STEP 7



Lock the lever. The light should still be blinking fast. This is an indication that you have entered descaling mode. If not, start over from Step 3.

## STEP 8



Place 20 oz. receptacle underneath spout. Press and release button once to begin descaling. Light will continuously blink throughout the process. Machine will dispense solution intermittently.

## STEP 9



Once the solution has finished running through, machine should be silent. Discard the solution and return the empty receptacle underneath the coffee spout.





### STEP 10



Rinse water tank. Refill with  $\frac{2}{3}$  fresh water and place back on the machine. Press and release button to start the rinsing process.

### STEP 11



The machine will stop making noise once the water tank is completely empty. Discard the water from the receptacle.

### STEP 12




Once the water tank is empty, press and hold the button until the blinking light becomes steady. This may take approximately 7 seconds.

### STEP 13



Refill the water tank and place it back onto the machine.

### STEP 14

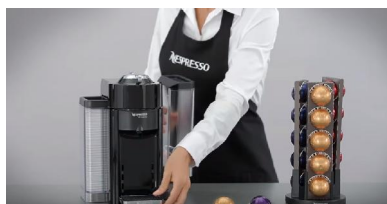

Empty and rinse the capsule container and drip tray and reinsert.

### STEP 15



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.