

JVC

Bluetooth Party Speaker

XS-N6211PBA

JVC



Register your product at jvctv.com.au/warranty-registration

 

 
 




INTRODUCTION

In order to ensure safety and efficiency of the product, please read this manual carefully before operating. Keep the manual in a safe place for future reference.

1. Use this apparatus in moderate climates only. This product is for indoor use only.
2. No naked flame sources, such as lighted candles, should be placed on the apparatus.
3. To preserve our environment, dispose of used batteries according to your local laws or regulations.
4. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on apparatus.
5. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
6. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use.
7. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
8. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
9. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
10. This product is not a toy! Children should be supervised to ensure that they do not play with the product.

PRECAUTIONS

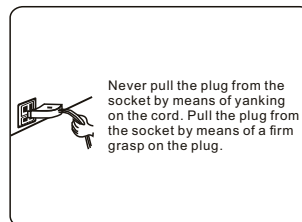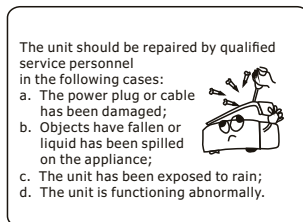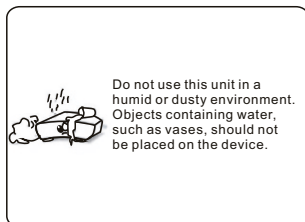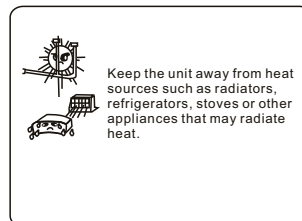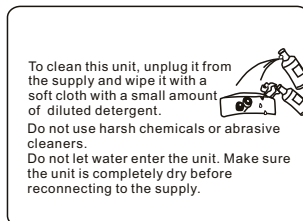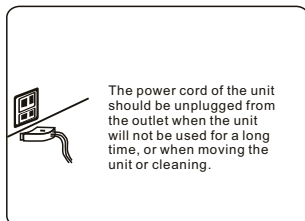

SAFETY WARNING



The unit uses AC 100-240V ~50/60Hz. If the AC exceeds this range, the unit will get damaged.

If the unit is in need of repair, please contact a qualified service technician. Do not attempt to repair it yourself.

 
In order to prevent hazards such as fire or electric shock, please keep the unit away from rain.

To avoid the risk of electric shock, do not open the unit.

Please adhere to the above-mentioned safety suggestions. If there are malfunctions found during operation, please turn off, unplug and contact customer service.

DESCRIPTION OF REMOTE CONTROL

Before first use, please insert the 2 x AAA batteries provided separately.

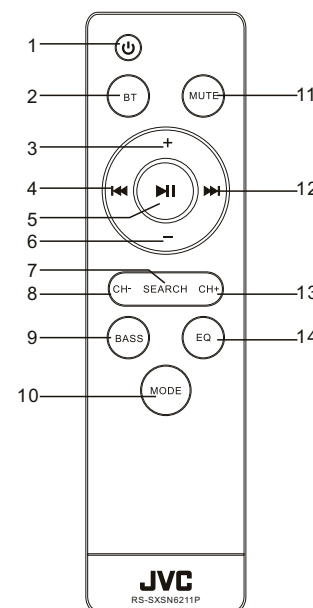

1. Power On/Off
2. Bluetooth
3. Volume Increase(+)
4. Previous
5. Play/Pause
6. Volume Decrease(-)
7. FM Search
8. Previous FM Channel
9. Bass
10. MODE (Switch between BT/ FM/ AUX/ USB)
11. Mute
12. Next
13. Next FM Channel
14. EQ

SPECIFICATIONS

Power Consumption: 160W

FM : 87.5-108MHz

Tweeter Speaker : 2x2.5"

 
Bass Speaker : 2x8"

Input Sensitivity: 880mV


Power Supply : AC100V-240V ~50/60Hz

Separation : 40dB

SYSTEM CONNECTION

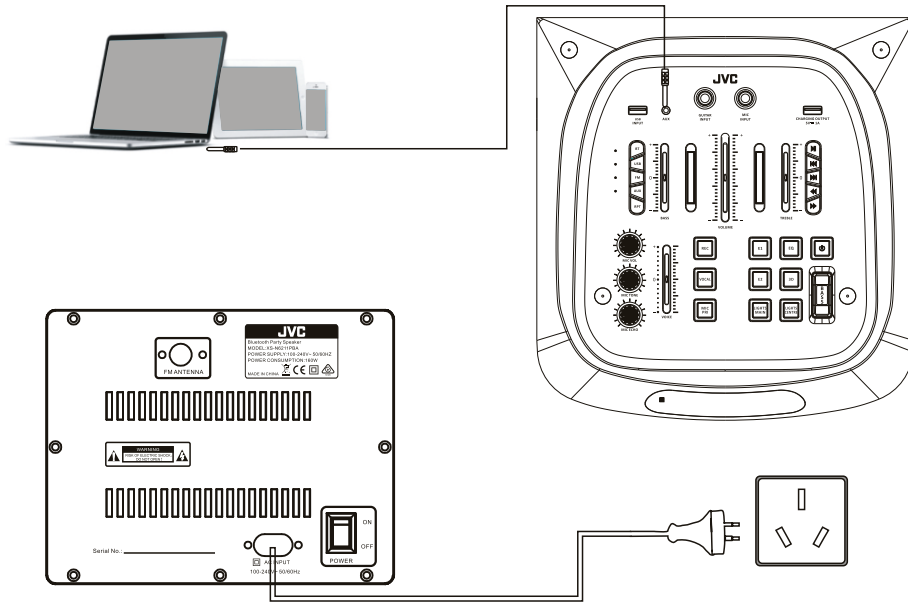

PANEL INSTRUCTION

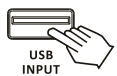 

USB Input: Connect USB memory devices to play compatible mp3 files. (Max. size of USB device that can be connected is 64GB).



GUITAR Slot



DC 5V, 1A USB Output for charging your devices (eg. smartphone).



Press this button once to switch over to USB mode.



Press this button once to switch over to AUX mode.



ON/ STANDBY button



Aux input: Connect to the AUX output of your external device to play compatible files (AUX cable included).



MIC Slot



Press this button once to switch over to Bluetooth mode.



Press this button once to switch over to FM Radio mode.



Press this button repeatedly to repeat a single song or repeat all the songs in USB function. (Note: ALL, ONE or OFF will be shown on the screen)



Previous button



Next button



Forward button



Backward button



Microphone ECHO Adjustment Button



Microphone Volume Adjustment Button



Microphone Tone Adjustment Button to adjust the bass and treble of MIC input.



Press this button to lower vocal frequencies during playback. Press again for normal playback. (Note: Not available for MIC/GUITAR input.)



In BT/FM/Aux/USB mode, press REC button to start recording music and MIC source to a connected USB device. Press REC button again to stop recording. Press and hold REC button to play/stop playing the recorded media.



Press this button to make the microphone priority when music is played.



Press the button for default equaliser effect 2.



Press the button for default equaliser effect 1.



Press this button to choose between available equaliser effects (FLAT, CLASSIC, JAZZ, POP, ROCK)



Press this button repeatedly to switch between the different centre light effects, and turn off the centre lights. (Note: The lights must be powered by pressing the Lights Main button first.)



Press this button once to turn on all lights. Press repeatedly to switch between the different main light effects. Press and hold to turn off all lights.



Press this button once to pause music being played, Press again to resume play; In FM mode, press this button to search and save the channels automatically, press again to stop the search.



Press to turn on or turn off the 3D audio effect.



Use this treble slider to turn up/down the treble effect.



Use this Volume slider to adjust the music volume.



Use this bass slider to turn up/down the bass effect.



Use this voice slider to raise or lower the human voice tone of microphone.



Press this button to turn on/off the extra bass effect.

Bluetooth Operation

1. Press the BT button on the unit or the remote control to switch to the BLUETOOTH CONNECT mode.
2. Open the Bluetooth function on your external device (like a smartphone). Search for 'XS-N6211' and connect to it.
3. Once connected, you can hear a small sound from the speaker.
4. You can use the ⏮ or ⏭ key on the unit or the remote control to control the tracks of the external device.
5. Press the ⏸ button on the unit or the remote control to stop/play music.
6. Press and hold the ⏸ button on the unit or the remote control to disconnect or reconnect the bluetooth.

Note: This speaker does not need a password.

FM Radio Operating Instructions

1. Press FM button on the unit (or MODE button on the remote control) to switch to FM Radio mode.
2. Press SEARCH on the remote control or 🔍 on the unit to search and save the channels automatically.
3. Press SEARCH on the remote control or 🔍 on the unit again to stop the search.
4. Press ⏮/⏭ on the unit or the remote control to change frequency.
5. Press ⏭/⏮ on the unit or CH+/ CH- on the remote control to select next/previous channel.

Troubleshooting

Problem	Troubleshooting method
No Power	<ol style="list-style-type: none"> 1. Ensure that the AC power plug of the speaker is connected properly. 2. Ensure that there is power at the AC outlet.
No sound or poor sound	<ol style="list-style-type: none"> 1. Inspect the function and adjust the volume. 2. Check if speaker is muted.
Intermittent music in Bluetooth mode	Check if the effective connection distance is exceeded or whether there are obstacles between the speaker and BT device.
Remote control does not work	<ol style="list-style-type: none"> 1. Ensure that the right source is selected. 2. Use the remote control within its range without any objects between the remote control and the unit. 3. Try replacing the batteries ensuring correct polarities as marked. 4. Aim the remote control towards the receiver on the display screen of the unit.
USB file failure to play	<ol style="list-style-type: none"> 1. The formats of these files are not supported. Only mp3 files can be played. 2. The USB device is incompatible with the speaker or the USB is damaged.
Bluetooth can not search or connect	<ol style="list-style-type: none"> 1. If other bluetooth devices are connected to your phone, try disconnecting these first, then search and connect again. 2. Turn off the speaker and turn on again, then switch to bluetooth mode. 3. Turn off and turn on bluetooth on your external device.

Responsible disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future.

Please recycle all packaging material where possible.