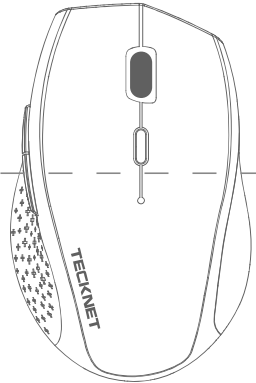 
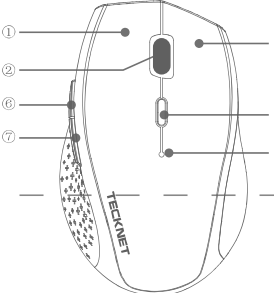 
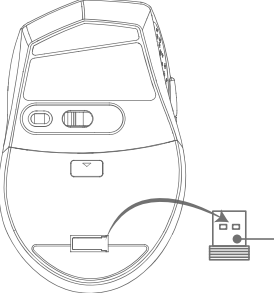 


TECKNET Cordless Mouse  User Manual ENDEFR ESITJP		Package Contents:  x 1  x 1  x 1 Button Instructions:  
--	--	---

Parámetros del producto: Frecuencia operativa: 2.4GHz Por defecto: 1200DPI Interfaz del receptor: USB versión 2.0 Tipo de pilas: 2 pilas AA Voltaje de funcionamiento: 3.0V Corriente de trabajo: <8mA Requisitos del sistema: Sistemas compatibles: Windows 2000, 2003, XP, Vista, Win7, Win8, Win8.1, Win10, MAC, Linux Nota: La rueda de desplazamiento solo funciona en los sistemas operativos enumerados anteriormente. Si usa el mouse en un sistema operativo diferente, el mouse puede no funcionar o perder sus características mejoradas. Instrucciones: 1. Abra la tapa de la batería. 2. Inserte las baterías en el compartimiento, asegurándose de que correspondan con la polaridad correspondiente. 3. Vuelva a colocar la tapa de la batería. 4. Encienda el mouse ajustando el interruptor de encendido debajo del mouse. El indicador LED en la parte superior del mouse parpadeará. 5. El mouse está equipado con un indicador de baja potencia. Cuando la energía de la batería se agota durante el período de uso, el indicador debajo de la rueda de desplazamiento parpadeará. Reemplace la batería. Nota: Al cambiar a 800 DPI, el indicador LED parpadeará una vez Al cambiar a 1200DPI, el indicador LED parpadeará dos veces Al cambiar a 1600DPI, el indicador LED parpadeará 3 veces Al cambiar a 2000DPI, el indicador LED parpadeará 4 veces Al cambiar a 2400DPI, el indicador LED parpadeará 5 veces Al cambiar a 3200DPI, el indicador LED parpadeará 6 veces	Parametri del prodotto: Frequenza Operativa: 2.4 GHz Predefinito: 1200DPI Interfaccia Ricevitore: USB versione 2.0 Tipo di Batteria: 2 batterie AA Tensione di funzionamento: 3.0V Corrente di funzionamento: <8mA Requisiti di Sistema: Sistemi compatibili: Windows 2000, 2003, XP, Vista, Win7, Win8, Win8.1, Win10, MAC, Linux Nota: la rotellina di scorrimento funziona solamente con i sistemi operativi di cui sopra. Se si usasse il mouse con un sistema operativo differente, il mouse potrebbe non funzionare o perdere le sue funzionalità avanzate. Istruzioni: 1. Aprire il coperchio della batteria. 2. Inserire le batterie nel vano, prestare attenzione che corrispondano ai segni della polarità. 3. Riposizionare il coperchio della batteria. 4. Accendere il mouse regolando l'interruttore di alimentazione sotto il mouse. Il LED della spia sulla parte superiore del mouse inizierà a lampeggiare. 5. Il mouse è fornito di una spia che indica la scarsità di energia. Quando la carica della batteria si scarica nel corso del suo utilizzo, la spia sotto la rotellina di scorrimento lampeggia. Sostituire la batteria. Nota: Quando si passa a 800DPI, la spia LED lampeggia una volta Quando si passa a 1200DPI, la spia LED lampeggia due volte Quando si passa a 1600DPI, la spia LED lampeggia 3 volte Quando si passa a 2000DPI, la spia LED lampeggia 4 volte Quando si passa a 2400DPI, la spia LED lampeggia 5 volte Quando si passa a 3200DPI, la spia LED lampeggia 6 volte	製品の仕様: 動作周波数: 2.4GHz 規定: 1200DPI レシーバインターフェイス: USB バージョン 2.0 電池の種類: 単3電池2本 動作電圧: 3.0V 動作電流: <8mA システム要件: 対応システム: Windows 2000, 2003, XP, Vista, Win7, Win8, Win8.1, Win10, MAC, Linux メモ: スクロールホイールは上記のオペレーティングシステムでのみ動作します。それ以外のオペレーティングシステムでマウスを使用されると、マウスが動作しない、または拡張機能が使用できない場合があります。 操作ガイド: 1. 電池ケースのカバーを開けてください。 2. 電池の電極の向きに合わせて電池を装着してください。 3. 電池のカバーを戻します。 4. マウスの下側にある電源スイッチを動かしてマウスの電源を入れてください。マウス上部の電源インジケータのLEDが点滅します。 5. マウスには電池残量インジケータが付いています。使用中に電池の残量が少なくなると、スクロールホイールの下のインジケータが点滅します。電池を交換してください。 メモ: 800DPI に切り替えると、LED インジケータが1回点滅します。 1200DPI に切り替えると、LED インジケータが2回点滅します。 1600DPI に切り替えると、LED インジケータが3回点滅します。 2000DPI に切り替えると、LED インジケータが4 回点滅します。 2400DPI に切り替えると、LED インジケータが5回点滅します。 3200DPI に切り替えると、LED インジケータが6回点滅します。	IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.  1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.  2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product.  3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  4. Children should be supervised to ensure that they do not play with the appliance.  5. Keep the product away from fire or explosion may occur.  6. Do not place product in or near inflammable, explosive or hazardous object.  7. Do not place in or near water, rain, excess moisture or extreme heat.  8. Do not operate product with damaged cord or plug.  9. Do not operate product if it has been damaged in any way.  10. Do not disassemble the product. Disassembly may result in a risk of safety hazards.  11. Do not throw or shake the product.	Limited 18-Month warranty 18 MONTH What this warranty covers. Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TeckNet product that the product shall be free of defects in design, assembly, material, or workmanship. What the period of coverage is. Unichain warrants the TeckNet product for 18 Months. What will we do to correct problems? Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). What is not covered by this warranty? All above warranties are null and void if the TeckNet product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TeckNet product has been improperly installed, altered in any way, or tampered with. The TeckNet Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration. How to claim the warranty Please contact retailers or visit TeckNet website www.tecknet.co.uk for more information. Disclaimer Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.	EC REP SHOPIVATE EURO LIMITED 20-22 Wenlock Road, London, UK, N1 7GU
---	--	---	---	---	--

尺寸: 74.5 X 75 MM

材质: 80g 书纸 单色印刷 风琴折

FCC Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.