
CLAYMOR3 heady II

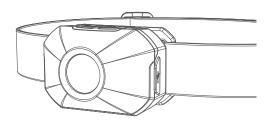

User Manual

CLAYMORE heady II

 
This portable light contains Li-Polymer batteries. Please follow the user manual before use. If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased. Any modifications of this product will void the warranty. Misuse of CLAYMORE products may cause user harm.

Caution

- ① Do not use near high temperatures such as fires or heating equipments. It may cause explosion and ignition. 2 This product is water resistant. However, if left in the rain for a long time, it may cause malfunction.
- If the product gets soaked, please quickly wipe it off,
- 3 Do not store or use in vehicles exposed to direct sunlight, It may cause explosion and malfunction,
- Do not touch the light source directly as it may become very hot during use.
- (5) Do not use if the product exceeds the operating temperature range (-10 ° C to 40 °C).
- Do not look directly into the LED light source.

- ⑦ Please do not place in the reach of infants, It may cause swallowing of parts or injury.
 ⑥ Adult supervision is necessary when used by children. Misuse of head imp may cause injury or electric shock.
 ⑨ Do not insert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock
- O Do not disassemble or modify the product.
- (f) Do not touch the connector with wet hands. There is a danger of electric shock.
- (2) After use, be sure to turn off the power. If not, it may cause leakage.
- (3) When adjusting the angle, please do not bend with force. It may cause damage to the product.
- (4) Dropping or impacting the product can cause damage to the inside of the product, resulting in unexpected failures in normal use, Be careful not to apply impact to the body

Components



Operation



Repeat to turn off the light.

Light turns on when pushing button shortly.





When light is on, Press and hold If light is activated, push down buton to adjust brightness the button and press to increase brightness, Press and hold button once 5 step dimming again to decrease brightness

5 STEP Dimming



the button to control

* Blinks once when Maximum and Minimum brightness is reached,

CCT Change 不



| For hiking







For camping

Warm LED light with low color temperature, warm light feels like ordinary gas lantern Cool LED light with high color temperature, cool light feels like ordinary fluorescent light

When light is on, push

3 different light modes

button shortly to change



When light is on, push button over 2 seconds to make SOS signal on each

Charging method

Open rubber cover and connect USB cable to charge.



* This lantern contains memory function that returns to the last setting it was set at,

Battery check

When charging, battery indicator will flicker in 3 steps to display remaining battery. (Battery remaining will be shown for 2 seconds in 1 step brightness during each mode)

Battery indicator

2411	0~33%	
2400	33~66%	Flickers
2411	66~99%	
-11	Fully charged	Stop

Instructions

Headband





Insert head band on the band hook of the product and adjust to desired

Using Clip



 
As shown in the figure, insert clip into the dip hole on the band hook and push until it makes a "Click" sound. It is attachable to any compatable

Angle adjustment




4 sten tilt to light desired area.

Lantern Hook



Mountable on Carabiner or hangable on a line with hook,

 Specification



Product name	CLAYMORE heady II	Size	59.8×40×39.7mm
Model name	CLC-420(BK/RD/TN)	Weight	58g
Battery capacity	Li-Polymer 3.7V 1,200mAh(4.44Wh)	Charging time	2hour
Input	USB 5V 1A	Origin	MADE IN KOREA
Color temperature	Warm: 3000K, Cool: 6200K (±15%)		

Contents











(§) USB charging cable

⚠ Caution for long-term storage

- * If the battery is completely drained, the battery indicator might not flash.
- If this happens, plug the USB cable back in or press the button to turn the battery indicator on again.
- * For long-term storage, fully recharge the battery. (Repeat every six months)
- * Please keep in mind that if stored below -10°C the battery life may be affected.
- * Please keep in a dry place without moisture.

Warranty

Item	CLAYMORE heady II
Model No.	CLC-420(BK/RD/TN)
Seller	
Date of Purchase	

- 1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
- 2. This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center listed below.

1) Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.

2)Warranty period: 1 year.

Charged Service

- 1) Damage caused when the warranty period is over.
- 2) Damage caused due to the user's mishandling, abuse, or improper operation. 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized
- service center 4) Damage from input electricity or cable defect.
- 5) Damage caused by natural disaster.

Official Import Distributor

Bigtent Outdoor Equipment Ltd., www.bigtentoutdoors.com info@bigtentoutdoors.com

Prism Co., Ltd. www.claymorelight.com / www.prismlight.co.kr info@prismlight.co.kr 101-1501, Chunui-Technopark, Bucheon-ro 198 Road, 36,