



| Original                                                                                 | Recharge                                                                                                       |
|------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  Power  |  Power                        |
|  Input  |  AV / Input / RDS             |
|  Sleep  |  Sleep / Timer                |
|  Nicam  |  Audio / Lang I/II            |
|  P.Mode |  Picture / Format             |
|  S.Mode |  Sound / Title                |
|  1      |  1                            |
|  2      |  2                            |
|  3      |  3                            |
|  4     |  4                           |
|  5    |  5                          |
|  6    |  6                          |
|  7    |  7                          |
|  8    |  8                          |
|  9    |  9                          |
|  -/-- |  Shift + Guide / EPG / -/-- |
|  0    |  0                          |

| Original                                                                                           | Recharge                                                                                                          |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  Recall         |  Back / Return                 |
|  Del            |  Shift + Exit / Cancel / Clear |
|  Subtitle       |  Subtitle / EQ                 |
|  EPG            |  Guide / EPG / -/--            |
|  Red            |  Red / Netflix / Search        |
|  Green          |  Green / APP / Repeat          |
|  Yellow         |  Yellow / YouTube / Repeat     |
|  Blue           |  Blue / Prime Video / Random   |
|  Mute           |  Mute / Dimmer                 |
|  Up            |  Up                           |
|  Info         |  Info / Angle                |
|  Left         |  Left                        |
|  OK / CH List |  OK                          |
|  Right        |  Right                       |
|  Menu         |  Menu / Home                 |
|  Down         |  Down                        |
|  Exit         |  Exit / Cancel / Clear       |



