


Haniture
clean

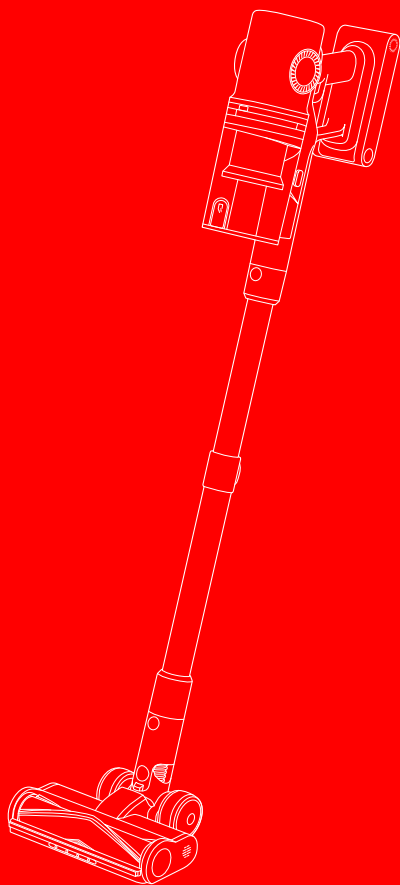

QUICK USER GUIDE

Cordless Vacuum Cleaner

P7 Pro



IMPORTANT SAFETY WARNING

▲ ATTENTION: Please read all of the instructions carefully before using this product.

1. Please do not use the vacuum cleaner to suck the detergent, kerosene, glass slag, needles, soot, wet dust, water, sewage, matches and other items.
2. Please do not use a vacuum cleaner to suck up small particles such as cement, gypsum powder, wall powder, or large objects such as toy paper balls, otherwise it will cause the vacuum cleaner to block and the motor to burn out.
3. Please do not let the vacuum cleaner close to fire sources and other hot places.
4. When using the vacuum cleaner, please pay attention to install the filter assembly and ground brush brush.
5. Please do not dump water or other liquid into the machine to cause short circuit to burn the machine.
6. When using a new battery or the battery used for the first time after long-term storage, please fully charge the battery. When storing and not using the machine for a long time, please ensure that it is charged and discharged at least once every three months.
7. When your vacuum cleaner is fully charged and needs cleaning or maintenance, please unplug the power adapter in time, and do not pull the cord of the power adapter.
8. When cleaning the vacuum cleaner, use a dry cloth to wipe it can, do not use gasoline, banana water and other easy to make the shell crack or fade the cleaner.
9. Please do not use or store the vacuum cleaner in high temperature, low temperature and other adverse conditions, it is recommended at the ambient temperature (0-40°C) for indoor use in a cool and dry place without long sunlight exposure.
10. Do not allow the children to use or play with this machine.
11. When this machine is fully charged and cannot work, it must test and repair at the designated maintenance point. Please do not disassemble the machine without permission.
12. Before discarding the appliance, the battery must be removed from the appliance. When removing the battery, the appliance must be powered off.
13. Discarded battery packs should be recycled and disposed of safely, and please do not discard them randomly.
14. If the cord of the power adapter is damaged, in order to avoid danger, you must go to the manufacturer's local maintenance department or similar department to replace it.

SAVE THESE INSTRUCTIONS



Do not use near open flames



Do not store near heat sources



Do not pick up water or liquids



Do not use near open flames




Do not put hands near the brush bar
when the machine is in use




Do not place on or
near the cooker

1. Know Your Product

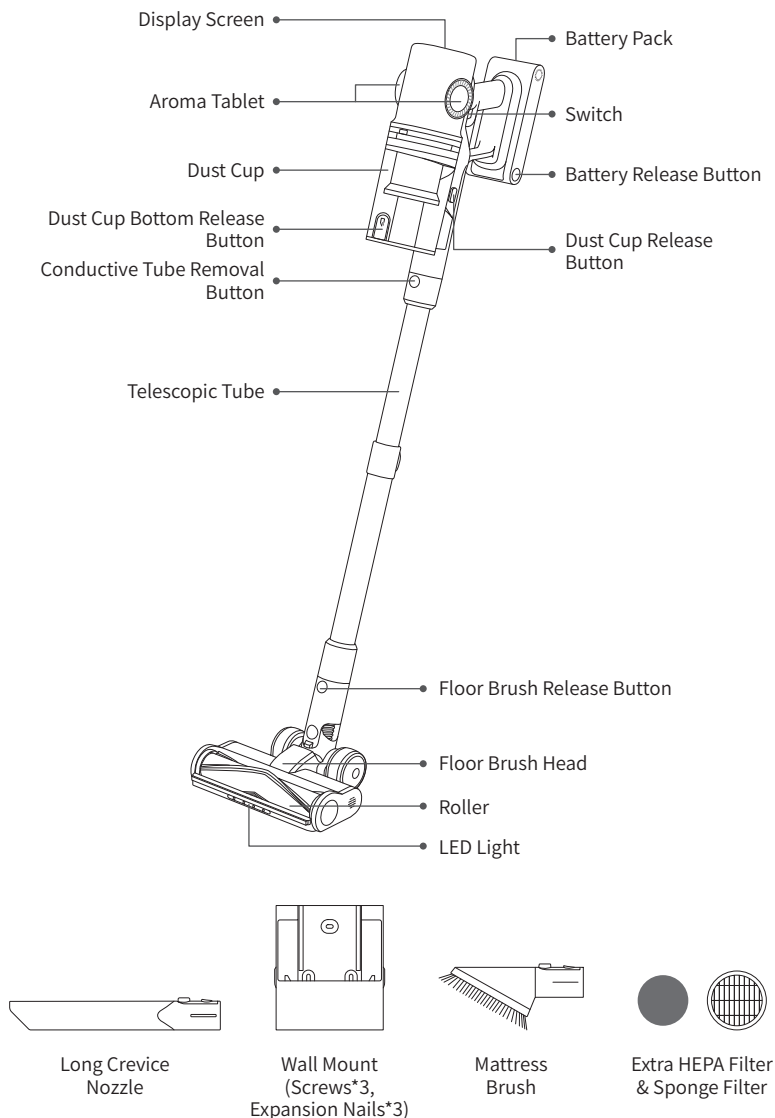




Mini Cleaning
Brush

 

Charger



Aromatherapy
Tablets*2

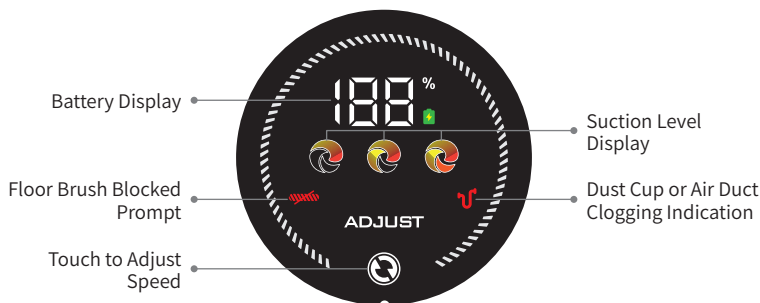


2.Charging

Turn off the power before charging


- Please fully charged the battery before use.
- Please ensure that it is charged and discharged at least once every three months.
- Be sure to use the charger included in the box, other chargers may damage the battery.

Charging Method


① Connect the main body to charge

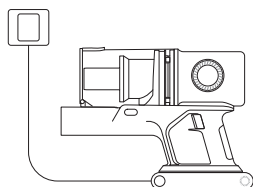

② Hang on the wall mount to charge

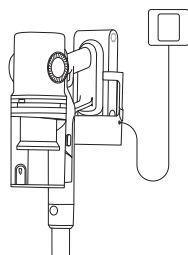

③ Charge the battery directly

 


Green light flashing (Charging)
Battery indicator light


Note: Prolonged max-suction use may cause the battery to overheat and temporarily prevent charging. Charging will resume automatically after cooling.

3.Assembling



Install the Battery Pack

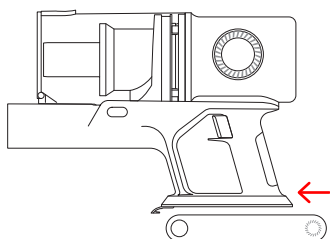


Aromatherapy tablet replacement

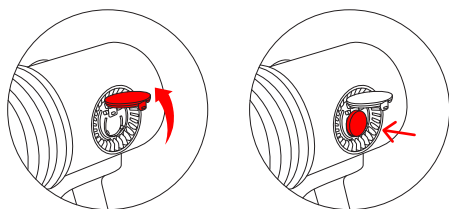

Install Wall Mount

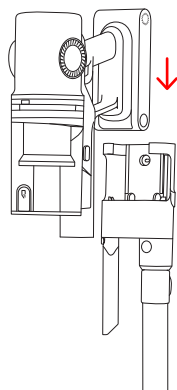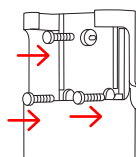


Assembling Cleaning Accessories

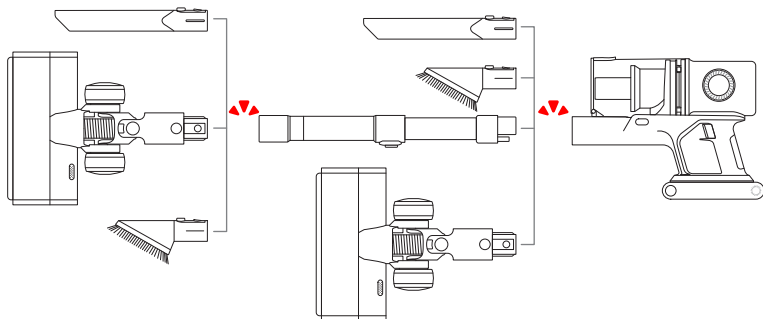

4.Operating

Power Button

Press the switch button to turn it on and again to turn it off. It is not necessary to press all the time!

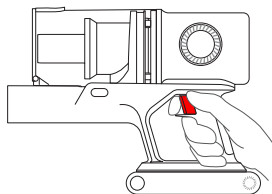

Select Cleaning Mode




ECO



MID



MAX

- Three modes: Touch [] and starts at MID suction. Touch again to switch modes, ECO-MID-MAX in sequence.

Abnormal Indicator



Low battery warning

When the battery level is under 10%,the battery indicator on the screen will start to flash in red.The vacuum cleaner should be charged as soon as possible.



Rolling error report

When the brush roller is blocked,the LED light on the motorized brush goes out,and the red brush roller indicator light keeps flashing until it is manually turned off.Please turnoff the vacuum cleaner and clean the brush roller.



E0 Error code

When the vacuum cleaner main unit malfunctions, error code 'E0' appears for 10 seconds and then disappears.

Solution: Contact customer service for a free replacement of the main unit.



E1 Error code

The main unit is malfunctioning or the ambient temperature is too low. Error code 'E1' will be displayed for 10 seconds and then disappear.

Solution: Please use at temperatures above -17°C or replace the main unit.



E2 Error code

Vacuum cleaner main unit malfunction. Error code 'E2' will be displayed for 10 seconds and then disappear.

Solution: Replace main unit.



E3 Error code

The charger is not being used properly. Error code 'E3' appears for 10 seconds and then disappears.

Solution: Please replace with the original charger. (26V)



E4 Error code

Vacuum cleaner main unit malfunction, Error code 'E4' appears for 10 seconds and then disappears.

Solution: Replace main unit.



E5 Error code

The battery/motor temperature is too high. Error code 'E5' appears for 10 seconds and then disappears.

Solution: Please empty the dust cup of debris and wait one hour before using it again.



E6 Error code

When there is excessive debris inside the dustbin, or when the telescopic rod or floor brush hose is blocked, the red dustbin full indicator light will flash, and error code 'E6' will display for 10 seconds before turning off.

Solution: Please clean the dustbin/telescopic rod/floor brush.



E7 Error code

The adapter is using the wrong current or the adapter is damaged. Error code 'E7' appears for 10 seconds and then disappears.

Solution: Please replace with the original charger. (26V/900mA)



E8 Error code

The floor brush is short-circuited. Error code 'E8' appears for 10 seconds and then disappears.


Solution:

1. Turn on the main unit without connecting any accessories. If the error persists, replace the main unit head; if the error disappears, proceed to the next step for troubleshooting.
2. Connect the extendable rod to the main unit and turn it on. If the error persists, replace the extendable rod; if the error disappears, proceed to the next step for troubleshooting.
3. Connect the floor brush to the main unit and turn it on. If the error persists, replace the floor brush.

5.Cleaning


Clean the Main Body

- Turn off the power before cleaning the body.
- Please use a neutral detergent, wipe the body with a half-wet cloth.
- Please avoid sun exposure and store in a cool and dry place.

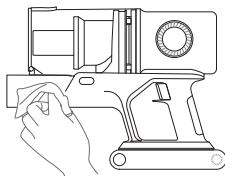


Empty the Dust Cup

- Press the dust empty button to empty the dust.
- When using, if the garbage in the dust cup exceeds MAX line, please empty it in time.



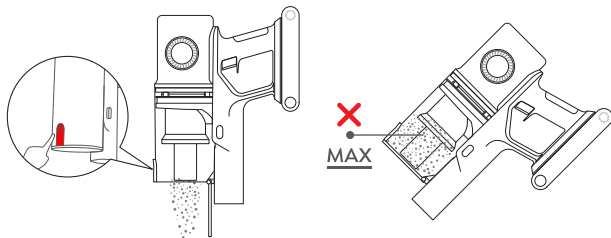


Cleaning the Dust Cup Filter

- In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.
- Remove the dust cup by pressing and holding the dust cup release buttons on the left and right sides of the cup.

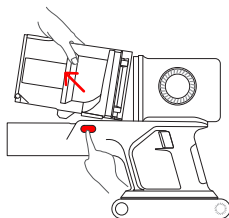







- Rotate and pull out the dust cup filter
- Empty the dust from the dust cup container
- Rinse the dust cup filter in cold water

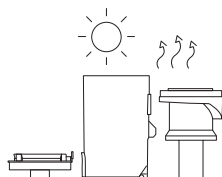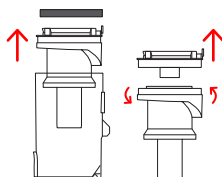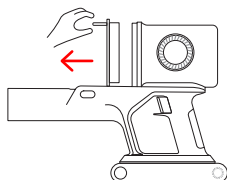

! NOTE: You can clean it with or without water. Please remember to use the roller after it is completely dry.

Clean the Brush Roller

 - Take out the roller.
- The brush side used to clean metal mesh, inlet filter;
- The knife side used to remove the tangled hairs from roller.
- Install the roller.

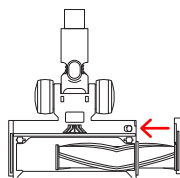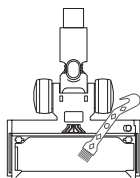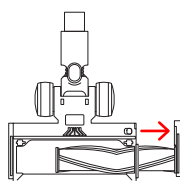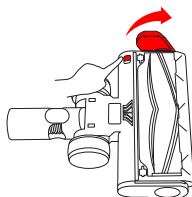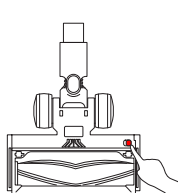

! NOTE: You can clean it with or without water. Please remember to use the roller after it is completely dry.

6.Maintenance

- Please clean your vacuum cleaner regularly to prolong its life.
- It is recommended that the floor brush be cleaned regularly to keep it in effective use and maintain suction power.
- It is recommended to change the HEPA filter every 2 months to ensure excellent performance. Do not use the filter when it is damaged or worn out.
- Only the original charger can be used in the machine.

7.Troubleshooting

ISSUE	CAUSE	SOLUTION
Cannot be turned on	① The switch of vacuum cleaner is not working ② Filtration system / host blockage ③ Battery damage	① Clean/replace the filter ② Contact customer service
Battery cannot be charged	① Loose charging port ② Wrong adapter ③ Adapter/battery damaged	① Reconnect charging ② Use the correct adapter ③ Contact customer service
Weak suction power	① The filter/telescopic tube is clogged ② The floor brush hose is broken	① Clean/replace the filter ② Clean the telescopic tube ③ Contact customer service
Automatic shutdown	① Battery is not fully charged ② Filtration system/host blockage ③ Telescopic tube/floor brush short circuit	① Use original adapter/reconnect to charge ② Clean/replace the filter ③ Contact customer service

8.Warranty

If there is any problem or malfunction during use, please send your question and order number to our email.

(Format of order number: 000-0000000-0000000)

We will provide you a good after-sales service within 24 hours.

Email: support@honitureclean.com



Declaration of Conformity

We (Manufacturer is responsible for this declaration)

Shenzhen Narisa Technology Co., Ltd.
(Company name)

No.5 Huancheng South Rd Bantian,, Rm401, 4/F, BldgB, Bantian Guoji Center,;
518100 Longgang, Shenzhen
(Company address)

declare under our sole responsibility that the product

Trade name: Honiture Clean

Equipment: Vacuum Cleaner

Model No. : P7 Pro

to which this declaration relates is in conformity with the essential requirement set out in the Council Directive on the Approximation of the laws of the Member States relating to LVD Directive(2014/35/EU) & EMC Directive(2014/30/EU) & RoHS(2011/65/EU) product is responsible to affix CE marking, the following standards were applied:

EN 60335-2-2:2010+A11:2012+A1:2013

EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019

EN 62233:2008

EN 55014-1:2021

EN 55014-2:2021

EN IEC 61000-3-2:2019+A1:2021

EN 61000-3-3:2013+A2019

IEC62321-3-1:2013

IEC62321-4:2013

IEC62321-5:2013

IEC62321-6:2015

IEC62321-7-1:2015

IEC62321-7-2:2017

IEC62321-8:2017

Full Name: George.wang

Position: Approbation Manager

Signature: George.wang

Place/Date: Shenzhen,China/Jan.22-2025



Scan the QR Code to Download
the Electronic Manual