
Start Here - Magniflow™ Canister Filters Quick Setup Guide


Parts Check

- 1) Valve Block*
- 2) Motor Head*
- 3) Impeller Assembly Cover
- 4) Impeller Assembly
- 5) Filter Media Securing Plate
- 6) Filter Floss Pad
- 7) Ceramic Rings (220 & 360 only)
- 8) BIO-Filter Balls
- 9) Carbon Bags
- 10) Filter Foam
- 11) Filter Trays (Stack n' Flo)
- 12) Canister 13) Intake Tube
- **14)** Strainer
- 15) Outlet Tube
- 16) Elbow & Diffuser
- 17) Suction Cups
- 18) Vinyl Tubing (2 lengths)
- **19)** Snapper Clamps

*Includes attached o-rings, please do not discard. Additional Valve Block O-Rings are also included.

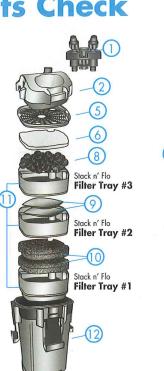

Model 160

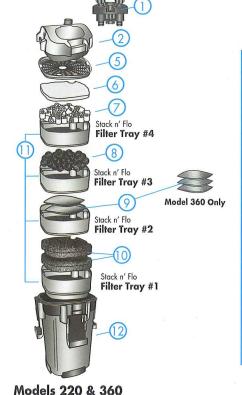






D. Replace Motor Head. Close locking buckles. NOTE: Align intake nozzle and connector pipe.



E. Attach valve block to motor head. The inlet will be on the right and outlet on the left. To lock the valve block turn the key clockwise and the reverse to unlock.

- 1. Turn key
- 2. Press key down 3. Close key cover

 Case Prep



B. Unwrap all media Rinse thoroughly.



Filter Bags

C. Place media in appropriate Filter Trays.

Securing Plate

Filter Floss Pad

Ceramic Rings

Model 360

BIO-Filter

Carbon

Load filled trays and Securing Plate.

Foam Filter Tray

Models 220

& 360

160 IMPORTANT:

Model

Arrow on handle should align with arrow on filter case.



A. Place canister filter under aguarium in an accessible location. Top of canister must be below aquarium water level.


Placement

DO NOT PLUG IN. B. Make sure distance from bottom of filter and top of aquarium falls within these ranges: 160: 20-60 inches 220: 24-60 inches 360: 32-60 inches 0

DO NOT PLUG IN.

0


Intake/Outlet **Assembly**

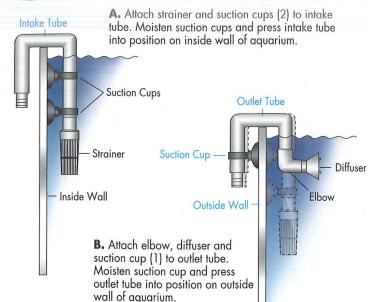

Connection A. Attach vinyl tubing ends to valve hose barbs. Tighten Hose Nuts. Please make sure you have pushed the vinyl tubing down onto the hose barbs as far as possible to help make sure the hose nuts tighten properly.



B. Extend hoses to highest barbs on aguarium intake and outlet tubes. Allow for 2 inches of slack. Cut hoses to fit. Make sure you cut in a straight, smooth line with either tubing cutters or a sharp knife. Attach hoses to intake and outlet tubes. Place snapper clamps around hose and tubes at fittings. Tighten snapper clamps.

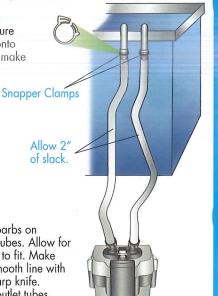



Start Up

A. Press the Quick Prime button multiple times until water starts to flow into the canister and back up towards the aquarium. B. Plug in the filter.

NOTE: If water flow through Diffuser is not satisfactory, unplug

filter and check hose connections for obstruction or kinking. NOTE: A slight rattling noise is normal ONLY DURING STARTUP. If noise persists, shut off filter and check for dirt or



Filter Maintenance

To perform routine maintenance on your canister filter you should first unplug the filter. There is no need to remove the intake and

outlet tubes or disconnect hosing from the valve block. All you need to do is remove the valve block from the canister. To do this, first stop the water flow to the filter by lifting Rinse filter foam every three weeks the key cover on the valve block. To unlock the and replace after nine weeks. valve block, turn the key inside counter clockwise. Lift the valve block from the canister leaving the intake/outlet assemblies tubing and valve block together for easy reconnect.

debris that may be in bottom of Canister

Clean filter media regularly. Rinse with water from aquarium NOT TAP WATER.

Clean impeller assembly cover and impeller monthly. Rinse thoroughly under warm tap water.

Replace filter floss pad and



Never use soap, abrasives or any other cleaning agent on or around filter or aquarium.

Never attempt to remove Motor Head when filter is in use.

Never submerge Motor Head.



Questions or Missing Parts: Call Customer Service at (800) 322-1266 04/15 AQ12338

United Pet Group, a Division of Spectrum Brands, Inc. 3001 Commerce Street Blacksburg, VA 24060 1.800.322.1266 • www.marineland.com ® Registered Trademark and TM Trademark of Spectrum Brands, Inc. ©2015 Spectrum Brands, Inc