

Canon

CANON INC. 7-1, Nishi-Shinjuku 2-Chome, Shinjuku-ku, Tokyo 163, Japan
Mailing address: P.O. Box 5050, Dai-ichi Seimei Building, Tokyo 163, Japan

U.S.A. — **CANON U.S.A., INC. HEADQUARTERS**
One Canon Plaza, Lake Success, N.Y. 11042, U.S.A.
CANON U.S.A., INC. MANHATTAN SERVICE CENTER
600 Third Avenue, New York, N.Y. 10016, U.S.A.
CANON U.S.A., INC. ATLANTA BRANCH
6380 Peachtree Industrial Blvd., Norcross, Georgia 30071, U.S.A.
CANON U.S.A., INC. CHICAGO BRANCH
140 Industrial Drive, Elmhurst, Illinois 60126, U.S.A.
CANON U.S.A., INC. LOS ANGELES BRANCH
123 Paulmar Avenue East, Costa Mesa, California 92626, U.S.A.
CANON U.S.A., INC. LOS ANGELES SERVICE CENTER
3321 Wilshire Blvd., Los Angeles, California 90010, U.S.A.
CANON U.S.A., INC. SANTA CLARA BRANCH
4000 Burton Drive, Santa Clara, California 95054, U.S.A.
CANON U.S.A., INC. DALLAS OFFICE
3200, Regent Blvd., Irving, Texas 75063-3145, U.S.A.
CANON U.S.A., INC. HONOLULU OFFICE
Bldg. B-2, 1050 Ala Moana Blvd., Honolulu, Hawaii 96814, U.S.A.
CANADA — **CANON CANADA INC. HEADQUARTERS**
6390 Dixie Road, Mississauga, Ontario L5T 1P7, Canada
CANON CANADA INC. MONTREAL SERVICE CENTRE
10652 Côte de Liesse, Lachine, Quebec H8T 1A5, Canada
CANON CANADA INC. CALGARY OFFICE
2828, 16th Street, N.E. Calgary, Alberta T2E 7K7, Canada
EUROPE, AFRICA & MIDDLE EAST — **CANON EUROPA N.V.**
P.O. Box 7907, 1008 AC Amsterdam, The Netherlands
CANON FRANCE-PHOTO CINEMA S.A.
30, boulevard Vital-Bouhot, Île de la Jatte, 92521 Neuilly-sur-Seine, France
CANON UK LTD.
Units 4 & 5, Brent Trading Centre, North Circular Road, London NW10 0JF, United Kingdom
CANON EURO-PHOTO G.m.b.H.
Linsellesstraße 142-156, D-4156 Willich 3, West Germany
CENTRAL & SOUTH AMERICA — **CANON LATIN AMERICA, INC. DEPTO. DE VENTAS**
Apartado 7022, Panamá 5, República de Panamá
CANON LATIN AMERICA, INC. CENTRO DE SERVICIO Y REPARACION
Apartado 2019, Zona Libre de Colón, República de Panamá
SOUTHEAST ASIA — **CANON HONG KONG TRADING CO., LTD.**
Golden Bear Industrial Centre, 7/F., 66-82 Chea Wan Kok Street, Tsuen Wan, New Territories, Hong Kong
CANON SINGAPORE PTE. LTD.
95 South Bridge Road #13-01/15, South Bridge Centre, Singapore 0105
OCEANIA — **CANON AUSTRALIA PTY. LTD.**
Unit 1/37, Waterloo Road, North Ryde (Macquarie Park), N.S.W. 2113, Australia
JAPAN — **CANON SALES CO., INC.**
11-28, Mita, 3-Chome, Minato-ku, Tokyo 108, Japan

キヤノン株式会社

キヤノン販売株式会社

〒108 東京都港区三田 3-11-28
カメラ相談室 (03) 455-9353

◎サービスステーション・営業所

札幌	〒060 札幌市中央区北三条西4-1 (第一生命ビル)	☎(011)	231-1353
仙台	〒980 仙台市一番町1-1-30 (やまと生命仙台ビル)	☎(0222)	66-4151
郡山	〒963 福島県郡山市開成2-38-13	☎(0249)	23-5618
新潟	〒950 新潟市東大通り1-4-1 (マルタケビル)	☎(0252)	43-2111
銀座	〒104 東京都中央区銀座5-9-9	☎(03)	573-7834
新宿	〒163 東京都新宿区西新宿2-5-1 (住友三井ビル地下1階)	☎(03)	348-4725
横浜	〒221 横浜市中区磯子区磯子3-30-4 (安田生命横浜西口ビル)	☎(045)	312-0211
大宮	〒330 大宮市大成町2-273	☎(0486)	66-3930
静岡	〒420 静岡市藤田2-7-2 (静米会館)	☎(0542)	55-2241
名古屋	〒450 名古屋市中村区名駅3-21-7 (三友ビル)	☎(052)	563-6822
梅田	〒530 大阪市北区梅田1-8-17 (第一生命ビル)	☎(06)	341-9335
京都	〒604 京都市中京区東洞院通御池下ル菅屋町435 (京都御池第一生命ビル)	☎(075)	241-0216
沢	〒920 金沢市玉井2-266	☎(0762)	91-1215
松	〒760 高松市錦屋町9-6 (高松大同生命ビル)	☎(0878)	22-3666
岡山	〒700 岡山市中山下1-9-40 (新岡山ビル)	☎(0862)	22-8228
広島	〒730 広島市中区小町2-30 (第二有楽ビル)	☎(082)	245-7791
福岡	〒812 福岡市博多区美野島1-2-1 (キヤノン販売福岡ビル)	☎(092)	411-4173
沖縄	〒900 那覇市泊1-2-2	☎(0988)	67-2106

◎営業所

青森	〒030 青森市大字浦町字島野351-7 (東和ビル)	☎(0177)	75-1666
盛岡	〒020-01 盛岡市上金3-2-15 (工藤ビル)	☎(0196)	46-8710
本	〒390 松本市双葉町10-22 (双葉町ビル)	☎(0263)	26-5549
千	〒280 千葉市末広2-13-2	☎(0472)	61-5121
大分	〒870 大分市城崎町1-3-31 (富士火災大分ビル)	☎(0975)	37-4117
鹿児島	〒892 鹿児島市山之口町3-22 (住友生命鹿児島ビル)	☎(0992)	24-3141

 
◎サービスセンター

東京	〒108 東京都港区港南2-13-29	☎(03)	450-2731
大阪	〒540 大阪市東区森の宮中央2-10-9	☎(06)	941-1076

◎休業のご案内

新宿(第3木曜日)銀座・梅田(日曜日・祝日)その他(土・日曜日・祝日)

Canon Speedlite 244T

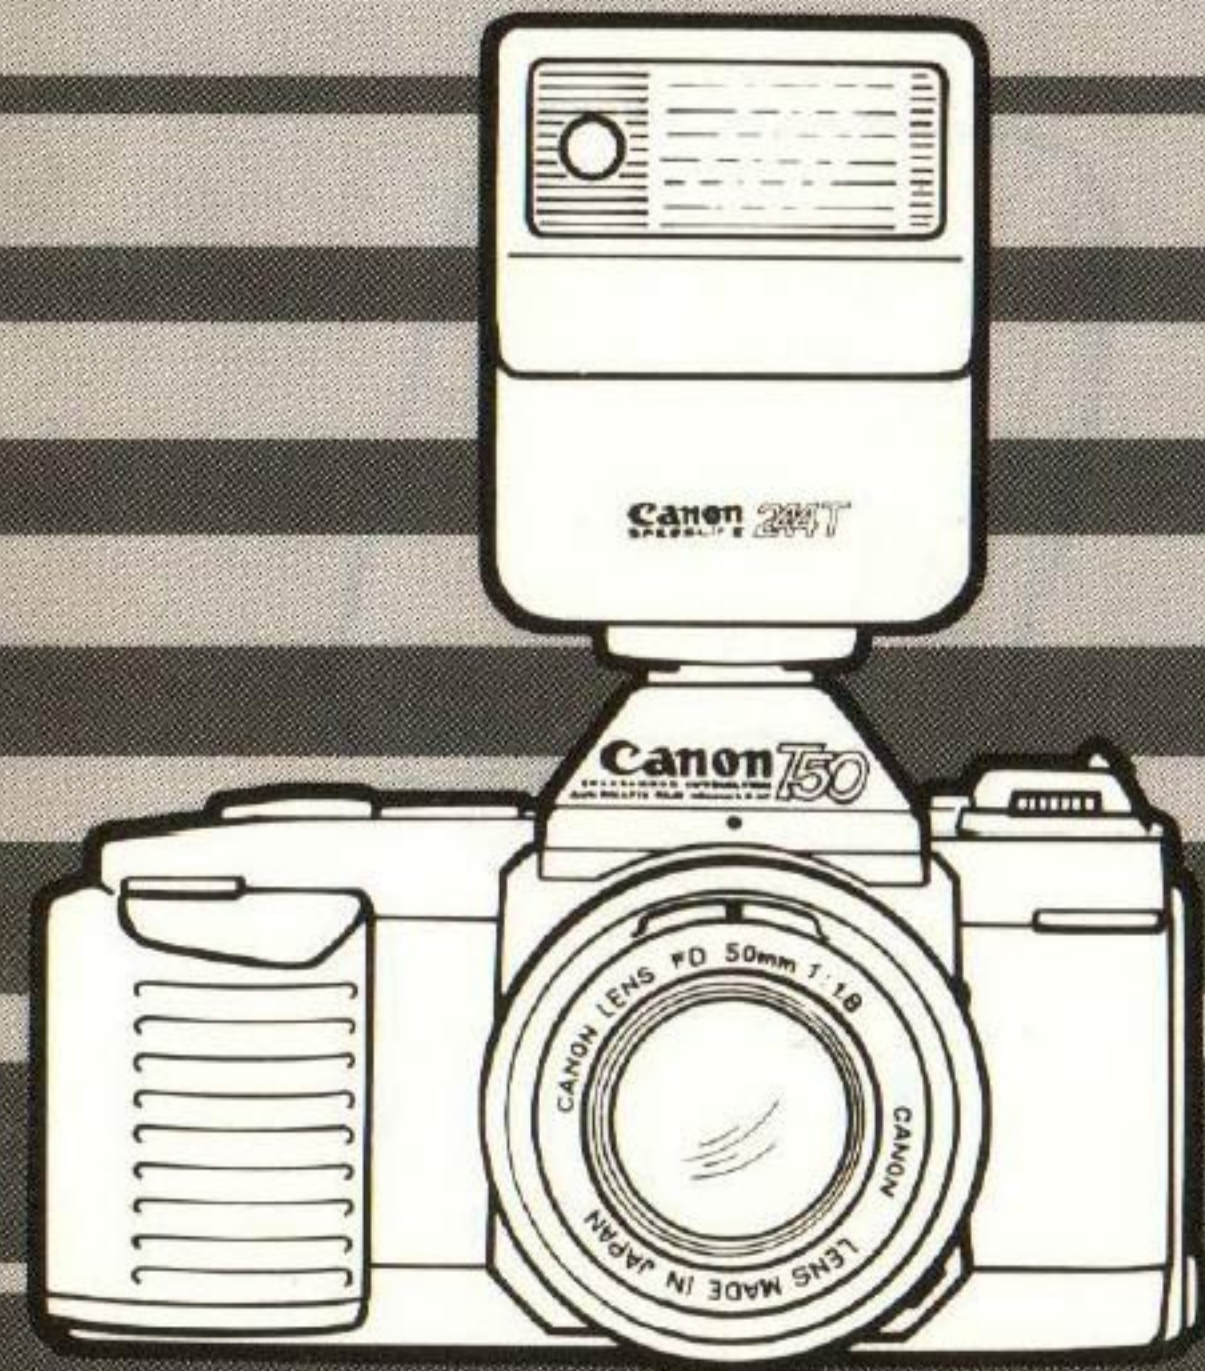

スピードライト 244T

使用説明書

Speedlite 244T

Instructions

Speedlite 244T

Notice d'emploi

Speedlite 244T

Bedienungsanleitung

Speedlite 244T

 
Instrucciones

PUB.C-II-110V
1285B25

© CANON INC. 1982
CY8-6506-009

PRINTED IN JAPAN
IMPRIME AU JAPON


Nomenclature

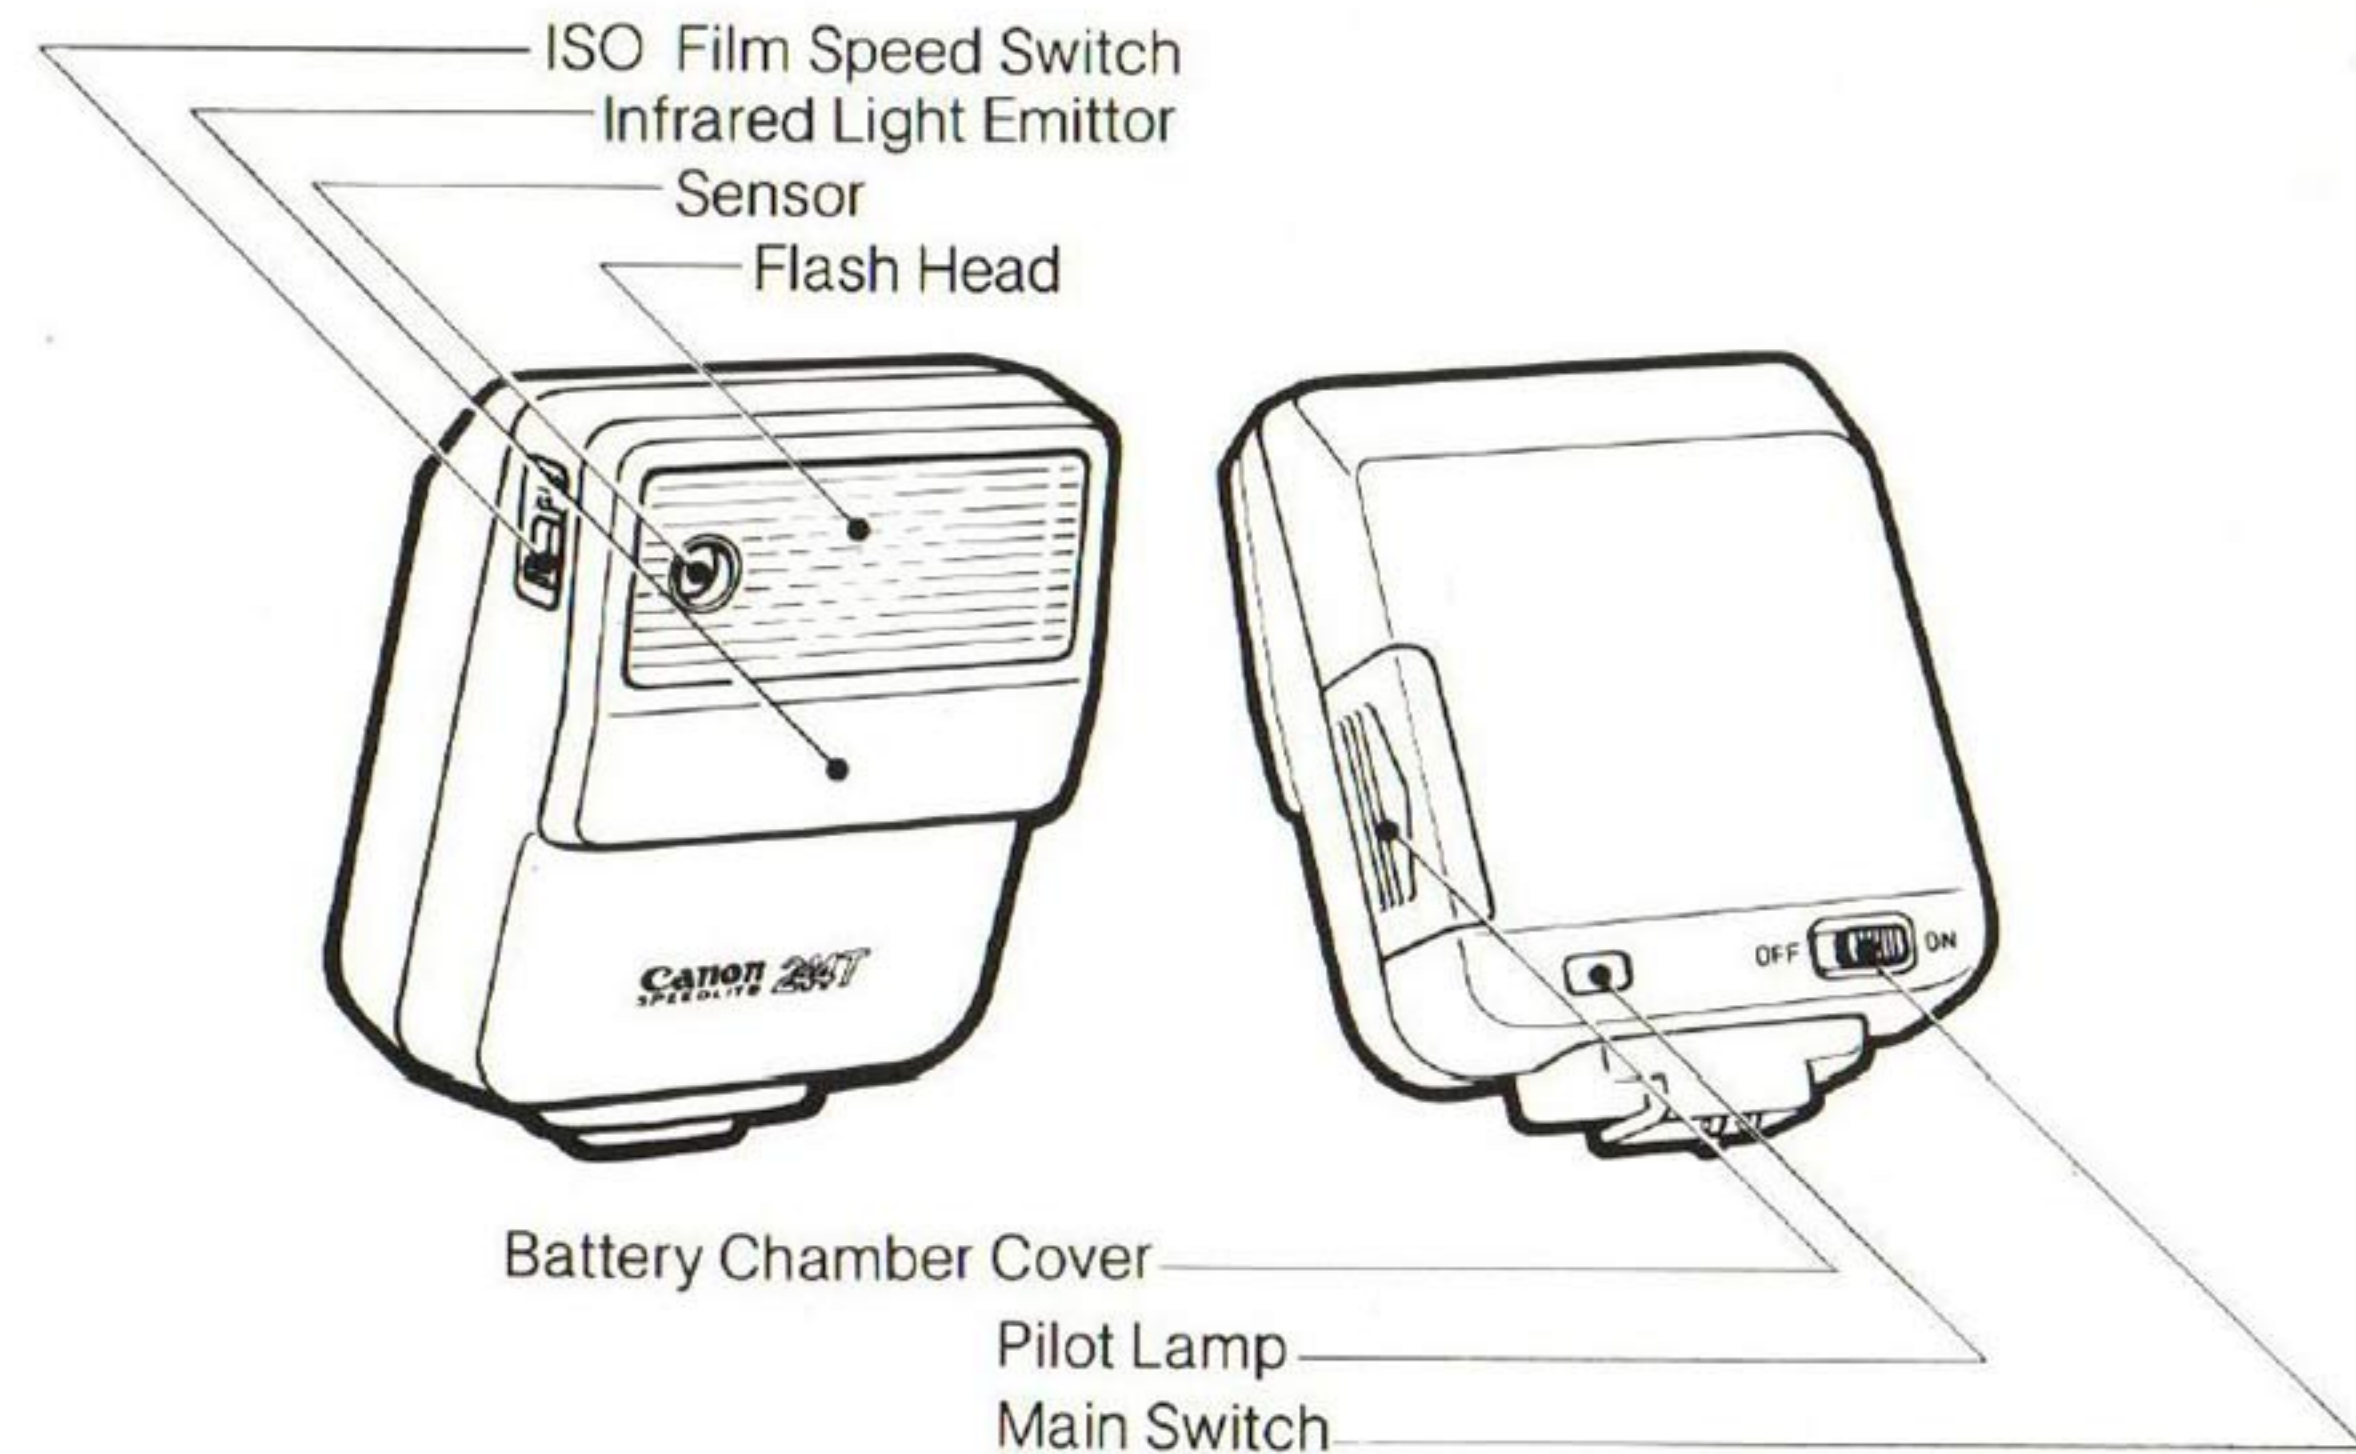

The Canon Speedlite 244T is an automatic,* electronic flash unit designed exclusively for the Canon T-series cameras. The 244T sets both the shutter speed and aperture automatically, making flash photography incredibly simple. When the "P" in the viewfinder starts to blink, all you have to do is attach the unit to the camera and turn the main switch on for beautiful flash pictures.

* An automatic exposure flash has a sensor which measures the light reflected back from the subject and cuts off flash emission automatically when the subject has received the proper amount of light.

 
Use this flash when the green "P" starts to blink.

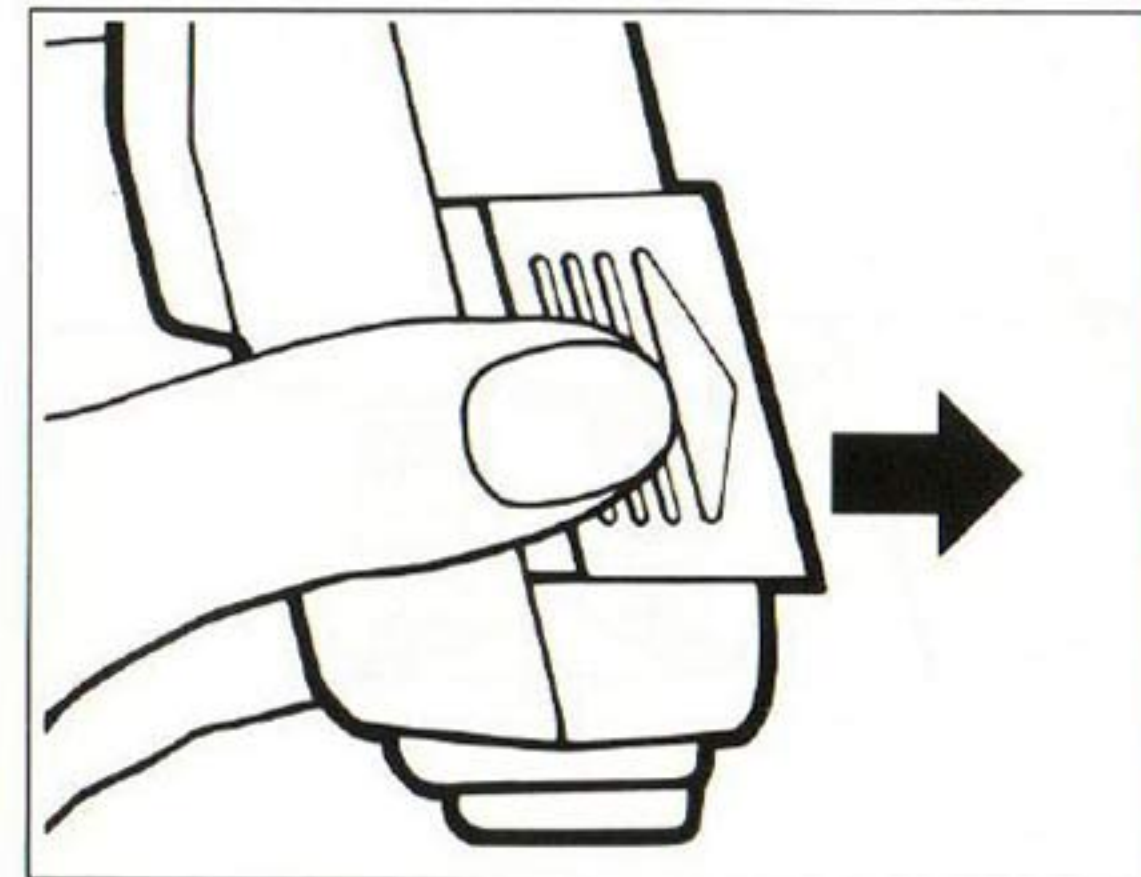

Loading the Batteries

Use two new size AA alkaline-manganese (LR6/AM-3) or Ni-Cd batteries. Carbon-zinc batteries may also be used, but their life is shorter. In temperatures below 0°C (32°F), use fully charged Ni-Cd batteries for best results.

 
1. Slide the battery chamber cover off.

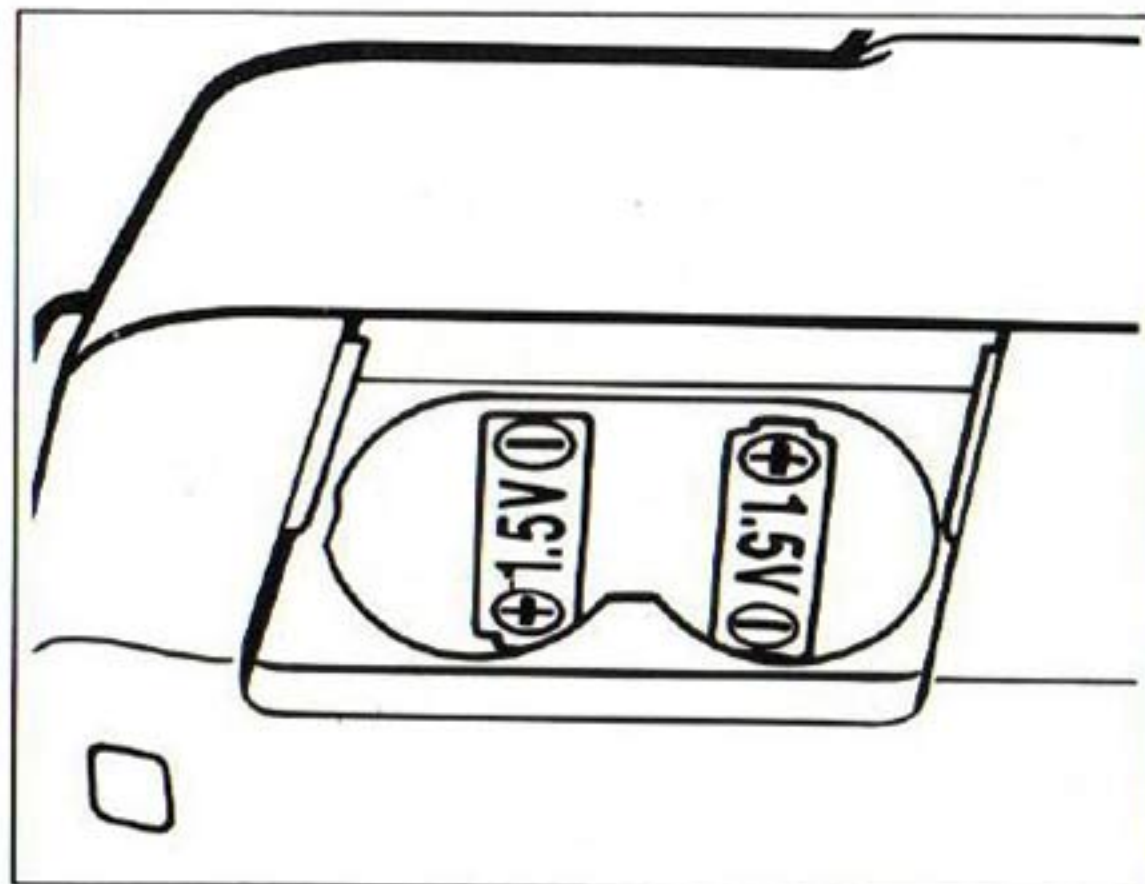

2. Load the batteries so that their contacts are in the directions indicated by the diagram inside the battery chamber.
3. Once the batteries are loaded, slide the battery chamber cover back on while pressing the batteries down. Make sure the cover's tab fits into the corresponding groove on the flash body.

Remove the batteries if you do not expect to use the 244T for about three weeks or longer.

 When using Ni-Cd batteries, please note that each brand has its own terminals system. Be sure to use the type which is suitable for this flash. Recharge Ni-Cd batteries according to the manufacturer's instructions.

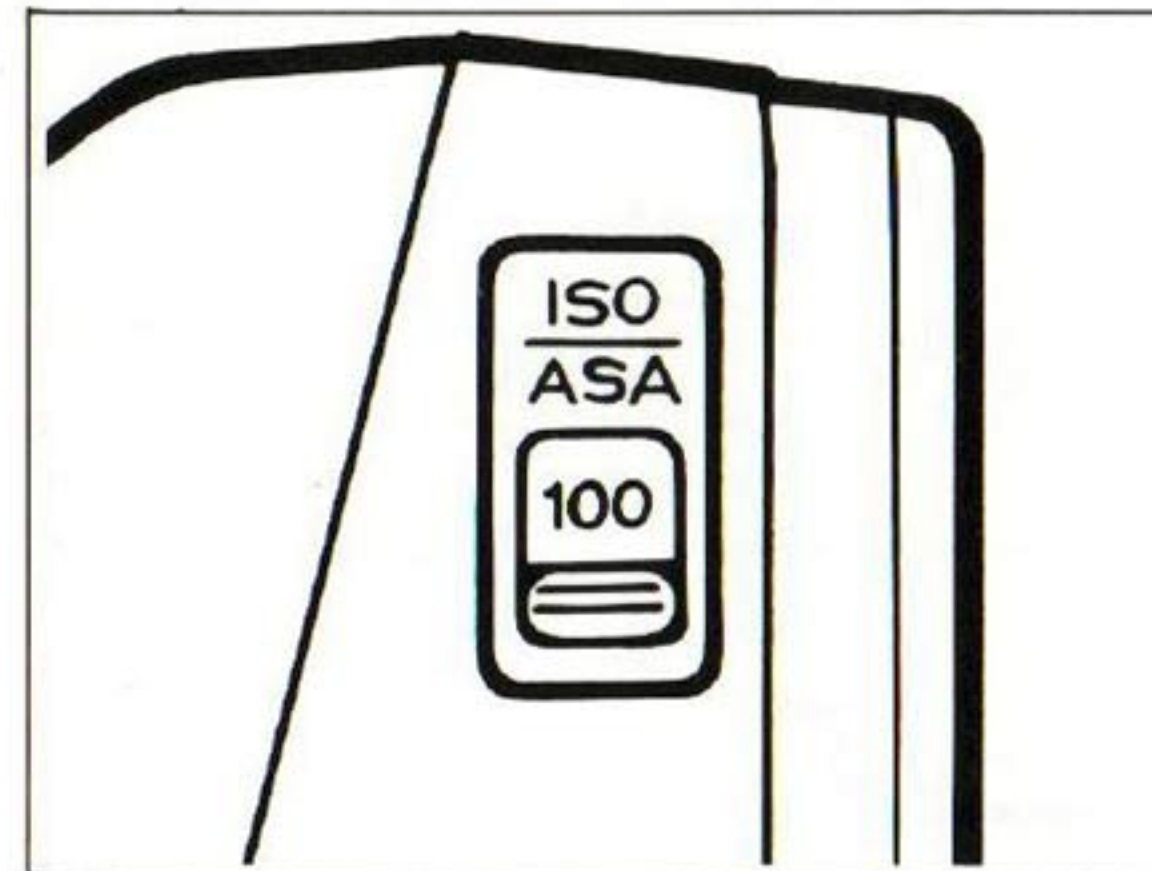


Setting the ISO Film Speed

Set the ISO film speed corresponding to the film in use.


Use only ISO 100 or 400 film with this flash. Other films cannot be used.

 * The number after ISO is the equivalent ASA number.

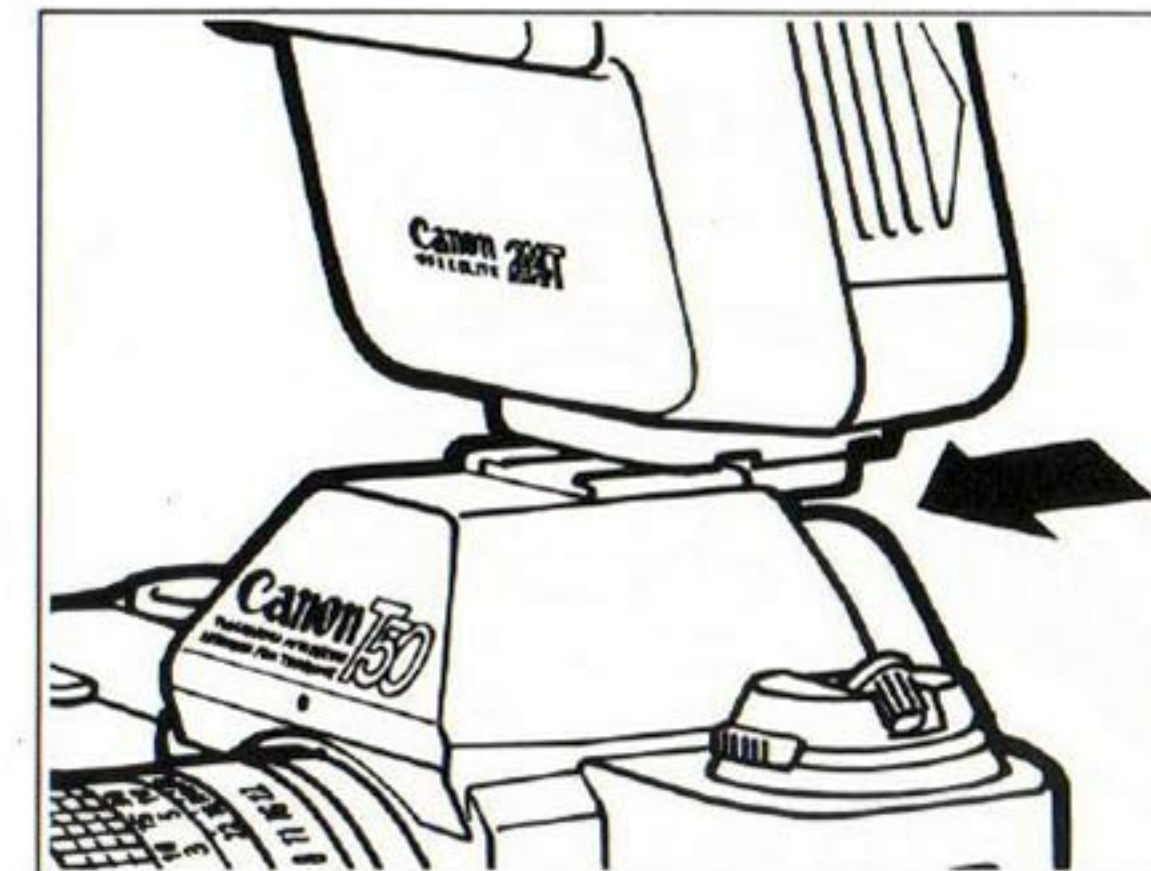


Mounting the 244T on the Camera

 Insert the Speedlite into the camera's accessory shoe. For proper electrical contact, make sure it is pushed in all the way.

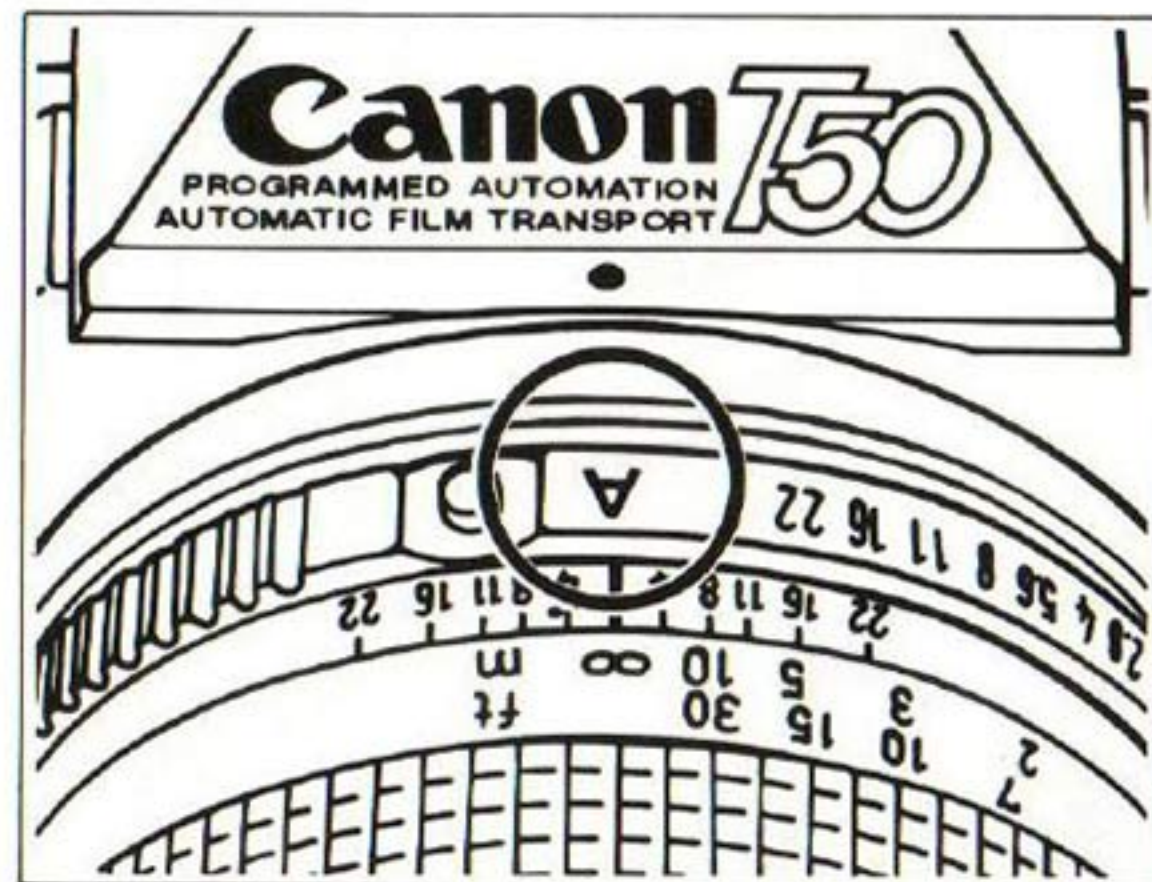


Taking Flash Pictures

 
1. Make sure that the lens is set to the "A" mark, and that the camera is set to "PROGRAM."

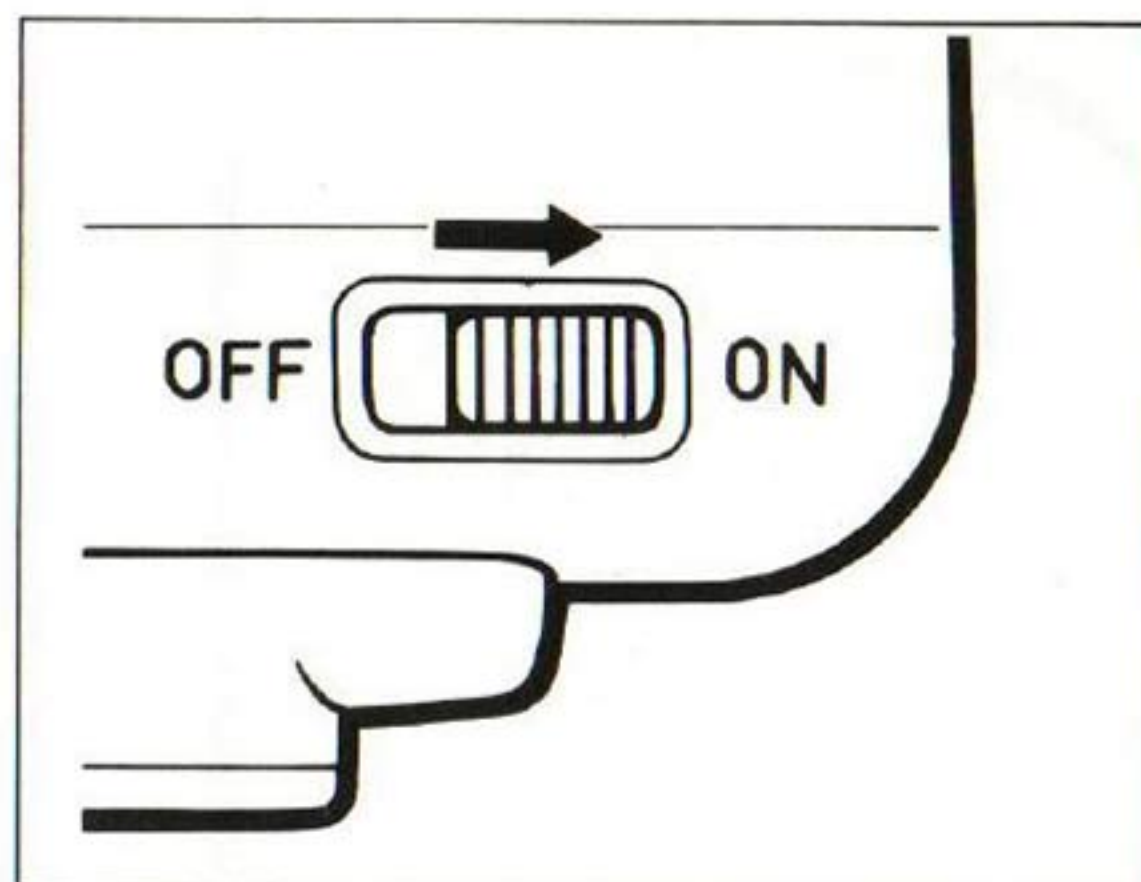

 2. Turn the main switch of the flash ON.

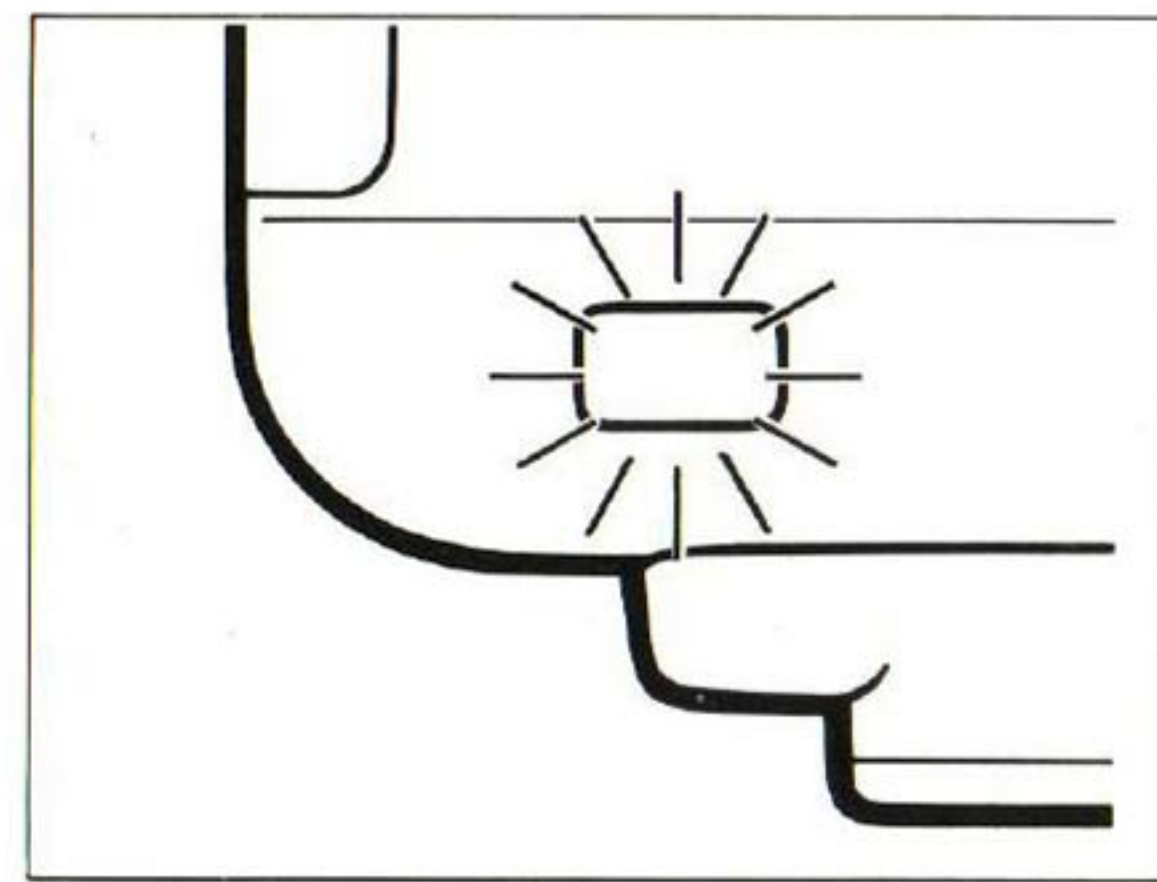

 3. Make sure the pilot lamp lights up. When the "⚡" mark lights up, the shutter speed switches to X-sync (1/60 sec) automatically.
4. Compose the picture and focus the subject.

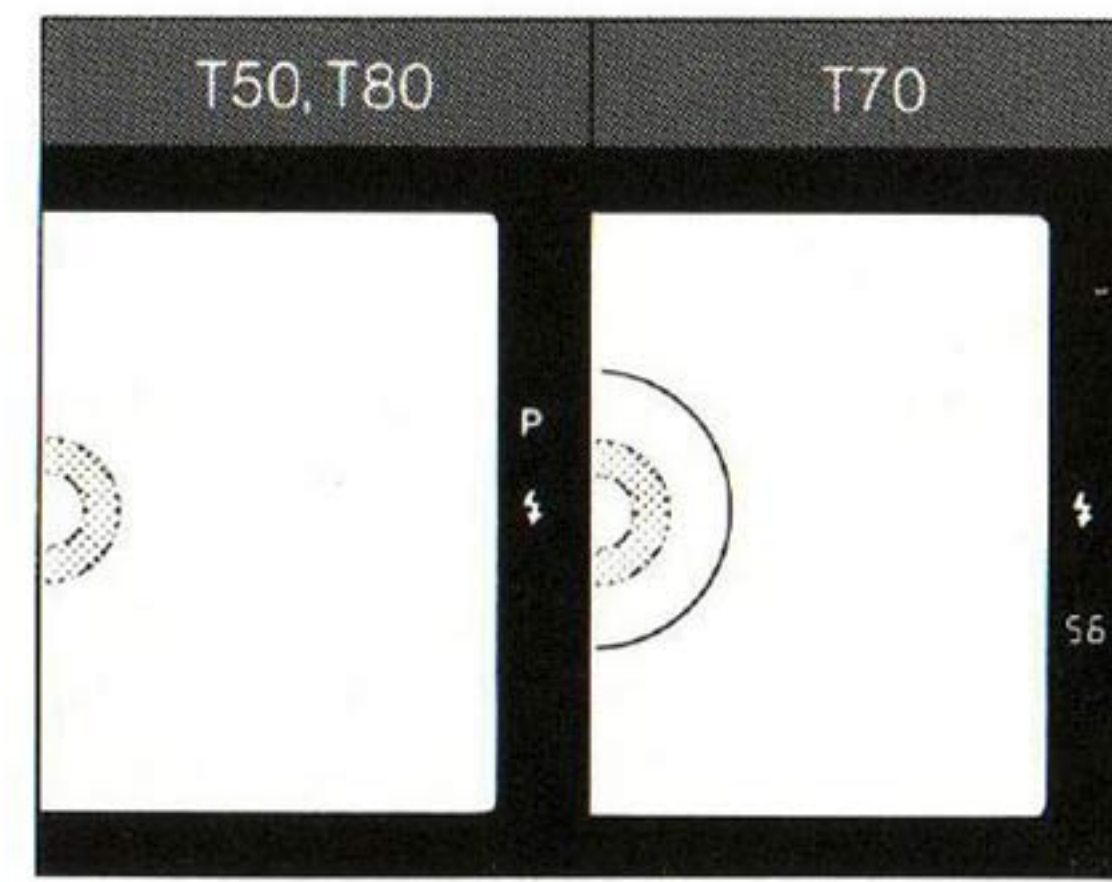

5. Press the shutter button halfway to activate the viewfinder information display. When the "⚡" mark and the "P" mark (T50, T80) or the selected aperture value (T70) light up, you can take a picture.
 - When the shutter button is pressed halfway, the Speedlite emits near infrared rays and an aperture is automatically selected according to the shooting distance and reflectivity of the subject.

6. Set the main switch to OFF when flash photography is finished.

Notes

1. If the subject is too far from the flash, the T50's and T80's green "P" or the T70 lens' full aperture value will blink rapidly (8 times per sec) to warn you. (The "⚡" remains solid.) Move closer to the subject until the "P" stops blinking. Once you have found a suitable shooting position, be sure to remove your finger from the shutter button* and re-focus the subject. Then you can take the picture.

* If you do not remove your finger from the shutter button after changing your position, exposure will be incorrect, since exposure is set each time the shutter button is pressed halfway.

2. Please note that the closest shooting distance is 0.5m with ISO 100 and 1m with ISO 400 film.
3. The flash auto shooting distance range is greater when using ISO 400 film. Thus you can photograph a subject that is up to 11.4m (37.4 ft.) away when using brighter (f/2.8 or larger) lenses.
4. When using a lens with a maximum aperture of f/3.5 or smaller, keep in mind that the flash auto shooting distance range will be less than when using brighter (f/2.8 or larger) lenses.
5. Rapid continuous shooting with the T-series cameras is not possible when the 244T is mounted.

Specifications

Type: Energy-saving flash with series control circuit. 3-aperture selection switch is set automatically.

Guide Number: 16 (ISO 100·m) or 26 (ISO 25·ft.) At full charge, i.e. 30 secs after pilot lamp glows, with new batteries.

Flash Coverage Angle: Covers a 35mm lens on the 35mm format.

Recycling Time: 0.5—9 secs with new alkaline-manganese batteries; 0.5—6 secs with fully-charged Ni-Cd batteries.

Number of Flashes: Max. flash output, 30 sec firing intervals: 150 flashes with new alkaline-manganese batteries, 70 flashes with fully-charged Ni-Cd batteries. Min. flash output, 10 sec firing intervals: 1,300 flashes with new alkaline-manganese batteries, 600 flashes with fully-charged Ni-Cd batteries.

Color Temperature: Same as daylight.

Automatic Flash Aperture: The flash automatically sets the aperture to f/2.8, f/4, or f/5.6 at the first stroke of the shutter button.

Auto Shooting Distance Range: ISO 100: 0.5—5.7m (1.6—18.7 ft.); ISO 400: 1—11.4m (3.3—37.4 ft.).

Outside of Auto Shooting Distance Range: If subject is too far, T50's and T80's "P" mark or the T70 lens' full aperture value blinks rapidly at first stroke of shutter button.

Film Speed Setting: ISO film speed indication. ASA 100 and 400. (No ISO indication on unit.)

Power Source: Two penlight (AA) alkaline-manganese (LR6, AM-3) or Ni-Cd batteries.

Dimensions: 63 (W) × 86 (H) × 41.5 (L) mm (2-1/2" × 3-3/8" × 1-5/8")

Weight: 140 g (4-15/16 oz.) without batteries.

Subject to change without notice.