



Out of this world savings.

User Manual

Model: 3334



Winged Heated Airer

CE

UK
CA

Contents

Safety Information	2
Operating Instructions.....	3
Care & Storage.....	4

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Never carry out any alterations or modifications to this product.
 - This product is not a toy, and is only to be used for its designated purpose.
 - This product is intended for indoor use only.
 - This product is for domestic use only.
 - Only use this product on stable, level and dry ground.
 - Do not lean on the product.
 - Keep the product out of the reach of children and pets.
 - This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
 - Do not use the product near flammable materials or liquids.
 - If the product is damaged or has any defects, please contact cservice@oypla.com
 - When the appliance is not in use, always unplug from the mains socket.
 - Do not leave this ailer on for extended periods of time unsupervised, for example overnight.
 - Never fully cover the ailer with a towel or other large item, unless it is by the correct cover.
 - Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
 - Do not use the product near any source of water.
 - To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
 - Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Make sure the product is off, unplugged from the socket and been left for five minutes to remove the risk of electrical shock and to allow the product to cool down.
-


Operating Instructions

The below information is designed to help you with the operation of your Oypla product

If the product is damaged, defective or you require more information, please contact our dedicated team at cservice@oypla.com.

Firstly, the ailer requires very basic assembly. Simply attach the clips on the top of the legs to the bars running across the middle section of the ailer.

When the ailer is assembled, to operate it, simply use the power button located on the side. This will begin generating heat to dry your clothes much more efficiently than without heat.

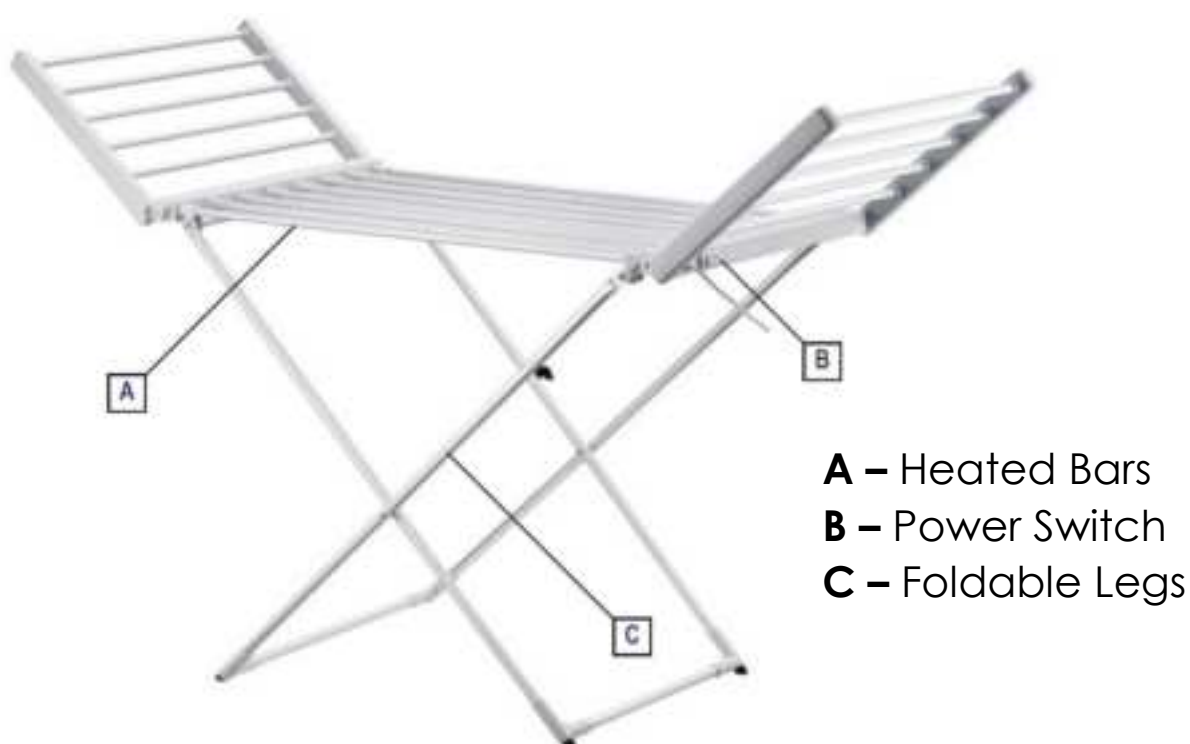

*Once the product is assembled and ready for use, check it over before using it.

Care & Storage

Please familiarise yourself with the below information before caring for your Oypla product

Oypla.com are not responsible for any product damage as a result of incorrectly cleaning and/or maintaining the product.

Be aware that if the product gets in contact with clothes that have colours that easily run this will cause the product to bleach the original colour. It is recommended that these items of clothing are wrapped to protect them, in a towel for example, before they are placed on the product.

This product is meant to dry clothes washed with only water. If soap or detergent is not well removed, burn-like stains can appear on tissues. This is a colour transformation caused by the heat of the product.

Put the clothes on the heated bars with care, this is to avoid the risk of burns.

Cleaning

Always disconnect the ailer from the power supply before beginning to clean. Only use a slightly damp cloth to clean the product, followed by buffing with a dry cloth. Never use any detergents, polishes or waxes as these may damage the product.

Storage

Save the box for off-season storage.

Fold the ailer fully for easier storage. Only store the ailer on a dry, dust-free space to avoid any risks when usage is resumed.

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: cservice@oypla.com

Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual

Model Code: 3334

Oypla.com LLP / cservice@oypla.com