Fanttik

NEX E2 Ultra Precision Electric Screwdriver Kit

User Manual



Fanttik

NEX E2 Ultra



Contents

00

i.sarety warnings 02
2.Package Contents 03
3. Product Overview 04
4.Operation and Functions 06
5.Specifications · · · · · · · · · · · · · · · · · · ·
Warranty Info11

1.Safety Warnings

- Avoid moisture, dust, and drop.
- Do not store the product in extreme temperature environment.
- Stay alert, watch what you are doing and use common sense when operating. Do not
 operate while you are tired or under the influence of drugs, alcohol or medication.
- This product is not a toy and should not be used by kids under 10 years old.
 This product has built-in battery do not throw it into fire and should be recycled by
- This product has built-in battery, do not throw it into fire and should be recycled by local laws and regulations.
- Do not dismantle the machine by yourself. Have your power tool serviced by a qualified repair person or contact us for advice.






- 03 -

3. Product Overview

- 1. Press area (press to eject the bit storage and screwdriver)
- 2.Metal Housing
- 3. Rotatable bit storage
- 4.USB Type-C Charging Port
- 5. Power Indicator ring light
- 6. Torque setting knob
- 7. Torque energy bar
- 8. Forward/Reverse rotation button
- 9.Bit chuck

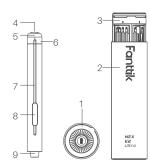

4.Operation and Functions

Open and close the bit storage

- To open: Press down on the top surface of the bit storage (avoid the central screwdriver). both the bit storage and screwdriver will then pop up from the metal housing.
- To close: First, place the bit storage back into the metal housing and press it down to lock in place. Then, position the screwdriver back into the center of the bit storage and press it down to secure it.

Storage of bits

 Bits are stored in the magnetic bit storage holders. Tweezers and a spudger are included. After using the bits, position them back into the magnetic holders, and they will be attracted by magnet.

Storage of the screwdriver

 The screwdriver is stored in the center of the bit storage and secured by magnetic attraction.

Bit installation

 Retrieve a bit from the bit storage, then insert it into the screwdriver bit chuck.



• Press the \checkmark or \land button to tighten or loosen screws.

Torque setting knob

 Rotate the torque knob from OFF to five different levels to gradually increase the torque.





LED Torque energy bar

- The length of the energy bar indicates different torque settings. A longer energy bar corresponds to a higher torque.
 While the screwdriver is operating, the energy bar will display a flowing effect.
- The direction of the flow indicates the direction of the screwdriver's operation.

Bit magnetizer

 Place the bit tip in the magnetizing window for a few seconds to complete magnetization.

Turn on/off the LED light

- Press the forward/reverse rotation button to turn on the LED light simultaneously.
- The LED light will stay on for 10 seconds if no further operation is performed.

Power Indicator

- When the battery level drops below 20% during use, the indicator will blink red rapidly.
- While charging, the indicator will blink green slowly.
 When the battery is fully charged, the indicator will display solid green.

Battery charging

 This screwdriver features a universal Type-C charging port and includes a USB charging cable. A charger is not included; please use a 5V output charger for charging.

5. Specifications

Product Name	Electric Precision Screwdriver Kit
Product Model	NEX E2 Ultra
Product Dimension	Ф2.36 x 7.95inches (Ф60 x 202mm)
Net Weight	20.7oz (586g)
Max. hard torque	0.6 N·m
Max. permitted manual torque	3.0 N·m
Rotation Speed (unloaded)	270RPM
Battery Capacity	800mAh/2.96Wh
Rated Voltage	3.7V
Charging Input	5V/0.5A
Charging Time	150-180 min
Storage Temperature	-4°F-140°F(-20°C-60°C)
Working Temperature	32°F-113°F(0°C-45°C)

Bit specifications

Bit Shank: 5/32-inch (4mm) hex shank Bit Material: Coated S2 Steel

Bit Length: 1.1 inches and 1.8 inches(28mm and 45mm)

Bit Type:

- PH0000, PH000, PH00, PH0, PH1, PH2
- SL1.0, SL1.5, SL2.0, SL2.5, SL3.0, SL3.5
- O H0.7, H0.8, H0.9, H1.0, H1.3, H1.5, H2.0, H2.5, H3.0
- **(2)** T2, T3, T4

(3) TR5, TR6, TR7, TR8, TR9, TR10, TR15

1 U2.0, U2.6, U3.0

₽2, P5, P6

O S0, S1

2.0, 2.3, 2.5

W1.5

Y Y0.6, Y1.0, Y2.0, Y2.5, Y3.0, Y1

- 0.8
- \star Note: PH0, PH1, SL2.0, TR8, TR10, H2.0 are 1.8 inches(45mm) in length; the remaining are 1.1 inches(28mm).

WARRANTY CARD

Warranty Policy

Your product is covered for 12 months against manufacturing defects.

O How to Return Your Fanttik Product

- Email us at support@fanttik.com with your order number.
- We'll email you a prepaid return shipping label.
- Tear off the 'Return Details' page, fill it out, and include it inside your return package.
- Use the provided label to ship your package back to us.
- Once shipped, please email us. We'll expedite your replacement or solution.

O Return Details

Complete this section and include it in your package for faster processing

	Purchase Name:	
	Order Number:	
	Date of Purchase:	
	Place of Purchase:	

929-693-6066MON-FRI 9AM-5PM (ET) www.fanttik.com support@fanttik.com METASEE LLC

12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

Made in China

